Back | Specifications



2002 BODY BUILDER LAYOUT BOOK

MODEL LINEUP VIN NUMBERS IDENTIFICATION INFORMATION (PDF File) METRIC / U.S. CUSTOMARY UNIT EQUIVALENTS (PDF File) SAFETY / EMISSION

TRUCK DATA

ESCAPE 4-DOOR - FWD/4x4
EXPLORER
RANGER
WINDSTAR
EXPEDITION 4-DOOR - 4X2/4X4
EXCURSION 4-DOOR - 4X2/4X4
E-SERIES/E-SERIES SUPER DUTY
F-150 - 4X2/4X4
SUPER DUTY F-250/350 STYLESIDE PICKUP - 4X2/4X4
SUPER DUTY F-350/450/550 - CHASSIS CAB - 4X2/4X4
SUPER DUTY F-SERIES MOTOR HOME CHASSIS - CLASS A (F53)

MEDIUM TRUCK DATA

SUPER DUTY F-650/750

APPENDIX

SNOWPLOW INSTALLATION F-150 AND SUPER DUTY F-SERIES ELECTRICAL WIRING DESIGN RECOMMENDATIONS AMBULANCE BUILDER GUIDELINES (PDF file) NEW VEHICLE STORAGE GUIDELINES (PDF file)

Copyright© 2006 Ford Motor Company.

Page 1 INDEX

2002
2002
MODEL YEAR

INTRODUCTION	Page Number
Index	1-4
Model Lineup	
Escape	5
Explorer	5
Ranger	6
Expedition	7
Excursion	7
E-Series/E-Series Super Duty	8-9
F-150	10-11
Super Duty F-Series 250-550	
F-Super Duty Motor Home Chassis - Class A	16
Super Duty F-Series 650-750	17-18
Vin Numbers Identification Information	
Metric/U.S Customary Unit Equivalents	25

SAFETY/EMISSION Page N	Nun
Definitions of Terms	27
Guidelines for Installation of Alternative Fuel Systems on Gasoline Vehicles28-3	30
Guidelines for Second Unit Body Installation on Ford Produced Dedicated Natural	
Gas Vehicle (NGV) E-Series Super Duty Cutaway 176" WB 31-3	32
Seat Track Travel/H-Point Locations	
Escape	
Explorer/Sport/Sport Trac34	
Ranger	
E-Series/E-Series Super Duty	
F-15037-3	38
Super Duty F-Series39	
Occupant Protection Systems	
Seat Restraint System40-4	45
Airbag Supplemental Restraint System46-4	48
Vehicle Noise Regulations	50
Emission Control Modifications	54
Fuel System Evaporative Emissions 55-5	57

SAFETY/EMISSION (Continued)	Page Number
U.S. and Canada Safety Standards	
Completed/Altered Vehicles	58-61
F/CMVSS 105 Hydraulic Brake Compliance Guidelines for	
Altered E-Series and Ranger Vehicles	62-66
F/CMVSS 105 Hydraulic Brake Compliance Guidelines for	
Altered Super Duty F-Series Vehicles	
Incomplete Vehicles	70-75
TRUCK DATA	Page Number
Escape 4-Door — FWD/4x4	
Dimensional Data	76-77
Explorer	
Dimensional Data	
4-Door — 4x2/4x4	78-79
Sport - 2-Door — 4x2/4x4	
Sport Trac - 4-Door — 4x2/4x4	
Sport Trac Pickup Box Dimensions/Features	84
Axle/Tire/Vehicle Height Data	85
Tire Data	86
X and Z Datum Line Locations	87
Ranger	
Dimensional Data	
Regular Cab Styleside 4x2/4x4	88-89
SuperCab Styleside 4x2/4x4	90-91
Regular/SuperCab Flareside 4x2/4x4	92-93
Axle/Tire/Vehicle Height Data	94
Tire Data	95
X and Z Datum Line Locations	96
Fuel and Vapor System	97
Windstar	
Dimensional Data	98-103
Expedition 4-Door — 4x2/4x4	
Dimensional Data	104-105
Axle/Tire/Vehicle Height Data	106
T D . (-	407

Page 2 INDEX

2002
MODEL YEAR

TRUCK DATA (Continued)	Page Number
Excursion 4-Door — 4x2/4x4	
Dimensional Data	108-109
Axle/Tire/Vehicle Height Data	
Tire/Wheel Data	
E-Series/E-Series Super Duty	
Dimensional Data	
E-150/E-350 Super Duty Wagon 8/12 Passenger	112-113
E-350 Super Duty Extended Wagon 12/15-Passenger	
E-150/E-350 Super Duty Wagon 7-Passenger	
(Quad Captain's Chairs/3-Passenger Bench)	116-117
E-150/E-250/350 Super Duty Van	
E-150/E-250/350 Super Duty Crew Van	
Van/Wagon Axle/Tire/Vehicle Height Data	
Incomplete E-150/E-250/350 Super Duty Van with Recreational Trim	
E-350/450 Super Duty Stripped Chassis	
138" Wheelbase (SRW/DRW)	124-125
158" Wheelbase (SRW/DRW)	126-127
176" Wheelbase (DRW)	
Body Section	
Dimensional Data	
E-250 Super Duty Stripped Chassis 124" Wheelbase (SRW)	
E-350 Super Duty Stripped Chassis 138" Wheelbase (SRW/DRW)	133
E-350/450 Super Duty Stripped Chassis	404
158" Wheelbase (SRW/DRW)	
176" Wheelbase (DRW)	
Parking Brake Cable Attachment	136
E-350/450 Super Duty Cutaway/Stripped Chassis	407
All Wheelbase (SRW/DRW)	
Vehicle Height Data Super Duty Cutaway/Stripped Chassis	
Tire/Ground Clearance Data Stripped Chassis/Cutaway	
Cutaway/Stripped Chassis Fuel Filler Systems	140
E-350/450 Super Duty Cutaway/Stripped Chassis	
37/55-Gallon Aft-of-Axle Fuel Tank	
Trailer Tow/Lamp Plug and Wiring	142-145

TRUCK DATA (Continued)	Page Number
E 450 4 (2)/4 (4	
F-150 — 4x2/4x4	
Dimensional Data	146 147
Regular Cab Styleside	
SuperCab Styleside	
Regular Cab Flareside	
SuperCab Flareside	
4-Door SuperCrew Pickup	
4-Door SuperCrew Pickup Box Dimensions/Features	
Styleside Pickup Box Dimensions/Features	
Flareside Pickup Box Dimensions/Features	
X and Z Datum Line Locations	
Fuel and Vapor System Typical All Lengths F-150	
Axle/Tire/Vehicle Height Data - Regular/SuperCab	
Axle/Tire/Vehicle Height Data - SuperCrew	162
Tire Data	163
Super Duty F-250/350 Styleside Pickup — 4x2/4x4	
Dimensional Data	
Regular	164-165
SuperCab	166-167
Crew Cab	168-169
Pickup Box Dimensions/Features	170-171
Axle/Tire/Vehicle Height Data	
Regular	172-173
SuperCab	174-175
Crew Cab	
Super Duty F-350/450/550 — Chassis Cab — 4x2/4x4	
Dimensional Data	
Regular	178-179
SuperCab	
Crew Cab	
Axle/Tire/Vehicle Height Data	
Regular	184-185
SuperCab	
Crow Coh	100 107

Page 3 INDEX

2002
MODEL YEAR

TRUCK DATA (Continued)	Page Numbe
Super Duty F-350/450/550 — Chassis Cab — 4x2/4x4 (Continued)	
Ground Clearance Data	190-192
Frame Data Super Duty F-250/350 Styleside Pickup — Wide Frame	193
Pickup/Box Delete Exhaust/Fuel Systems — Wide Frame	194
Fuel Filler Pipe Location and Dimension	
Pickup Box Delete — Wide Frame	195
Chassis Cab	196
Frame Data - Chassis Cab - Narrow Frame	197-198
Chassis Cab Exhaust/Fuel System	199
F-Super Duty Class A Motor Home Chassis (F53)	
Chassis Dimensions	200
Fuel Filler Pipe Installation	201
Frame Crossmember (CM) Locations	202
Front Structure	203
Axle/Tire/Vehicle Height Data	204
Body and Special Equipment Installation Precautions	205-209

MEDIUM TRUCK DATA	Page Number
per Duty F-650/750	
Front/Rear Ride Heights/Wheel & Tire Data/Spring Ratings	210-211
Dimensional Data	
Regular Cab	212-213
SuperCab	214-215
Crew Cab	216-217
F-650 Lo-Pro Regular/SuperCab/Crew Cab Chassis	218
F-650 Super CrewZer Crew Cab	219
Air Tank Location	220
Battery Box Location	221
Fuel Tank Location	222
Frame Data	
8 K Front Axle Super Duty F-650 Super CrewZer	223
9 K Front Axle	224
12 K Front Axle	225
Front/Rear Suspension Crossmember Data	
8 K Front Axle Super Duty F-650 Super CrewZer	226
9 K Front Axle	227
12 K Front Axle	228
Exhaust System Diesel	
Caterpillar 3126B	229
Cummins 5.9L	230
Navistar 7.3L	231
Fixed Grille Installation	232
Transmission PTO/U-Joint Locations	233-234
Power Take-Off Data/Allison Transmission	235-238
Engine Power Take-Off Crankshaft Damper	239
Electrical Wiring Data	240-255
Air Brake System	
ABS Air Brake Schematic	256
Powerstroke Air Brake Schematic	257
Air Brake System Schematic/ABS and Trailer Package	258
Air Brake Schematic/ABS and Tractor Package	259
Air Brake Schematic for Super CrewZer	260
Non ABS Air Brake Schematic	261
Hydraulic Brake System (Typical)	262
Typical Hydraulic ABS Module Location	263

Page 4 INDEX

APPENDIX	Page Numbe
Snowplow Installation	
F-150	264-265
Super Duty F-Series	266-267
Tractor Fifth Wheel Mounting Procedure	268
Installation Guidelines	269-270
Manual Transmission	271
4R100 Automatic Transmission	272
Elevated Idle Control — Diesel Only	273-276
Electrical Wiring	
PTO Circuit Installation	277
Customer Access Circuits	278-279
Super Duty F-Series Trailer Tow/Second Unit Body Wiring Tap Schematic	280
General Practices	281-282
Powertrain Control System Application	283
Adding Lights or Electrical Devices	284-285
Design Recommendations	
Pickup Box Removal/Alterations	286-294
Second Unit Body Mounting	295-303
Fuel System	304-306
Cooling/Climate Control Systems	307
Exhaust System/Ford Body Components	308
Wheels/Tires/Suspension/Steering/Engine	309
Driveline/Transmission/Frame/Jack	310
Ambulance Builder Guidelines	311

New Vehicle Storage Guidelines312



ESCAPE MODEL LINEUP



Page 5 INTRODUCTION

				STANDARD				BASE CURB WEIGHT		
MODEL	SERIES	S CODE	WHEELBASE inches	ENGINE liters	STANDARD TRANSMISSION	GVWR pounds	PASSENGER CAPACITY	FRONT pounds	REAR pounds	TOTAL pounds
4X2	U01	XLS	400.4	2.0L I-4	5-Spd. Manual OD	4120	_	1797	1238	3035
(Front Wheel Drive) 4-Door	U03	XLT	103.1	3.0L V-6	4-Spd. Auto OD	4380	5	1963	1243	3206
4X4	U02	XLS		2.0L I-4	5-Spd. Manual OD	4260	_	1812	1340	3152
4-Door	U04	XLT	103.1	3.0L V-6	4-Spd. Auto OD	4520	5	2019	1345	3364

EXPLORER MODEL LINEUP

			CTANDADD					ВА	SE CURB WEIGH	1T ⁽²⁾
MODEL	SERIES CODE	WHEELBASE inches	STANDARD ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	TRANSFER CASE	PASSENGER CAPACITY	FRONT pounds	REAR pounds	TOTAL pounds
Explorer 4x2 4-Door	U62	113.8	4.0L SOHC V-6	5-Spd. Manual OD	5200	_	5/7	2227	1932	4159
Sport 4x2 2-Door	U60	101.8	4.0L SOHC V-6	5-Spd. Manual OD	4760	_	4	1998	1771	3769
Sport Trac 4x2 4-Door	U67	125.9	4.0L SOHC V-6	5-Spd. Manual OD	5660	_	5	2240	1851	4191
Explorer 4x4 4-Door	U72	113.8	4.0L SOHC V-6	5-Spd. Manual OD	5420	BW4410/11	5/7	2354	2020	4374
Sport 4x4 2-Door	U70	101.8	4.0L SOHC V-6	5-Spd. Manual OD	4920	BW1354	4	2145	1818	3963
Sport Trac 4x4 4-Door	U77	125.9	4.0L SOHC V-6	5-Spd. Manual OD	5840	BW1354	5	2410	1900	4310

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

⁽²⁾ Base curb weight is for standard equipment only.

⁽³⁾ Computer selected GVWR.

RANGER MODEL LINEUP

INTRODUCTION Page 6

									BA	SE CURB WEIGH	HT ⁽³⁾	PICKUP
RANGER MODEL	SERIES CODE	WHEELBASE inches	CA inches	STANDARD ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	MAXIMUM GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds	NOMINAL LENGTH feet
REGULAR CAB PIC	KUP											
4x2 SWB	R10	112	37.6	2.3L I-4	5-Spd. Manual OD	4700 4680	_	1260 1640	1730	1265	2995	6
4x2 LWB	R10	118	43.5	2.3L I-4	5-Spd. Manual OD	4700	_	1610	1740	1321	3061	7
Electric 4x2 SWB	R10	112	37.6	_	_	5400	_	650	2398	2312	4710	6
4x4 SWB	R11	112	37.6	3.0L V-6	5-Spd. Manual OD	4980	BW1354	1540	2057	1377	3434	6
4x4 LWB	R11	118	43.6	3.0L V-6	5-Spd. Manual OD	4760 5020	- BW1354	1260 1520	2078	1422	3500	7
SUPERCAB STYLE	SIDE PICKUR	P										
4x2 LWB	R14 R44	126	37.7	2.3L I-4	5-Spd. Manual OD	4940	_	1260	1802	1364	3166	6
4x4 LWB	R15 R45	126	37.8	3.0L V-6	5-Spd. Manual OD	5440	BW1354	1260	2155	1439	3594	6

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

⁽²⁾ Includes weight of driver, passengers and optional equipment.(3) Base curb weight is for standard equipment only.

EXPEDITION MODEL LINEUP



Page 7 INTRODUCTION

			STANDARD		MAXIMUM		BA	SE CURB WEIGH	T ⁽²⁾
EXPEDITION MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	PASSENGER CAPACITY	FRONT pounds	REAR pounds	TOTAL pounds
4x2	U15/U17	119	4.6L V-8	4-Spd. Auto. OD (4R70W)	7000	8, 9	2555	2354	4909
4x4	U16/U18	119	4.6L V-8	4-Spd. Auto. OD (4R70W)	7200	8, 9	2833	2464	5297

 ⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.
 (2) Base curb weight is for standard equipment only.

EXCURSION MODEL LINEUP

			STANDARD		MAXIMUM		ВА	SE CURB WEIGH	T ⁽²⁾
EXCURSION MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	PASSENGER CAPACITY	FRONT pounds	REAR pounds	TOTAL pounds
4x2	U40/U42	137	5.4L V-8	4-Spd. Auto. OD (4R100)	8900	8, 9	3203	3374	6577
4x4	U41/U43	137	6.8L V-10	4-Spd. Auto. OD (4R100)	9200	8, 9	3568	3549	7117

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas. (2) Base curb weight is for standard equipment only.

E-SERIES VAN MODEL LINEUP



INTRODUCTION Page 8

E-SERIES/			STANDARD		MIN./MAX.		ВА	SE CURB WEIGH	IT ⁽²⁾
E-SERIES SUPER DUTY MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION	GVWR pounds	PASSENGER CAPACITY	FRONT pounds	REAR pounds	TOTAL pounds
REGULAR/SUPER WAGON									
E-150 Wagon	E11	138	4.2L V-6	4-Spd. Auto. OD (4R70W)	7000	7, 8	2807	2311	5118
E-350 Super Duty Wagon	E31	138	5.4L V-8	4-Spd. Auto. OD (4R70W)	8600/8700	7, 12	3020	2534	5554
E-350 Super Duty	004	400	5.41.1/.0	4-Spd. Auto. OD	9300	12	2978	3147	6125
Extended Wagon	S31	138	5.4L V-8	(4R100)	9100 / 9400	15	2954	3258	6212

			STANDARD		MAXIMUM	MAXIMUM	ВА	SE CURB WEIGH	T ⁽²⁾
E-SERIES MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION	GVWR pounds	PAYLOAD ⁽³⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds
REGULAR/SUPER VAN									
E-150 Van	E14	138	4.2L V-6	4-Spd. Auto. OD (4R70W)	6700/7000 ⁽⁴⁾	1905/2155 ⁽⁴⁾ 1715 ⁽⁵⁾	2728/2739 ⁽⁴⁾ 2878 ⁽⁵⁾	2067/2102 ⁽⁴⁾ 2104 ⁽⁵⁾	4795/4841 ⁽⁴⁾ 4982 ⁽⁵⁾
E-250 Van	E24	138	4.2L V-6 5.4L V-8 ⁽⁴⁾	4-Spd. Auto. OD (4R70W)	8600/7900 ⁽⁴⁾	3330/2560 ⁽⁴⁾ 3140 ⁽⁵⁾	2892/3000 ⁽⁴⁾ 3042 ⁽⁽⁵⁾	2378/2340 ⁽⁴⁾ 2418 ⁽⁵⁾	5270/5340 ⁽⁴⁾ 5460 ⁽⁵⁾
E-250 Extended Van	S24	138	4.2L V-6 5.4L V-8 ⁽⁴⁾	4-Spd. Auto. OD (4R70W)	8600/7500 ⁽⁴⁾	3200/2025 ⁽⁴⁾ 3010 ⁽⁵⁾	2792/2879 ⁽⁴⁾ 3059 ⁽⁵⁾	2607/2592 ⁽⁴⁾ 2652 ⁽⁵⁾	5399/5471 ⁽⁴⁾ 5711 ⁽⁵⁾
E-350 Super Duty Van	E34	138	5.4L V-8	4-Spd. Auto. OD (4R100)	9500	4025 3835 ⁽⁵⁾	3024 3174 ⁽⁵⁾	2448 2488 ⁽⁵⁾	5472 5662 ⁽⁵⁾
E-350 Super Duty Extended Van	S34	138	5.4L V-8	4-Spd. Auto. OD (4R100)	9400	3780 3440 ⁽⁵⁾	2932 3087 ⁽⁵⁾	2684 2720 ⁽⁵⁾	5616 5807 ⁽⁵⁾

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

⁽²⁾ Base curb weight is for standard equipment only.
(3) Includes weight of driver, passengers and optional equipment.
(4) RV Conversion

⁽⁵⁾ Crew Van

2002 MODEL YEAR

E-SERIES SUPER DUTY CUTAWAY & STRIPPED CHASSIS MODEL LINEUP

Page 9 INTRODUCTION

			STANDARD		MAXIMUM	MAXIMUM	ВА	SE CURB WEIGH	IT ⁽²⁾
E-SERIES MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION	GVWR pounds	PAYLOAD ⁽³⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds
CUTAWAY		•		•	-		•	•	•
E-350 Super Duty Cutaway	E35	138	5.4L V-8/ 7.3L V-8 ⁽⁴⁾	4-Spd. Auto OD (4R100)	9600 SRW 10,700/10,000 ⁽⁴⁾ DRW	4820 5790/4510 ⁽⁴⁾	2880 2894/3384 ⁽⁴⁾	1899 2014/2104 ⁽⁴⁾	4779 4908/5488 ⁽⁴⁾
		158	5.4L V-8	4-Spd. Auto OD (4R100)	11,500 DRW	6520	2936	2041	4977
		176	5.4L V-8	4-Spd. Auto OD (4R100)	11,500 DRW	6500	3008	1989	4997
E-450 Super Duty Cutaway	E45	158	6.8L V-10/ 7.3L V-8 ⁽⁵⁾	4-Spd. Auto OD (4R100)	14,050/14,000 ⁽⁵⁾ DRW	8460/7940 ⁽⁵⁾	3070/3471(5)	2520/2587(5)	5590/6058 ⁽⁵⁾
		176	6.8L V-10/ 7.3L V-8 ⁽⁵⁾	4-Spd. Auto OD (4R100)	14,050/14,000 ⁽⁵⁾ DRW	8435/7915(5)	3142/3543(5)	2472/2539(5)	5614/6082 ⁽⁵⁾
STRIPPED CHASSIS									l .
E-250 Super Duty Stripped Chassis	E29	124	4.2L V-6	4-Spd. Auto OD (4R100)	8600 SRW	5130	2070	1399	3469
E-350 Super Duty Stripped Chassis	E39	138	5.4L V-8	4-Spd. Auto OD (4R100)	9600 SRW 10,000 DRW	5620 5755	2160 2169	1816 2076	3976 4245
		158	5.4L V-8	4-Spd. Auto OD	9600 SRW	5535	2269 2281	1795	4064
		176	5.4L V-8	(4R100) 4-Spd. Auto OD (4R100)	11,000 DRW 11,000 DRW	6680 6648	2278	2035 2074	4316 4352
E-450 Super Duty Stripped Chassis	E49	158 176	5.4L V-8	4-Spd. Auto OD (4R100)	14,050 DRW	9485 9490	2260 2318	2304 2241	4564 4559

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

⁽²⁾ Base curb weight is for standard equipment only.

⁽³⁾ Includes weight of driver, passengers and optional equipment.

⁽⁴⁾ School Bus - 7.3L Diesel only.

⁽⁵⁾ California only.

F-150 MODEL LINEUP



Page 10 INTRODUCTION

								BAS	SE CURB WEIGI	HT ⁽³⁾	
F-SERIES MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	TRANSMISSION ⁽¹⁾	MIN-MAX GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds	PICKUP BOX NOMINAL LENGTH feet
REGULAR CAB FL	ARESIDE P	ICKUP									
F-150 4x2	F07	119.9	4.2L V-6	5-Spd. Manual OD	6050	_	2045	2264	1738	4002	6½
F-150 4x2	F07	119.9	4.6L V-8	5-Spd. Manual OD	6050	_	1995	2335	1716	4051	6½
F-150 4x2	F07	119.9	5.4L V-8	4-Spd. Auto OD	6050	_	1865	2410	1775	4185	61/2
F-150 4x4	F08	120.2	4.2L V-6	5-Spd. Manual OD	6050	Warner 44-06	1690	2513	1844	4357	6½
F-150 4x4	F08	120.2	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1845	2585	1816	4401	61/2
F-150 4x4	F08	120.2	5.4L V-8	4-Spd. Auto OD	6300	Warner 44-06	1765	2658	1876	4534	6½
REGULAR CAB ST	YLESIDE PI	ICKUP									
F-150 4x2	F17	119.9	4.2L V-6	5-Spd. Manual OD	6050	_	2060	2257	1733	3990	61/2
F-150 4x2	F17	119.9	4.6L V-8	5-Spd. Manual OD	6050	_	2010	2328	1711	4039	6½
F-150 4x2	F17	119.9	5.4L V-8	4-Spd. Auto OD	6050	_	1875	2403	1770	4173	61/2
F-150 4x2	F17	138.5	4.2L V-6	5-Spd. Manual OD	6050	_	1985	2326	1738	4064	8
F-150 4x2	F17	138.5	4.6L V-8	5-Spd. Manual OD ⁽⁴⁾	6050/6600	_	1900/2370	2410	1740	4150	8
F-150 4x2	F17	138.5	5.4L V-8	4-Spd. Auto OD	6050/6600	_	1760/2265	2493	1793	4286	8
F-150 4x2	F17	138.5	5.4L V-8	4-Spd. Auto OD	7700	_	3150	2606	1943	4549	8
F-150 4x2	F17	138.5	5.4L V-8 NGV	4-Spd. Auto OD	7650	_	2685	2851	2111	4962	8
F-150 4x4	F18	120.2	4.2L V-6	5-Spd. Manual OD	6050	Warner 44-06	1705	2506	1839	4345	61/2
F-150 4x4	F18	120.2	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1860	2578	1811	4389	6½
F-150 4x4	F18	120.2	5.4L V-8	4-Spd. Auto OD	6300	Warner 44-06	1775	2651	1871	4522	6½
F-150 4x4	F18	138.8	4.2L V-6	5-Spd. Manual OD	6050	Warner 44-06	1635	2593	1822	4415	8
F-150 4x4	F18	138.8	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1745	2679	1823	4502	8
F-150 4x4	F18	138.8	5.4L V-8	4-Spd. Auto OD	6300	Warner 44-06	1660	2760	1877	4637	8
F-150 4x4	F18	138.8	5.4L V-8	4-Spd. Auto OD	7700	Warner 44-06	2810	2874	2014	4888	8

Engine/transmission combinations may not be available on all models, or in all areas.
 Includes weight of driver, passengers and optional equipment.
 Base curb weight is for standard equipment only.
 4-Spd. Auto OD with 6600 GVWR.

F-150 MODEL LINEUP



Page 11 INTRODUCTION

								BAS	E CURB WEIG	HT ⁽³⁾	
F-SERIES MODEL	SERIES CODE	WHEELBASE inches	ENGINE ⁽¹⁾ liters	TRANSMISSION ⁽¹⁾	MIN-MAX GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds	PICKUP BOX NOMINAL LENGTH feet
SUPERCAB FLARE	SIDE PICK	ÜP									
F-150 4x2	X07	138.5	4.2L V-6	5-Spd. Manual OD	6050	_	1810	2380	1856	4236	6½
F-150 4x2	X07	138.5	4.6L V-8	5-Spd. Manual OD	6050	_	1725	2464	1858	4322	6½
F-150 4x2	X07	138.5	5.4L V-8	4-Spd. Auto OD	6300	_	1840	2547	1911	4458	6½
F-150 4x4	X08	138.8	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1595	2715	1936	4651	6½
F-150 4x4	X08	138.8	5.4L V-8	4-Spd. Auto OD	6500	Warner 44-06	1710	2796	1990	4786	6½
SUPERCAB STYLE	SIDE PICK	JP									
F-150 4x2	X17	138.5	4.2L V-6	5-Spd. Manual OD	6050	_	1825	2373	1851	4224	6½
F-150 4x2	X17	138.5	4.6L V-8	5-Spd. Manual OD	6050	_	1740	2457	1853	4310	6½
F-150 4x2	X17	138.5	5.4L V-8	4-Spd. Auto OD	6300	_	1850	2540	1906	4446	61/2
F-150 4x2	X17	138.5	5.4L V-8	4-Spd. Auto OD	7700	_	3010	2652	2034	4686	61/2
F-150 4x2	X17	157.1	4.6L V-8	5-Spd. Manual OD	6050	_	1560	2581	1906	4487	8
F-150 4x2	X17	157.1	5.4L V-8	4-Spd. Auto OD	6300	_	1675	2661	1964	4625	8
F-150 4x4	X18	138.8	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1610	2708	1931	4639	6½
F-150 4x4	X18	138.8	5.4L V-8	4-Spd. Auto OD	6500	Warner 44-06	1725	2789	1985	4774	6½
F-150 4x4	X18	138.8	5.4L V-8	4-Spd. Auto OD	7700	Warner 44-06	2670	2916	2114	5030	6½
F-150 4x4	X18	157.4	4.6L V-8	5-Spd. Manual OD	6250	Warner 44-06	1475	2833	1938	4771	8
F-150 4x4	X18	157.4	5.4L V-8	4-Spd. Auto OD	6500	Warner 44-06	1550	2926	2022	4948	8
SUPERCREW PICK	UP										
F-150 4x2	W07	138.5	4.6L V-8	4-Spd. Auto OD	6350	_	1695	2648	2007	4655	5½
F-150 4x2	W07	138.5	5.4L V-8	4-Spd. Auto OD	6600	_	1840	2705	2053	4758	5½
F-150 4x4	W08	138.8	4.6L V-8	4-Spd. Auto OD	6500	Warner 44-06	1440	2846	1961	4807	5½
F-150 4x4	W08	138.8	5.4L V-8	4-Spd. Auto OD	6750	Warner 44-06	1555	2924	2018	4942	5½

 ⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.
 (2) Includes weight of driver, passengers and optional equipment.
 (3) Base curb weight is for standard equipment only.

SUPER DUTY F-250/350 STYLESIDE PICKUP MODEL LINEUP



INTRODUCTION Page 12

				074ND 4 DD					BAS	SE CURB WEIGH	T(3)	PICKUP
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	STANDARD ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	MAXIMUM GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds	BOX NOMINA LENGTH feet
REGULAR CAB STYL	ESIDE PICK	UP	1								I	
F-250 4x2 SRW	F20	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	_	3440	3040	2316	5376	8
F-250 4x4 SRW	F21	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	NV271	2940	3466	2391	5857	8
F-350 4x2 SRW	F30	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	_	4410/4250 ⁽⁴⁾	3144/3112 ⁽⁴⁾	2342/2334 ⁽⁴⁾	5486/5446 ⁽⁴⁾	8
F-350 4x4 SRW	F31	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	NV271	4045/3880 ⁽⁴⁾	3458/3423 ⁽⁴⁾	2393/2394(4)	5851/5817 ⁽⁴⁾	8
F-350 4x2 DRW	F32	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾	_	5455/5090 ⁽⁴⁾	3140/3248 ⁽⁴⁾	2605/2662(4)	5745/5910 ⁽⁴⁾	8
F-350 4x4 DRW	F33	137	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾	NV271	5045/4665 ⁽⁴⁾	3475/3585 ⁽⁴⁾	2680/2749(4)	6155/6334 ⁽⁴⁾	8
SUPERCAB STYLESII	DE PICKUP		L			ı					<u> </u>	
5 050 4 0 0DW	. Voo	141.8	40	5.4L V-8	6-Spd. Manual OD	8800	_	3215	3189	2396	5585	63/4
F-250 4x2 SRW	X20	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	_	2995	3299	2504	5803	8
		141.8	40	5.4L V-8	6-Spd. Manual OD	8800	NV271	2815	3536	2446	5982	63/4
F-250 4x4 SRW	X21	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	NV271	2585	3655	2558	6213	8
		141.8	40	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	_	4290/4110 ⁽⁴⁾	3209/3184 ⁽⁴⁾	2401/2403 ⁽⁴⁾	5610/5587 ⁽⁴⁾	63/4
F-350 4x2 SRW	X30	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	_	4070/3895(4)	3319/3294 ⁽⁴⁾	2509/2507 ⁽⁴⁾	5828/5801 ⁽⁴⁾	8
		141.8	40	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	NV271	3920/3755 ⁽⁴⁾	3528/3494 ⁽⁴⁾	2448/2449 ⁽⁴⁾	5976/5943 ⁽⁴⁾	63/4
F-350 4x4 SRW	X31	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	NV271	3690/3525(4)	3647/3615 ⁽⁴⁾	2560/2558 ⁽⁴⁾	6207/6173 ⁽⁴⁾	8
F-350 4x2 DRW	X32	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	_	5125/4745 ⁽⁴⁾	3370/3486 ⁽⁴⁾	2705/2769 ⁽⁴⁾	6075/6255 ⁽⁴⁾	8
F-350 4x4 DRW	X33	158	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	NV271	4770/4395 ⁽⁴⁾	3670/3780 ⁽⁴⁾	2759/2822 ⁽⁴⁾	6489/6602 ⁽⁴⁾	8

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.
(2) Includes weight of driver, passengers and optional equipment.

NOTE: ♦ — SEE CHART ON FOLLOWING PAGE FOR 7.3L V-8 DIESEL ENGINE WEIGHT RATINGS.

⁽³⁾ Base curb weight is for standard equipment only.

⁽⁴⁾ California only.

⁽⁵⁾ Available with Pickup Box Delete Regular Production Option (RPO).

SUPER DUTY F-250/350 STYLESIDE PICKUP MODEL LINEUP



Page 13 INTRODUCTION

				STANDARD		MAXIMUM		MAXIMUM	ВА	SE CURB WEIGH	T(3)	PICKUP BOX NOMINAL
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	TRANSFER CASE	PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds	LENGTH feet
CREW CAB STYLESID	E PICKUP	•				1		1	l	•	l	
E 250 4v2 CDW	14/20	156.2	40	5.4L V-8	6-Spd. Manual OD	8800	_	2930	3322	2548	5870	63/4
F-250 4x2 SRW	W20	172.4	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	_	2760	3429	2610	6039	8
F 250 4v4 CDW	W21	156.2	40	5.4L V-8	6-Spd. Manual OD	8800	NV271	2525	3666	2607	6273	63/4
F-250 4x4 SRW	VVZ1	172.4	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	8800	NV271	2390	3766	2643	6409	8
F-350 4x2 SRW	W30	156.2	40	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	_	4005/3825 ⁽⁴⁾	3342/3318 ⁽⁴⁾	2553/2553 ⁽⁴⁾	5895/5871 ⁽⁴⁾	63/4
F-350 4X2 SRVV	W30	172.4	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	_	3835/3660 ⁽⁴⁾	3449/3428 ⁽⁴⁾	2615/2612 ⁽⁴⁾	6064/6040 ⁽⁴⁾	8
F-350 4x4 SRW	W31	156.2	40	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	NV271	3630/3470 ⁽⁴⁾	3658/3624 ⁽⁴⁾	2609/2604 ⁽⁴⁾	6267/6228 ⁽⁴⁾	63/4
F-350 4X4 SRVV	WSI	172.4	56.2 ⁽⁵⁾	5.4L V-8	6-Spd. Manual OD	9900/9700 ⁽⁴⁾	NV271	3495/3330 ⁽⁴⁾	3758/3726 ⁽⁴⁾	2645/2640 ⁽⁴⁾	6403/6366 ⁽⁴⁾	8
F 250 4v2 DDW	W32	156.2	40	6.8L V-10	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	_	4900/4725 ⁽⁴⁾	3536/3518 ⁽⁴⁾	2763/2756 ⁽⁴⁾	6299/6274 ⁽⁴⁾	63/4
F-350 4x2 DRW	VV32	172.4	56.2 ⁽⁵⁾	6.8L V-10	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	_	4675/4500 ⁽⁴⁾	3632/3614 ⁽⁴⁾	2891/2884 ⁽⁴⁾	6523/6498 ⁽⁴⁾	8
F 250 4v4 DDW	\\/\20	156.2	40 ⁽⁵⁾	6.8L V-10	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	NV271	4565/4395 ⁽⁴⁾	3812/3788 ⁽⁴⁾	2823/2815 ⁽⁴⁾	6635/6603 ⁽⁴⁾	63/4
F-350 4x4 DRW	W33	172.4	56.2 ⁽⁵⁾	6.8L V-10	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ◆	NV271	4240/4075 ⁽⁴⁾	3976/3950 ⁽⁴⁾	2984/2975 ⁽⁴⁾	6960/6925 ⁽⁴⁾	8

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

SUPER DUTY F-350 DRW STYLESIDE WITH 7.3L V-8 DIESEL ENGINE (49 STATES, CALIFORNIA REMAINS AT 11,000 LB GVWR)

					MIN-MAX				CURB WEIGHT(2)	1
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	ENGINE liters	TRANSMISSION	GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽¹⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds
REGULAR CAB	1									
F-350 4x2 DRW	F32	137	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	_	5145/6145	3665	2673	6353
F-350 4x4 DRW	F33	137	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	NV271	4715/5715	4013	2764	6785
SUPERCAB	1				1					
F-350 4x2 DRW	X32	158	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	_	4800/5800	3902	2779	6696
F-350 4x4 DRW	X33	158	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	NV271	4440/5440	4208	2833	7056
CREW CAB	1				1					
E 250 4v2 DDW	Waa	156.2	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	_	4780/5780	3935	2781	6716
F-350 4x2 DRW	W32	172.4	7.3L V-8	4-Spd. Auto OD	11,500	_	4560	4031	2908	6939
E 250 4v4 DDW	Waa	156.2	7.3L V-8	4-Spd. Auto OD	11,500/12,500 ⁽³⁾	NV271	4445/5445	4216	2839	7055
F-350 4x4 DRW	W33	172.4	7.3L V-8	4-Spd. Auto OD	11,500	NV271	4120	4379	2999	7378

⁽¹⁾ Includes weight of driver, passengers and optional equipment. Payloads shown are with 4-speed Auto OD transmission (payloads will be less with 6-speed Manual OD transmission).

⁽²⁾ Includes weight of driver, passengers and optional equipment.

⁽³⁾ Base curb weight is for standard equipment only.

⁽⁴⁾ California only.

⁽⁵⁾ Available with Pickup Box Delete Regular Production Option (RPO).

⁽²⁾ Curb weight is for standard equipment and 7.3L V-8/4-speed Auto OD transmission. Curb weight will be greater with 6-speed Manual OD transmission.

SUPER DUTY F-350/450/550 CHASSIS CAB MODEL LINEUP



Page 14 INTRODUCTION

				STANDARD		MIN-MAX			ВА	SE CURB WEIGH	IT (3)
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	ENGINE(1) liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds 3024/3141 ⁽⁴⁾ 3401/3513 ⁽⁴⁾ 3231/3088 ⁽⁴⁾ 3346/3202 ⁽⁴⁾ 3672/3535 ⁽⁴⁾ 3728/3584 ⁽⁴⁾ 3469 3582 3622 3814 3721 3855 3907 4083 3435 3553 3593 3753 3705 3835 3887	REAR pounds	TOTAL pounds
REGULAR CHASSIS				l	ı	•					l
F-350 4x2 SRW	F34	140.8	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)		4820/4510 ⁽⁴⁾	3024/3141(4)	2055/2046(4)	5079/5187(4)
F-350 4x4 SRW	F35	140.8	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)	NV271	4385/4085(4)		2113/2100(4)	5514/5613 ⁽⁴⁾
F-350 4x2 DRW	F36	140.8	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦		5620/5620 ⁽⁴⁾	3231/3088(4)	2347/2291(4)	5578/5379 ⁽⁴⁾
1 -330 +XZ DIVV	1 30	164.8	84	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦		5520/5520(4)	3346/3202(4)	2333/2276(4)	5679/5478(4)
E 250 4v4 DDW	F37	140.8	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦	NV271	5160/5140 ⁽⁴⁾	3672/3535(4)	2364/2321(4)	6036/5856(4)
F-350 4x4 DRW	F3/	164.8	84	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦	NV271	5045/5045(4)	3728/3584(4)	2426/2370(4)	6154/5954 ⁽⁴⁾
		140.8	60	6.8L V-10	6-Spd. Manual OD	15,000		8745	3469	2786	6255
E 450 4 0 DDW	E40	164.8	84	6.8L V-10	6-Spd. Manual OD	15,000		8640	3582	2775	6357
F-450 4x2 DRW	F46	188.8	108	6.8L V-10	6-Spd. Manual OD	15,000		8570	3622	2808	6430
		200.8	120	6.8L V-10	6-Spd. Manual OD	15,000		8330	3814	2853	6667
		140.8	60	6.8L V-10	6-Spd. Manual OD	15,000	NV271	8435	3721	2844	6565
		164.8	84	6.8L V-10	6-Spd. Manual OD	15,000	NV271	8325	3855	2818	6673
F-450 4x4 DRW	4 DRW F47	188.8	108	6.8L V-10	6-Spd. Manual OD	15,000	NV271	8240	3907	2849	6756
		200.8	120	6.8L V-10	6-Spd. Manual OD	15,000	NV271	7990	4083	2926	7009
		140.8	60	6.8L V-10	4-Spd. Auto OD	17,500		11,190	3435	2872	6307
		164.8	84	6.8L V-10	4-Spd. Auto OD	17,500/19,000		11,090/12,600	3553	2857	6410
F-550 4x2 DRW	F56	188.8	108	6.8L V-10	4-Spd. Auto OD	17,500		11,015	3593	2890	6483
		200.8	120	6.8L V-10	4-Spd. Auto OD	17,500/19,000		10,790/12,180(4)	3753	2954	6707
		140.8	60	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10,865	3705	2928	6633
		164.8	84	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10,750	3835	2912	6747
F-550 4x4 DRW	F57	188.8	108	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10,670	3887	2943	6830
		200.8	120	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10,450	4053	2997	7050
SUPER CHASSIS C	AB					·		i i			
F-350 4x2 SRW	X34	161.8	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)		4465/4150 ⁽⁴⁾	3229/3347(4)	2203/2203(4)	5432/5550(4)
F-350 4x4 SRW	X35	161.8	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)	NV271	4030/3720(4)	3622/3734(4)	2245/2242(4)	5867/5976(4)
F-350 4x2 DRW	X36	161.8	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦		5265/5255 ⁽⁴⁾	3438/3302(4)	2494/2439(4)	5932/5741 ⁽⁴⁾
F-350 4x4 DRW	X37	161.8	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000 ⁽⁴⁾ ♦	NV271	4855/4845 ⁽⁴⁾	3830/3694(4)	2514/2459(4)	6344/6153(4)
F-450 4x2 DRW	X46	161.8	60	6.8L V-10	6-Spd. Manual OD	15,000		8405	3626	2968	6594
F-450 4x4 DRW	X47	161.8	60	6.8L V-10	6-Spd. Manual OD	15,000	NV271	7990	4018	2988	7006
F-550 4x2 DRW	X56	161.8	60	6.8L V-10	4-Spd. Auto OD	17,500		10,850	3597	3050	6647
F-550 4x4 DRW	X57	161.8	60	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10,420	3998	3082	7080

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

⁽²⁾ Includes weight of driver, passengers and optional equipment.

⁽³⁾ Base curb weight is for standard equipment only.

⁽⁴⁾ California only.

SUPER DUTY F-350/450/550 CHASSIS CAB MODEL LINEUP



Page 15 INTRODUCTION

						MIN-MAX				CURB WEIGHT(3)
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches		ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION(1)	GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds
CREW CHASSIS CA	B				•						
F-350 4x2 SRW	W34	176.2	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)	_	4265/3950(4)	3364/3483(4)	2268/2267(4)	5632/5750(4)
F-350 4x4 SRW	W35	176.2	60	5.4L V-8	6-Spd. Manual OD	9900/9700(4)	NV271	3815/3510 ⁽⁴⁾	3755/3868(4)	2326/2322(4)	6081/6190(4)
F-350 4x2 DRW	W36	176.2	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦		5080/5075(4)	3546/3410(4)	2570/2515 ⁽⁴⁾	6116/5925(4)
F-350 4x2 DRW	W37	176.2	60	6.8L V-10	6-Spd. Manual OD	11,200/11,000(4) ♦	NV271	4620/4610(4)	3960/3824(4)	2617/2562(4)	6577/6386(4)
F-450 4x2 DRW	W46	176.2	60	6.8L V-10	6-Spd. Manual OD	15,000		8175	3789	3032	6821
F-450 4x2 DRW	W46	200.2	84	6.8L V-10	6-Spd. Manual OD	15,000	_	8100	3829	3068	6897
F-450 4x4 DRW	W47	176.2	60	6.8L V-10	6-Spd. Manual OD	15,000	NV271	7855	4083	3060	7143
F-450 4x4 DRW	W47	200.2	84	6.8L V-10	6-Spd. Manual OD	15,000	NV271	7770	4135	3094	7229
F-550 4x2 DRW	W56	176.2	60	6.8L V-10	4-Spd. Auto OD	17,500		10,610	3790	3097	6887
F-550 4x2 DRW	W56	200.2	84	6.8L V-10	4-Spd. Auto OD	17,500		10,535	3829	3134	6963
F-550 4x4 DRW	W57	176.2	60	6.8L V-10	4-Spd. Auto OD	17,500	NV271	10.285	4060	3154	7214
F-550 4x4 DRW	W57	200.2	84	6.8L V-10	4-Spd. Auto OD	17,500	NV271	TBD	TBD	TBD	TBD

⁽¹⁾ Engine/transmission combinations may not be available on all models, or in all areas.

NOTE: ♦ — SEE CHART BELOW FOR 7.3L V-8 DIESEL ENGINE WEIGHT RATINGS.

SUPER DUTY F-350 CHASSIS CAB WITH 7.3L V-8 DIESEL ENGINE (12,500 LB GVWR)

						MIN-MAX				CURB WEIGHT(3)	
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	ENGINE ⁽¹⁾ liters	STANDARD TRANSMISSION ⁽¹⁾	GVWR pounds	TRANSFER CASE	MAXIMUM PAYLOAD ⁽²⁾ pounds	FRONT pounds	REAR pounds	TOTAL pounds
REGULAR CHASSIS	CAB			•							
E 050 4 0 DDW	F00	140.8	60	7.3L V-8	4-Spd. Auto OD	12,500		6545	3599	2356	5955
F-350 4x2 DRW	F36	164.8	84	7.3L V-8	4-Spd. Auto OD	12,500	_	6395	3741	2362	6103
E 050 4 4 BBW	F07	140.8	60	7.3L V-8	4-Spd. Auto OD	12,500	NV271	6030	4066	2403	6469
F-350 4x4 DRW	F37	164.8	84	7.3L V-8	4-Spd. Auto OD	12,500	NV271	5915	4126	2459	6585
SUPER CHASSIS CA	AB			•	1		1	-		•	
F-350 4x2 DRW	X36	161.8	60	7.3L V-8	4-Spd. Auto OD	12,500		6130	3840	2526	6366
F-350 4x4 DRW	X37	161.8	60	7.3L V-8	4-Spd. Auto OD	12,500	NV271	5715	4234	2550	6784
CREW CHASSIS CA	ΔB			•	1		1	-		•	
F-350 4x2 DRW	W36	176.2	60	7.3L V-8	4-Spd. Auto OD	12,500	_	6000	3949	2550	6499
F-350 4x4 DRW	W37	176.2	60	7.3L V-8	4-Spd. Auto OD	12,500	NV271	5485	4365	2650	7015

⁽¹⁾ Includes weight of driver, passengers and optional equipment. Payloads shown are with 4-speed Auto OD transmission (payloads will be less with 6-speed Manual OD transmission).

⁽²⁾ Includes weight of driver, passengers and optional equipment.

⁽³⁾ Base curb weight is for standard equipment only.

⁽⁴⁾ California only.

⁽²⁾ Curb weight is for standard equipment and 7.3L V-8/4-speed Auto OD transmission. Curb weight will be greater with 6-speed Manual OD transmission.

CLASS A MOTOR HOME CHASSIS MODEL LINEUP

Page 16 INTRODUCTION

SUPER DUTY F-SERIES CLASS A MOTOR HOME CHASSIS (F-53)

			STANDARD						CURB WEIGHT(1)	
MODEL	SERIES CODE	WHEELBASE inches	ENGINE liters	STANDARD TRANSMISSION	GVWR pounds	TRANSFER CASE	PAYLOAD pounds	FRONT pounds	REAR pounds	TOTAL pounds
		178			15,700	_	10,054	3091	2555	5646
		190			15,700	_	9995	3132	2573	5705
		178			18,000	_	12,279	3120	2601	5721
F-SUPEK DUTT		190		4-Spd. Auto OD (4R100)		_	12,209	3157	2634	5791
CLASS A		208	6.8L V-10			_	12,131	3208	2661	5869
MOTOR HOME	F53	228	0.6L V-10			_	12,053	3250	2697	5947
CHASSIS		208				_	14,559	3228	2713	5941
		228			20,500	_	14,481	3270	2749	6019
		208			22.000	_	16,039	3228	2733	5961
		228			22,000	_	15,961	3270	2769	6039

⁽¹⁾ Base curb weight is for standard equipment only.

F-650/750 SUPER DUTY MODEL LINEUP



Page 17 INTRODUCTION

				OTANDA DD			BA A VIBALIBA	BA	SE CURB WEIGH	HT ⁽²⁾
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	STANDARD ENGINE liters	STANDARD TRANSMISSION	GVWR pounds	MAXIMUM PAYLOAD (1) pounds	FRONT pounds	REAR pounds 3321 3441 3500 3634 3770 3617 3737 3796 3930 4066 3928 4066 4122 4267	TOTAL pounds
REGULAR CHASSIS	CAB			-1						1
F-650 4x2 DRW	F65	158	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	17,290	5385	3321	8706
	F65	182	108	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	17,125	5431	3441	8872
	F65	194	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	17,035	5463	3500	8963
	F65	230	156	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,835	5531	3634	9165
	F65	260	186	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,630	5599	3770	9369
F-750 4x2 DRW	F75	158	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,845	5537	3617	9154
	F75	182	108	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,680	5583	3737	9320
	F75	194	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,585	5615	3796	9411
	F75	230	156	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,385	5683	3930	9613
	F75	260	186	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,180	5751	4066	9817
	F75	158	84	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,770	6299	3928	10,227
	F75	182	108	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,595	6337	4066	10,403
	F75	194	120	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,510	6365	4122	10,487
	F75	230	156	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,310	6423	4267	10,690
	F75	260	186	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,085	6481	4430	10,911

⁽¹⁾ Includes weight of driver, passengers and optional equipment. (2) Base curb weight is with standard equipment only.

F-650/750 SUPER DUTY MODEL LINEUP



Page 18 INTRODUCTION

				STANDARD			MAXIMUM	ВА	SE CURB WEIGH	IT ⁽²⁾
SUPER DUTY F-SERIES MODEL	SERIES CODE	WHEELBASE inches	CA inches	ENGINE liters	STANDARD TRANSMISSION	GVWR pounds	PAYLOAD (1) pounds	FRONT pounds	pounds pounds 3460 893 3603 914 3794 944 3756 938 3899 959 4090 989 4085 10,4 4235 10,6 4454 10,9 3510 905 3644 925 3780 946 3806 950 3940 970 4076 990	TOTAL pounds
SUPER CAB CHASS	IS CAB									1
F-650 4x2 DRW	X65	179	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	17,065	5474	3460	8934
	X65	215	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,850	5543	3603	9146
	X65	260	165	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,555	5649	3794	9443
F-750 4x2 DRW	X75	179	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,615	5626	3756	9382
	X75	215	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,405	5695	3899	9594
	X75	260	165	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,105	5801	4090	9891
	X75	179	84	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,530	6382	4085	10,467
	X75	215	120	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,325	6440	4235	10,675
	X75	260	165	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,015	6531	4454	10,985
CREW CHASSIS CA	В			-			1			•
F-650 4x2 DRW	W65	194	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,945	5545	3510	9055
	W65	230	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,740	5613	3644	9257
	W65	260	150	CUMMINS 5.9L ISB	AT-545 4-spd.auto	26,000	16,535	5681	3780	9461
F-750 4x2 DRW	W75	194	84	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,495	5697	3806	9503
	W75	230	120	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,295	5765	3940	9705
	W75	260	150	CUMMINS 5.9L ISB	AT-545 4-spd.auto	30,000	20,090	5833	4076	9909
	W75	194	84	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,420	6447	4132	10,579
	W75	230	120	CAT 3126B	MD-3060CR 6-spd.auto	33,000	22,215	6505	4277	10,782
	W75	260	150	CAT 3126B	MD-3060CR 6-spd.auto	33,000	21,995	6563	4440	11,003

⁽¹⁾ Includes weight of driver, passengers and optional equipment.

⁽²⁾ Base curb weight is with standard equipment only.



Page 19 INTRODUCTION

VIN — How to Use It

Here is your 2002 guide to interpreting universal Vehicle Identification Numbers.


All vehicle body codes shown apply to 2002 models only. For previous model year body type codes, see reference material at your dealership or previous VIN Guides published by the Vehicle Remarketing Department.

Universal Vehicle Identification Numbers (VINs) have 17 "positions". There is a number or a letter in each position (see example below).

In this guide, you will find decoding for positions 5-7 (line, series and body type), position 8 (engine type), and position 11 (assembly plant).

The VIN data are preliminary and are prepared for the exclusive use of Ford Division dealers. More comprehensive dealership VIN references should be checked to confirm accuracy.

Check This Example

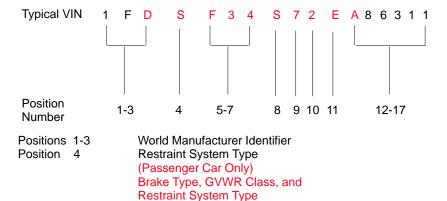

(Trucks, MPVs and Buses)
Positions 5-7 Line, Series, Body Type
Position 8 Engine Type

Position 9 Check Digit
Position 10 Model Year
Position 11 Assembly Plant

Positions 12-17 Production Sequence Number

World Manufacturer Identifiers (WMI) (Positions 1-3)

POSITIONS 1-3	VEHICLE MANUFACTURER	MAKE	TYPE
1FM	FORD MOTOR COMPANY, USA	FORD	MPV
1FT	FORD MOTOR COMPANY, USA	FORD	TRUCK (COMPLETED VEHICLE)
1FD	FORD MOTOR COMPANY, USA	FORD	INCOMPLETE VEHICLE
1FC	FORD MOTOR COMPANY, USA	FORD	BASIC (STRIPPED) CHASSIS
1FB	FORD MOTOR COMPANY, USA	FORD	BUS
			MOTOR VEHICLE EQUIPMENT
			W/O ENGINE/POWERTRAIN
2FM	FORD MOTOR COMPANY OF CANADA, LTD.	FORD	MPV
2FT	FORD MOTOR COMPANY OF CANADA, LTD.	FORD	TRUCK (COMPLETED VEHICLE)
2FD	FORD MOTOR COMPANY OF CANADA, LTD.	FORD	INCOMPLETE VEHICLE
2FC	FORD MOTOR COMPANY OF CANADA, LTD.	FORD	BASIC (STRIPPED) CHASSIS
2FB	FORD MOTOR COMPANY OF CANADA, LTD.	FORD	BUS
			MOTOR VEHICLE EQUIPMENT
			W/O ENGINE/POWERTRAIN
3FB	FORD MOTOR COMPANY (MEXICO)	FORD	BUS
3FC	FORD MOTOR COMPANY (MEXICO)	FORD	BASIC (STRIPPED) CHASSIS
3FD	FORD MOTOR COMPANY (MEXICO)	FORD	INCOMPLETE VEHICLE
3FE	FORD MOTOR COMPANY (MEXICO)	FORD	INCOMPLETE VEHICLE
3FM	FORD MOTOR COMPANY (MEXICO)	FORD	MPV
3FT	FORD MOTOR COMPANY (MEXICO)	FORD	TRUCK (COMPLETED VEHICLE)



Page 20 INTRODUCTION

Brake System and GVWR Class for Trucks and MPVs (Position 4) Brake System (only) for Buses and Incomplete Vehicles - GVWR classes as shown are not applicable.

BRAKE SYSTEM	GVWR CLASS	GVWR RANGE	TRUCKS without Airbags	LIGHT TRUCKS with Second Generation Airbags ⁽¹⁾	ESCAPE/EXPLORER/ WINDSTAR/EXPEDITION/ EXCURSION with Second Generation Airbags & Side-Impact Airbags	RHD U.S. POSTAL SERVICE EXPLORER without Airbags
Hydraulic	Class A	Not greater than 3,000 pounds		Т		
Hydraulic	Class B	3,001 - 4,000 pounds		U ⁽²⁾	B ⁽³⁾	
Hydraulic	Class C	4,001 - 5,000 pounds		Υ	С	
Hydraulic	Class D	5,001 - 6,000 pounds		Z	D	М
Hydraulic	Class E	6,001 - 7,000 pounds		R	Е	G
Hydraulic	Class F	7,001 - 8,000 pounds		Р	F	
Hydraulic	Class G	8,001 - 8,500 pounds		V		
Hydraulic	Class G	8,501 - 9,000 pounds	Н	N		
Hydraulic	Class H	9,001 - 10,000 pounds	J	S		
Hydraulic	Class 3	10,000 - 14,000 pounds	K	W		
Hydraulic	Class 4	14,001 - 16,000 pounds	L	X		
Hydraulic	Class 5	16,001 - 19,500 pounds	М	A		
Hydraulic	Class 6	19,501 - 20,000 pounds	N			
Hydraulic	Class 7	26,001 - 33,000 pounds	Р			
Hydraulic	Class 8	33,001 - 55,000 pounds	R			
Air	Class 3	10,001 - 14,000 pounds	Т			
Air	Class 4	14,001 - 16,000 pounds	U			
Air	Class 5	16,001 - 19,500 pounds	V			
Air	Class 6	19,501 - 26,000 pounds	W			
Air	Class 7	26,001 - 33,000 pounds	Х			

⁽¹⁾ This column applies to light trucks listed in sections V and VI of the VIN Report having body codes (positions 6 and 7) less than or equal to 57.

⁽²⁾ For Escape, Code "U" is equivalent to Code "Y" indicating hydraulic brakes, 4001-5000 lb GVWR, and Second Generation Air Bags.

⁽³⁾ For Escape, Code "B" is equivalent of Code "C" indicating hydraulic brakes, 4001-5000 lb GVWR, Second Generation Air Bags, and Side Air Bags.



Page 21 INTRODUCTION

Line, Series, Chassis, Cab Type or Body Type for Trucks, Multipurpose Passenger Vehicles (MPVs), Buses, and Incomplete Vehicles (IVs) with GVW Ratings of 4990 kilograms (11,000 pounds) or less: (Positions 5, 6, 7)

VIN CODE	VEHICLE LINE	SERIES	CHASSIS TYPE	CAB or BODY TYPE	VEHICLE TYPE
Make - FOF	RD			<u> </u>	
U01	Escape	XLS	FWD	4-Door	MPV
U02	Escape	XLS	4x4	4-Door	MPV
U03	Escape	XLT	FWD	4-Door	MPV
U04	Escape	XLT	4x4	4-Door	MPV
U15	Expedition	XLT	4x2	4-Door	MPV
U16	Expedition	XLT	4x4	4-Door	MPV
U17	Expedition	Eddie Bauer	4x2	4-Door	MPV
U18	Expedition	Eddie Bauer	4x4	4-Door	MPV
U40	Excursion	XLT	4x2	4-Door	MPV
U41	Excursion	XLT	4x4	4-Door	MPV
U42	Excursion	LTD	4x2	4-Door	MPV
U43	Excursion	LTD	4x4	4-Door	MPV
U60	Explorer	Sport	4x2	2-Door	MPV
U70	Explorer	Sport	4x4	2-Door	MPV
U67	Explorer	Sport Trac	4x2	4-Door	Truck
U77	Explorer	Sport Trac	4x4	4-Door	Truck
U62	Explorer	XLS	4x2	4-Door	MPV
U72	Explorer	XLS	4x4	4-Door	MPV
U63	Explorer	XLT	4x2	4-Door	MPV
U73	Explorer	XLT	4x4	4-Door	MPV
U64	Explorer	Eddie Bauer	4x2	4-Door	MPV
U74	Explorer	Eddie Bauer	4x4	4-Door	MPV
U65	Explorer	LTD	4x2	4-Door	MPV
U75	Explorer	LTD	4x4	4-Door	MPV
R10	Ranger	XL	4x2	Pickup-Regular Cab	Truck
R11	Ranger	XL	4x4	Pickup-Regular Cab	Truck
R14	Ranger	XL	4x2	Pickup-SuperCab	Truck
R15	Ranger	XL	4x4	Pickup-SuperCab	Truck
R08	Ranger (Electric)	EV	4x2	Pickup-Regular Cab	Truck
F07	F-Series	F150	4x2	Pickup-Regular Cab Flareside	Truck or I'
X07	F-Series	F150	4x2	Pickup-SuperCab Flareside	Truck or I
F08	F-Series	F150	4x4	Pickup-Regular Cab Flareside	Truck or I
X08	F-Series	F150	4x4	Pickup-SuperCab Flareside	Truck or I
F17	F-Series	F150	4x2	Pickup-Regular Cab Styleside	Truck or I'

VIN CODE	VEHICLE LINE	SERIES	CHASSIS TYPE	CAB or BODY TYPE	VEHICLE TYPE
Make - FOF	RD	l			
X17	F-Series	F150	4x2	Pickup-SuperCab Styleside	Truck or IV
F18	F-Series	F150	4x4	Pickup-Regular Cab Styleside	Truck or IV
X18	F-Series	F150	4x4	Pickup-SuperCab Styleside	Truck or IV
F20	F-Series	F250	4x2	Pickup-Regular Cab Styleside	Truck or IV
X20	F-Series	F250	4x2	Pickup-SuperCab Styleside	Truck or IV
W20	F-Series	F250	4x2	Pickup-Crew Cab Styleside	Truck or IV
F21	F-Series	F250	4x4	Pickup-Regular Cab Styleside	Truck or IV
X21	F-Series	F250	4x4	Pickup-SuperCab Styleside	Truck or IV
W21	F-Series	F250	4x4	Pickup-Crew Cab Styleside	Truck or IV
F30	F-Series	F350	4x2	Pickup-Regular Cab	Truck or IV
X30	F-Series	F350	4x2	Pickup-SuperCab	Truck or IV
W30	F-Series	F350	4x2	Pickup-Crew Cab	Truck or IV
F31	F-Series	F350	4x4	Pickup-Regular Cab	Truck or I\
X31	F-Series	F350	4x4	Pickup-SuperCab	Truck or IV
W31	F-Series	F350	4x4	Pickup-Crew Cab	Truck or IV
F32	F-Series	F350 DRW ⁽¹⁾	4x2	Pickup-Regular Cab	Truck or IV
X32	F-Series	F350 DRW	4x2	Pickup-SuperCab	Truck or IV
W32	F-Series	F350 DRW	4x2	Pickup-Crew Cab	Truck or I\
F33	F-Series	F350 DRW	4x4	Pickup-Regular Cab	Truck or I\
X33	F-Series	F350 DRW	4x4	Pickup-SuperCab	Truck or I\
W33	F-Series	F350 DRW	4x4	Pickup-Crew Cab	Truck or IV
F34	F-Series	F350	4x2	Chassis Cab-Regular Cab	IV
X34	F-Series	F350	4x2	Chassis Cab-SuperCab	IV
W34	F-Series	F350	4x2	Chassis Cab-Crew Cab	IV
F35	F-Series	F350	4x4	Chassis Cab-Regular Cab	IV
X35	F-Series	F350	4x4	Chassis Cab-SuperCab	IV
W35	F-Series	F350	4x4	Chassis Cab-Crew Cab	IV
F36	F-Series	F350 DRW	4x2	Chassis Cab-Regular Cab	IV
X36	F-Series	F350 DRW	4x2	Chassis Cab-SuperCab	IV
W36	F-Series	F350 DRW	4x2	Chassis Cab-Crew Cab	IV
F37	F-Series	F350 DRW	4x4	Chassis Cab-Regular Cab	IV
X37	F-Series	F350 DRW	4x4	Chassis Cab-SuperCab	IV
W37	F-Series	F350 DRW	4x4	Chassis Cab-Crew Cab	IV

^{(1) &}quot;DRW" means Dual Rear Wheels.

NOTE: Special Order (DSO) units will be coded with the appropriate series VIN codes listed above.



Page 22 INTRODUCTION

Line, Series, Chassis, Cab Type or Body Type for Trucks, Multipurpose Passenger Vehicles (MPVs), Buses, and Incomplete Vehicles (IVs) with GVW Ratings of 4990 kilograms (11,000 pounds) or less: (Positions 5, 6, 7)

VIN CODE	VEHICLE LINE	SERIES	CHASSIS TYPE	CAB or BODY TYPE	VEHICLE TYPE
Make - Fo	ORD				
E11	E150 Wagon	XL	4x2	Regular Wagon	MPV
E31	E350 Super Duty	XLT	4x2	H.D. Wagon/Wagon	MPV, IV or Bus ⁽¹⁾
S31	E350 Super Duty Wagon	XLT	4x2	H.D. Wagon/Wagon	MPV, IV or Bus ⁽¹⁾
E14	E-Series	E150	4x2	Cargo Van-Regular Van	Truck or IV
E24	E-Series	E250	4x2	Cargo Van-Regular Van	Truck or IV
S24	E-Series	E250	4x2	Cargo Van-Super Van	Truck or IV
E34	E-Series	E350 Super Duty	4x2	Cargo Van-Super Duty Regular Van	Truck or IV
S34	E-Series	E350 Super Duty	4x2	Cargo Van-Super Duty Super Van	Truck or IV
E27	E-Series	E250 Super Duty	4x2	Super Duty Cutaway	IV
E29	E-Series	E250 Super Duty	4x2	Super Duty Stripped Chassis	IV
E35	E-Series ⁽²⁾	E350 Super Duty	4x2	Super Duty Cutaway (138" WB)	IV
E39	E-Series	E350 Super Duty	4x2	Super Duty Stripped Chassis	IV
A50	Windstar	Base	4x2	3-Door Wagon ⁽³⁾	MPV
A51	Windstar	LX	4x2	3-Door Wagon ⁽³⁾	MPV
A52	Windstar	SE	4x2	4-Door Wagon	MPV
A53	Windstar	SEL	4x2	4-Door Wagon	MPV
A54	Windstar		4x2	3-Door Cargo Van	Truck

- (1) Excludes School Bus.
- (2) Also see "Ford Light & Medium Incomplete Vehicles and Trucks with GVW Ratings over 11,000 pounds".
- (3) 4th door optional.
- (4) Gas or Optional Diesel.
- (5) "DRW" means Dual Rear Wheels.

Line, Series, Chassis, Cab Type or Body Type for Ford Light & Medium Incomplete Vehicles and Trucks with GVW Ratings of 4990 kilograms (11,000 pounds) or less: (Positions 5, 6, 7)

VIN CODE	VEHICLE LINE	SERIES	CHASSIS TYPE	CAB or BODY TYPE	VEHICLE TYPE
Make - F	ORD	•			
E35	E-Series(4)	E-350 Super Duty	4x2	Super Duty Cutaway (158" & 176" WB)	IV
E45	E-Series(4)	E-450 Super Duty	4x2	Super Duty Cutaway (158" & 176" WB)	IV
E49	E-Series	E-450 Super Duty	4x2	Super Duty Stripped Chassis	IV
F53	F-Series	Super Duty	4x2	Class A Motorhome Chassis Gas Only	Truck or IV
F32	F-Series	F350 DRW(5)	4x2	Pickup-Regular Cab	Truck or IV
X32	F-Series	F350 DRW	4x4	Pickup-SuperCab	Truck or IV
W32	F-Series	F350 DRW	4x4	Pickup-Crew Cab	Truck or IV
F33	F-Series	F350 DRW	4x4	Pickup-Regular Cab	Truck or IV
X33	F-Series	F350 DRW	4x2	Pickup-SuperCab	Truck or IV
W33	F-Series	F350 DRW	4x2	Pickup-Crew Cab	IV
F36	F-Series	F350 DRW	4x2	Chassis Cab-Regular Cab	IV
X36	F-Series	F350 DRW	4x4	Chassis Cab-SuperCab	IV
W36	F-Series	F350 DRW	4x4	Chassis Cab-Crew Cab	IV
F37	F-Series	F350 DRW	4x4	Chassis Cab-Regular Cab	IV
X37	F-Series	F350 DRW	4x2	Chassis Cab-SuperCab	IV
W37	F-Series	F350 DRW	4x2	Chassis Cab-Crew Cab	IV
F46	F-Series	F450 DRW	4x4	Chassis Cab-Regular Cab	IV
W46	F-Series	F450 DRW	4x4	Chassis Cab-Crew Cab	IV
F47	F-Series	F450 DRW	4x2	Chassis Cab-Regular Cab	IV
W47	F-Series	F450 DRW	4x2	Chassis Cab-Crew Cab	IV
F56	F-Series	F550 DRW	4x4	Chassis Cab-Regular Cab	IV
W56	F-Series	F550 DRW	4x4	Chassis Cab-Crew Cab	IV
W57	F-Series	F550 DRW	4x2	Chassis Cab-Regular Cab	IV
W57	F-Series	F550 DRW	4x2	Chassis Cab-Crew Cab	IV
F65	F-Series	F650 DRW	4x2	Chassis Cab-Regular Cab	IV
X65	F-Series	F650 DRW	4x2	Chassis Cab-SuperCab	IV
W65	F-Series	F650 DRW	4x2	Chassis Cab-Crew Cab	IV
F75	F-Series	F750 DRW	4x2	Chassis Cab-Regular Cab	IV
X75	F-Series	F750 DRW	4x2	Chassis Cab-SuperCab	IV
W75	F-Series	F750 DRW	4x2	Chassis Cab-Crew Cab	IV



Page 23 INTRODUCTION

NOTE: Engine types are divided into four distinct groups: Passenger Car, Light Truck/MPV, Light/Medium Truck and Electric Vehicle. Each group is coded independently of the other three groups and these codes are listed in separate tables.

Engine Type-Displacement, Cylinders, Fuel Type, Manufacturer and Horsepower (H.P.) Ratings (Position 8)

VIN CODE	DISPLACEMENT/ LITER	CYLINDERS	FUEL	MANUFACTURER	NET BRAKE H.P.					
Light Truck/MPV										
В	2.0 SEFI-DOHC	I-4	Gasoline	Ford	TBD					
С	2.5 EFI-SOHC	I-4	Gasoline	Ford	119					
D	2.3 EFI-DOHC	I-4	Gasoline	Ford	135					
U	3.0 EFI	V-6	Gasoline	Ford	150					
V	3.0 EFI-FFV	V-6	Gasoline/E85	Ford	150					
1	3.0 SEFI-DOHC	V-6	Gasoline	Ford	TBD					
4	3.8 EFI-SPI	V-6	Gasoline	Ford	200					
Х	4.0 EFI	V-6	Gasoline	Ford	160					
E	4.0 EFI-SOHC	V-6	Gasoline	Ford	205					
K	4.0 SOHC EFI-FFV	V-6	Gasoline/E85	Ford	TBD					
2	4.2 EFI-SPI	V-6	Gasoline	Ford	200-210					
W	4.6 EFI-SOHC (R)	V-8	Gasoline	Ford	190-210					
Р	5.0 EFI	V-8	Gasoline	Ford	215					
L	5.4 EFI-SOHC (W)	V-8	Gasoline	Ford	235-260					
3	5.4 EFI-SOHC SC	V-8	Gasoline	Ford	TBD					
М	5.4 EFI-SOHC (W)	V-8	Natural Gas (CNG)	Ford	195-200					
Α	5.4 DOHC (W)	V-8	Gasoline	Ford	295-300					
R	5.4 DOHC (R)	V-8	Gasoline	Ford	295-300					
Z	5.4 EFI-SOHC (W)	V-8	Gasoline-GFP	Ford	TBD					
S	6.8 EFI-SOHC (W)	V-10	Gasoline	Ford	265-275					
F	7.3 D-Turbo-DI	V-8	Diesel	Navistar	245-275					

"EFI": Electronic Fuel Injection

"DOHC": Double Overhead Camshaft

"FFV": Flexible Fuel Vehicle

"M85": Methanol Flexible Fuel "Turbo": Turbocharged

"IDI": Indirect Injection
"(W)": Windsor Engine Plant

"SOHC": Single Overhead Camshaft

"SPI": Split Port Induction "SHO": Super High Output "E85": Ethanol Flexible Fuel

"DI": Direct Injection
"(R)": Romeo Engine Plant

"SC": Supercharged

"GFP" means Gaseous Fuel Prep. Gaseous fuel includes Natural Gas and Liquified Petroleum Gas "LPG" (Propane). Leaves Ford Assy. Plant as a gasoline engine but suitable for aftermarket conversion.

Engine Type-Displacement, Cylinders, Fuel Type, Manufacturer and Horsepower (H.P.) Ratings (Position 8)

VIN CODE	DISPLACEMENT/ LITER	CYLINDERS	FUEL	MANUFACTURER	NET BRAKE H.P.					
Light/Medium/Heavy Truck (with GVW Ratings over 11,000 pounds)										
L	5.4 EFI-SOHC (W)	V-8	Gasoline	Ford	255-260					
S	6.8 EFI-SOHC (W)	V-10	Gasoline	Ford	305-310					
F	7.3 D-TURBO -DI	V-8	Diesel	Navistar	215-235					
1	5.9	I-6	Diesel	Cummins, Model ISB	175 HP/420 lb -ft					
4	5.9	I-6	Diesel	Cummins, Model ISB	195 HP/520 lb-ft					
8	5.9	I-6	Diesel	Cummins B5.9E	210 HP/520 lb-ft					
Y	5.9	I-6	Diesel	Cummins B5.9E	215 HP/520 lb-ft					
В	5.9	I-6	Diesel	Cummins B5.9E	225 HP/605 lb-ft					
G	5.9	I-6	Diesel	Cummins B5.9E	240 HP/605 lb-ft					
J	5.9	I-6	Diesel	Cummins B5.9E	245 HP/660 lb-ft					
V	5.9	I-6	Diesel	Cummins B5.9E	260 HP/550 lb-ft					
Х	5.9	I-6	Diesel	Cummins B5.9E	260 HP/660 lb-ft					
Α	7.2	I-6	Diesel	Caterpillar 3126B	190 HP/520 lb-ft					
Н	7.2	I-6	Diesel	Caterpillar 3126B	210 HP/605 lb-ft					
2	7.2	I-6	Diesel	Caterpillar 3126B	210 HP/520 lb-ft					
N	7.2	I-6	Diesel	Caterpillar 3126B	230 HP/660 lb-ft					
R	7.2	I-6	Diesel	Caterpillar 3126B	250 HP/660 lb-ft					
7 ²	7.2	I-6	Diesel	Caterpillar 3126B	300 HP/860 lb-ft					
5	7.3	V-8	Diesel	Navistar	210 HP/485 lb-ft					
6	7.3	V-8	Diesel	Navistar	210 HP/520 lb-ft					

¹ Engine only available on 11,000 lbs and greater

DELETE ENGINE (applicable to all groups)

0 (Zero) DSO Glider - Delete Engine on motor vehicle equipment only.

VIN CODE	POWER	NOMINAL VOLTAGE	FUEL	MANUFACTURER	BATTERY PACK	GROSS H.P. RANGE
Electric Vehic	cles					
7	71kw	312 volts	Electric	Siemens	Lead/Acid	90
1	76kw	300 volts	Electric	Siemens	NiMH	90

VIN Check Digit (Position 9)

The check digit must have a value of 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, or X.

² Available with F650 Super CrewZer Model only



Page 24 INTRODUCTION

Vehicle Model Year (Position 10)

VIN CODE	YEAR	VIN CODE	YEARS	VIN CODE	YEAR
В	1981	N	1992	3	2003
С	1982	Р	1993	4	2004
D	1983	R	1994	5	2005
E	1984	S	1995	6	2006
F	1985	Т	1996	7	2007
G	1986	V	1997	8	2008
Н	1987	W	1998	9	2009
J	1988	Х	1999	А	2010
K	1989	Y	2000	В	2011
L	1990	1	2001	С	2012
М	1991	2	2002	D	2013

Plant of Manufacture (Position 11)

The plant of manufacture VIN code is designated as follows:

VIN CODE	Vehicle Assembly Plant Name: location	Light Trucks/MPVs	Medium Trucks
В	Oakville: Oakville, Ont.	Х	
С	Ontario Truck: Oakville, Ont.	X	
D	Ohio: Avon Lake, OH	X	
Е	Kentucky Truck: Jefferson County, KY	Х	
Н	Lorain: Lorain, OH	Х	
J	IMMSA: Monterrey, Mexico		Х
K	Kansas City, Claycomo, MO	X	
L	Michigan Truck: Wayne, MI	X	
M	Cuautitlan: Cuautitlan, Mexico	Х	Х
N	Norfolk: Norfolk, VA	Х	
Р	Twin Cities: St. Paul, MN	Х	
Т	Edison: Edison, NJ	X	
U	Louisville: Louisville, KY	Х	
V	Kentucky Truck: Jefferson County, KY	X	
Z	St. Louis: Hazelwood, MO	Х	

Sequential Vehicle Identifiers

(VIN Positions 12 through 17)

Trucks, MPVs, buses and incomplete vehicles:


A six-digit alphanumeric sequence code (first digit alpha, last five digits numeric) is assigned for trucks, MPVs, and incomplete vehicles. For Nissan-badged vehicles, a six-digit numerical sequence has been assigned.

METRIC/U.S. CUSTOMARY UNIT EQUIVALENTS



Page 25 INTRODUCTION

Multiply: LINEAR		by:		to get:	Multiply:		by:		to get:	Multiply: by: FUEL ECONOMY		to get:	Multip	ly:		by:		to get:
inches	Х	25.4	=	millimetres(mm)		Χ	0.03937	=	inches	miles/gal X 0.4251	=	kilometres/litre (km/l)			Х	2.352	=	miles/gal
inches		2.54		centimetres (cm)			0.3937		inches	gal/mile X 2.3524		litres/kilometre (l/km)			Х	0.42517		gal/mile
feet		0.3048		metres (m)			3.281		feet	gal/mile X 235.24		litres/100 kilometre (I/km)				0.004252		gal/mile
1001	,,	0.0010		mondo (m)		•	0.20		1001	ga,,,,,,,,		ma do, ree maemene (,, mm)			^	0.00 .202		gaviino
AREA										POWER								
inches ²	Χ	645.16	=	millimetres ² (mm ²)		Χ	0.00155	=	inches ²	horsepower X 0.746	=	kilowatts (kW)			Χ	1.34	=	horsepower
inches ²		6.452		centimetres ² (cm ²)			0.155	=	inches ²	ft-lb/min X 0.0226		watts(W)			Χ	44.27	=	ft-lbf/min
feet ²		0.0929		metres ² (m ²)		Χ	10.764	=	feet ²			,						
				,						TORQUE								
VOLUME										b-in X 0.11298	=	newton-metres (N-m)			Χ	8.851	=	lb-in
inches ³	Χ	16387.0	=	millimetres ³ (mm ³)		Χ	0.000061	=	inches ³	b-feet X 1.3558		newton-metres (N-m)			Χ	0.7376	=	lb-feet
inches ³	Χ	16.387		centimetres ³ (cm ³)		Χ	0.06102	=	inches ³			, ,						
inches ³	Χ	0.01639		litres (1)		Χ	61.024	=	inches ³	VELOCITY								
quarts	Х	0.94635	=	litres (1)		Χ	1.0567	=	quarts	miles/hr X 1.6093	=	kilometres/hr (km/hr)			Χ	0.6214	=	miles/hr
gallons		3.7854		litres (1)			0.2642		gallons	kilometres/hr X 0.27778		metres/sec (m/s)			Χ	3.600		kilometres/hr
feet ³		28.317		litres (1)			0.03531		feet ³	miles/hr X 0.4470		metres/sec (m/s)			Χ	2.237		miles/hr
feet ³		0.02832		metres ³ (m ³)			35.315		feet ³	,					, ,			
fluid oz.		29.57		millilitres (ml)			0.03382		fluid oz.	COMMON METRIC PREFIXE	s							
	, ,	_0.0.					0.0000					,000,000	centi	(c) =	= 0	Λ1		
MASS										- · · ·		,000	milli			.001		
ounces (av)	Χ	28.35	=	grams (g)		Χ	0.03527	=	ounces (av)	` '	: 1		micro	` '		.000001		
lb (av)		0.4536		kilograms (kg)			2.2046		lb (av)	()				· · /				
tons (2000 lb)		907.18		kilograms (kg)			0.001102		tons (2000 lb)									
tons (2000 lb)		0.9078		tonne (t)			1.1025		tons (2000 lb)									
(,				\ \ \		-												

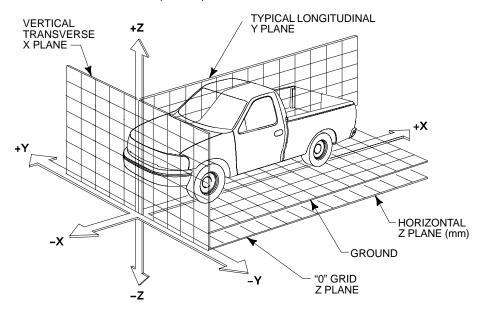

DEFINITIONS OF TERMS

Page 26 SAFETY/EMISSION

The following definitions are from Title 49, Code of Federal Regulations, Section 571.3 except where noted. Canadian definitions are from Canada Motor Vehicle Safety Regulations, Section 2(1), and are in italics. Ford Motor Company definitions are for the purpose of this publication only. Some terms are followed by an abbreviation that is used throughout this publication.

Ambulance — is a vehicle for emergency medical care which provides:

A driver's compartment; a patient compartment to accommodate an Emergency Medical Technician (EMT)/Paramedic and two litter patients (one patient on the primary cot and a secondary patient on a folding litter located on the squad bench) so positioned that the primary patient can be given intensive life support during transit; equipment and supplies for emergency care at the scene as well as during transport; two-way radio communication; and, when necessary, equipment for light rescue/extrication procedures. The Ambulance shall be designed and constructed to afford safety, comfort and avoid aggravation of the patient's injury or illness. (From Federal Specification KKA-1822-D). Ford Motor Company also includes within its definition of ambulance, "any vehicle that is used for transporting life-supported equipment, for rescue operations, or for non-emergency patient transfer if the engine of the vehicle is equipped with a "throttle kicker" device, which enables an operator to increase engine speed over normal idle speed when the vehicle is not moving."

Assembler (Canada) — means a manufacturer engaged in the business of altering vehicles that bear the National Safety Mark.

Auto Transporter — means a truck and a trailer designed for use in combination to transport motor vehicles where the truck is designed to carry cargo other than at the fifth wheel and that cargo is to be loaded only by means of the trailer.

B-Pillar — is the vehicle body structure located directly rearward of each front door. This structure will include the outer panel, all inner panels or reinforcements which support the door opening, the door latching system and/or the roof structure (source: Ford Motor Company).

Bus — a motor vehicle with motive power, except a trailer, designed for carrying more than 10 persons.

Bus (Canada) — a vehicle having a designed seating capacity of more than 10, but does not include a trailer.

Chassis Cab — an incomplete vehicle, with completed occupant compartment, that requires only the addition of cargo-carrying, work-performing or load-bearing components to perform its intended functions. (From Title 49 CFR, Section 567.3)

Chassis Cab (Canada) — means a vehicle consisting of a chassis that is capable of being driven, drawn or self-propelled, upon which may be mounted a cab, and that is designed to receive:

- (a) a passenger-carrying or cargo-carrying body including a body that incorporates a prime mover, or
- (b) a work performing structure other than a fifth-wheel coupling.

Completed Vehicle — means a vehicle that requires no further manufacturing operations to perform its intended function other than the addition of readily attachable components, such as mirrors or tire and rim assemblies, or minor finishing operations such as painting.

Completed Vehicle Alterer — as used in this book means a person who alters a vehicle that has previously been certified in accordance with Section 567.4 or 567.5 of Title 49 Code of Federal Regulations other than by the addition, substitution or removal of readily attachable components such as mirrors or tire and rim assemblies, or minor finishing operations such as painting, or who alters the vehicle in such a manner that its stated weight ratings are no longer valid, before the first purchase of the vehicle in good faith for purposes other than resale.

Critical Control Item — is a component or procedure which may affect compliance with a federal regulation or, which could directly affect the safe operation of the vehicle. ∇ is the identifying symbol. (source: Ford Motor Company)

Dealer — means any person who is engaged in the sale and distribution of new motor vehicles or motor vehicle equipment primarily to purchasers who in good faith purchase any such vehicle or equipment for purposes other than resale.

Designated Seating Position — any plan view location capable of accommodating a person at least as large as a 5th percentile adult female if the overall seat configuration and design and vehicle design is such that the position is likely to be used as a seating position while the vehicle is in motion, except for auxiliary seating accommodations such as temporary or folding jump seats. Any bench or split-bench seat in passenger car, truck or multipurpose passenger vehicle with a GVWR less than 10,000 pounds, having greater than 50 inches of hip room (measured in accordance with SAE Standard J1100(a) shall have not less than three designated seating positions, unless the seat design or vehicle design is such that the center position cannot be used for seating.

Designated Seating Position (Canada) — any plan view position capable of accommodating a person at least as large as a 5th percentile adult female, as defined in section 100 of Schedule IV, where the overall seat configuration and design and the vehicle design are such that the position is likely to be used as a seating position while the vehicle is in motion, but does not include any plan view position of temporary or folding jump seats or other auxiliary seating accommodation.

Distributor (Canada) — means a person engaged in the business of selling to other persons, for the purpose of resale, vehicles manufactured in Canada and obtained directly from a manufacturer or his agent.

Final-Stage Manufacturer — a person who performs such manufacturing operations on an incomplete vehicle that it becomes a completed vehicle. (49 CFR, Section 568.3)

Forward Control — a vehicle configuration in which more than half of the engine length is rearward of the foremost point of the windshield base and the steering wheel hub is in the forward quarter of the vehicle length.

Gross Axle Weight Rating (GAWR) — the value specified by the vehicle manufacturer as the load carrying capacity of a single axle system as measured at the tire-ground interfaces.

Gross Combination Weight Rating (GCWR) — the value specified by the manufacturer as the loaded weight of a combination vehicle.

Gross Vehicle Weight Rating (GVWR) — the value specified by the manufacturer as the loaded weight of a single vehicle.

H-Point — the mechanically hinged hip point of a manikin which simulated the actual pivot center of the human torso and thigh, described in SAE Recommended Practice J826, "Manikins For Use in Defining Vehicle Seating Accommodation," November 1962.

Importer (Canada) — means a person engaged in the business of importing vehicles into Canada.

Incomplete Vehicle Manufacturer — a person who manufactures an incomplete vehicle by assembling components none of which, taken separately constitute an incomplete vehicle. (49 CFR, Section 568.3)

Intermediate Manufacturer — a person, other than the incomplete vehicle manufacturer or the final stage manufacturer, who performs manufacturing operations on an incomplete vehicle. (49 CFR, Section 568.3)

Incomplete Vehicle — an assemblage consisting, as a minimum, of frame and chassis structure, power train, steering system, suspension system and braking system, to the extent that those systems are to be part of the completed vehicle, that requires further manufacturing operations, other than the addition of readily attachable components such as mirrors or tire and rim assemblies, or minor finishing operations, such as painting, to become a completed vehicle.

Manufacture (Canada) — includes any process of assembling or altering a vehicle prior to its sale to the first retail purchaser.

DEFINITIONS OF TERMS

Page 27 SAFETY/EMISSION

The following definitions are from Title 49, Code of Federal Regulations, Section 571.3 except where noted. Canadian definitions are from Canada Motor Vehicle Safety Regulations, Section 2(1), and are in italics. Ford Motor Company definitions are for the purpose of this publication only. Some terms are followed by an abbreviation that is used throughout this publication.

Manufacturer — means any person engaged in the manufacturing or assembling of motor vehicles or motor vehicle equipment, including any person importing motor vehicles or motor vehicle equipment for resale.

Motor Home (Canada) — means a multipurpose passenger vehicle that provides living accommodation for persons.

Multipurpose Passenger Vehicle (MPV) — a motor vehicle with motive power, except a trailer, designed to carry 10 persons or less which is constructed either on a truck chassis or with special features for occasional off-road operation, but does not include an air cushion vehicle, all-terrain vehicle, golf-cart, passenger car or truck.

Multipurpose Passenger Vehicle (MPV) (Canada)
— a vehicle having a designated seating capacity of
10 or less that is constructed either on a truck chassis
or with special features for occasional off-road
operation, but does not include an air cushion vehicle,
all-terrain vehicle, golf cart, passenger car or truck.

Prescribed Class (Canada) — a class of vehicles listed in Schedule III.

Seating Reference Point — the manufacturer's design reference point which:

- (a) Establishes the rearmost normal design driving or riding position of each designated seating position in a vehicle:
- (b) Has coordinates established relative to the designated vehicle structure;
- (c) Simulates the position of the pivot center of the human torso and thigh; and
- (d) Is the reference point employed to position the two dimensional templates described in SAE Recommended Practice J826. "Manikins for Use in Defining Vehicle Seating Accommodation," November, 1962.

School Bus — a bus that is sold, or introduced in interstate commerce, for purposes that include carrying students to and from school or related events, but does not include a bus designed and sold for operation as a common carrier in urban transportation.

School Bus (Canada) — a bus designed or equipped primarily to carry students to and from school.

Second Unit Body (SUB) — consists of the body structure and/or all the cargo carrying, work performing, and/or lead bearing components and/or equipment installed by a subsequent stage manufacturer on an incomplete vehicle, such that the incomplete vehicle becomes a completed vehicle. (source: Ford Motor Company)

Subsequent Stage Manufacturer — is a term which means either intermediate or final stage manufacturers or both. (source: Ford Motor Company)

Trimmed Seat — a complete functional seat assembly including the seat pedestal, seat track, seat base frame, seat back, recliner mechanism, seat padding, all attaching hardware and the final trim material) i.e., cloth, leather or vinyl). (source: Ford Motor Company)

Truck — a motor vehicle with motive power, except a trailer, designed primarily for the transportation of property or special purpose equipment.

Truck (Canada) — a vehicle designed primarily for the transportation of property or equipment but does not include a chassis-cab, crawler-mounted vehicle, trailer, work vehicle or vehicle designed for operation exclusively off the public highway.

Truck Tractor — a truck designed primarily for drawing other motor vehicles and not so constructed as to carry a load other than a part of the weight of the vehicle and the load so drawn.

Truck Tractor (Canada) — a truck designed primarily for drawing other vehicles and not constructed for carrying any load other than part of the weight of the vehicle and load drawn, and includes a vehicle designed to accept a fifth-wheel coupling but does not include a crane-equipped breakdown vehicle.

Unloaded Vehicle Weight (UVW) — the weight of a vehicle with maximum capacity of all fluids necessary for operation of the vehicle, but without cargo, occupants, or accessories that are ordinarily removed from the vehicle when it is not in use.

Unloaded Vehicle Weight (UVW) (Canada) — the weight of a vehicle with maximum capacity of all fluids necessary for operation of the vehicle, but without cargo, occupants, or accessories that are ordinarily removed from the vehicle when it is not in use.

Untrimmed Seat — the structure including the seat pedestal, seat track, seat base frame, seat back, recliner mechanism, seat padding and all attaching hardware required for a functional seat assembly without the final trim material (e.g., cloth, leather or vinyl) and trim material attaching components. (source: Ford Motor Company)

Vehicle (Canada) — means any vehicle that is capable of being driven or drawn on roads by any means other than muscular power exclusively, but does not include any vehicle designed to run exclusively on rails.

Vehicle Capacity Mass (Canada) — means the rated cargo and luggage mass plus 70 kg (150 pounds) multiplied by the designated seating capacity. (For School Buses the minimum occupant weight allowance shall be 120 pounds.)

Walk-In Van — is a step entry city delivery van type vehicle that permits a person to enter the vehicle without stooping. This definition by Ford Motor Company is based on information appearing in 41FR 54945, published December 16, 1976, and in 42 FR 34288, published July 5, 1977.

GUIDELINES FOR INSTALLATION OF ALTERNATIVE FUEL SYSTEMS ON GASOLINE VEHICLES

2002 MODEL YEAR

Page 28 SAFETY/EMISSION

INTRODUCTION

Ford recommends purchasing a Ford produced Alternative Fuel Vehicle if possible. If a Ford Alternative Fuel Vehicle is not available to meet vour requirements the following guidelines are intended to assist manufacturers that modify or alter Ford light truck products to Alternative Fuel Vehicles (AFVs), either dedicated gaseous fuel systems or a combination unleaded gasoline/gaseous fuel "bi-fuel" systems. Both Compressed Natural Gas (CNG) and Liquefied Petroleum Gas or Propane (LPG) are included in the term gaseous fuels. These guidelines are based on analyses of components, vehicle tests, actual service situations and engineering judgment. Disregard of these guidelines may affect the durability, reliability, handling and performance characteristics of the vehicle, may elevate the underbody temperature and/or increase the potential for fire, and may affect the safety of the vehicle occupants in the event of an accident.

For information concerning labeling of complete or incomplete vehicles as manufactured by Ford Motor Company, see the U.S. & Canada Safety Standards section of this book.

Since gaseous fuel vehicles may take many forms, these recommendations are not comprehensive and may not be universally applicable. Strict adherence to these guidelines will not ensure compliance to applicable safety or emission regulations. The final stage manufacturer or alterer is responsible for compliance with safety or emission regulations which are affected by AFV modifications. Accordingly, Ford Motor Company makes no representation as to the appropriateness of any particular recommendation in its application to a particular design or act of a subsequent stage manufacturer or alterer.

To verify compliance to an applicable regulation, testing of representative vehicles may be necessary. New vehicles equipped with CNG may need to meet FMVSS 303 and FMVSS 304 or CMVSS 301.2. New vehicles equipped with LPG will need to meet CMVSS 301.1 in Canada. Questions regarding compliance to applicable regulations should be directed to your legal counsel, the National Highway Traffic Safety Administration, Transport Canada, the Environmental Protection Agency, the California Air Resources Board (CARB), or any other state/provincial emission certification activity, as appropriate.

Some states have certification and installation procedures defined for alternative fuel conversions that may require chassis roll emission testing, obtaining an assigned deterioration factor for emission components, an in-use compliance plan (recall), etc. This includes the "California Certification and Installation Procedures for Alternative Fuel Retrofit Systems for Motor Vehicles Certified for 1994 and Subsequent Model Years," EPA's "Exemption of Aftermarket Conversion From Tampering Prohibition" under Subpart F, 4OCFR85, or EPA's Tampering Prohibition. EPA's Small Volume Manufacturer's procedure can apply if sales volume is 10,000 units or less in a given calendar year.

Prior to vehicle modification or alteration, a subsequent stage manufacturer or alterer should consider the following:

- Weight ratings and distribution
- Adequate ground clearance, approach and departure angles and ramp breakover clearance
- Appropriate component clearances
- Serviceability
- Service network
- Service manuals
- Emissions Warranty Booklet

After installing an alternative fuel system on a new vehicle, a label may be required to disclose vehicle range when operating on the alternative fuel per 16 CFR Part 309.

ALTERING COMPLETED VEHICLES

Any person or company who, prior to the first retail sale, alters a vehicle certified as complying with applicable Federal Motor Vehicle Safety Standards (FMVSS) or Canadian Motor Vehicle Safety Standards (CMVSS) must comply with section 567.7 of Title 49, Code of Federal Regulations, entitled "Requirements for Persons Who Alter Certified Vehicles" or Section 7.1 of the Canadian Motor Vehicle Safety Regulations, respectively.

In general, you must:

- Retain the original certification label on the vehicle
- Determine whether the vehicle, as altered, conforms to all applicable Federal Motor Vehicle Safety Standards, and if it does
- Not exceed weight as noted below
- Affix to the vehicle an altered vehicle certification label

OTHER GENERAL NOTES

- Conversions should be done in accordance with all applicable federal, state, provincial or local regulations; the 1998 Edition of the National Fire Protection Association (NFPA) Standard No. 52 or 58, as applicable ("Standard for CNG Vehicular Fuel Systems" or "Standard for the Storage and Handling of LPG"); the National Standard of Canada CAN/CGA-12.3-M91, entitled "Fuel System Components for Natural Gas Powered Vehicles"; CSA B51 and CAN/CGA B149.5 for LPG systems, the American Gas Association (AGA) standards, and Compressed Gas Association (CGA) standards.
- Maintain clearances for all components as specified in NFPA 52/58, CAN/CGA-1 2.3-M91 and AGA standards.
- Verify the function and integrity of any modified or altered Ford component.

WEIGHT DISTRIBUTION

Ford truck products include both completed vehicles and incomplete vehicles. A vehicle may not exceed the GVWR or front or rear GAWRs including projected payloads, all fluids and fuels filled to capacity, and designated passenger load. Equipment added to a completed vehicle 10,000 lb GVWR or less may not exceed the Accessory Reserve Capacity (ARC) as defined on page 59 of this section. Incomplete vehicles may not be completed to exceed the Unloaded Vehicle Weight (UVW) as defined in the Definitions section of the *Incomplete Vehicle Manual*.

HEAT MANAGEMENT

Refer to Design Recommendations — Underbody Heat Management section, page 295, of this book.

BODY AND GAGING

- Ford fuel gages are equipped with an anti-slosh module that may affect the accuracy of the converted fuel gage.
- Any hole added to the body should be grommeted and sealed.
- Instrumentation or controls added must comply with F/CMVSS 101.

FRAME

- Additional components added to frame such as tanks and brackets may degrade frame performance. The modifications should be evaluated by testing or analysis.
- See also Design Recommendations Frame section, page 310, of this book.

COOLING

- Modifications to engine coolant system (e.g., for pressure regulator heating) may affect compliance with F/CMVSS 103 (Windshield Defrost & Defog/MPV, Truck, Bus).
- See also Design Recommendations Cooling System section, page 307, of this book.

GUIDELINES FOR INSTALLATION OF ALTERNATIVE FUEL SYSTEMS ON GASOLINE VEHICLES



Page 29 SAFETY/EMISSION

ENGINE/EMISSIONS

Basic Engine

- Use of gaseous fuel in engines without upgraded internal components (e.g., valve seat inserts, upgraded valve material, etc.) may lead to high mileage durability issues, such as valve seat recession, that are not covered under warranty.
- Improper installation of gaseous fuel hardware may affect gasoline engine function.
- Do not use silicone-based materials for gaskets or adhesives to attach components since this material is not intended as an adhesive and if used as a gasket may "poison" the HEGO sensor.
- Do not extend existing vehicle maintenance service intervals (e.g., oil changes, spark plugs).
- Unique gaseous fuel components must have durability equivalent to gasoline components.

Electronic Control

- Use electric wiring practices as described in the Electrical Wiring Section of this book.
- Fuel system should have self-test capability for input/output (On Board Diagnostics-II).
- As part of checking the modifications, verify that Ford self-test systems (OBD-II) are unaffected.
- Do not force engine control system into "open loop" by altering engine coolant temperature signal as this may cause electric cooling fan to not operate properly, causing engine damage.
- Do not use the "power take-off" wire to avoid illumination of the check-engine light.
- Gasoline should not remain un-circulated for extended periods (over 60 days) since this may clog the engine fuel injectors.
- The electric gasoline fuel pump must not run while operating on the alternative fuel.

Fuel Metering

- Impurities in natural gas may necessitate the need for a coalescer/filter.
- Regulator performance is affected by water content. Adequate heating must be used to prevent fuel freeze-up under normal operating conditions.
- Improper cylinder-to-cylinder air-fuel ratio distribution could affect catalyst/engine durability.

 Gaseous fuel systems should be capable of reliable operation at ambient conditions of -40°F to + 120°F, barometric pressure of sea level to 14,000 feet, and have start times less than or equal to the following:

Time	Temperature
12 sec	-20° F to -0° F
6 sec	0°F to 31°F
1 sec	32°F to 120°F

Emissions

- Any conversion made to the vehicle must comply with the applicable Federal and California Emission regulations including EPA's Tampering Prohibition (See EPA Mobile Source Enforcement Memorandum 1A and Addendum thereto as revised at 63 FR 32878) or obtain an "Exemption of Aftermarket from Tampering Prohibition" under Subpart F, 40CFR85. For California, please refer to the "California Certification and Installation Procedures for Alternative Fuel Retrofit Systems for Motor Vehicles certified for 1994 and subsequent model years."
- Gaseous fuel system should be emission tested to verify compliance with applicable emission regulations.
- In a bi-fuel system, installation of the gaseous fuel system must not interfere with vehicle operation on gasoline.
- Gaseous fuel system calibration should be tamperproof.
- Ozone Depletion Substances (ODS) Refer to Emission Control Information section of this book on pages 50-53.

Safety

- Fuel metering system should provide a mechanism to prevent backfires in the intake manifold on start-up.
- Do not leave gasoline fuel pump or fuel injectors engaged during operation of the engine on gaseous fuel. This could result in decomposition of fuel, elevated fuel temperatures, fuel over pressurization and the risk of fuel expulsion and fire. Also, this could allow the electrically powered gasoline fuel pump to overheat if run with no gasoline in tank.

• Do not leave gasoline in vehicle for extended periods (60 days or more), gasoline may deteriorate due to oxidation. This can damage rubber and other polymeric materials in the fuel systems such as fuel pressure regulator diaphragms. It may also clog small orifices. Recirculating gasoline through fuel rail during prolonged gaseous fuel operation accelerates the deterioration of the gasoline. Refer to New Vehicle Storage Guidelines, Fuel System section, page 312 of this book, for gasoline fuel stabilizer suggestions.

SUSPENSION AND STEERING

Refer to Design Recommendations — Suspension and Steering System section, page 309, of this book.

TRANSMISSION

Refer to Design Recommendations — Transmission section, page 310, of this book.

EXHAUST

Refer to Design Recommendations — Exhaust System section, page 308, of this book.

FUEL SYSTEMS

WARNING:

VEHICLES WITH EFI ENGINES HAVE PRESSURIZED FUEL SYSTEMS. THIS PRESSURE MUST BE RELIEVED PRIOR TO SERVICING, LOOSENING OR REMOVING ANY FUEL SYSTEM COMPONENT BY FOLLOWING THE INSTRUCTIONS IN THE FORD TRUCK SHOP MANUAL FOR THE APPROPRIATE MODEL AND MODEL YEAR.

WHEN WELDING NEAR FUEL SYSTEM COMPONENTS, ALL METALLIC COMPONENTS SHOULD BE ADEQUATELY SHIELDED AND PROTECTED FROM HEAT OR WELD SPATTER. ALL ADJACENT NON-METALLIC COMPONENTS SHOULD BE REMOVED BEFORE WELDING. REMOVAL OR REINSTALLATION OF ANY FORD FUEL SYSTEM COMPONENT SHOULD BE PERFORMED TO THE SPECIFICATIONS AND INSTRUCTIONS FOUND IN THE FORD TRUCK SHOP MANUAL FOR THE APPROPRIATE MODEL AND MODEL YEAR.

Fuel Tanks

- It is recommended that you do not modify the Ford gasoline or alternative fuel tank system.
- Gaseous fuel tanks must meet FMVSS 304 and any applicable state, provincial, and local regulations.
- Performance of a gaseous fuel tank during an impact or accident should be considered when selecting the type and strength of the tank and the location and means of mounting.
- New Gaseous Fuel Tanks Lines or tubing connected to the tank should be flexible to permit small movements of the tank relative to fixed mounting surfaces and to help prevent rupture or disconnection of such lines or tubing during an impact or accident.
- New Fuel Tanks Generally, the tank should be located below the floor of the vehicle and inside its frame rails.
- New Fuel Tanks Clearance between the tank and surrounding components should be provided. Rigid or sharp components close to the tank should be shielded to prevent contact with the tank.
- Tank Valves should comply with CGA standards and should be appropriately shielded to protect from road hazards. Valve materials should be compatible with tank to prevent galvanic corrosion.
- Isolate tank, valve, and Pressure Relief Device (PRD) away from heat sources or shield adequately (see Design Recommendations — Heat Management Section of this book.
- Fuel tanks should not be re-painted.

Retention

- See also Design Recommendations Fuel System, New Fuel Tank Retention Systems section of this book, page 304.
- Refer to AGA or fuel tank manufacturer for guidelines (for general overall vehicle).
- Body sheet metal retention systems should be adequately reinforced to accommodate the weight of the fuel system and fuel as specified in NFPA-52/58 and CAN/CGA-1 2.3-M91.
- System fasteners and attachments should be designed to help retain the tank during an impact or accident.

GUIDELINES FOR INSTALLATION OF ALTERNATIVE FUEL SYSTEMS ON GASOLINE VEHICLES



Page 30 SAFETY/EMISSION

FUEL SYSTEMS (continued)

Fuel Fill System

- Fill system should have some flexibility to help prevent rupture or disconnection resulting from movement of the fuel fill area relative to the remainder of the vehicle in an impact or accident.
- Any appliance or hardware attachments to the body in the area of a fuel system component should be designed, positioned and secured to help prevent damage to such a component during an impact or accident.
- The fuel fill receptacle should be recessed, capped, and when installed should be within the normal body plane.
- Check the fuel filler opening area of the body, as shown in Figure A, Design Recommendations — Fuel Fill System section, page 304, of this book for adequate sealing from the vehicle interior because holes or cracks in this area may allow fuel vapors to enter the vehicle interior. Openings should be sealed with a product which is fuel resistant.
- Whenever possible, the fill system should pass under the body rather than through it. Where passing through floors and sides, the fill system should be shielded and have adequate clearance to surrounding structure.
- Be sure that the fuel filler cap is the correct designated part. Provide adequate hand clearance for cap installation and correct sealing of the cap to fill receptacle.
- When installing accessories or equipment, avoid exposing fuel lines to surfaces with sharp edges, or to high temperature surfaces (near hot exhaust or coolant) as shown in Figure A, Design Recommendations — Fuel Fill System section, page 305, of this book. Also, avoid installations which result in the exposure of these lines to road debris and/or undercoating.
- Do not place adjacent hardware such that it may cut or otherwise damage the filler neck and vent hoses and cause fuel leakage.
- The fuel filler line must be clear of moving suspension components to help prevent abrasion which could result in fuel leakage.
- Ford recommends CNG fuel receptacle meet ANSI/AGA NGV1 requirements.
- The receptacle must be packaged to accept available refueling nozzles.

Do not route fuel filler line near sharp or jagged surfaces. Also, avoid kinked fuel filler line due to improper routing.

Fuel Line/Hoses/Tubes

- NFPA 52/58, CAN/CGA-1 2.3-M91 and AGA 1-85 criteria should be followed.
- Do not reroute or change the attachments of gasoline fuel lines or fuel vapor hoses. Doing so may affect the vehicle's ability to comply with F/CMVSS 301 Fuel System Integrity, and may adversely affect vehicle performance by increasing the amount of heat absorbed by the fuel system or restricting its venting.
- Tubes and lines should be routed away from and not attached to members likely to move during normal vehicle operation or to deform most in the event of an impact or accident.
- Tubes and lines should be flexible to help avoid rupture or disconnection resulting from movement of the engine relative to the frame during an impact or accident.
- Tubes and lines should be routed away from hot regions and sharp objects, and should be retained adequately to prevent movement into such regions or against such objects.
- Do not add fuel or vapor line flow restrictors as they can cause engine fuel starvation or abnormally light fuel tank pressures.
- If the push connectors on OEM nylon gasoline lines are disconnected, they must be reconnected and the retention clip must be discarded and replaced with a new clip.
- The special removal tool must be used to open push connectors installed on OEM steel gasoline lines, if the lines need to be disconnected. The tool is available from Ford Parts and Service Division.
- The push connectors on OEM steel gasoline lines, if disconnected, must be reconnected by snapping them back into position and installing the appropriate retainer,
- Avoid pinching or kinking of any fuel vapor hose as shown in Figure B, Design Recommendations — Fuel Fill System section, page 305, of this book.
- Each of the fuel line and fuel vapor hose retention clips provided by Ford must be used in original factory locations to prevent misplacement or movement of the lines.

- Fuel filters installed in the fuel supply line must be
 of sufficient size to permit adequate fuel flow and
 placed so as to help reduce exposure to exhaust
 heat and physical damage. Ford replacement fuel
 filters are recommended for the gasoline system.
 Filters are not to be installed in the fuel return line.
- Fuel system components which are disconnected during manufacturing should be capped or plugged promptly to prevent possible contamination.

Valves and Fittings

- Must be leak-free under normal vehicle vibration modes, line pressures and temperatures.
- Material must be compatible with interfacing components.
- Consider serviceability when selecting fitting type & packaging.

Pressure Regulator

- Must be packaged in an area which is:
 - Serviceable
- Protected from road hazards and jacking
- Protected during crash situations
- Must not restrict airflow through the radiator

ELECTRICAL

- Electrical connections exposed to the elements should be appropriately protected.
- Refer to Ford Electrical Trouble Shooting Guide for each Model to resolve electrical concerns. Publications are available from Helm Incorporated, call 1-800-782-4356.

LPG Conversions

Conversions of Ford gasoline engines into LPG engines should be made by reputable and qualified distributors of LPG equipment in accordance with applicable Canadian, U.S. Federal, State, provincial, and local laws and regulations. LPG is a regulated emission in California and requires a California Executive Order for engine sales in California. Engines that are converted to operate on LPG should be run only on LPG fuels specifically designated for motor use. Operators of LPG-fueled vehicles should obtain from the organization that performed the conversion, written instructions for operating the engine and its LPG fuel system, including any precautions applicable to such operation. It is very important that these instructions be followed carefully and completely.

In the United States, regulations issued by the U.S. Federal Highway Administration (see, for example, 49 CFR Part 393.65 and 393.69) and State and local laws and regulations may require installation of special equipment depending on the particular uses intended for the vehicles. A number of State and local governments require the fuel systems of LPG-fueled vehicles to meet standards that often are based on some version of National Fire Protection Association (NFPA) Standard No. 58, entitled "Standard for the Storage and Handling of Liquified Petroleum Gases."

GUIDELINES FOR SECOND UNIT BODY INSTALLATION ON FORD PRODUCED DEDICATED NATURAL GAS VEHICLE (NGV) E-SERIES CUTAWAY 176" WB



Page 31 SAFETY/EMISSION

Ford produces a Super Duty Cutaway Dedicated Natural Gas Vehicle (NGV), which comes from the factory capable of running on Compressed Natural Gas (CNG).

The vehicle is equipped with a 3-tank CNG fuel system, which consists of one midship tank and two aft-of-axle tanks.

When installing a Second Unit Body (SUB), the precautions and instructions as described on these pages must be followed, as well as pages 28-30.

 The body shall provide adequate strength and anti-deformation characteristics to withstand NGV-1 breakaway force from the fill station with no vehicle fuel system leakage.

Definition of a Dedicated NGV: Vehicle operates on CNG fuel only, no gasoline on board. The engine has upgraded components for enhanced durability while operating on the gaseous fuel.

- Removing, detaching or altering any component of the CNG fuel system should only be done by an authorized Ford Dealer, properly Ford trained personnel or Ford Alliance Partner.
- Do not weld on CNG tanks or attachment brackets.

- If it is necessary to place the vehicle in a paint-curing oven to cure paint on a SUB, all the fuel from the CNG system (tanks, lines, etc.) must be removed prior to curing. The vehicle and it's components should not be subjected to temperatures in excess of 180 ambient degrees F.
- Do not pressurize the fuel system with anything but nitrogen or natural gas.

The vehicle must adhere to the same requirements and criteria as the gasoline E-450 Cutaway unless otherwise stated in the E-450 Cutaway NGV portion of this publication or in the Ford Alternative Fuel Programs (FAFP-2000) Gaseous Fuel Guidelines.

A copy of the *FAFP-2000 Gaseous Fuel Guidelines* can be obtained by calling 1-877-ALT-FUEL.

Clearance from transmission mounted parking brake equalizer: "A minimum of 25.4 mm [1.0 in] clearance is required between any part of the fuel system and the parking brake equalizer."

Installation of Ford approved in-body tank kit:

- Any tanks that are added by the SUB installer must utilize the inertia switch and have a solenoid activated tank valve.
- Underbody or cargo area tanks must be shielded. Shields must have drain holes.
- If tanks are mounted inside the vehicle, the tank neck and all connections must be enclosed in a gas tight housing and be vented outside the vehicle.
- Tanks must meet (NGV2-98) requirements for Type 1 or Type 2 only. Type 3 and Type 4 tanks are not allowed.

The subsequent stage manufacturer is responsible for ensuring that all applicable requirements are met, including Federal/Canadian Motor Vehicle Safety Standards (F/CMVSS) regulations. The completed vehicles must be in accordance with all federal, state, provincial and local regulations and industry standards regarding new vehicles including, but not limited to, those issued by:

- National Fire Protection Association (NFPA 52)
- Ford Alternative Fuel Programs (FAFP-2000) Requirements
- Ford Truck Body Builders Layout Book

 Ford Qualified Vehicle Modifier (QVM) Motor Home and Transit Bus Guide

Do not assume that this is a complete list but rather a sample of the many resources that contain the requirements that your vehicle must meet once it is complete.


Fuel lines and tanks must be vented according to the proper fuel venting procedure before tapping into the fuel system.

- Refer to the Ford Service Manual for the recommended fuel system venting procedure if required.
- Warning: High Pressure Fuel System.
 Service Pressure: 3600 PSI @ 70 F.

The completed weight of any vehicle must not exceed the rated GAWRs or GVWR with full fuel and allowance for passengers and rated cargo.

 The spacers required between the frame and Second Unit Body must be included in the center of gravity and Second Unit Body weight.


The accessory reserve capacity (ARC), or accessory reserve load, of new Ford vehicles must not be exceeded for either the front axle, rear axle and/or total vehicle with the installation of additional gaseous fuel system components.

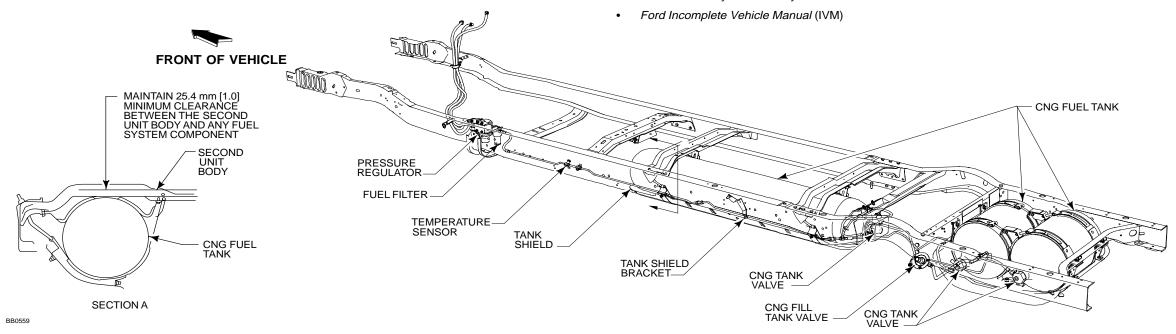

GUIDELINES FOR SECOND UNIT BODY INSTALLATION ON FORD PRODUCED DEDICATED NATURAL GAS VEHICLE (NGV) E-SERIES CUTAWAY 176" WB


2002 MODEL YEAR

Page 32 SAFETY/EMISSION

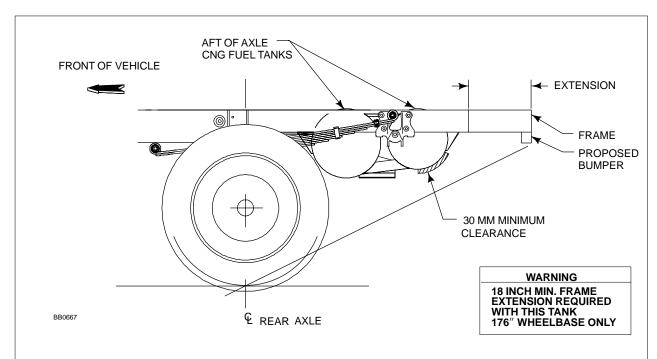

Minimum Ground Clearance (Departure Angle) for Completed Vehicles with Aft Axle CNG tanks

Any tank and shield package designed to mount under the Ford body must be at least 30mm above the break-over and departure zones. Take no action which would degrade ground clearance beyond that which is sold and released by Ford Motor Company. See page 129 for Recommended Installation of Frame Extension.

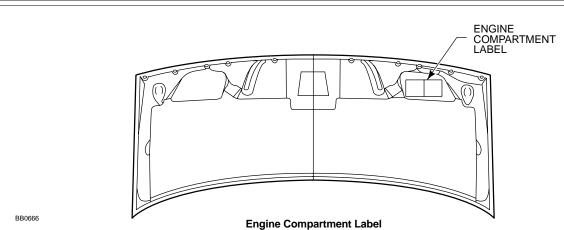


Every vehicle powered by CNG gas must bear a label located in the engine compartment and shall include the following:

- 1. Identification as a CNG-fueled vehicle.
- 2. System service pressure.
- 3. Installer's name or company.
- 4. Container retest date (s) or expiration date.
- 5. Total container water volume in gallons (liters).
- (Label will be affixed under hood upon delivery)

If additional fuel tanks are added to the fuel system, a supplemental sticker must be affixed in this location as well. The supplemental sticker must contain the following:

- 1. Additional System Volume (added volume and total).
- 2. Service pressure (must not be altered from 3600 psi @ 70 F).
- 3. Installer's name or company.

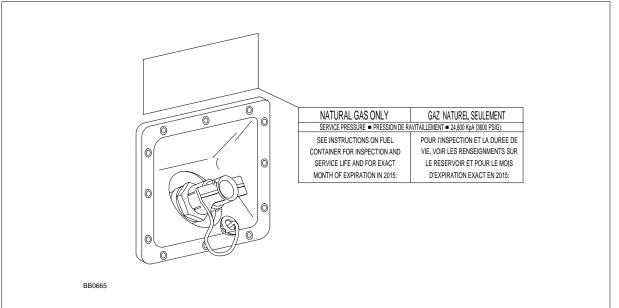

Every vehicle powered by CNG gas must bear a label located at the fueling connection receptacle and shall include the following:

- 1. Identification as a CNG-fueled vehicle.
- 2. System service pressure.
- 3. Container retest date (s) or expiration date.

(If additional tanks are added to the fuel system, the label must be supplemented to reflect the earliest date of all tanks on the vehicle)




CNG Label

Every vehicle powered by CNG gas must be identified with a weather resistant diamond-shaped label located on an exterior vertical, or near vertical surface, on the lower right rear of the vehicle, inboard from any other markings. The label must not be installed on the bumper. The label shall be approximately 120 mm [4¾ in] long by 83 mm [3¼ in] high. The marking shall consist of a border and the letters "CNG" 25 mm [1 in] minimum height centered in the diamond of silver or white reflective luminous material on a blue background.

ESCAPE SEAT TRACK TRAVEL/H-POINT LOCATION



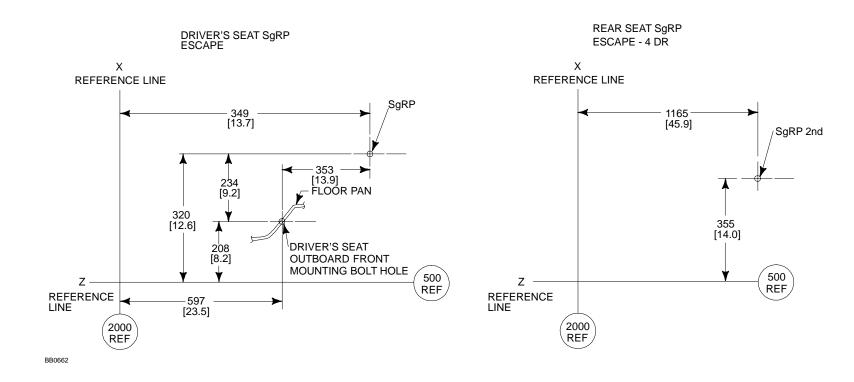


EXPLORER 4 DR/SPORT/SPORT TRAC SEAT TRACK TRAVEL/H-POINT LOCATION




Page 34 SAFETY/EMISSION



EXPLORER SPORT – 2 DR EXPLORER SPORT TRAC – 4 DR DRIVER/FRONT PASSENGER MANUAL TRACK

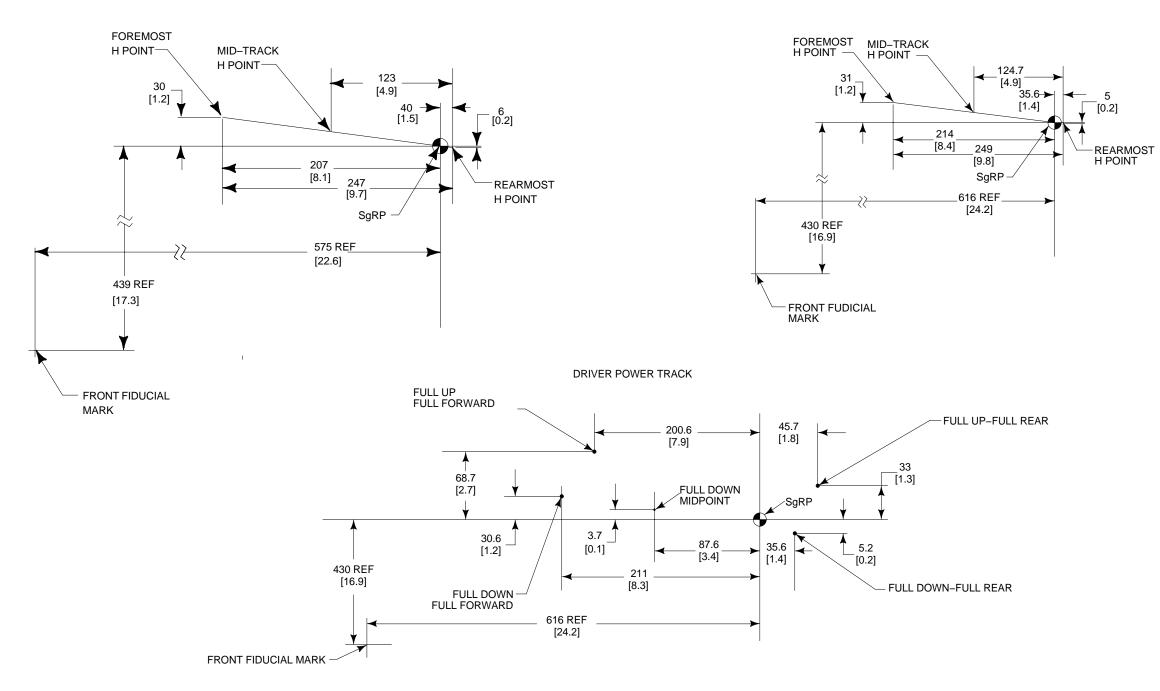



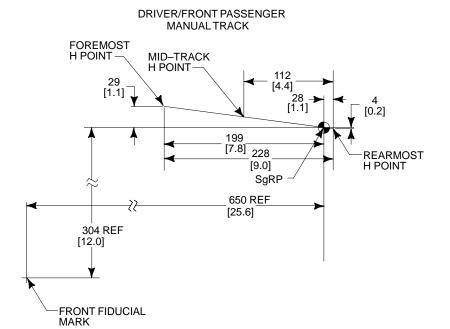


BB0460

E-SERIES SEAT TRACK TRAVEL/H-POINT LOCATION


2002 MODEL YEAR

Page 36 SAFETY/EMISSION


BB0056

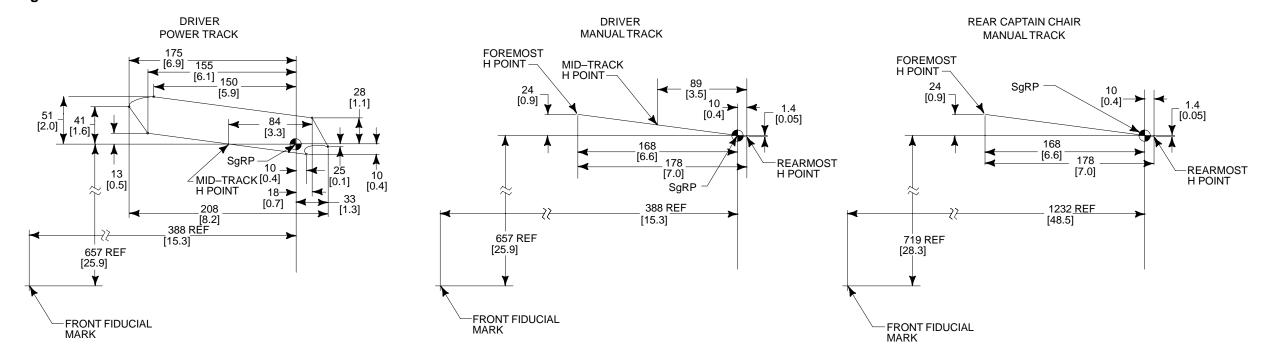

FRONT PASSENGER MANUAL TRACK

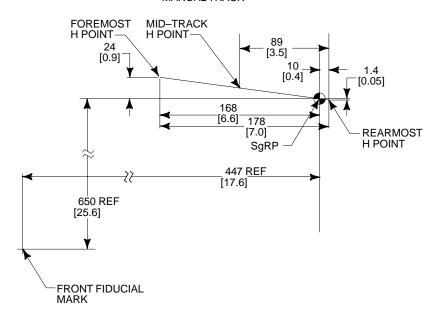

FRONT PASSENGER MANUAL TRACK FIXED SEAT BACK

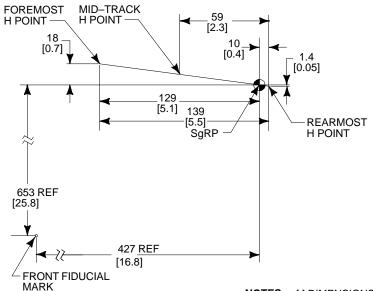


NOTES —[] DIMENSIONS ARE INCHES.

THIS INFORMATION IS PROVIDED TO ASSIST IN THE INSTALLATION OF SEATS OTHER THAN FORD INSTALLED SEATS AND TO HELP PRESERVE THE INTENDED PERFORMANCE OF THE SAFETY AND ERGONOMIC FEATURES OF THE 2002 E-SERIES. THE MID-TRACK H-POINT LOCATION MUST BE MAINTAINED IN ORDER TO COMPLY WITH FMVSS 208 AIRBAG REQUIREMENTS.

F-150 SEAT TRACK TRAVEL/H-POINT LOCATION





Page 37 SAFETY/EMISSION

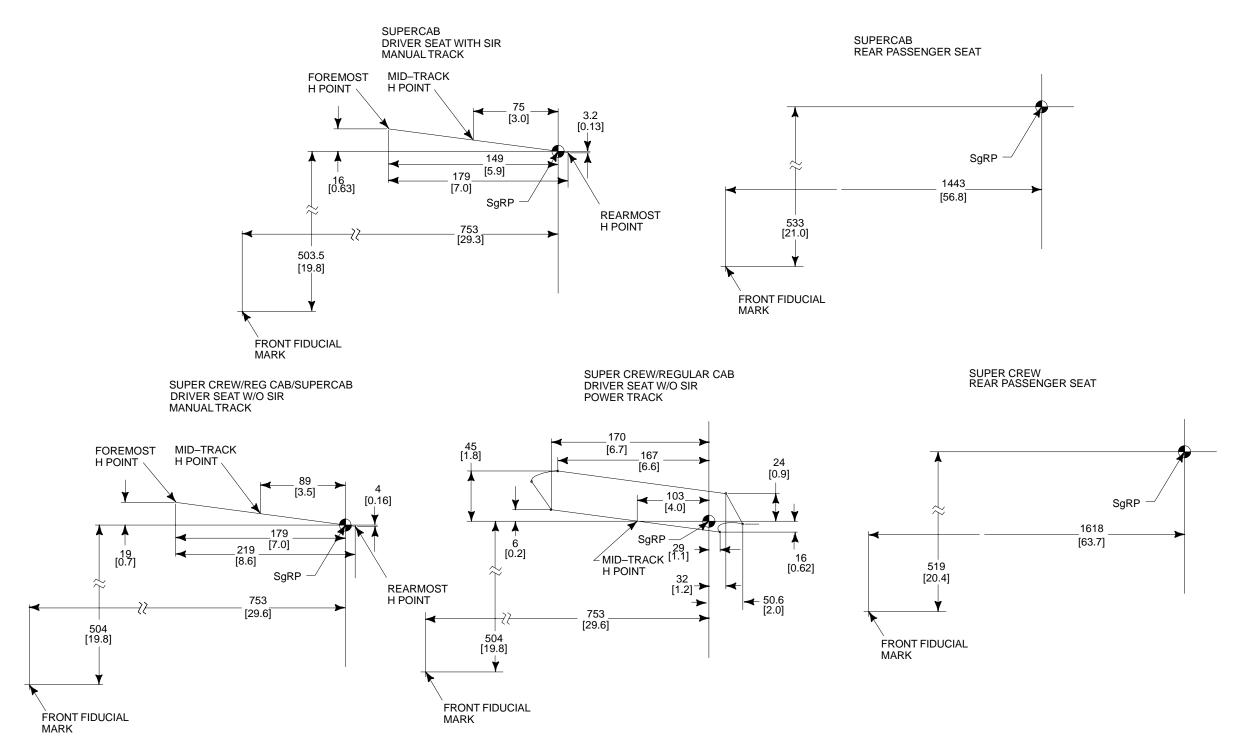

F-150 SEAT TRACK TRAVEL/H-POINT LOCATION



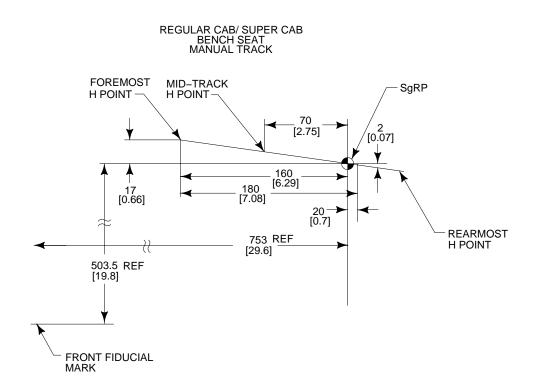

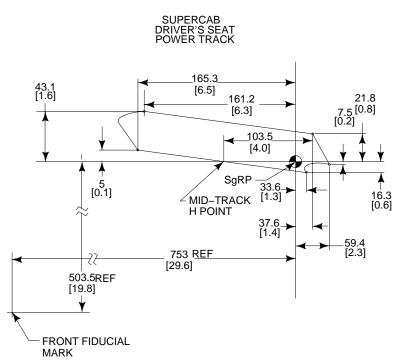

BB0700

SUPER DUTY F-SERIES SEAT TRACK TRAVEL/H-POINT LOCATION

2002 MODEL YEAR

SAFETY/EMISSION Page 39 REGULAR CAB SUPERCAB DRIVER'S SEAT **CREW CAB** DRIVER'S SEAT MANUAL TRACK DRIVER'S SEAT MANUALTRACK MANUAL TRACK **FOREMOST** MID-TRACK MID-TRACK FOREMOST MID-TRACK SgRP **FOREMOST** H POINT H POINT -H POINT-H POINT H POINT H POINT-_ 79 [3.1] _120 [4.7] _ 118 [4.6] [0.15] [0.15] [0.1] 140 [5.5] [6.3][6.3] 180 199 199 14 16 [0.6] [7.1] [7.8] [0.6] [7.8] [0.6] 40**→** [1.6] 39 **→** [1.5] SgRP-REARMOST REARMOST -REARMOST H POINT H POINT **H POINT** 241 REF 241 REF 241 REF [9.5] [9.5] [9.5] 553 REF 553 REF 553 REF [21.8] [21.8] [21.8] FRONT FIDUCIAL FRONT FIDUCIAL FRONT FIDUCIAL MARK MARK MARK **CREW CAB** SUPERCAB DRIVER'S SEAT **REGULAR CAB** DRIVER'S SEAT POWER TRACK POWER TRACK DRIVER'S SEAT POWER TRACK 173₋ [6.8] 173₋ [6.8] 173 [6.8] 151 151 151 31 [1.2] 41 [1.6] 31 [1.2] [6.0]41 [1.6] [6.0][6.0][1.6] 148 22 148 22 148 9 [0.9] [0.4] [5.8] 22 [5.8]9 [0.9] [5.8] [0.9] [0.4]131 130 _131 [5.1] [5.1] [5.1] SgRP SgRP SgRP 2 [0.1] [0.1] 2 [0.1] _MID-TRACK [1.9] /MID-TRACK [1.9] 17 /MID-TRACK [1.9] [0.7] [0.7]H POINT H POINT H POINT 51 [2.0]→ 51 [2.0]→ _ 71 [2.8] 241 REF [2.8] 241 REF 241 REF [9.5] [9.5] [9.5] 553 REF 553 REF 553 REF [21.8] [21.8] [21.8] NOTES — THIS INFORMATION IS PROVIDED TO ASSIST IN THE INSTALLATION OF SEATS OTHER THAN FORD INSTALLED SEATS AND TO HELP PRESERVE THE INTENDED FRONT FIDUCIAL FRONT FIDUCIAL PERFORMANCE OF THE SAFETY AND ERGONOMIC MARK

FEATURES OF THE 2002 SUPER DUTY F-SERIES OVER FRONT FIDUCIAL

MARK

MARK

BB0298

—[] DIMENSIONS ARE INCHES.

8500 LB.

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM

Page 40 SAFETY/EMISSION



INFORMATION

The following recommendations are intended to assist in the design of seats and seat belt systems capable of meeting the requirements of the F/CMVSS 207, 208, 209 and 210 except for front seating positions for vehicles having a GVWR of 3855 kg [8500 lb] or less, and an Unloaded Vehicle Weight of 2495 kg [5500 lb] or less. These recommendations are based on testing and analyses performed by Ford Motor Company.

Ford cautions subsequent stage manufacturers to note the definition of "Designated Seating Positions" on page 26/. If a position can reasonably be used by a 5th percentile adult female for seating and the overall seat configuration and vehicle design make it likely that the position will be used by an occupant while the vehicle is in motion, then the position must be considered to be a "Designated Seating Position" for determination of compliance to U.S. and Canadian motor vehicle safety standards.

Seat and seat belt systems may take many forms; this list of recommendations cannot cover all possibilities. Strict adherence to these suggestions will not ensure that systems will comply with F/CMVSS 207, 208, 209 and 210. Responsibility for determining compliance to appropriate F/CMVSS regulations is that of the final stage manufacturer. Accordingly, Ford Motor Company makes no representation as to the appropriateness of any particular recommendation in its specific application of a particular design or act of intermediate or final stage manufacture.

To confidently verify compliance with F/CMVSS 207, 208, 209 and 210, the testing of representative systems to applicable F/CMVSS 207, 208, 209 and 210 procedures is recommended. Questions regarding compliance with F/CMVSS regulations should be directed to your legal counsel, the National Highway Traffic Safety Administration, or Transport Canada.

SEAT SYSTEMS

- For Incomplete E-Series Vans and Cutaways with a GVWR over 3855 kg (8500 lb) purchased with the front seat delete option, Ford strongly recommends following the practices specified in the compliance representations for F/CMVSS 208 that apply to Incomplete E-Series Vans with a GVWR of 3855 kg (8500 lb) or less and completed units Unloaded Vehicle Weight of 2495 kg (5500 lb) or less that are purchased without front seats.
- 2 Any additional seats and seat anchorages installed by subsequent stage manufacturers must meet F/CMVSS 207 requirements and specifications.
- Do not modify or alter Ford furnished seating or occupant restraint system. When utilizing the Ford seat delete package, care must be taken to insure proper function of the seat adjustment latching mechanism, electrical wiring and seat belt buckle pretensioner. Refer to Bulletin Q-48 for wire routing.
- 4. If the seat or seat belt components are temporarily removed for any reason, they must be reinstalled in accordance with the instructions and specifications found on the following pages for E-Series, Super Duty F-Series or the applicable Ford Truck Shop Manual.
- Seating systems that include the attachment of lap belt or shoulder belt assemblies should also consider the requirements of F/CMVSS 210 as part of the seating system.
- Seating system components should be free of sharp edges to prevent damage to seat belt systems when the belts could potentially contact the seating system components.
- Seats should be mounted with appropriate fasteners in the mounting holes provided, since these holes are located to utilize floor pan structural reinforcements. (See figures on following pages.)
- 8. If additional holes are required for any reason, their locations should be carefully selected so that the structural integrity of the floor pan will not be compromised and to prevent damage to other components located below the floor.

- Seating systems should be designed to be compatible with the seat belt systems, so as to permit proper adjustment, allow for occupant movement and provide convenient accessibility of the restraint system buckle release.
- Seats not designated for occupancy while the vehicle is in motion must be conspicuously labeled as such.

WARNING:

FORD SAFETY BELTS ARE DESIGNED TO WORK WITH THE SEATS ORIGINALLY DESIGNED FOR THE VEHICLE. IF A MODIFIER USES DIFFERENT SEATS WITH FORD SEAT BELTS, THAT MODIFIER MUST ENSURE THE SAFETY BELTS AND REPLACEMENT SEATS MEET ALL FMVSS REQUIREMENTS AND WILL PERFORM SAFELY IN THE FIELD. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY IN THE EVENT OF A COLLISION.

LAP AND SHOULDER BELT SYSTEMS

- The front seats are equipped with a pyrotechnic buckle pretensioner. The buckle pretensioner reduces slack in the lap and shoulder safety belt by pulling the buckle downward. The buckle pretensioners and air bags operate on the same sensors and will function simultaneously.
- Additional lap and shoulder belt assemblies, including retractors and hardware, must comply with the requirements of F/CMVSS 208 and 209.
- Additional lap and shoulder belt system anchorages must comply with the requirements of F/CMVSS 210.
- Lap and shoulder belt systems that are attached to seat frame or base may affect compliance of the seating system with the requirements of F/CMVSS 207.

- 5. Ford lap and shoulder belts, retractors and attaching hardware should not be altered or modified in any way. The reinstallation of these components should follow the instructions and specifications on the following pages, or those in the appropriate Ford Truck Shop Manual.
- 6. Lap and shoulder belt assemblies should be compatible with the seat systems and anchorages so that lap belts will be properly positioned about the occupant's pelvis to provide proper adjustment and fit. The buckle and buckle release are properly located with respect to the occupant and must comply with the requirements of F/CMVSS 208.
- 7. Seat belt warning system activation/deactivation, where applicable, should be provided by the lap and shoulder belt assembly.

WARNING:

THE SEAT BELT BUCKLE PRETENSIONER, AIRBAGS AND ELECTRONIC SENSOR MODULE ARE BAR CODED WITH A UNIQUE SERIAL NUMBER WHICH IS MATCHED TO THE VEHICLE VIN. TO MAINTAIN THE OCCUPANT PROTECTION SYSTEM PERFORMANCE, THE COMPLETED VEHICLE MUST CONTAIN THE SAME SEAT BELT BUCKLE PRETENSIONER, AIR BAGS AND ELECTRONIC SENSOR MODULE THAT WERE INSTALLED BY FORD MOTOR COMPANY. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY IN THE EVENT OF A COLLISION.


OCCUPANT PROTECTION ZONE AND OVERHEAD CONSOLE

For vehicles completed with an Unloaded Vehicle Weight (UVW) greater than 2495 kg [5500 lb], Ford strongly recommends following the practices in the compliance representations for F/CMVSS 208 regarding overhead console specifications that apply to Incomplete E-Series Vans with a GVWR of 3856 kg [8500 lb] or less and completed units have an Unloaded Vehicle Weight of 2495 kg [5500 lb] or less. (Refer to the *Incomplete Vehicle Manual* for these compliance representations.)

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM



Page 41 SAFETY/EMISSION

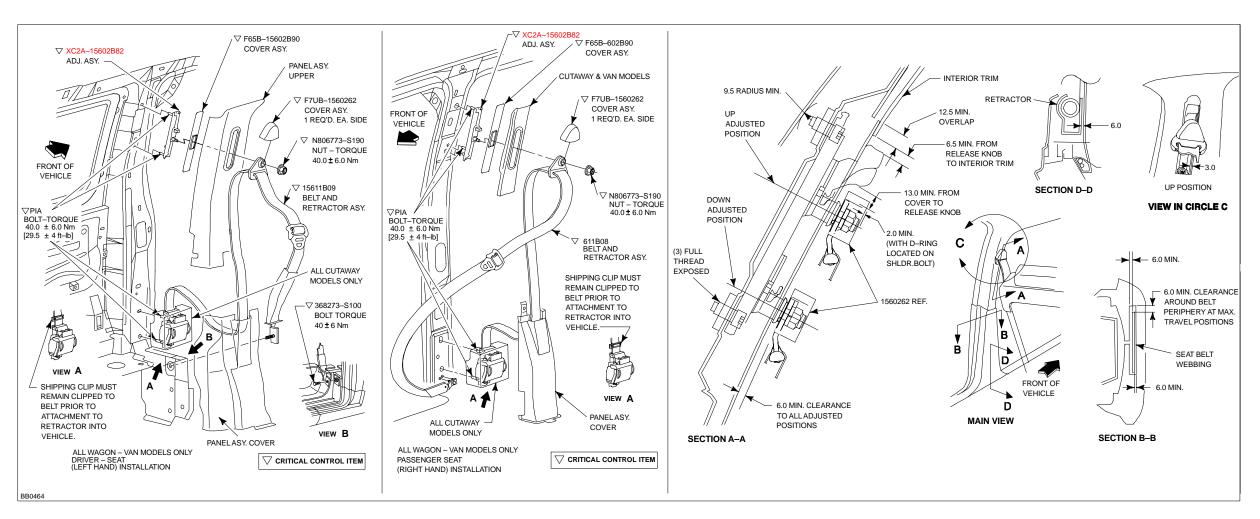

E-SERIES DRIVER (LH) SEAT RESTRAINT SYSTEM INSTALLATION


E-SERIES PASSENGER (RH)
SEAT RESTRAINT SYSTEM INSTALLATION

E-SERIES FRONT SEAT RESTRAINT INSTALLATION

Page 42 SAFETY/EMISSION

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM



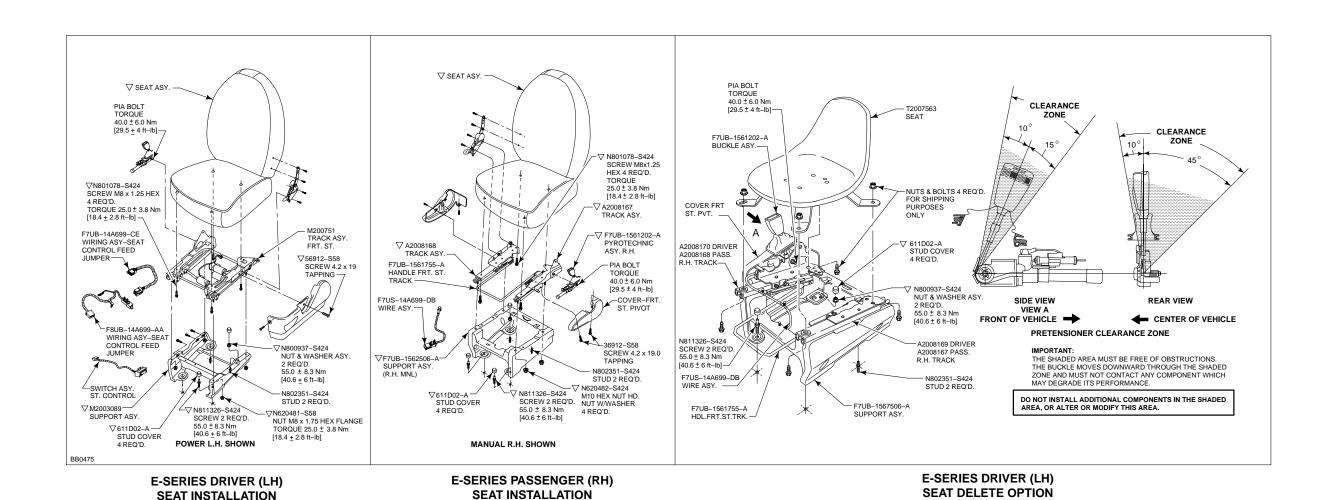


NOTE - [] DIMENSIONS ARE FT-LB OR INCHES.

2002 MODEL YEAR

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM


Page 43 SAFETY/EMISSION

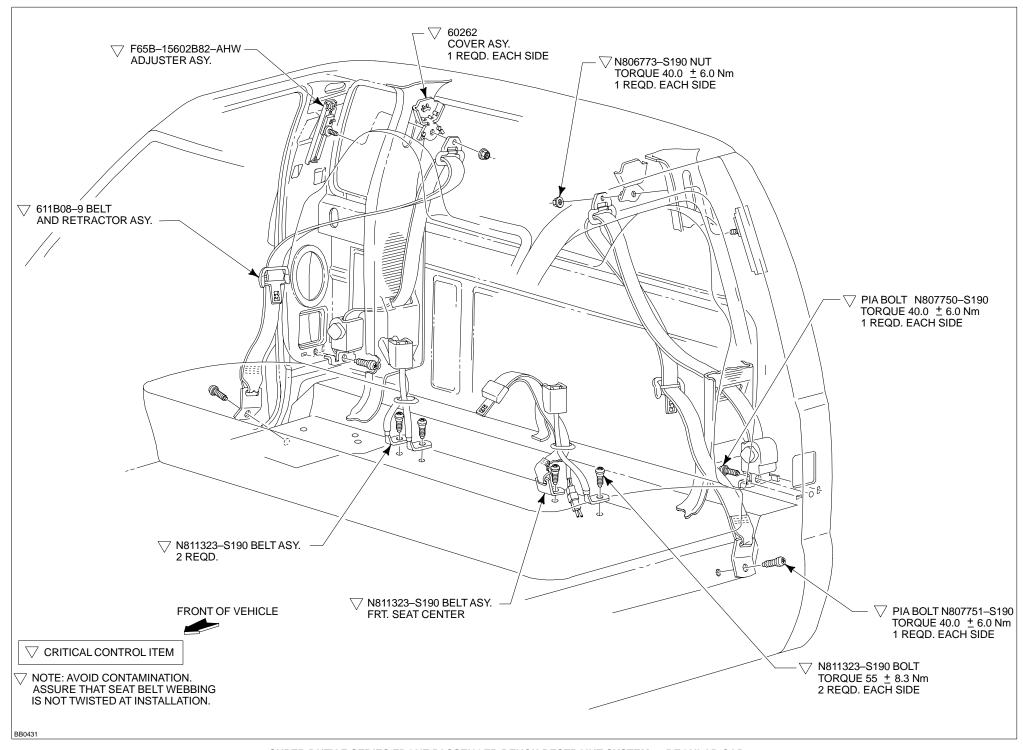

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM




Page 44 SAFETY/EMISSION

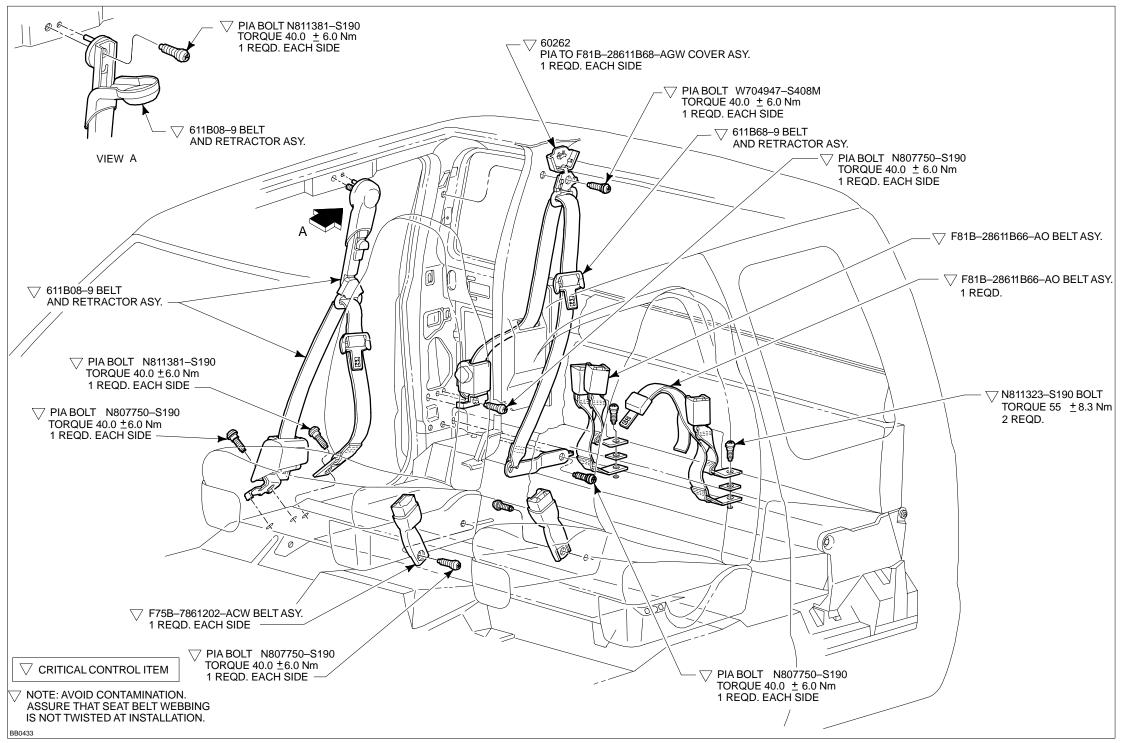

OCCUPANT PROTECTION SYSTEMS SEAT RESTRAINT SYSTEM



Page 45 SAFETY/EMISSION

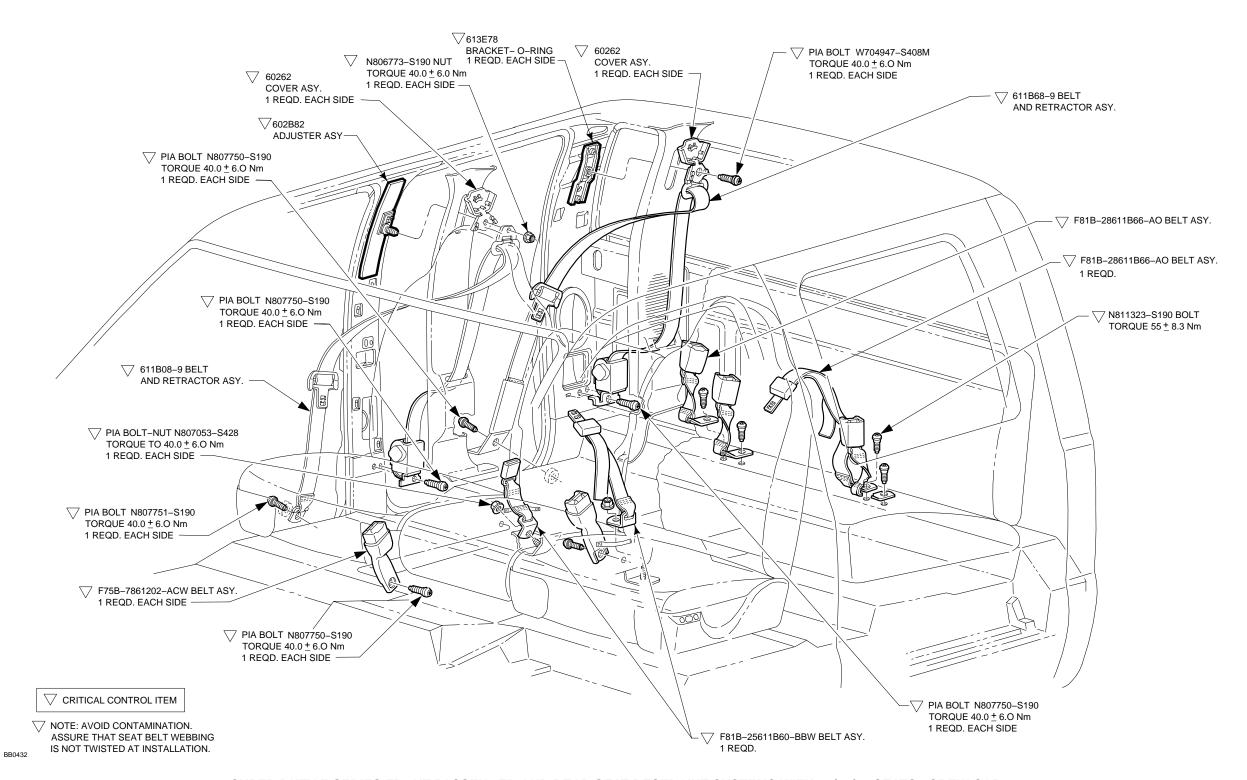

OCCUPANT PROTECTION SYSTEMS AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM

2002 MODEL YEAR

Page 46 SAFETY/EMISSION

INFORMATION

Ford urges careful consideration of the recommendations that follow. They are based on analyses of component and vehicle tests, actual service situations, and engineering judgments. Disregard of these recommendations may affect the durability, reliability, handling, and performance characteristics of a completed vehicle and may result in elevated underbody temperatures, increase the potential for fire, or may affect the safety of the occupants in the event of an accident.

These recommendations are supplemental to U.S. and Canadian Motor Vehicle Safety compliance representations provided in the *Incomplete Vehicle Manual* (IVM). Also, additional information is provided in the *Ford Truck Service Manual* which may be helpful to subsequent stage manufacturers.

The completed vehicle in the "Loaded" condition must not exceed the front GAWR, rear GAWR, or the GVWR. ("Loaded" means the completed vehicle weight with the maximum fluid capacity necessary for vehicle operation, plus 150 lb for each designated seating position, and an additional allowance for any cargo weight advertised by the manufacturer). The GAWRs and GVWR are on the label affixed to the cover of the *Incomplete Vehicle Manual*.

Subsequent Stage Manufacturers are encouraged to contact the Ford Truck Body Builder Advisory Service if they have any questions concerning these recommendations.

AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM

Some trucks produced by Ford Motor Company are equipped with an Airbag Supplemental Restraint System (SRS). Vehicles equipped with this system will have the words "AIRBAG" and an air bag symbol on the VIN plate located on the top driver-side corner of the instrument panel. System components are shown in their vehicle locations on the following pages.

Included on the vehicle identification number -VINplate (visible through the windshield) of the vehicle, manufactured by Ford with a driver's air bag, are the words "AIR" and "BAG" and a pictogram for the airbag separating the two (see illustration below).



BB0538

Detailed system and service information will be found in the *Ford Truck Service Manual* for the appropriate type and model year. Ford Motor Company urges the subsequent stage manufacturers to become familiar with this system prior to modifying vehicles that are so equipped.

CAUTION:

DO NOT REMOVE THE STEERING COLUMN, STEERING WHEEL AND AIRBAG MODULE AS AN ASSEMBLY FROM THE VEHICLE UNLESS (1) THE COLUMN IS LOCKED TO PREVENT ROTATION, OR (2) THE LOWER END OF STEERING SHAFT IS SECURED (e.g., by wire) IN SUCH A WAY THAT THE STEERING WHEEL CANNOT BE ROTATED.

WARNING:

THE SEAT BELT BUCKLE PRETENSIONER, AIRBAGS, AND ELECTRONIC SENSOR MODULE ARE BAR CODED WITH A UNIQUE SERIAL NUMBER WHICH IS MATCHED TO THE VEHICLE VIN. TO MAINTAIN THE OCCUPANT PROTECTION SYSTEM PERFORMANCE, THE COMPLETED VEHICLE MUST CONTAIN THE SAME SEAT BELT BUCKLE PRETENSIONER, AIR BAGS, AND ELECTRONIC SENSOR MODULE THAT WERE INSTALLED BY FORD MOTOR COMPANY. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY IN THE EVENT OF A COLLISION.

If electrical work is performed in the steering column area, the instrument panel or the air bag system, the system must be deactivated to avoid unwanted inflation of the air bag. To do this, follow the procedure described on this page.

DEACTIVATION PROCEDURE

- 1. Disconnect all negative battery cable(s), and power supplies (if equipped).
- 2. Wait 1 minute. This is the time required for backup power supply in diagnostic monitor to deplete its stored energy.

WARNING:

TO AVOID ACCIDENTAL DEPLOYMENT AND POSSIBLE PERSONAL INJURY, THE BACKUP POWER SUPPLY MUST BE DEPLETED BEFORE REPAIRING OR REPLACING ANY AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM (SRS) COMPONENTS. TO DEPLETE THE BACKUP POWER SUPPLY ENERGY, DISCONNECT THE BATTERY GROUND CABLE AND WAIT ONE MINUTE. BE SURE TO DISCONNECT AUXILIARY BATTERIES AND POWER SUPPLIES (IF EQUIPPED).

WARNING:

CARRY A LIVE AIRBAG MODULE WITH THE AIRBAG AND TRIM COVER POINTED AWAY FROM YOUR BODY. THIS WILL REDUCE THE RISK OF INJURY IN THE EVENT OF AN ACCIDENTAL DEPLOYMENT.

WARNING:

DO NOT SET A LIVE AIRBAG MODULE DOWN WITH THE TRIM COVER FACE DOWN.

- 3. Remove fasteners retaining driver airbag module to steering wheel. Disconnect driver airbag connector and remove the bag from steering wheel. Place the bag on a flat surface with trim cover facing upward. Connect an Airbag Simulator (Part # 105-R0012 in the Rotunda Tool catalog) to the air bag connector on the wire harness in the steering wheel.
- 4. Disconnect passenger airbag module connector and replace it with an Airbag Simulator (Part # 105-R0012 in the Rotunda Tool catalog) to the airbag connector on the wire harness in the I/P.
- 5. Reconnect all negative battery cables and power supplies (if equipped).

REACTIVATION PROCEDURE

- Disconnect all negative battery cable(s) and power supplies (if equipped).
- 2. Wait 1 minute for backup power supply to deplete stored energy.
- Remove Airbag Simulator and reconnect driver airbag connector. Position driver airbag on steering wheel and secure with fasteners (10mm). Tighten fasteners to 2.7-3.7 Nm.[24-32 in-lb].
- Remove Airbag Simulator and reconnect passenger airbag connector.
- Reconnect all negative battery cables and power supplies (if equipped).
- 6. PROVE-OUT the system.

PROVE-OUT SYSTEM PROCEDURE

Prove-out system means to turn the ignition switch from OFF to RUN and visually monitor the airbag indicator. The airbag will light continuously for approximately six seconds and then turn off. If an airbag system fault is present, the indicator will either fail to light, remain lit continuously or light in a flashing manner. The flashing manner may not occur until approximately 30 seconds after the ignition switch has been turned from OFF to RUN. This is the time required for the diagnostic monitor to complete the testing of the airbag system. If the airbag indicator is inoperative and an airbag system fault exists, a tone will sound in a pattern of five sets of five beeps. If this occurs, the airbag indicator will need to be serviced before further diagnosis can be done.


OCCUPANT PROTECTION SYSTEMS AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM

2002

Page 47 SAFETY/EMISSION

AIRBAG USAGE CHART

VEHICLE	DRIVER	PASSENGER
Windstar	Standard Front Optional Side	Standard Front Optional Side
Escape	Standard Front Optional Side	Standard Front Optional Side
Explorer	Standard Front Optional Side	Standard Front Optional Side
Explorer Sport	Standard Front Optional Side	Standard Front Optional Side
Explorer Sport Trac	Standard Front Optional Side	Standard Front Optional Side
Ranger	Standard Front	Standard Front (Includes deactivation switch except with Crew Cab models)
Expedition	Standard Front	Standard Front
Excursion	Standard Front	Standard Front
F150	Standard Front	Standard Front (Includes deactivation switch except with Crew Cab models)
E-Series Wagon	Standard Front	Standard Front
E-Series Vans	Standard Front	Standard Front
E-Series Cutaway	Standard Front	Standard Front
E-Series Stripped Chassis		
Super Duty F-Series Pickups	Standard Front	Standard Front (Includes deactivation switch except with Crew Cab models)
Super Duty F-Series Pickup Box Delete and Chassis Cabs	Standard Front	Standard Front (Includes deactivation switch except with Crew Cab models)

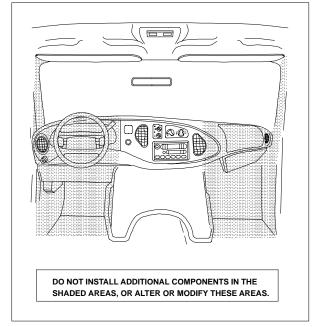

INSTRUMENT PANEL HARNESS WHEEL ELECTRONIC CRASH SENSOR MODULE READINESS CONNECTOR AT SAFETY WALL COMPARTMENT DO NOT MODIFY OR ALTER ANY COMPONENTS OR AREAS OF THE VEHICLE IN THE VICINITY OF THE COMPONENTS THAT ARE IDENTIFIED IN THIS ILLUSTRATION.

FIGURE A - E-SERIES OCCUPANT **PROTECTION ZONE**

FIGURE B - E-SERIES SUPPLEMENTAL **RESTRAINT SYSTEM** (AIRBAGS, SENSORS AND WIRING)

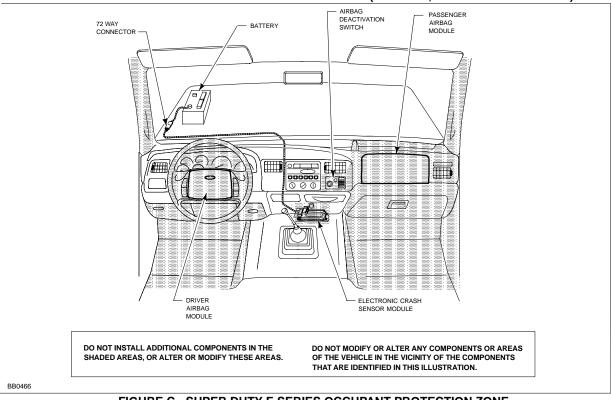


FIGURE C - SUPER DUTY F-SERIES OCCUPANT PROTECTION ZONE

OCCUPANT PROTECTION SYSTEMS AIRBAG SUPPLEMENTAL RESTRAINT SYSTEM

Page 48 SAFETY/EMISSION

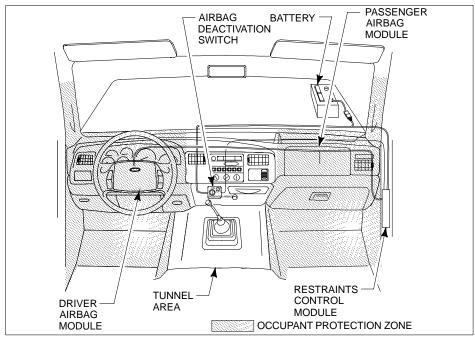


FIGURE A - RANGER OCCUPANT PROTECTION ZONE

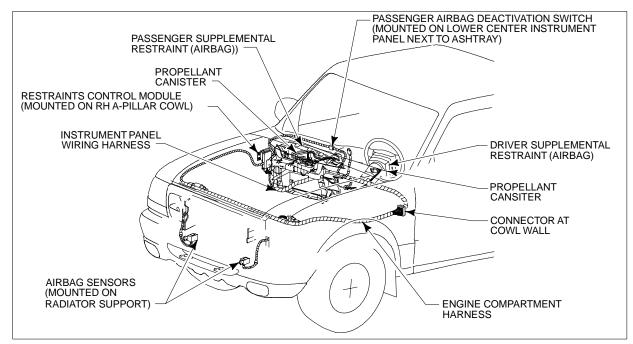


FIGURE B - RANGER SUPPLEMENTAL RESTRAINT SYSTEM (AIRBAGS, SENSORS AND WIRING)

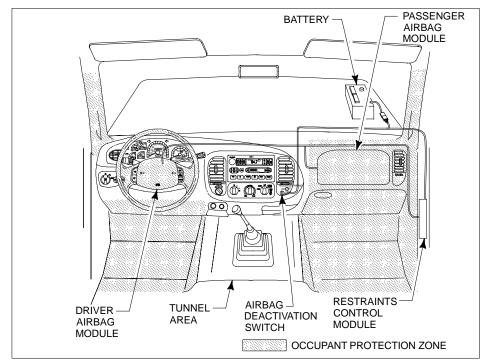


FIGURE C - F-150 OCCUPANT PROTECTION ZONE

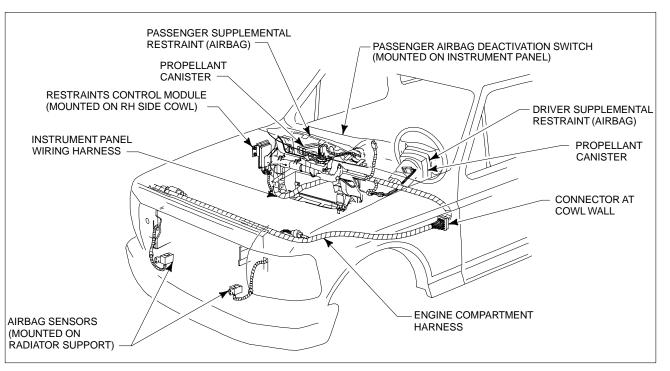


FIGURE D - F-150 SUPPLEMENTAL RESTRAINT SYSTEM (AIRBAGS, SENSORS AND WIRING)

VEHICLE NOISE REGULATIONS

Page 49 SAFETY/EMISSION

EXTERIOR

The U.S. Federal Government, the Canadian Federal Government, and some states, provinces and municipalities have enacted a variety of noise control laws and regulations which apply to motor vehicles sold or operating within their jurisdictions. Sales Representatives should become familiar with the various sales and user regulations, as required, to alert the individual purchaser. Moreover, the individual purchaser should check and become aware of any applicable regulations. The individual purchaser should be sure that the specifications of the vehicle, which he orders, are appropriate in view of those sales and user noise regulations applicable to his purchase and his anticipated use of that vehicle.

Although vehicles which have GVWRs over 4536 kg (10,000 lb) are designed to comply with Federal Interstate Motor Carrier Noise Emissions Standards, 40 CFR § 325, Ford Motor Company does not represent compliance with this standard under numerous and varying conditions under which such vehicles may be operated.

Furthermore, Ford does not represent compliance of any school bus, stripped chassis or chassis-cowl type vehicles with any noise control law or regulation. Because vehicle noise varies with number of tires on total vehicle combination, tire tread pattern, vehicle load, tire wear and the road surface condition, completed vehicles should not be ordered with lug-type tires.

Vehicles, to which alterations or additions are made that may increase exterior noise emissions, must be ascertained to comply with the applicable noise standards after modifications have been completed by the vehicle modifiers.

EXTERIOR NOISE REGULATIONS APPLICABLE TO SALE OF NEW VEHICLES

The U. S. Environmental Protection Agency (EPA) noise emission standards for medium and heavy trucks in excess of 4536 kg (10,000 lb) GVWR (40 CFR § 205.52) preempts, with certain exceptions, all those state and local noise regulations that are applicable to the sale of such new vehicles, and are not identical to the federal standards. These federal standards, which set a maximum sound emission level 80 dB(A), as measured by the prescribed procedure, are effective in all states, the District of Columbia, Puerto Rico, Virgin Islands, American Samoa, Guam and the Trust Territory of the Pacific Islands. These Federal regulations do not apply to school buses which are required to meet 80 dB(A) in a number of local jurisdictions. They also do not apply to trucks not having a partially or fully enclosed operator's compartment (for example stripped chassis). (See 40 CFR § 205.50, "Applicability" and pertinent definitions in § 205.51. See 40 CFR § 205.55-1 (b) for when incomplete vehicles being completed become subject to the Federal standard.)

SPECIFICATIONS FOR INTERIOR NOISE WHEN BMCS (INTERSTATE COMMERCE) SERVICE IS INDICATED

The Federal Interstate Motor Carrier interior noise standard (49 CFR § 393.94) is applicable to all motor vehicles. This standard requires that the interior sound level at the driver's seating position of any such vehicle not exceed 90 db(A), when measured in accordance with the test procedure in 49 CFR § 393.94(c).

Ford Motor Company does not represent that stripped chassis or cutaway vehicles manufactured by Ford Motor Company comply with the Federal Interstate Motor Carrier interior noise standard.

Vehicles subjected to alterations or additions, which may increase interior sound levels, must be ascertained to comply with the interior noise regulation after the modifications have been completed by the vehicle modifiers.

CANADIAN INTERIOR NOISE REGULATION

Trucks and buses over 4536 kg (10,000 lb) GVWR manufactured for use in Canada must meet the noise standard of the Canada Motor Vehicle Safety Standards (Section 1106 (2)) which specifies that the interior sound level at the driver's seating position shall not exceed 90 db(A), as measured in accordance with the test procedure set forth in Section 1106 (2).

Ford Motor Company does not represent that stripped chassis vehicles and vehicles with cut-away operators' compartments comply with the standard.

RADIO FREQUENCY INTERFERENCE (RFI)

The ignition system on your vehicle (if other than a Stripped Chassis) has been designed to be capable of compliance with RFI requirements established by the Canadian government. However, because Ford has no control over how an incomplete vehicle is completed by subsequent-stage manufacturers, Ford does not represent that the completed vehicle, incorporating the Ford-built components, will comply with those requirements. Any ignition system component (i.e., spark plugs, ignition wiring, coil suppressor assembly, etc.) that is replaced should be replaced by the same Ford Motor Company part number or equivalent, to maintain RFI suppression. Ford Motor Company does not represent that stripped chassis vehicles comply with the standard.

While there are currently no RFI regulations in the United States, specifically applicable to automotive ignition systems, some Ford trucks are built with ignition system components the same or equivalent to those supplied on Canadian vehicles. Ford Motor Company recommends that all ignition system service be performed at a Ford-authorized service facility to help hold RFI emissions levels to a minimum.

Devices that emit radio frequency (RF) energy, such as AM/FM radios, mobile telecommunications systems (two-way radios, telephones) and radio-controlled security systems, are subject to the rules and regulations of the Federal Communications Commission (FCC) 47 CFR Parts 2 and 15. Any such system installed in a vehicle should comply with those rules and should be installed only by a qualified technician. In addition, to ensure continued compliance with the FCC's regulations, RF devices must not be modified or changed in a manner not expressly approved by Ford Motor Company.

Mobile communication systems, particularly if not properly installed, may adversely affect vehicle operation. For example, such systems, when operated, may cause the engine to stumble or stall. In addition, such systems themselves may be damaged, or their operation affected by the operation of the vehicle. (Citizens Band [CB] transceivers, garage door openers, and other transmitters whose power output is 5 watts or less, ordinarily will NOT affect vehicle operation.)

Because Ford has no control over the operation or manufacture of such systems, or their installation, Ford cannot assume responsibility for any adverse effects or damage, if this equipment is used.

Similar radio regulations are in place in Canada: see, e.g., Radio Standards Specification RSS-119 and Radio Standards Procedure RSP-100.

CONTROL MODIFICATIONS

VEHICLE NOISE REGULATIONS/EMISSION



Page 50 SAFETY/EMISSION

NOISE CONTROL MODIFICATIONS

All new Ford Motor Company trucks over 4536 kg (10,000 lb) GVWR (other than stripped chassis) manufactured for use in the United States are designed to comply with the U.S. Environmental Protection Agency's Medium and Heavy Truck Noise Emission Standards (40 CFR Part 205). Information pertinent to these noise emission standards appears in the Ford Truck Owners' Guide and Maintenance Schedule and Record Log supplied with each Ford vehicle. Sections of the Guide that specifically relate to the Federal noise regulations are:

- 1. A statement entitled "Tampering with Noise Control System Prohibited," prescribed by Environmental Protection Agency regulation (40 CFR § 205.58-2(b)), and a list of acts, commission of any of which may be presumed to constitute tampering (Tampering List.)
- 2. Instructions for the maintenance, use and repair of the vehicle to minimize noise emission degradation*
- 3. A section reserved for recording what maintenance was done, by whom, where and when.
- * For trucks powered by diesel engines, the engine manufacturer's operation and maintenance manual. supplied with the vehicle, should also be consulted.

In planning vehicle modifications, the Tampering List should be consulted to identify those parts or systems where the alteration or removal is likely to affect the truck's compliance with the Noise Emission Standards. In addition, prospective modifications not mentioned in the Tampering List may increase the noise emissions of the truck to an impermissibly high level. The Federal regulations require regulated trucks completed by a subsequent-stage manufacturer for use in the United States, to conform to these standards. The Federal Noise Control Act of 1972, as amended, provides civil penalties for distribution in commerce by a manufacturer of non-complying trucks, and criminal penalties where such distribution is willful or knowing. Advice concerning compliance with noise regulations should be obtained from your legal counsel.

A compliance label (see sample) is affixed to each Ford truck regulated by the Federal Noise Regulations.

VEHICLE NOISE EMISSION CONTROL INFORMATION



FORD MOTOR COMPANY

The Vehicle Conforms to U.S. Regulations for Noise Emission Applicable to Medium and Heavy Trucks.

The Following acts or the causing thereof by any person are prohibited by the Noise Control Act of 1972: (A) The removal or rendering inoperative, other than for purposes of maintenance, repair or replacement, of any noise control device or element of design (listed in the owner's manual) incorporated into this vehicle in compliance with the Noise Control Act; (B) The use of this vehicle after such device or element of design has been removed or rendered inoperative.

> 'Month and Year of Mfr.' SAMPLE

BB0526

EMISSION CONTROL MODIFICATIONS

All new Ford Motor Company trucks, vehicles, and engines are certified by the U.S. Environmental Protection Agency and/or by the California Air Resources Board (CARB) for compliance with applicable government emission control regulations. A copy of the appropriate Ford Truck Owner's or Operator's Manual and Warranty Facts Booklet must be installed in every vehicle prior to sale to the ultimate purchaser in order to provide emission systems warranty and maintenance schedules.

CAUTION:

2002 MODEL YEAR VEHICLES ARE EMISSION CERTIFIED FOR REGISTRATION IN SPECIFIC AREAS OF THE UNITED STATES. FOR EXAMPLE, VEHICLES CERTIFIED AND LABELED FOR SALE IN CALIFORNIA CANNOT BE SOLD IN THE STATES THAT REQUIRE FEDERALLY CERTIFIED VEHICLES AND VEHICLES CERTIFIED TO FEDERAL STANDARDS CANNOT BE SOLD IN STATES THAT REQUIRE CALIFORNIA CERTIFIED VEHICLES. IT IS THE SUBSEQUENT STAGE MANUFACTURER'S RESPONSIBILITY TO PURCHASE A VEHICLE CERTIFIED FOR THE STATE/AREA IN WHICH THE VEHICLE WILL BE SOLD. EPA HAS STATED THAT UNDER CERTAIN CIRCUMSTANCES THEY WILL NOT ENFORCE THESE REQUIREMENTS. FOR **FURTHER** GUIDANCE, CONSULT EPA'S "POLICY ON CROSS BORDER SALES OF CALIFORNIA VEHICLES."

Modifications, revisions or removal of components may affect the emissions certification status of the vehicle and could cause the body builder, installer or any other subsequent modifier to be considered a manufacturer for purposes of emissions certification, warranty and recall. Modification of the emission control system may result in civil or criminal liability under Federal, State or Provincial law. To avoid any question of certification coverage, approval of any modification, revision or removal of components should be sought from the Environmental Protection Agency, California Air Resources Board or Canadian Department of Transportation, as applicable. Advice concerning compliance with applicable standards and regulations should be obtained from your legal counsel.

EMISSION COMPLIANCE

When ordering a vehicle, the body builder must ensure that the vehicle emissions system purchased complies with appropriate emission regulations. Failure to order such a vehicle could result in the inability to register the vehicle in the area of intended use. Examples of areas requiring specific emissions certification are Altitude, SLA-Civil, California, Federal, and states adopting California Emissions Regulations.

FUEL VAPOR RECOVERY

The California Air Resources Board has adopted regulations "Specifications for Fill Pipes and Openings of Motor Vehicle Fuel Tanks" requiring that all 1977 and later model year gasoline-powered motor vehicles offered for sale in that state meet certain specifications for fill pipes and fuel tank openings.

EMISSION CONTROL MODIFICATIONS



SAFETY/EMISSION Page 51

Curb Weight and Frontal Area Restrictions

Vehicle modifiers that add weight to a vehicle or increase the frontal area of a vehicle prior to sale and delivery to the ultimate purchaser may be considered manufacturers for emission purposes (including responsibility for emissions warranty, recall and in-use compliance) and may be required to recertify the vehicle for compliance with applicable federal or California emissions standards.

Federally Certified Vehicles with a GVWR of 8500 Lb or Less

According to U.S. Environmental Protection Agency (EPA) guidance, for all federally certified vehicles and trucks (8500 lb GVWR or less), a vehicle modifier will not be deemed to be a manufacturer, and will not be requried to obtain a separate Certificate of Conformity for a modified vehicle, if the following conditions are met:

- 1. The modified vehicle conforms in all material respects to the design specifications in the original manufacturer's application for certification; and
- 2. The weight of the modified vehicle, including the weight of fuel at nominal tank capacity, is no more than 500 lb above the maximum vehicle weight.

"Maximum vehicle weight" for a given vehicle is determined by (A) Subtracting 300 lb from the highest loaded vehicle weight (see 40 CFR 86.079-2 for loaded vehicle weight definition and the table at 40 CFR 86.129-80) associated with the test weight listed in the Application for Certification for the vehicle in question; and (B) Adding the weight of all options (in the case of mutually exclusive options only the weight of the heavier option is used) that are offered by the original manufacturer for the applicable truck line that were not included in the curb weight reported in the Application. Vehicle modifiers can refer to the Ford Source Book to determine loaded vehicle weights and option weights for Ford vehicles.

EPA guidance provides that no frontal area restrictions will apply to secondary manufacturers that comply with the conditions listed above.

NOTE: The information above is derived from guidance contained in U.S. EPA MSAPC Advisory Circular No. 64 (March 7, 1977) and a letter dated July 13, 1979 from Charles N. Freed, EPA Director, Mobile Source Enforcement Division to Maurice H. McBride, Legal Counsel, Recreational Vehicle Industry Association. Vehicle modifiers should refer to these documents directly for specific guidance regarding whether vehicle modifications are within the scope of the original application for certification. Vehicle modifiers should periodically consult with legal counsel to determine whether these documents have been amended or superseded and whether additional guidance exists.

Vehicles (14,000 lb GVWR or less) Certified for WARNING Sale, Registration or Use in California

Modifications to passenger cars, trucks and vehicles (14.000 lb GVWR or less) intended for sale, registration or use in California will be deemed to be within the original emissions certification only if such modifications

- 1. increase vehicle weight more than 10 percent above the curb weight, increase frontal area more than 10 percent or result in a combination increase of weight plus frontal area of more than 14 percent; or
- 2. include changes in axle ratio, tire size or tire type resulting in changes in the drivetrain ratio of more than 5 percent; or
- 3. include any modification to the emission control

Modified vehicles that do not satisfy these conditions may not be sold to an ultimate purchaser, offered or delivered for sale to an ultimate purchaser, or registered in California unless the modified vehicle is certified by the California Air Resources Board pursuant to applicable emissions requirements. The vehicle modifier is responsible for obtaining such certification. Refer to "California Exhaust Emission Standards and Test Procedures for 1988 and Subsequent Model Passenger Cars, Trucks, and Vehicles."

IMPORTANT:

The information above is provided as guidance only. Vehicle modifiers are responsible for compliance with applicable emissions, regulations, including recertification if necessary. Modifiers should refer to the documents referenced above for additional guidance. Questions regarding the above requirements should be directed to your legal counsel, the EPA or the California Air Resources Board. In no case can vehicle weight exceed the UVW in TAble A, page 291 (Super Duty F-Series), or Table A, page 292 (Ranger), without also recertifying for F/CMVSS No. 105, 204, 208, 212, 219, 301 and 303.

Incomplete vehicles using engines which are certified as heavy duty engines will not have frontal area or curb weight restrictions based on exhaust emissions regulations. It is important, however, that the final stage manufacturer observe vehicle restrictions from vehicle safety requirements, etc., which are located in the Incomplete Vehicle Manual.

Modifications not specified by Ford, such as changes to the exhaust system, tire size, axle ratio, fuel system, etc., • could adversely affect emissions performance of the vehicle and require emissions recertification by the • modifier. More details are shown below.

WARNING

Any modification should not cause a vehicle to fit into a • different weight class, (See Safety/Emission, page 60 for a discussion against revising GAWR). Doing so may . require recertification to both FMVSS and Emissions • Standards. Also, this type of change voids Ford's . warranty.

Light-Duty Trucks/Medium-Duty Trucks/Some Heavy-Duty Trucks

- Includes Escape, Explorer, Ranger, Windstar, Expedition, Excursion, E-Series, F-150 and Super Duty F-Series catalyst-equipped trucks except those over 3856 kg (8500 lb) GVWR-equipped with 5.4L, 5.8L, 6.8L. and 7.5L gasoline engines for Federal, California and Canada.
- **Engine Assembly**
- Air Intake System including Air Cleaner, Duct, Valve, Heat Stove and Cold Air Inlet Tube
- All EGR, Catalytic Converter(s), Thermactor or any other emission control system components^{3/4/}
- Transmission including Vacuum Control System
- Axle Ratio
- Tire Size (other than available options)
- Fuel Pump and Lines
- Fuel Tank^{5/6/}
- Fuel Economy Rating (as printed on vehicle invoice as applicable7/
- Filler and Vent Tube Assembly and Hose^{5/6/8/}
- Vapor Control Orifice and/or Float Valve Assembly
- Vapor Control Orifice Seal^{5/}
- Vapor Delivery Lines/Hoses/Clamps^{5/}
- Fuel Vapor Purge Line5/
- Fuel Filler Pipe, Cap and surrounding Sheet Metal5/6/8/
- Carbon Canister(s) and Hoses^{5/}
- Exhaust Inlet and Outlet Pipe and Attaching Nuts8/
- Exhaust System Joint Clamps/Suspension/Bracket Assemblies3/
- Muffler3/4/
- Tailpipe^{3/4/}
- Important Vehicle Information Label
- Emission Control Information Label^{2/}

Heavy-Duty Engine / Vehicles - Gasoline **Powered and Diesel Powered**

- Includes all vehicles over 8500 GVWR, both Federal and California Medium-Duty Vehicle category
- Engine Assembly^{10/}
- Fuel System
- · Air Intake System, including Air Cleaner, Duct, Valve, Heat Stove and Cold Air Inlet Tube
- All EGR. Catalytic Converter(s). Thermactor or any other emission control system components^{3/4/}
- Exhaust Inlet and Outlet Pipes^{3/4/}
- Muffler^{3/4/}
- Tailpipe^{3/4/}
- Important Engine Information Label
- Emission Control Information Label^{2/}
- All gasoline powered units require an evaporative emission control system. Damage to or mislocation of any of the following elements of the evaporative emission control system may render the system inoperative, may invalidate the vehicle emission control system certification and may result in the release of flammable gasoline fumes.
- Fuel Tank^{5/6/}
- Fuel Filler Pipe and Vent Tube Assembly, Hose, Cap and surrounding sheet metal5/6/8/
- Vapor Control Orifice Seal^{5/}
- Vapor Delivery Lines/Hoses/Clamps^{5/}
- Fuel Vapor Purge Line5/
- Carbon Canister(s) and Hoses^{5/}
- Vapor Seal in Fuel Tank
- Fastener Seals on All Components Attached to Fuel
- Vapor Control Valves, Solenoids and Related Wiring in Engine Compartment or Adjacent Thereto
- Vehicle Emission Control Label 49 States Only^{9/}

EMISSION CONTROL MODIFICATIONS

Page 52 SAFETY/EMISSION

Heavy-Duty Engine / Vehicles – Gasoline Powered and Diesel Powered (Cont'd)

1/ For important information regarding radio frequency interference (RFI), see Radio Frequency Interference in the Appendix section of this book. Note particularly that Canada has RFI regulations.

2/ EMISSION CONTROL INFORMATION LABEL

To meet United States Environmental Protection Agency regulations, the important vehicle information (tune-up and fuel tank capacity) labels must be affixed in a location that is readily visible after installation and in such a manner that it cannot be removed without destroying or defacing the label. The label shall not be affixed to any equipment that is easily detached from such vehicle.

When emission control labels are supplied but not attached to the vehicle (i.e., tune-up label or fuel tank label), they must be permanently mounted in a readily visible location to meet the preceding requirements. In addition, whether the label is already affixed or to be affixed, no components shall be installed which visibly obscure the label in any way that fails to satisfy the visibility requirements described in the California Emission Control Label Specifications.

CALIFORNIA FUEL VAPOR RECOVERY

California regulations require that the vehicle fuel systems be designed to accommodate a vapor recovery fueling nozzle including unobstructed access to the fill pipe. Fuel filler pipes installed per the sketches on page 140 for E-Series and pages 195-196 for Super Duty F-Series, will comply with the "Specifications For Fill Pipes and Openings of Motor Vehicle Fuel Tanks" referenced in Title 13 California Administrative Code provided no part of the aftermarket body, as installed, intrudes within a 254 mm [10 in] radius cylinder which has its axis parallel to the ground, passing through point "Z" and extends outward from the Ford supplied fuel pipe housing component. The fuel pipe housing component is shown on the referenced figures and is attached to the aftermarket body via 4.76 mm [0.188 in] diameter rivets. Fuel filler pipes installed, using the alternative bracket shown in the sketches on Super Duty F-Series, pages 195-196, will comply with the above California vapor recovery regulations provided the aftermarket body does not interfere with the access zone as described by the California Air Resources Board, and the areas adjacent to this opening cannot foreseeably damage the nozzle bellows or face plate of nozzles during insertion, latching, disposing or removal.

CALIFORNIA MOTOR VEHICLE EMISSION CONTROL LABEL

To meet California emission certification regulations, the Emission Control Information (tune-up) label must be welded, riveted or otherwise permanently attached to an area within the engine compartment or to the engine in such a way that it will be readily visible to the average person after installation of the engine in a vehicle. In selecting an acceptable location, the manufacturer shall consider the possibility of accidental damage (e.g., possibility of tools or sharp instruments coming in contact with the label). The label shall be affixed in such a manner that it cannot be removed without destroying or defacing the label, and shall not be affixed to any part which is likely to be replaced during the vehicle's useful life. For motor vehicles rated at 3856 kg (8500 lb) GVWR or less, the label shall not be affixed to any equipment which is easily detached from the vehicle. The tune-up label must include the heading "Important Vehicle Information" for Medium-Duty trucks. As used in specifications, readily visible to the average person shall mean that the label shall be readable from a distance of 460 cm [18 in] without any obstructions from vehicle or engine parts (including all manufacturer available optional equipment), except for flexible parts, (e.g., vacuum hoses, ignition wires). Alternately, information required by these specifications to be printed on the label shall be no smaller than 8 point type size provided that no vehicle or engine parts, (including all manufacturer available optional equipment), except for flexible parts that can be moved out of the way without disconnection, obstruct the label.

Completed vehicles for retail sale in California require a machine-readable vehicle identification number (VIN) bar-code label made of paper, plastic, metal or other permanent material which shall be affixed in a readily visible location to either the door-latch post next to the driver's seating position, the door edge that meets this door-latch post, or above the instrument panel in a location clearly visible through the lower left corner of the windshield.

 All Incomplete Vehicles except Stripped Chassis Type Vehicles will conform to this standard. Stripped Chassis Type Vehicles:

Conformity with CARB Motor Vehicle Emission Control Label specifications for VIN label is not substantially affected by the design of this incomplete vehicle. Accordingly, Ford Motor Company makes no representation as to conformity with this requirement. To assist a subsequent stage manufacturer with conforming to this specification, Ford is providing a label which will accompany the *Incomplete Vehicle Manual* inside the protective plastic bag located in the dunnage box.

For the VEC† and VIN labels, sufficient clearance shall be provided to use a non-contact bar-code Reading Wand. For the tune-up label and vacuum hose routing diagram label, the label and nay adhesives used shall be designed to withstand for the vehicle's total expected life, typical vehicle environment conditions in the area where the label is attached. Typical vehicle environmental conditions shall include, but are not limited to, exposure to engine lubricants and coolants (e.g., gasoline, motor oil, brake fluids, water, ethylene glycol), underhood temperatures, steam cleaning, and paints or paint solvents.

To meet U.S. Environmental Protection Agency important engine regulations, the Vehicle Emission Control Information of the Important Vehicle Information label (also referred to as the tune-up label) must be affixed in a readily visible location. The tune-up label must include the heading "Important Vehicle Information" or "Important Engine Information". See sample labels on the following page.

When the tune-up label is supplied detached from the engine (with the operator's manual), it must be permanently mounted in a readily visible location to meet the preceding requirements. In addition, whether the label is already affixed or to be affixed, no components shall be installed which visibly obscure the label in any way such that the preceding requirements are not satisfied.

Some model trucks of Ford Motor Company built since 1981 may exhibit higher engine compartment and exhaust system temperatures in some operating modes than in previous model years. Components, including exhaust heat shielding systems, have been installed on some vehicles in our assembly plants in an effort to provide greater protection against such temperatures. Subsequent manufacturers are responsible for providing thermal protection for any structure and/or equipment added to the vehicle and should not remove any (e.g., underbody heat shields) components and/or exhaust heat shielding installed on the vehicles by Ford.

- 4/ The back pressure at the exhaust manifold must not be changed, and vehicle noise intensity (dbA) must not be allowed to increase. Catalytic converter must not be relocated.
- 5/ If a subsequent manufacturer desires to modify or add to the evaporative emission control system, or add permanent gasoline fuel tank(s) or an evaporative emission control system to a vehicle required to have an evaporative emission control system, the subsequent manufacturer is responsible for installing an appropriate evaporative emission control system. See pages 55-57 of this section for recommendations. U.S. Environmental Protection Agency (EPA) approval and California Air Resources Board (CARB) approval (for all vehicles which will be delivered for sale and primary use in California) must be obtained by the subsequent manufacturer for any evaporative emission control system installed or modified by the subsequent manufacturer.
- 6/ Must not be altered such that CARB fuel vapor recovery regulations are not met.
- 7/ May not be removed until after sale to ultimate customer. Also see Frontal Area and Curb Weight considerations (above).
- 8/ Any rerouting or change in materials cannot be made unless approval is obtained from the California Air Resources Board (CARB) and/or the U.S. Environmental Protection Agency (EPA). Unleaded fuel filler pipe restrictions may not be removed.
- 9/ To meet U.S. EPA Regulation, the Vehicle Emission Control Information label must be affixed in a readily visible location. See sample labels on the following page.
- 10/ The check engine light is required by emissions regulations. It is installed by Ford Motor Company in all vehicles except the commercial stripped chassis. For this vehicle, it is located in the instrument cluster shipped in the dunnage box. The final stage manufacturer must install this light. For information regarding installation of Check Engine Warning Light to the E-350 Super Duty Stripped Chassis model, see page 284, adding Lights and Electrical Devices.

† Vehicle Emission Control

EMISSION CONTROL MODIFICATIONS



Page 53 SAFETY/EMISSION

EVAPORATIVE EMISSIONS

All Ford Trucks are required to comply with evaporative emissions requirements established by the U.S. Environmental Protection Agency or the California Air Resources Board. Production fuel systems supplied on incomplete vehicles manufactured by Ford Motor Company comply with applicable requirements. If the subsequent manufacturer adds to or modifies the fuel system in any manner, it becomes that manufacturer's responsibility to assure compliance with the applicable Federal or California emissions standards. See pages 55-57 of this section.


SERVICE ENGINE SOON - WARNING LIGHT


The service engine soon warning light is used to indicate malfunctions of the Electronic Engine Control System and certain emissions-related components. For all incomplete vehicles **except** Stripped Chassis (which is not equipped with an instrument panel), it is Ford installed and operational.

The Stripped Chassis vehicle has the warning light installed in the instrument cluster, which is shipped in the dunnage box. If an alternate instrument cluster is utilized, the final stage manufacturer must install an operational light in the instrument cluster. This light must glow amber and display the message "Service Engine Soon." It should be recognized that this light is a requirement of emission certification.


POWER TAKE-OFF CIRCUIT

An underhood wire labelled "Power Take-Off Circuit" is provided to minimize the inadvertent illumination of the "Service Engine Soon Light" while the PTO is engaged. See Figure A, page 277 of this book for the circuit location. Connect the underhood wire to the Power Take-Off Light Circuit as instructed on page 277 and isolate the wire labelled "Power Take-Off Circuit" from the solenoid to prevent damage to the Power Control Module (PCM).

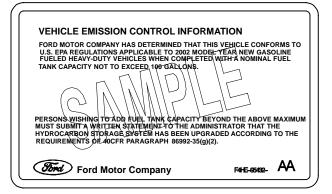

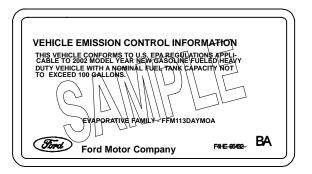

BB0434

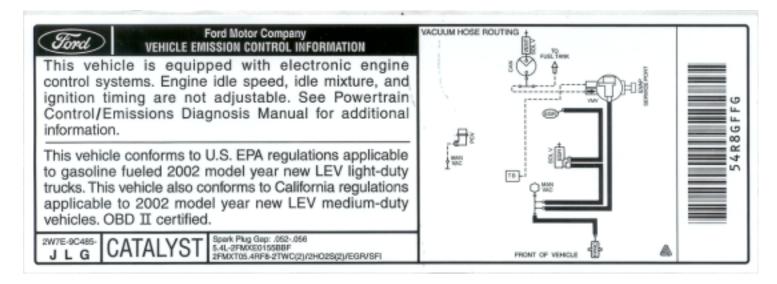

EMISSIONS COMPLIANCE GUIDELINES NON-OEM FUEL TANK MODIFICATIONS



Page 54 SAFETY/EMISSION

These guidelines are applicable to those tanks designed to replace the Original Equipment Manufacturer (OEM) fuel tank for the purpose of increasing fuel capacity or to accommodate modifications to the vehicle. These tanks differ in design from the OEM tanks in terms of size, tank material, shape, location or purge strategy. Auxiliary fuel tanks are those tanks added on to the existing OEM tank(s) in order to increase the vehicle's fuel capacity.

WARNING:

Prohibitions Against Uncertified Vehicles, Devices and Tampering

Changes to the size, material, or shape of a fuel tank may cause the certified vehicle to exceed applicable evaporative emissions or not comply with OBD-II monitoring requirements. Such changes may constitute tampering. Changes made to accommodate the installation of non-OEM fuel tanks may also constitute tampering; these include changes in the Filler and Vent Tube Assembly and Hose, Fuel Vapor Purge Line, Vapor Control Orifice and/or Float Valve Assembly, Vapor Delivery Lines/Hoses/Clamps, etc.

Ford vehicles are certified as compliant with California's OBD-II (On-Board Diagnostic II) requirements. These requirements (among other diagnostic tests) check the evaporative emission control and fuel tank system for leaks. A decrease or increase in tank size or change in material and shape, may degrade the function of the evaporative leak monitor. Further, decreases below the 25 gallon threshold would make the vehicle ineligible for an alternative to the new 0.020" threshold - for example, the 2001 Windstar with a 26 gallon tank is certified with a 0.030" leak monitor. Degrading of the evaporative leak detection monitor may constitute tampering.

Violation of the applicable Federal, State or Canadian Provincial Laws prohibiting tampering may result in civil or criminal liability.

Exemptions from Tampering Prohibitions for Fuel Tank Modifications

Only those modifications to the evaporative emission control system (which includes the fuel tank) or OBD-II system that are specifically approved or certified by EPA and/or CARB may be exempted from these tampering prohibitions. In general, to obtain an exemption, the aftermarket manufacturer or converter must demonstrate that the replacement or auxiliary fuel tank does not reduce the effectiveness of the vehicle's OBD-II and evaporative emission control systems. This demonstration may require an evaluation using the Federal Test Procedure and enhanced evaporative system test procedures to ensure compatibility with OBD-II system requirements as well as compliance with the applicable evaporative emission standards.

Any conversion made to the vehicle must comply with the applicable Federal and California on-board diagnostic (OBD) system regulations. Any changes that potentially affect the OBD system must be reported to the Agencies (EPA and/or CARB) for their review and approval.

General Information Relating to EPA/CARB Approval of Aftermarket Conversions

Any conversion made to the vehicle must comply with the applicable Federal and California Emission regulations and laws including EPA's Tampering Prohibition (See EPA Mobile Source Enforcement Memorandum 1A and Addendum thereto as revised at 63 FR 32878) or obtain an "Exemption for Aftermarket from Tampering Prohibition" under Subpart F, 40CFR85. For California, please refer to CARB Mail Out #96-27, subject: "Sales and Installation of Replacement (and Auxiliary) Fuel Tanks", dated September 9, 1996. (See the Section of this Layout Book entitled "Vehicle Noise Regulations/Emissions Control Modifications" for a further explanation of the potential liabilities for the modifier.)

CARB Website

To apply for specific VC 27156 exemptions from the ARB for aftermarket conversions including non-OEM fuel tank replacement, contact Ms. Rose Castro, Manager, Aftermarket Parts Section, at 818-575-6848 or e-mail at rcastro@arb.ca.gov. CARB consumer information on aftermarket performance and add-on parts can be found at the following website: http://www.arb.ca.gov/msprog/aftermkt.htm

Website

To apply for an exemption from the tampering provisions of the Clean Air Act, contact Mr. Steven Albrink (albrink.steve@epa.gov) on 202-564-8997. EPA information concerning the conditions that must be satisfied to obtain an EPA exemption for an aftermarket conversion from the tampering prohibition contained in Section 203 of the Clean Air Act can be found at the EPA website:

http://www.access.gpo.gov/nara/cfr/cfrhtml_00/title_40/40cfr85_00.html

Ford and SEMA Website

Ford Motor Company and the Specialty Equipment Market Association (SEMA) have established a Powertrain Technology Initiative (PTI) for OBD-related products. PTI provides manufacturers of performance aftermarket equipment with the opportunity to obtain custom-developed software calibrations needed for the proper use and installation of aftermarket products which could affect emissions, OBD compliance, emission compliance and durability, fuel requirements, exhaust temperatures, etc. If these categories are significantly affected, a calibration modification may be appropriate. PTI has established a website by which an aftermarket converter can learn how to obtain the custom calibration for its conversion. The PTI website explains the purpose of the PTI program, how PTI works, basic criteria for approval, what are the steps and expected turnover time, and what are the costs. The PTI website is:

http://www.sema.org/techtransfer/info.cfm

General OBD Monitoring Requirements:

The EPA has regulations in place establishing requirements for on-board diagnostic (OBD) systems on light duty vehicles and light duty trucks beginning with the 1994 model year. The purpose of the OBD system is to assure proper emission control system operation for the vehicle's lifetime by monitoring emission-related components and systems for deterioration and malfunction.

NOTE: California has slightly different OBD requirements from EPA's OBD requirements; however, systems designed to meet California's requirements are also accepted by EPA as meeting the federal requirements.

What is OBD and How Does It Work?

Automobile manufacturers developed the first OBD systems in the early 1980's as electronic systems replaced mechanical systems. The engines in today's vehicle are largely electronically controlled. Sensors and actuators sense the operation of specific components (e.g., the oxygen sensor) and actuate others (e.g., the fuel injectors) to maintain optimal engine control. An on-board computer, known sometimes as a "powertrain control module" or an "engine control unit". controls all of these systems.

With proper software, the on-board computer is capable of monitoring all of the sensors and actuators to determine whether they are working as intended. It can detect a malfunction or deterioration of the various sensors and actuators, usually well before the driver becomes aware of the problem through a loss in vehicle performance or drivability. The sensors and actuators, along with the diagnostic software in the on-board computer, make up what is called "the OBD system".

OBD monitoring requirements include the following systems: catalyst, misfire, evaporative, secondary air, air conditioning system refrigerant, fuel, oxygen sensor, Exhaust Gas Recirculation (EGR), Positive Crankcase Ventilation (PCV), thermostat monitoring and comprehensive component monitoring.

Sources of Information on OBD Regulations:

For a comprehensive description of the regulations governing OBD systems, visit the EPA and CARB websites shown below.

(EPA) http://www.epa.qov/otaq/obd.htm (CARB) http://www.arb.ca.gov/msprog/obdprog/pbdprog.htm

FUEL SYSTEM EVAPORATIVE EMISSIONS



Page 55 SAFETY/EMISSION

The following suggestions are intended to assist in the design of gasoline fuel vapor control systems capable of meeting Federal Evaporative Emissions Standards. All Ford vehicles are equipped with evaporative emission control systems which are certified to the applicable standards. If the subsequent stage manufacturer adds to or modifies the gasoline fuel system in any manner, it becomes the responsibility of the subsequent stage manufacturer to assure compliance with the applicable standards.

The Environmental Protection Agency (EPA) has provided evaporative emission control system design upgrade requirements for federally regulated vehicles over 3856 kg [8500 lb] GVWR weight classes in 40 CFR-86.088-35 (g)(2). The following requirements are applicable when adding fuel tank capacity beyond the maximum specified on the label: 1) upgrade the vapor storage capacity in accordance with the formula below, and 2) notify the EPA of the change. Note that California has unique evaporative emission regulations and adherence to the EPA upgrade requirements does not satisfy California certification requirements. Subsequent stage manufacturers performing fuel system modifications to California vehicles must certify the vehicle as modified, to California evaporative emission standards.

A. EPA VAPOR STORAGE UPGRADE REQUIREMENTS

The additional amount of fuel tank vapor storage material required can be determined according to the following formula:

$$VSa = \left[VSi \times \frac{T \ Volume \ f}{Max \ Volume \ i} \right] - VSi$$

where: VSi = Initial amount of vapor storage material in grams installed on the vehicle. The initial amount of vapor storage can be determined by examining the vehicle. For Super Duty F-Series, carbon canisters will be mounted in the engine compartment on the driver side. E-Series carbon canisters will be mounted inside the frame as shown on page 57. Ford vehicles will be equipped with one or two cylindrical shaped canister(s).

T Volume f = Final fuel tank capacity rating of the vehicle after the addition of the new fuel tank(s). This volume would be equal to the volume equipped with the vehicle plus the volume desired added.

Max Volume i = The Maximum fuel tank volume as specified on the VECI† label. The Super Duty F-Series label can be found in the engine compartment on the passenger side radiator support. (See Figure A.) The E-Series label can be found on the underside of the hood on the driver's side. The E-Series Stripped Chassis label can be found in the dunnage box and should be installed on the completed vehicle consistent with the guidelines on page 59 of the Incomplete Vehicle Manual.

VSa = The minimum final additional vapor storage material required in grams. Additional vapor storage material can be purchased at a local Ford dealer using the Ford Service Part Number (2800ml - F75Z-9D653-A). See Figures B and C on this page for Super Duty F-Series canister identification and series system upgrade, respectively. E-Series canisters are shown on page 57. Additional vapor storage material must have the same absorbent characteristics as that used by Ford Motor Company.

The EPA requires that hoses for the vapor routing be at least as impermeable to hydrocarbon vapors as hoses used by Ford. Ford uses rubber hose per std. WSL-M96D33-A4. A typical auxiliary tank vapor line routing uses a short length of rubber hose to a 1/2-inch I.D. steel tube. The steel tube connects to another short length of rubber hose and then to a "Y" which connects to the standard tank vapor line.

† Vehicle Emission Control Information

The EPA requires that additional vapor device(s) be installed in series with the existing system such that the existing storage device(s) are between the fuel tank(s) and the new storage device(s). The existing storage device(s) should be routed to the new storage device(s) such that the existing storage device(s) are no longer vented to the atmosphere. The elevation of the original storage device(s) should be equal to or lower than the new storage device(s). Ford suggests that the diameter of the hose used to connect the additional storage device be large enough so as not to restrict purge flow which cleans out the canisters (1/2-inch I.D. hose from an existing one canister system, and 5/8-inch I.D. hose from an existing two canister system in parallel).

B. EPA NOTIFICATION OF EVAPORATIVE EMISSION CONTROL SYSTEM UPGRADE

A written statement that the system has been upgraded should be forwarded to the EPA. The body of the letter should indicate that the provisions of 40 CFR 86.085-35(g)(2)(i)-(iv) have been complied with. A brief description of the modification may also be included. The correct mailing address for the EPA is:

Director of Certification
Office of Mobile Source Air Pollution Control
U.S. Environmental Protection Agency
2565 Plymouth Rd.
Ann Arbor, MI 48105

IMPORTANT: Upgrading the evaporative emission system does not eliminate the necessity for compliance with the applicable safety requirements of FMVSS 301. A final stage manufacturer is responsible to certify the completed vehicle with any additional fuel tank(s) or any modification to the fuel system. The complete vehicle must conform to all applicable safety regulations.

SUPER DUTY F-SERIES WITH A GVWR OF OVER 3856 Kg (8500 LB) 5.4L AND 6.8L EFI-EQUIPPED VEHICLES

VEHICLE EMISSION CONTROL INFORMATION FORD MOTOR COMPANY HAS DETERMINED THAT THIS VECONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO 1990 WHICLES WHEN GOVERNMENT OF THE ABOVE MAXIMUM MUST SUBMIT A WRITTEN STATEMENTS OF 40 C.F.R. § 86.085 35(g)(2) FORM MOTOR COMPANY VETUE-9S432

FIGURE A - TYPICAL EVAPORATIVE LABEL (49 STATES, NOT CALIFORNIA OR CANADA)

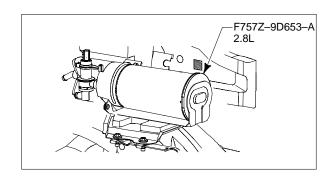


FIGURE B - CANISTER IDENTIFICATION SUPER DUTY F-SERIES


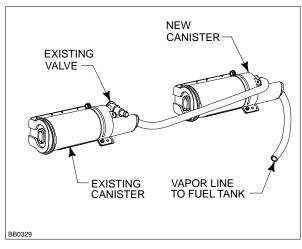


FIGURE C - TYPICAL DUAL CANISTER — SERIES SYSTEM UPGRADE SUPER DUTY F-SERIES

E-SERIES FUEL SYSTEM EVAPORATIVE EMISSIONS

2002


Page 56 SAFETY/EMISSION

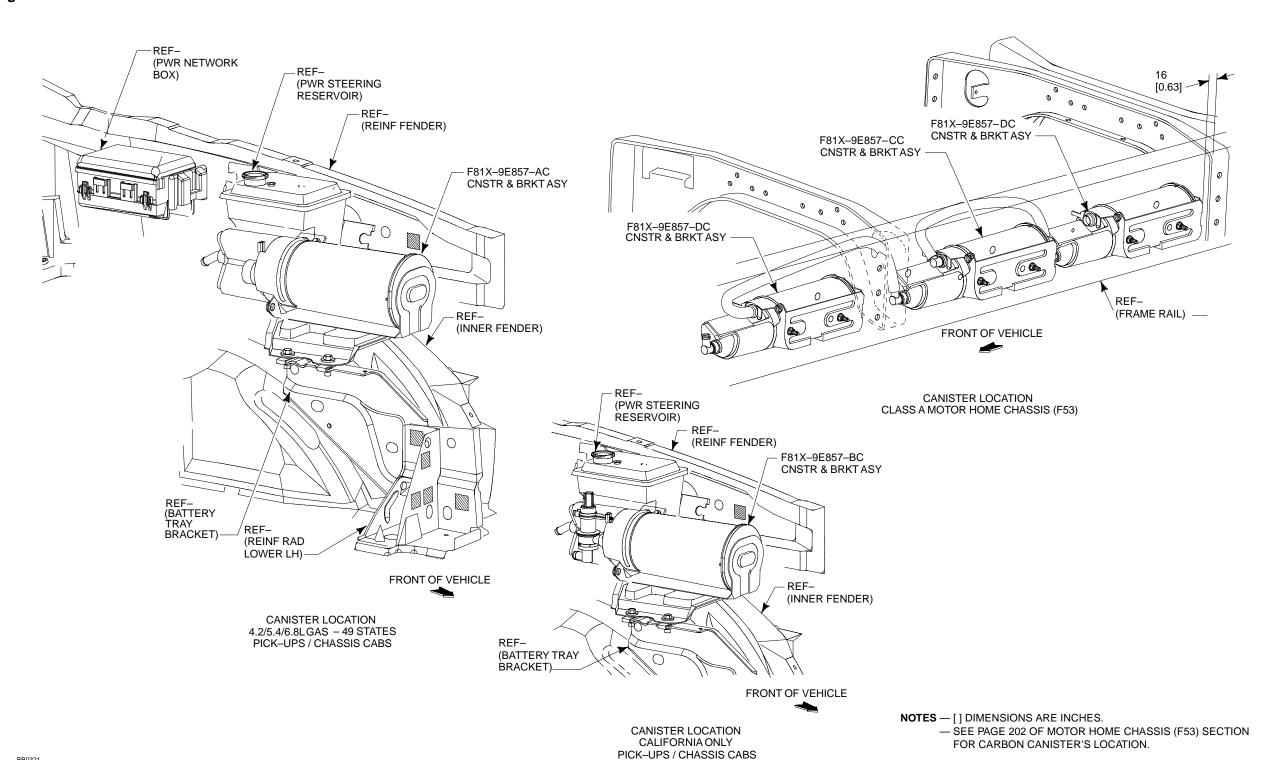

E-SERIES FUEL SYSTEM EVAPORATIVE EMISSIONS



Page 57 SAFETY/EMISSION

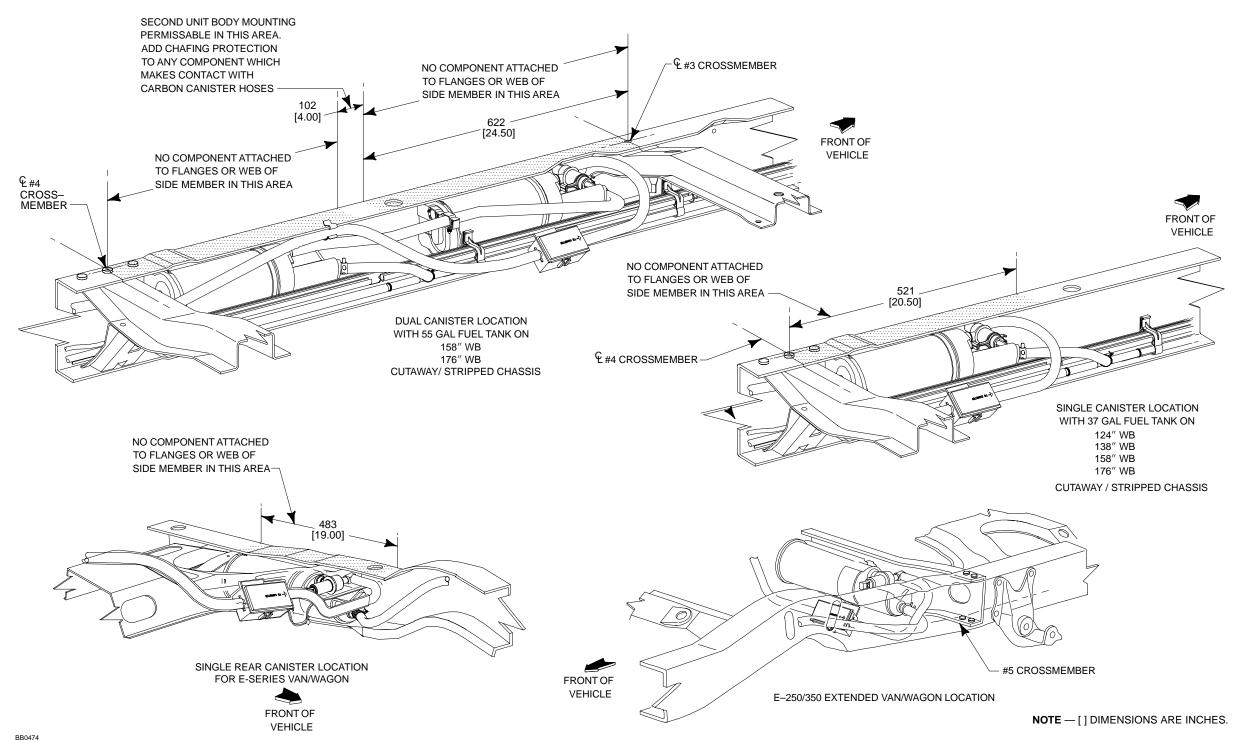

Page 58 SAFETY/EMISSION

The National Traffic and Motor Vehicle Safety Act of 1966 (United States) and the Motor Vehicle Safety Act (Canada) and the standards and regulations issued under authority of these laws impose responsibilities on dealers, intermediate and final stage manufacturers, and vehicle alterers and modifiers, as well as on Ford Motor Company. This section identifies some of these responsibilities. It is not intended to be comprehensive, nor to provide advice on legal questions applicable to individual situations. Advice on matters involving particular factual situations should be obtained from your legal counsel or from the National Highway Traffic Safety Administration (United States) or the Ministry of Transport (Canada).

Included among these safety standards and regulations are those applicable to trucks, buses, multipurpose passenger vehicles, passenger cars, vehicles manufactured in two or more stages, and to certain types of motor vehicle equipment offered for sale in the United States or Canada.

Completed vehicles as manufactured by Ford Motor Company and Ford Motor Company of Canada, Limited, are certified as conforming to all applicable Motor Vehicle Safety Standards issued under the National Traffic and Motor Vehicle Safety Act of 1966 (U.S.) or the Motor Vehicle Safety Act (Canada).

Where the vehicle is incomplete, a dealer or body builder who, after delivery and before retail sale, completes the vehicle is responsible for certification that the completed vehicle conforms to applicable U.S. or Canada Motor Vehicle Safety Standards. Dealers and body builders may be subject to substantial penalties if they sell or offer for sale vehicles which do not conform to all applicable U.S. or Canada Standards.

Certification-related information concerning Ford Motor Company completed vehicles and incomplete vehicles follows:

COMPLETED VEHICLES

All completed vehicles manufactured by Ford Motor Company and Ford Motor Company of Canada. Limited, for use on the public roads are provided with safety compliance certification labels affixed to the vehicles at the assembly plants. These labels contain information required by Part 567 of Title 49 of the Code of Federal Regulations for completed vehicles offered for sale in the United States and by Section 6 of the Canadian Motor Vehicle Safety Regulations for completed vehicles offered for sale in Canada. This information includes, among other things, the Gross Axle Weight Rating (GAWR) for each axle of the vehicle and the Gross Vehicle Weight Rating (GVWR) of the total vehicle. The labels also list the tire and rim data required by FMVSS or CMVSS No. 120. Tire Selection And Rims For Motor Vehicles Other Than Passenger Cars.

Completed vehicles, manufactured by Ford, for sale in the United States, will have a label similar to the one shown on this page (the label is located on the driver's door latch pillar).

The Canadian Motor Vehicle Safety Act and Regulations require: (1) display of the National Safety mark (below); (2) the expression "Canada Motor Vehicle Safety Standards" or "CMVSS"; and (3) "Poids Nominal Brut du Vehicule" or "PNBV" on vehicles manufactured for sale in Canada. A label containing this information is shown on this page.

Completed vehicles manufactured by Ford for sale in Canada, will have a label similar to the one shown on this page containing the Canadian National Safety Mark or a separate National Safety Mark label.


Alteration of completed vehicles before the first purchase of the vehicle for purposes other than resale may affect compliance of the vehicle to certain safety standards. Parts 567 and 568 of Title 49 of the Code of Federal Regulations state requirements for vehicle alterers in the United States. In Canada, Regulation 9 of the Canadian Motor Vehicle Safety Regulations determines the obligations of vehicle alterers under the Canadian Motor Vehicle Safety Regulations.


NOTE For completed vehicles offered for sale in the province of Quebec, Canada, the label will be printed in French.

The following section headed "Information For Persons Who Alter Completed Vehicles" explains the "accessory reserve capacity" information printed on the safety compliance certification label and its relationship to FMVSS and CMVSS No. 105 (Hydraulic Brakes), FMVSS and CMVSS No. 204 (Steering Column Rearward Displacement), FMVSS and CMVSS 208 (Occupant Crash Protection), FMVSS and CMVSS No. 212, (Windshield Mounting), FMVSS and CMVSS No. 219, (Windshield Zone Intrusion), FMVSS and CMVSS No. 301, (Fuel System Integrity), FMVSS No. 303 (Fuel System Integrity of Compressed Natural Gas Vehicles). CMVSS 301.1, (LPG Fuel System Integrity) and CMVSS No. 301.2 (CNG Fuel System Integrity) compliance testing for Ford completed vehicles.

VEHICLES 4536 kg (10,000 lb) GVWR AND LESS

Trucks, buses and MPVs having GVWRs of 4536 kg (10.000 lb) and less manufactured by Ford Motor Company in the current model year are certified as complying with the requirements of all applicable Federal U.S. and Canadian Motor Vehicle Safety Standards including FMVSS and CMVSS No. 105. Hydraulic Brakes, FMVSS and CMVSS No. 204, Steering Column Rearward Displacement (if the vehicles have unloaded vehicle weights of 2495 kg (5500 lb) or less), FMVSS No. 208 Occupant Crash Protection (injury criteria if vehicles GVWR is 3856 kg (8500 lb) or less having an unloaded vehicle weight of 2495 kg (5500 lb) or less). FMVSS and CMVSS No. 212, Windshield Mounting, FMVSS and CMVSS No. 219, Windshield Zone Intrusion, FMVSS and CMVSS No. 301, Fuel System Integrity, and FMVSS 303 and CMVSS 301.1 (LPG Fuel System Integrity) and CMVSS No. 301.2 (CNG Fuel System Integrity). Ford conducts compliance testing and makes compliance representations based on vehicle test weights that include the weights of all available regular production options plus the loads specified by FMVSS and CMVSS Nos. 105, 204, 208, 212, 219, 301, and 303 (301.1 and 301.2 Canada). With the exception of FMVSS and CMVSS No. 105, the test weight for a particular vehicle is usually less than the GVWR indicated on the vehicle safety compliance certification label.

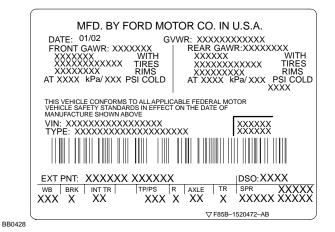

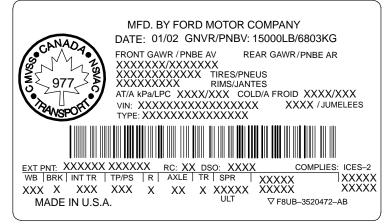

BB0524

Page 59 SAFETY/EMISSION

IMPORTANT INFORMATION! For Persons who Alter Completed Vehicles

The following applies to the alteration of vehicles completed by Ford Motor Company.

The degree of conformity to safety standards of incomplete vehicle chassis produced by Ford is represented by the *Incomplete Vehicle Manual* or IVM. An IVM is normally included in dunnage accompanying each Incomplete Vehicle.


Vehicle alterers should exercise caution when adding weight to the vehicle by installing accessories or modifying the vehicle because if the unloaded vehicle weight of the altered vehicle exceeds the unloaded vehicle weight for which Ford Motor Company has established compliance, then the vehicle alterer will be responsible to certify the altered vehicle pursuant to Title 49 of the Code of Federal Regulations Sections 567.7 and 568.8 in the United States or to Section 9 of the Canadian Motor Vehicle Safety Regulations in Canada.

Payload worksheets are provided in the *Ford Truck Source Book* at your Ford Dealer to help prospective purchasers of Ford truck products estimate the total weight of accessories, equipment, and modifications that may be added to the completed vehicle without exceeding the allowable weight ratings for the vehicle in question. Specific questions on this or related subjects may be directed to the Ford Truck Body Builder Advisory Service.

For each completed vehicle, Ford Motor Company determines the TOTAL ACCESSORY RESERVE CAPACITY (ARC), which represents the amount of accessory or modification weight in pounds that can be added to a certified vehicle before its unloaded vehicle weight exceeds the unloaded vehicle weight for which Ford Motor Company has established compliance. Total Accessory Reserve Capacity designations assume the use of permanently attached components resulting in center of gravity locations generally similar to those of comparable completed vehicles. Any additions or alterations that significantly affect the center of gravity of the total unit could impose more severe conditions than those for which Ford Motor Company has established compliance to FMVSS and CMVSS requirements. Examples of such extremes would be the installation of relatively heavy devices at the front or rear of the vehicle, particularly if these devices also had very high centers of gravity.

Vehicles having a GVWR greater than 10,000 lb manufactured by Ford Motor Co. include a total ARC weight that represents the maximum weight that can be permanently installed without compromising the durability and allow a reasonable minimum cargo for the customer.

TOTAL ACCESSORY RESERVE CAPACITY T.A.R.C. is provided on the Safety Compliance Certification Label (located on the driver's door latch pillar of Ford completed vehicles, as shown in the following example.

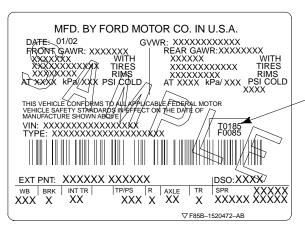

The T.A.R.C. specifies the total weight of permanently attached accessories or equipment that can be added to the vehicle. TO185 in the illustrated example indicates that 185 lbs of accessories or equipment can be added to the vehicle.

Also specified is the Front Axle Accessory Reserve Capacity (F0085 in the illustrated example). Although not directly applicable to FMVSS/CMVSS Nos. 204, 208. 212. 219. 301. and 303 (301.2 Canada) conformity representations, this magnitude represents the allowable weight that may be added in various forms (permanently attached equipment and accessories and removable equipment and accessories or any combination thereof) without overloading the front axle. Except for vehicles with the Snowplow Prep Package, this value will usually be less than the Total Accessory Reserve Capacity. Thus in the example, a total of 185 lbs of permanently installed equipment may be added to the vehicle but its distribution must be such that the load on the front axle is not increased by more than 85 lbs. However, although the Front Axle Accessory Reserve Capacity value may be greater than the Total Accessory Reserve Capacity value in some cases, the latter must never be exceeded. For vehicles with the Snowplow Prep Package, the Front Axle Accessory Reserve Capacity may be greater than the Total Accessory Reserve Capacity. This additional front axle capacity can be utilized to accommodate the removable snow plow components, such as the blade assembly.

Should the Front Axle Accessory Reserve Capacity on a Snowplow Package optioned vehicle be less than that which is required to accommodate the snow plow assembly, it should be understood that allowances for carrying persons in at least two designated seating positions (those provided with seat belts) have already been made. Therefore, it may be possible to operate the vehicle with minimum cargo and only one or two persons on board.

To prevent overloading under these circumstances, it is recommended that the vehicle alterer weigh the front axle under the conditions in which the vehicle is to be operated to ensure that the Front Gross Axle Weight Rating is not exceeded. See the Loading Information section of the *Owner's Guide*.

If the weight and weight distribution (front to rear) of the accessories or equipment to be added are not known, it will be necessary to weigh the vehicle before and after accessories or equipment are added to verify that neither the Front Axle Accessory Reserve Capacity nor the Total Accessory Reserve Capacity has been exceeded. When weighing the vehicle, remember to have all fluids necessary for vehicle operation (including fuel) filled to maximum capacity and weigh vehicle by axle so that front axle weight and total vehicle weight can be determined. Subtract the front axle weight of the vehicle before modification from the front axle weight of the vehicle after accessories or equipment have been added; this value must be equal to or less than the Front Axle Accessory Reserve Capacity (for the above example — 85 lb). Subtract the total vehicle weight before modification from the total vehicle weight after accessories or equipment have been added; this value must be equal to or less than the Total Vehicle Accessory Reserve Capacity (for the above example — 185 lb). Use the actual Accessory Reserve Capacity information as it appears on the safety compliance certification label of your vehicle.

If you know the weight and weight distribution of the accessories or equipment (including all fluids, if applicable) to be added, compare these weights with the Accessory Reserve Capacity to ensure that the added accessories or equipment do not exceed the Accessory Reserve Capacity.

Compliance to FMVSS and CMVSS 105 depends, among other things, upon the location of the center of gravity of the completed vehicle. Therefore, any modification or alteration to a completed vehicle must take into account its effect upon FMVSS and CMVSS 105 conformance. A set of guidelines are contained at the end of the completed vehicle portion of this section. A section specifically addressing the modification of pickup trucks in ways that include replacing pickup boxes with other equipment is contained in the Appendix section of this book.

Completed vehicles as produced by Ford meet the Center High Mounted Stop Lamp (CHMSL) requirements of FMVSS 108, Lamps, Reflectors Devices and Associated Equipment and the mirror requirements of FMVSS and CMVSS 111, Rearview Mirrors. Removing a pickup box and installing a second unit body could affect compliance of the vehicle to these requirements even though the CHMSL and mirror systems have not been altered. See the detailed discussion on page 288 to determine what must be done to maintain compliance with the CHMSL and mirror requirements of FMVSS 108 and F/CMVSS 111.



Page 60 SAFETY/EMISSION

WARNING: The accessory reserve capacity weight limitation found on the safety compliance certification label refers to FMVSS and CMVSS Nos. 204, 208, 212, 219, 301, and 303 (301.2 Canada) compliance only. If the added weight is 226 kg/500 lb or more and the vehicle's GVW rating is under 3856 kg/8500 lb, the modifier may be responsible for recertification to the applicable EPA, CARB, or CMVSS emissions standards (refer to MSAPC [EPA] Advisory Circular No. 64).

GUIDELINES FOR REVISING GAWR CAPACITIES FOR FORD SUPER DUTY F-SERIES VEHICLES

NOTE: GVWR increases may not be made on Ford Light Truck vehicles.

These guidelines are provided in response to requests for information on revising the Gross Axle Weight Rating (GAWR) capacities of Ford Light Truck vehicles. Dealers or purchasers should first try to obtain a vehicle with the desired GAWR capacities before modifying a vehicle to revise its weight ratings. If circumstances require vehicles to be altered and GAWR rating to be revised, however, the following quidelines must be followed:

- This information is provided for new, current model vehicles, to assist vehicle alterers who modify vehicles as described below in determining whether the modified vehicle complies with applicable regulatory requirements.
- 2. Revised GAWR capacities must be within the currently available capacities in Ford production for the particular model to maintain the vehicle's warranty. The GVWR may be revised downward but must remain in the same GVWR range as coded in the fourth position of the vehicle identification number (VIN) in accordance with the requirements of 49 CFR Part 565 and CMVSS 115. The VIN is displayed on the driver's side of the instrument panel and is visible from outside the vehicle. For GVWR codes utilized in the fourth position of the VIN, see the list in the chart on this page.

EXAMPLE:

- A typical Super Duty F-Series VIN is 1FTSF34F12EA01784. The fourth position in the VIN is S. Therefore, the GVWR of the vehicle is in the range 9001 to 10,000 lb and the lowered GVWR of this vehicle must fall in this GVWR range as well.
- 3. The appropriate chassis component or components (axles, brakes, tires/tire pressure, wheels, springs) are to be modified or changed to provide the revised GAWR capacity desired. All new suspension components installed are to have the same engineering specifications as those used by Ford in production (Ford service parts meet those specifications) at the GAWR capacities desired and must be installed according to the procedures specified in the applicable model year Ford Truck Service Manual to maintain the vehicle's warranty. Refer to the Ford Source Book for component specifications information. The person who alters the vehicle should maintain records as to the modifications made to obtain the desired revised GAWR capacities in order to document the basis for certification to applicable Federal Motor Vehicle Safety Standards. Besides the suspension components noted above, the specifications for other vehicle systems that have been altered must also be carefully reviewed to establish that these systems are equivalent to those provided by Ford in a production vehicle at the GAWR capacities desired. These systems include brakes, steering, frame, powertrain (engine availability, driveline, transmission, rear axle ratio), and axle capacities (both front and rear) and are also specified in the Ford Source Book. For other information concerning the component changes necessary for the desired GAWR capacities, please contact the Ford Truck Body Builder Advisory Service.

GVWR CODES UTILIZED IN VIN POSITION FOUR							
Brake System	GVWR Class	GVWR Range	Lt. Trucks w/Second Gen. Air Bags	Explorer / Windstar / Expedition w/Second Gen. Air Bags & Side Air Bags	All Other Vehicles		
Hydraulic	Α	≤ 3000 lb	Т				
Hydraulic	В	3001 - 4000 lb	U	В			
Hydraulic	С	4001 - 5000 lb	Υ	С			
Hydraulic	D	5001 - 6000 lb	Z	D			
Hydraulic	Е	6001 - 7000 lb	R	Е			
Hydraulic	F	7001 - 8000 lb	Р	F			
Hydraulic	G	8001 - 8500 lb	V				
Hydraulic	G	8501 - 9000 lb	N		Н		
Hydraulic	Н	9001 - 10,000 lb	S		J		
Hydraulic	3	10,001 - 14,000 lb	W		K		
Hydraulic	4	14,001 - 16,000 lb	X		L		
Hydraulic	5	16,001 - 19,500 lb	А		М		
Hydraulic	6	19,501 - 26,000 lb			N		
Hydraulic	7	26,001 - 33,000 lb			Р		
Air	6	19,501 - 26,000 lb			W		
Air	7	26,001 - 33,000 lb			Х		



Page 61 SAFETY/EMISSION

4. Certification Labels for Altered Vehicles United States

A person or company who alters a previously certified vehicle before the first purchase by the final customer in such a manner that its stated weight ratings are revised, is required by Federal Regulation (49 CFR Part 567.7) to affix an altered vehicle certification label in addition to the Ford completed vehicle certification label.

The original certification label must remain on the vehicle unaltered. The altered vehicle label must contain the information indicated in the example on this page.

The label must be affixed to the vehicle in the manner and form described in 49 CFR Part 567.4:

- The label shall, unless riveted, be permanently affixed in such a manner that it cannot be removed without destroying or defacing it.
- The label shall be affixed to either the hinge pillar, door-latch post, or the door edge that meets the door-latch post next to the driver's seating position, or if none of these locations is practicable, to the left side of the instrument panel (other permissible locations are also specified in 49 CFR Part 567.4).
- The lettering on the label shall be of a color that contrasts with the background of the label.
- The label shall contain the required statements in the English language and lettered in block capitals and numerals not less than three thirty-seconds of an inch high.
- The lettering shall be permanent. If typed or written, a protective clear cover may be necessary to prevent information from being wiped off.
- Label must not cover or obscure chassis manufacturers label.

LABEL INFORMATION IDENTIFICATION

Canada

"Alterers" of motor vehicles are required to affix a permanent label on vehicles that they manufacture bearing a statement of compliance as provided by Section 9 of the Canadian Motor Vehicle Safety Regulations. The vehicle alterer should affix a corporate label containing information shown on this page.

- 1. Insert the name of the company that altered the vehicle.
- 2. Insert the month and year during which the alteration of the vehicle was completed.
- 3. Insert a drawing of the National Safety Mark which includes their unique manufacturer number.

- Insert revised GVWR or PNBV capacities in Kilograms of the vehicle as altered, where they differ from those shown on the original compliance label.
- Insert the GAWR/PNBEs of the vehicle as altered, where they differ from those shown on the original compliance label. Also, include the tire size, rim size and tire inflation pressure.
- Insert the vehicle type stated on the safety standard certification label provided by Ford Motor Company.
 The type of vehicle, in both official languages, or the word "TYPE" along with one of the following
 - (i) "AT/PA" to refer to an auto transporter,
 - (ii) "ATV/VTT" to refer to an all-terrain vehicle,
 - (iii) "B/A" to refer to a bus,

abbreviations, namely,

- (iv) "BT/RA" to refer to a bus trailer,
- (v) "CD/CCC" to refer to a C-dolly,
- (vi) "CMC/MCC" to refer to a competition motorcycle,
- (vii) "HHT/RL" to refer to a heavy hauler trailer,
- (viii) "LSM/MVL" to refer to a limited-speed motorcycle,
- (ix) "LDD/CRC" to refer to a load divider dolly,
- (x) "MH/AC" to refer to a motor home,
- (xi) "MC" to refer to a motorcycle,
- (xii) "MPV/VTUM" to refer to a multipurpose passenger vehicle,
- (xiii) "PC/VT to refer to a passenger car,
- (xiv) "RUM/MUR" to refer to a restricted-use motorcycle,
- (xv) "SB/AS" to refer to a school bus,
- (xvi) "TRA/REM" to refer to a trailer,
- (xvii) "TCD/CDC" to refer to a trailer converter dolly,
- (xviii) "TRU/CAM" to refer to a truck, and
- (xix) "TT/CT" to refer to a truck tractor.

The label must meet the following requirements as described in Section 9:

- Shall be permanently attached.
- Shall be affixed adjacent to the original compliance label required by Section 6.
- The lettering of the label shall be clear, indelible, indented or embossed, or of a color that contrasts with the background color of the label, and in block capitals and numerals not less than 2 mm high.
- The label shall be permanently affixed to the same surface as that to which the national safety mark is affixed.

	AS ALTERED BY (1)
IN(2)	AND AS ALTERED, IT CONFORMS TO ALL
	DERAL MOTOR VEHICLE SAFETY STANDARDS
IN EFFECTIN	(3)
TYPE	(4)
GVWR:(5)_	LB
FRONT GAWR:	(5) LB WITH(6)
TIRES,(6)	RIMS AT(6) PSI COLD(6)
REAR GAWR:	(5) LB WITH(6)
TIRES, (6)	RIMS AT(6) PSI COLD(6)

- (1) Insert individual or corporate name of vehicle alterer.
- (2) Insert month and year in which alterations were completed.
- (3) Insert appropriate month and year no earlier than the manufacturing date of the original vehicle and no later than the date alterations were completed.
- (4) Insert "Type" of altered vehicle, i.e., Truck, Bus, MPV, etc.
- (5) Insert revised GAWR capacities in lb.
- (6) Insert appropriate tire, rim and cold inflation pressure information corresponding to the revised GAWR capacities (insert the word "DUAL" after the rear wheel cold inflation pressure information on dual rear wheel vehicles).

Typical Certification Label for altered vehicle for sale in the United States

THIS VEHICLE WAS ALTERED BY/CE VÉHICLE A ÉTÉ MODIFIÉ PAR				
(1)				
DATE:(2)(3)				
GVWR:(4) KG FRONT GAWR:(5) KG WITH(5) TIRES,(5) RIMS AT(5) kPa COLD REAR GAWR:(5) KG WITH(5) TIRES,(5) RIMS AT(5) kPa COLD TYPE:(6)				

Typical Corporate Label information for altered vehicles for sale in Canada (Reference Section 9 of the Canadian Motor Vehicle Safety Regulations)

Page 62 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR ALTERED RANGER VEHICLES AND E-SERIES VEHICLES (EXCEPT WHEN COMPLETED AS A SCHOOL BUS)

105 INFORMATION

Vehicle weight and dimensional information required for center of gravity calculations are available in the *Ford Source Book*. See your local Ford Dealer and refer to appropriate model year and specific vehicle for required information.

Abbreviated definitions and a vehicle diagram to assist with the equations for the FMVSS 105 segment are shown on page 63 for E-Series and Ranger and page 68 for Super Duty F-Series.

FOR ALL RANGER AND E-SERIES VEHICLES

The vehicle, as altered will conform to FMVSS and CMVSS No. 105, Hydraulic Brake system, if:

- No alterations, modifications or replacements are made to the service or parking brake system, anti-lock brake system, vacuum system, wheels or tires, brake system indicator lamp and wiring, brake system reservoir labeling, suspension ride height or spring rate, hydro-boost system, power steering pump and lines if used with hydro-boost, and engine belt drive system.
- Any removal of a Ford body or chassis component is accompanied by the addition of equal weight.
- The vertical distance from the ground to the completed vehicle center of gravity should not exceed 36 inches for vehicles <8000 lb GVWR and 48 inches for vehicles ≥ 8000 lb GVWR. (Restrictions for other standards may also apply).
- For Ranger Pickup Box Removal, the SUB weights found in Table A page 292 are met, as is the maximum Unloaded Vehicle Weight.
- The applicable GAWR's, GVWR and accessory reserve capacity (ARC) weights (see preceding pages) are not exceeded.
- The applicable center of gravity limitations are met using one of the following calculation methods on this page.

FOR VEHICLES UNDER 3629 KG [8000 LB] GVWR

- The E-Series vehicle equipped with Recreational Trim have an Unloaded Vehicle Weight that does not exceed the values in Table 1 page 65.
- The rear weight component (W_{rul}), as measured between the rear tires and the ground, does not exceed 58% of the completed vehicle weight at Unloaded Vehicle Weight plus 400 lb located in the driver and front passenger area (W_{ul}).
 - Maximum $W_{rul} = .58 \times W_{ul}$ (see definitions on the next page).
- The horizontal center of gravity of the SUB† is rearward of L_{min}†† for the appropriate vehicle description in Table A on this page.

L_{min} does not apply to a SUB of 120 lb or less when installed rearward of the front seats and forward of the centerline of the rear axle (Do not restrict seat travel. See IVM for SRP location and torso angle).

The horizontal center of gravity for the SUB is:

- At or forward of the rear axle centerline. The vertical center of gravity for the completed vehicle at Unloaded Vehicle Weight + 400 lb passenger load CG_V (Equation A) must not exceed 36.0 inches, when measured from the ground.
- Behind the rear axle centerline. The vertical center
 of gravity of the completed vehicle at Unloaded
 Vehicle Weight + 400 lb passenger load must fall
 within the appropriate range determined from Table
 6, page 66. The value of CGh (Equation B), which
 approximates the horizontal center of gravity of the
 completed vehicle, is used in Table 6 page 66 to
 determine the vertical center of gravity limits for the
 completed vehicle. The value CGv (Equation A),
 which approximates the vertical center of gravity of
 the completed vehicle, must fall within the
 appropriate range determined from Table 6 page 66.

EQUATION A

$$CG_{v} = \frac{CG_{vb}W_{b} + CG_{vc}W_{c} + 10,000}{W_{t}}$$

EQUATION B

$$CG_{h} = \left(\frac{W_{rb} + W_{rc} + \left(\frac{400 \times CG_{hp}}{WB}\right)}{W_{t}}\right) \times WB$$

FOR VEHICLES 3629 KG [8000 LB] THROUGH 6804 KG [15,000 LB] GVWR

The horizontal center of gravity for the SUB is:

- E-Series Van, Cutaway and Stripped Chassis vehicles with a GVWR of 4536 kg [10,000 lb] or less do not exceed the maximum Unloaded Vehicle Weight value in Table 1 page 65.
- E-Series Cutaways and Stripped Chassis vehicles conform to the minimum SUB weights found in Table 4 on page 66.
- At or forward of the rear axle centerline. The vertical center of gravity for the completed vehicle at GVWR (CG_V - Equation C) must not exceed 48 inches, when measured from the ground.
- E-250/350/450 Stripped Chassis, E250 Cutaway, E350 Super Duty Cutaway (DRW) and E450 Super Duty Cutaway must have a horizontal CG for the second unit body at or forward of the centerline of the rear axle.
- Behind the rear axle centerline. The vertical center
 of gravity for the completed vehicle at GVWR must
 fall within the appropriate range determined from
 Table 6 page 66. The value of CGh (Equation D),
 which approximates the horizontal center of gravity
 of the completed vehicle, is used in Table 6 page 66
 to determine the vertical center of gravity limits for
 the completed vehicle.

EQUATION C

$$CG_{_{V}} = \frac{CG_{_{Vb}}W_{_{b}} + CG_{_{Vc}}(W_{_{c}} + W_{_{I}}) \, + \, 25P}{GVWR}$$

EQUATION D

$$CG_{h} = \frac{\left(W_{rb} + W_{rc} + \left(\frac{P X CG_{hp}}{WB}\right) + W_{rl}}{GVWB} X WB$$

TABLE A HORIZONTAL CENTER OF GRAVITY FORWARD LIMIT Vehicle Wheelbase Millimeter [inch] Lmin Millimeter [inch] E-150 3505 [138] 1473 [58] E-250 3505 [138] 1524 [60]

TABLE B E-SERIES PASSENGER LOAD				
GVWR [lb]	P [lb]			
8000 – 10,000 10,001 – 15,000	400 500			

† SUB = Second Unit Body (See definition next page.)

††L_{min} = the minimum horizontal center of gravity of the SUB measured in inches rearward from the centerline of the front axle.

Page 63 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR ALTERED FORD LIGHT TRUCKS. FOR INCOMPLETE VEHICLES - REFER TO *THE IVM*.

L* = Horizontal distance in inches between the SUB center of gravity and the & of the front axle.

P = Passenger load [See Table B page 62].

CG_v = Vertical distance from the ground to the center of gravity [inches] of the completed vehicle.

CG_h = Horizontal distance from ♀ of the front wheels to completed vehicle center of gravity [inches].

CG_{vb} = Vertical distance from the ground to the center of gravity of the SUB and/or permanently attached added equipment [inches]. CG_{vc} = Vertical distance from the ground to the center of gravity of the chassis [inches] (including cab if original equipment). (Taken from Table 5, Page 66.)

CG_{hp} = Horizontal distance form the ℚ of the front wheels to the P [inches] (passenger load) (taken from Table 3 page 65.)

W_b = Weight of the SUB and/or permanently attached added equipment [pounds].

W_{rb} = Weight on the rear wheels of the SUB and/or permanently attached added equipment [pounds].

W_{rc} = Weight at the rear wheels of the vehicle (chassis and cab) (fuel tanks full) [pounds], including option weight.

W_c = Weight of the vehicle (chassis and cab) (fuel tanks full) [pounds], including option weight.

WB = Vehicle wheelbase [inches].

 W_t = Total unladen weight = $(W_b + W_c + P)$

GVWR = Gross Vehicle Weight Rating of the vehicle [pounds].

 W_l^{**} = Remaining cargo capacity [pounds]. Where : W_l = GVWR - (W_b + W_c + P)


W_{rl}** = Weight of the remaining cargo capacity on the rear wheels [pounds].

$$W_{rl} = \frac{(CG_{hl}) W_l}{WB}$$

CG_{hl}** = Horizontal distance from the € of the front wheels to the cargo center of gravity [inches], (taken from Table 3, Page 65). For many common vehicles, if the CG_{hl} is not given in the table, then it may be estimated as the distance from the € of the front wheel to the horizontal midpoint of the cargo area.

SUB = A Second Unit Body consists of the body structure and/or all the cargo carrying, work performing and/or load bearing components and/or equipment installed by a subsequent stage manufacturer on an incomplete vehicle, such that the incomplete vehicle becomes a completed vehicle.

- * Required for < 8000 lb GVWR calculations only.
- ** Required for ≥ 8000 lb GVWR calculations only.

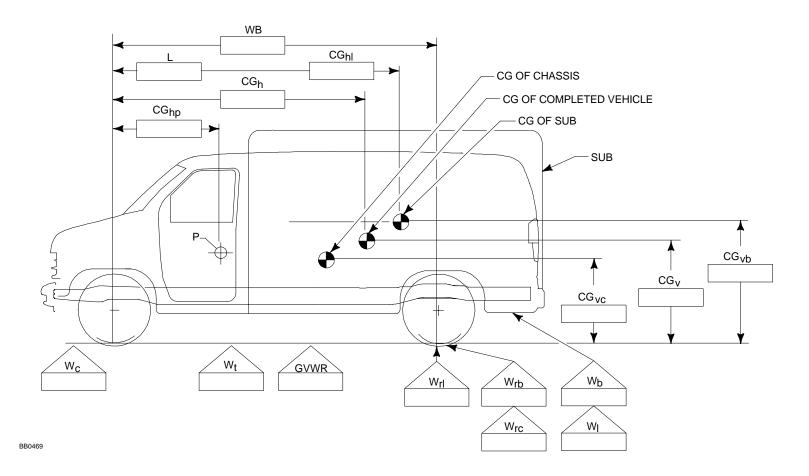

Page 64 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR ALTERED FORD LIGHT TRUCKS. FOR INCOMPLETE VEHICLES - REFER TO THE IVM.

SECOND UNIT BODY CENTER OF GRAVITY CALCULATION SUGGESTIONS

In the case where the rear weight of the SUB and/or added equipment must be reduced and the CG_V is found to be below the allowed minimum CG_V it may be possible to bring the vehicles into compliance by moving the CG_h forward. Forward movement of the CG_h can be accomplished by:

- Redistributing the weight of the SUB and/or added equipment.
- Adding permanently attached ballast forward of the CG_{h.} In order to reduce the rear weight, the ballast must be forward of the front axle. (Caution must be taken not to exceed the GVWR or front GAWR of the vehicle.)

The following general equations can be used to find the center gravity of the SUB and added equipment when there are several elements making up the CG.

NOTE: Removal of the components or body parts would be represented by a negative weight being used in these calculations.

$$CG_{vb} = \frac{CG_{vb1}(W_{b1}) + CG_{vb2}(W_{b2}) + ... + CG_{vbn}(W_{bn})}{W_{b1} + W_{b2} + ...W_{bn}}$$

and the horizontal CG location of the combined SUB and added equipment is:

$$CG_{hb} = \frac{(W_{rb1} + W_{rb2} + ... + W_{rbn})WB}{W_{b1} + W_{2} + ... + W_{bn}}$$

The front/rear weight break down can be found with the use of the following equation:

$$W_{rb} = \frac{CG_{hb} (W_{b1} + W_{b2} + ... + W_{bn})}{WB}$$

Conversely, the front weight component of the SUB and added equipment is:

$$W_{fb} = (W_{b1} + W_{b2} + ... + W_{bn}) - W_{rb}$$

SAMPLE CALCULATIONS

Vehicles <8000 lb GVWR Sample (1)

Ranger (4x2) pickup box removal vehicle 118 inch WB 4800 lb GVWR

Known:

 W_b = 250 lb W_{rb} = 260 lb (behind rear axle) W_c = 2912 lb; W_{rc} = 1080 lb CG_{vb} = 28 CG_{vc} = 25.5 CG_{hp} = 53.9 This vehicle falls in the under 8000 lb GVWR category and the SUB CG is behind the rear axle.

From equation A & B.

$$CG_{\nu} = \frac{(28)(250) + (25.5)(2912) + 10000}{3562} = 25.6 \text{ inches}$$

$$CG_h = \frac{260 + 1080 + \frac{400 \times 53.9}{113.9}}{3562} \times 113.9 = 48.9 \text{ inches}$$

From Table 1, page 65:

Upper Limit $CG_v = 1.39 \times 48.4 - 36.8 = 31.2$ inches Lower Limit $CG_v = 1.39 \times 48.4 - 51.7 = 16.3$ inches The 25.6 inches calculated is within the range given so this vehicle is acceptable from a compliance to FMVSS and CMVSS 105 standpoint.

Sample (2) E-Series Under 8000 lb GVWR 138 inch WB

Altering a completed E-150 vehicle with the addition of a permanently attached tool box and partition can be handled as follows:

The vertical distance above the floor is

$$V = \frac{Wt \, 1 \, (CG_{1V}) + Wt \, 2 \, (CG_{2V})}{Wt \, 1 + Wt \, 2}$$

$$V = \frac{125(24) + 100(25)}{125 + 100}$$

= 24.4 inches

The longitudinal distance aft of the front axle is

$$L = \frac{Wt \, 1 \, (CG_{1h}) + Wt \, 2 \, (CG_{2h})}{Wt \, 1 + Wt \, 2}$$

$$=\frac{125(133)\,+\,100(63)}{125\,+\,100}$$

= 101.9 inches

Using the value for Min L from Table A on page 62: Min L = .23 (138) + 21.4 + .72 (24.4) Min L = 70.7 inches

Since 101.9 is greater than 58, this meets the $L_{\mbox{\scriptsize MIN}}$ criteria.

If the vehicle curb weight + 400 lb for passengers (before alteration) is: front = 2825 lb; rear = 1888 lb; and, total = 4713 lb, adding the alteration weight of 225 lb which is distributed as follows:

Rear Axle Reaction =
$$\frac{225 + 101.9}{138}$$
 = 166 lb

Rear Axle Reaction = 166 lb

Conversely the Front Axle Reaction = 225 lb – 166 lb = 59 lb

$$W_{rul} = 1888 lb + 166 lb = 2054 lb$$

$$W_{ul} = 4713 \text{ lb} + 225 \text{ lb} = 4938 \text{ lb}$$


Max
$$W_{rul}$$
 = (.58) (4938) = 2864 lb using equation from page 62

So a W_{rul} of 2054 lb is less than the max.

W_{rul}, therefore, meets the criteria specified for compliance with FMVSS and CMVSS 105.

If the add-on weight of the SUB is forward of the centerline of the rear axle while conforming to GAWR, GVWR, ARC, and for pickup box removal vehicles min/max SUB weight restrictions (Table A page 292) are conformed to, then there are no FMVSS and CMVSS 105 issues.

E-150 ALTERED COMPLETED VEHICLE ADD TOOL CABINET AND A PARTITION

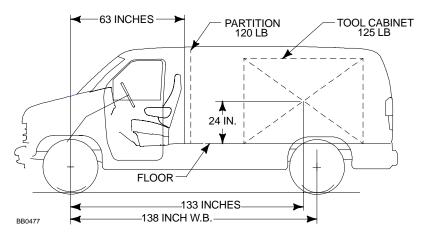



Page 65 SAFETY/EMISSION

TABLE 1 Unloaded Vehicle Weight (UVW) This Information Does Not Apply to Vehicles Over 4536 kg [10,000 lb]						
Models	WHEELBASE Millimeter [inch]	MAXIMUM UNLOADED VEHICLE WEIGHTS - Kilogram [pound] by Engine Size - Liter [cubic inch]				ound]
Incomplete E-Series Vehicles		4.2L [256] ⁽²⁾	4.6L [281]	5.4L [330]	6.8L [413]	7.3LD [444]
E-150 Regular Recreational Van	3505 [138]	2699 [5950] ⁽¹⁾	2699 [5950] ⁽¹⁾	2699 [5950] ⁽¹⁾	NA	NA
E-250 Regular Recreational Van	3505 [138]	NA	NA	3130 [6900]	NA	NA
E-250 Cutaway SRW	3505 [138]	2676 [5900]	NA	NA	NA	NA
E-250 Stripped Chassis SRW	3150 [124]	2676 [5900]	NA	NA	NA	NA
E-350 Reg. Van	3505 [138]	NA	NA	3583 [7900]	3583 [7900]	3583 [7900]
E-350 Extended Van or Extended Wagon	3505 [138]	NA	NA	3583 [7900]	3583 [7900]	3583 [7900]
E-350 Cutaway SRW(3)	3505 [138]	NA	NA	3856 [8500]	3856 [8500]	3856 [8500]
E-350 Cutaway DRW(3)	3505 [138]	NA	NA	3856 [8500]	3856 [8500]	3856 [8500]
E-350 Stripped Chassis SRW	3505 [138]	NA	NA	3946 [8700]	NA	NA
E-350 Stripped Chassis DRW	3505 [138]	NA	NA	3946 [8700]	NA	NA
E-350 Stripped Chassis SRW	4013 [158]	NA	NA	3946	NA	NA

(1) 2767 kg [6100 lb] when completed with 6 or less designated seating positions.

4013 [158]

4470 [176]

(2) Maximum unloaded vehicle weight values shown in this table are limits for purposes of FMVSS conformity only. The frontal area of the completed vehicle may limit the maximum Unloaded Vehicle Weight based on emission certification with the 4.2L engine. See the Emission Chart in the Incomplete Vehicle Manual for additional information.

NA

NA

NA

[8700]

3946

[8700]

3946

[8700]

NA

NA

NA

NA

- (3) E-350 vehicles completed as a School Bus must be equipped with the School Bus Prep Package and the Unloaded Vehicle Weight must exceed:
 - 2540 kg [5600lb] with single rear wheels (SRW).
 - 2858 kg [6300 lb] with dual rear wheels (DRW).

E-350 Stripped Chassis DRW

E-350 Stripped Chassis DRW

	TABLE 2	2	
CG _{hl} = Horizontal distance fro	m front axle cargo CG:		
Model		WB [in]	CG _{hl} [in] †
Super Duty F-Series:		<u>'</u>	1
Regular Cab		137.0	132
Regular Cab		140.8	134
Regular Cab		164.8	146
Regular Cab		188.8	158
Regular Cab		200.8	164
SuperCab		158.0	153
SuperCab		161.8	155
Crew Cab		172.4	165
Crew Cab		176.2	167
Crew Cab		200.2	182
E-Series:		•	-
Regular Van		138	116
†Extended Van or Extended V	Vagon	138	126
†Cutaway	(SRW)	138	121
•	(DRW)	138	127
†Commercial Cab/Box Partition	n (DRW)	158	134
† RV	(DRW)	158	138
†Commercial No Partition	(DRW)	158	143
†RV	(DRW)	176	153
†Commercial	(DRW)	176	160

TABLE 3

CG_{hp} = Horizontal distance from front wheel ^Q to Passenger Load. [Dimensions are in inches]

All Rangers 53.9
All Super Duty F-Series 61.2
All E-Series † 48.5

[†] Except E-Series Stripped Chassis where the distance from the \$\mathbb{Q}\$ of the front axle to the H-point of the driver must be measured.



Page 66 SAFETY/EMISSION

TABLE 4 MINIMUM SUB WEIGHT					
Models	Kilogram [Pound]				
E-250/350 Super Duty Cutaway 3505 mm [138 in] WB	281 [620]				
E-350 Super Duty Cutaway 4013 mm [158 in] WB	372 [820]				
E-350 Super Duty Cutaway 4470 mm [176 in] WB	431 [950]				
E-450 Super Duty Cutaway 4013 mm [158 in] WB	826 [1820]				
E-450 Super Duty Cutaway 4470 mm [176 in] WB	962 [2120]				
E-250 Stripped Chassis	771 [1700]				
E-350 Stripped Chassis All WB	862 [1900]				
E-450 Stripped Chassis All WB	998 [2200]				

TABLE 5					
CG _{VC} = Verticle distance ground to chassis CG [Dimensions are in inches]					
Ranger (4X2)	= 24.0				
Ranger (4X4)	= 27.0				
F-150 (4X2)	= 26.0				
F-150 (4X4)	= 28.5				
Super Duty F-250/350 (4X2) SRW > 8500 lb GVWR	= 30.0				
Super Duty F-250/350 (4X4) SRW > 8500 lb GVWR	= 31.0				
Super Duty F-350 (4X2) DRW	= 30.0				
Super Duty F-350 (4X4) DRW	= 31.0				
Super Duty F-450/550 (4X2 & 4X4) DRW	= 35.0				
E-150 & E-250 Van < 8000 lb GVWR	= 28.5				
E-250/350 SRW Van or Wagon > 8000 lb GVWR	= 32.0				
E-250/E-350 Super Duty Cutaway	= 28.0				
E-450 Super Duty Cutaway	= 26.5				
E-250 SRW Stripped Chassis	= 25.0				
E-350/450 Stripped Chassis	= 26.5				

TABLE 6 ${\rm CG_V = VERTICAL\ DISTANCE\ FROM\ THE\ GROUND\ TO\ THE\ COMPLETED\ VEHICLE\ CENTER\ OF\ GRAVITY\ [INCH].}$ GVWR $<8000\ lb\ Use\ equation\ A\ \&\ B,\ page\ 62$

		Equation for CGv Range		
Model	WB		Upper Limit	Lower Limit
Ranger 4x2 GVWR ≤ 4580 lb	112	CG _V =	1.39 X CG _h – 34.8	1.39 X CG _h – 49.0
	118	CG _V =	1.39 X CG _h – 36.8	1.39 X CG _h – 51.7
	126	CG _V =	1.39 X CG _h – 40.3	1.39 X CG _h – 56.7
Ranger 4x2 GVWR ≥ 4580 lb	112	CG _V =	1.39 X CG _h - 36.0	1.39 X CG _h – 42.0
	118	CG _V =	1.39 X CG _h - 38.5	1.39 X CG _h – 44.6
	126	CGv =	1.39 X CG _h - 45.5	1.39 X CG _h – 48.6
Ranger 4x4 GVWR ≥ 4580 lb	112	CG _V =	1.39 X CG _h – 32.8	1.39 X CG _h – 38.4
	118	CG _V =	1.39 X CG _h – 34.7	1.39 X CG _h – 40.5
	126	CG _V =	1.39 X CG _h – 38.0	1.39 X CG _h – 44.4

GVWR < 8000 lb Use equation A & B, page 62

Place the CG_h of the vehicle (from equation B) into the appropriate equations below to determine the allowable range of the CG_V . If the actual CG_V (from equation A) is within the range calculated, the center of gravity location is acceptable.

		Equation for CGv Range			
Model	WB		Upper Limit	Lower Limit	
E-150	138	CG _V =	1.39 X CG _h – 46.9	1.39 X CG _h – 58.7	
E-250 7900 lb GVWR	138	CG _V =	1.39 X CG _h – 47.1	1.39 X CG _h – 59.0	

GVWR ≥ 8000 lb Use equation C & D, page 62

Place the CG_h of the vehicle (from equation D) into the appropriate equations below to determine the allowable range of the CG_V . If the actual CG_V (from equation C) is within the range calculated, the center of gravity location is acceptable.

		Equation for CGv Range		
Model	WB		Upper Limit	Lower Limit
E-250 8600 lb GVWR	138	CG _V =	1.27 X CG _h – 59.0	1.27 X CG _h – 77.5
E-350 (SRW) ≤ 9600 lb GVWR	138 158	CG _V = CG _V =	1.27 X CG _h – 60.0 1.27 X CG _h – 69.5	1.27 X CG _h – 80.0 1.27 X CG _h – 90.7

Page 67 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR SUPER DUTY F-SERIES ALTERED VEHICLES WITH A GVWR BETWEEN 3629 kg [8000 LB] AND 8618 kg [19,000 lb] INCLUDING PICKUP BOX REMOVAL

105 INFORMATION

Vehicle weights and dimensional information required for center of gravity calculations are available in the *Source Book*. See your local Ford Dealer and refer to appropriate model year and specific vehicle for the required information.

The abreviated definitions and a vehicle diagram which are required for the equations in the FMVSS 105 segment of this document are shown on the next page.

The vehicle, as altered, will conform to FMVSS and CMVSS No. 105, Hydraulic and Electric Brake Systems, provided that:

- No alterations, modifications, or replacements are made to the following:
 - Service or parking brake system
 - Antilock brake system
 - Vacuum system
 - Wheels and tires
 - Brake system indicator lamp and wiring
 - Brake system reservoir labeling
 - Suspension ride height or spring rate
 - Hydro-boost system
 - Power steering pump and lines if used with Hydro-boost
 - Engine belt drive system
- Any removal of a Ford body or chassis component is accompanied by the addition of equal weight.

- Chassis Cab vehicle with a GVWR of 4536 kg [10,000 lb] or less do not exceed the Maximum Unloaded Vehicle Weight value in Table 7, page 69
- The applicable GAWRs and GVWR weights are not exceeded.
- The completed vehicle must have a vertical center of gravity (Equation E) of 48.00 inches or less when measured from the ground.
- The front axle curb weight of the completed vehicle (incomplete vehicle weight + min SUB weight, Table 8, page 69 may be reduced by no more than 10% for SRW or 25% for DRW vehicles, using the front axle ground reaction as manufactured by Ford.
- The rear axle curb weight of the completed vehicle (incomplete vehicle + min SUB weight, Table 8, page 69) must be the same or greater than the rear axle ground reaction as manufactured by Ford.
- 4. REFERENCE: Equation F can be used to determine the completed vehicle's horizontal center of gravity (CG_h). Abbreviated definitions and a vehicle diagram are provided to assist with the equation on page 68.

SUPER DUTY F-SERIES PASSENGER LOAD TABLE			
CG _{hp} GVWR [Ib] P		P [lb]	
61 2 [in]	8500-10,000	400	
61.2 [in]	10,001-19,000	500	

SUPER DUTY F-SERIES PASSENGER CG _{vp}			
All Seats			
	4x2	4x4	
CG _{vp}	39.9 [in]	43.4 [in]	

Example:

Super Duty F-250 (4x4) Pickup Box Removal with 137 inch WB and 8800 lb GVWR

Known:

Super Duty F-250 (4x4) 137 inch WB, 8800 lb GVWR, 5.4L pickup box removal vehicle.

 W_b = 675 lb; W_{rb} = 600 lb; W_{rc} =1531 lb; W_c = 4684 lb; CG_{vb} = 35 inches;

 CG_{vc} = 31.0 inches; W_I = $GVWR - (W_b + W_c + 400)$ = 3041 lb

$$W_{rl} = \frac{(132)(3041)}{137} = 2930 \text{ lb}$$

From Equations E & F:

$$CG_v = \frac{35(675) + 31(4684 + 3041) + 43.4x(400)}{8800} = 31.9 \text{ in}$$

$$CG_h = \frac{(600 + 1531 + \frac{400(61.2)}{137} + 2930) \times 137}{8800} = 81.6 \text{ in}$$

EQUATION E

$$CG_{v} = \frac{CG_{vb} \ W_{b} + CG_{vc}(W_{c} + W_{J}) \, + \, (CG_{vp}) \ X \, P}{GVWR}$$

EQUATION F

$$CG_h = \frac{(W_{rb} + W_{rc} + (\frac{P \times CG_{hp}}{WB}) + W_{rl})}{GVWB} \times WB$$

Since CG_v is less than 48" and CG_h is less than 137", this vehicle is acceptable with the 675 lb SUB.

If CG_V exceeds 48", do one or more of the following, as required to get $CG_V \le 48$ ".	$\label{eq:first-section} \begin{array}{c} \text{If CG_h exceeds} \\ \text{wheelbase, do one or} \\ \text{more of the following, as} \\ \text{required to get} \\ \text{CG}_h \leq \text{WB}. \end{array}$		
 Move heavy objects to lower areas to lower the CG. 	Move heavy objects forward to shift the CG forward.		
Remove heavy objects with CG's greater than 48" above the ground.	Remove heavy objects which are aft of the rear axle.		
Add weight as low as possible (lower than 48") to bring down CG.	Add weight as far forward as possible (forward of the rear axle) to shift the CG forward.		

Page 68 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR SUPER DUTY F-SERIES ALTERED VEHICLES INCLUDING PICKUP BOX REMOVAL


- P = Passenger load (see table on page 67).
- CG_v = Vertical distance from the ground to the center of gravity [inches] of the completed vehicle.
- CG_h = Horizontal distance from € of the front wheels to the center of gravity [inches] of the completed vehicle.
- CG_{vb} = Vertical distance from the ground to the center of gravity of the SUB and/or permanently attached added equipment [inches].

- CG_{vc} = Vertical distance from the ground to the center of gravity of the chassis [inches] (including cab if original equipment). (Taken from Table 5 page 66).
- CG_{hp} = Horizontal distance from the ♀ of the front wheels to the P (passenger load). (Taken from Passenger Load Table on page 67).
- CG_{vp} = Vertical distance from the ground to the center of gravity of the front and rear seat P (passenger weight). (Taken from Passenger Load Table on page 67).
- W_b = Weight of the SUB and/or permanently attached added equipment [pounds].
- W_{rb} = Weight at the rear wheels of the SUB and/or permanently attached added equipment [pounds].

- W_{rc} = Weight at the rear wheels of the vehicle (chassis and cab) (fuel tanks full) [pounds], including option weight.
- W_c = Weight of the vehicle (chassis and cab) (fuel tanks full) [pounds], including option weight.
- WB = Vehicle wheelbase [inches].
- W_t = Total unladen weight = $(W_b + W_c + P)$
- GVWR = Gross Vehicle Weight Rating of the vehicle [pounds].
- W_I = Remaining cargo capacity [pounds]. Where : W_I = GVWR - (W_D + W_C + P)
- W_{rl} = Weight of the remaining cargo capacity on the rear wheels [pounds].

$$W_{rl} = \frac{(CG_{hl}) W_l}{WB}$$

- CG_{hI} = Horizontal distance from the ♀ of the front wheels to the cargo center of gravity [inches]. (Taken from Table 2 page 65) for many common vehicles. If the CG_{hI} is not given in the table, then it may be estimated as the distance from the ♀ of the front wheel to the horizontal midpoint of the cargo area.
- SUB = A Second Unit Body consists of the body structure and/or all the cargo carrying, work performing and/or load bearing components and/or equipment installed by a subsequent stage manufacturer on an incomplete vehicle, such that the incomplete vehicle becomes a completed vehicle.
- CG_{hc} = Horizontal distance from € of the front wheels to the center of gravity [inches] of the chassis.

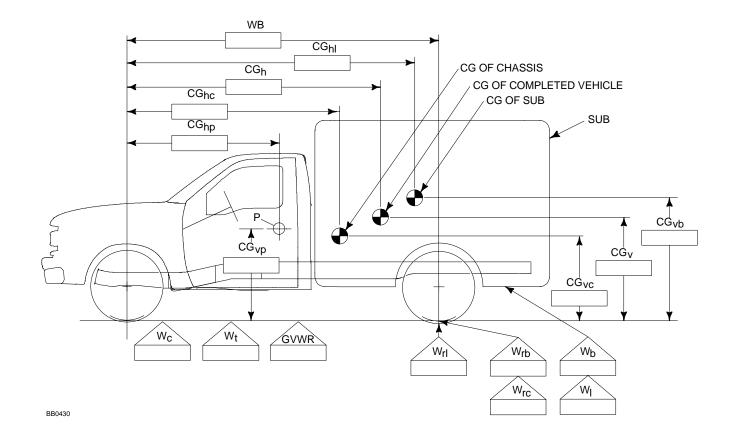



Page 69 SAFETY/EMISSION

FMVSS AND CMVSS 105 HYDRAULIC BRAKE COMPLIANCE GUIDELINES FOR ALTERED VEHICLES

TABLE 7
This Weight Information Does Not Apply to Vehicles Over 4536kg [10,000 lb] GVWR

SUPER DUTY F-SERIES	SECOND UNIT BODY MAXIMUM LIMITATIONS		MAX. UNLOADED VEHICLE WEIGHT Kilogram [pound]		
MODELS	SUB	Center of Gravity Height† Millimeter [inch]	Engine Size - Liter [cubic inch]		
WODELS	Weight Kilogram [pound]		5.4L [330]	6.8L [415]	7.3LD [444]
F-250 Reg. Chassis Cab (4X2)	816	447	2904	2904	3198
3480 mm [137 in] WB (56.00" CA)	[1800]	[17.6]	[6400]	[6400]	[7050]
F-250 Reg. Chassis Cab (4X4)	816	447	3130	3130	3345
3480 mm [137 in] WB (56.00" CA)	[1800]	[17.6]	[6900]	[6900]	[7350]
F-250 Super Chassis Cab (4X2)	816	610	3108	3108	3289
4013 mm [158 in] WB (56.00" CA)	[1800]	[24]	[6850]	[6850]	[7250]
F-250 Super Chassis Cab (4X4)	816	610	3289	3289	3493
4013 mm [158 in] WB (56.00" CA)	[1800]	[24]	[7250]	[7250]	[7700]
F-250 Crew Chassis Cab (4X2)	816	610	3198	3198	3471
4379 mm [172.4 in] WB (56.00" CA)	[1800]	[24]	[7050]	[7050]	[7650]
F-250 Crew Chassis Cab (4X4)	816	610	3391	3391	3584
4379 mm [172.4 in] WB (56.00" CA)	[1800]	[24]	[7475]	[7475]	[7900]
F-350 Reg Chassis Cab (4X2)	816	447	3539	3539	3539
3576 mm [140.8 in] WB (60.00" CA)	[1800]	[17.6]	[7800]	[7800]	[7800]
F-350 Reg Chassis Cab (4X4)	635	447	3471	3471	3471
3576 mm [140.8 in] WB (60.00" CA)	[1400]	[17.6]	[7650]	[7650]	[7650]
F-350 Super Chassis Cab (4X2)	816	610	3720	3720	3720
4110 mm [161.8 in] WB (60.00" CA)	[1800]	[24]	[8200]	[8200]	[8200]
F-350 Super Chassis Cab (4X4)	635	610	3675	3675	3675
4110 mm [161.8 in] WB (60.00" CA)	[1400]	[24]	[8100]	[8100]	[8100]
F-350 Crew Chassis Cab (4X2)	816	610	3834	3834	3834
4475 mm [176.2 in] WB (60.00" CA)	[1800]	[24]	[8450]	[8450]	[8450]
F-350 Crew Chassis Cab (4X4)	635	610	3766	3766	3766
4475 mm [176.2 in] WB (60.00" CA)	[1400]	[24]	[8300]	[8300]	[8300]

[†] Vertical dimensions are measured from the top surface of the frame at a distance approximately 304.8 to 457.2 [12 to 18 in] from the rear of the cab.

TABLE 8 SUPER DUTY F-SERIES VEHICLES MINIMUM SUB WEIGHTS

	8800 LB to 11,200 LB (Pickup Box Deletes/Wide Frame F-250/350 924mm [36.4 in] C	e Chassis Cabs	
Model and GVWR kg [lb]	Cab Style	WB mm [in]	Minimum SUB kg [lb]
	R/C	3480 [137]	172 [380]
	S/C	3602 [141.8]	151 [335]
F-250	C/C	3967 [156.2]	151 [335]
3989 [8800]	S/C	4013 [158]	172 [380]
	C/C	4380 [172.4]	172 [380]
	R/C	3480 [137]	172 [380]
	S/C	3602 [141.8]	151 [335]
F-350 4488 [9900] *	C/C	3967 [156.2]	151 [335]
4400 [9900]	S/C	4013 [158]	172 [380]
	C/C	4380 [172.4]	172 [380]
F-350 Gasoline	R/C	3480 [137]	
5077 [11,200] ** Diesel	S/C	4013 [158]	190 [420]
5667 [12,500] **	C/C ***	4380 [172.4]	
	9900 LB to 19,000 LB GVWR NA 5mm [34 in] and F-450/550 868m		
Model and GVWR kg [lb]	Cab Style	WB mm [in]	Minimum SUB kg [lb]
	R/C	3576 [140.8]	453 [1000]
F-350 4488 [9900] *	S/C	4110 [161.8]	317 [700]
4400 [0000]	C/C	4475 [176.2]	172 [380]
	R/C	3576 [140.8]	100 [420]
F-350	S/C	4110 [161.8]	190 [420]
5077 [11,200] **	R/C	4186 [164.8]	204 [450]
	C/C	4475 [176.2]	190 [420]
	R/C	3576 [140.8]	190 [420]
F-350 5667 [12,500] ****	S/C	4110 [161.8]	190 [420]
(7.3L Diesel)	R/C	4186 [164.8]	204 [450]
` ,	C/C	4475 [176.2]	190 [420]
		3576 [140.8]	190 [420]
	R/C	4186 [164.8]	204 [450]
F-450		4795 [188.8]	227 [500]
6800 [15,000]	C/C	4475 [176.2]	190 [420]
L		5085 [200.2]	204 [450]
	R/C	5100 [200.8]	249 [550]
	R/C	3576 [140.8]	190 [420]
F-550 7933 [17,500]		4186 [164.8]	204 [450]
		4795 [188.8]	227 [500]
		4475 [176.2]	190 [420]
<u> </u> _	C/C	5085 [200.2]	204 [450]
	R/C	5100 [200.8]	249 [550]
F-550	R/C	4186 [164.8]	204 [450]
8618 [19,000]	1.00	5100 [200.8]	249 [550]

Cab Style:

R/C = Regular Cab

S/C = SuperCab C/C = Crew Cab * GVWR shown for 49 state applications, California models are 90.7 kg [200 lbs] less.

^{**} GVWR shown for 48 state applications, California and Hawaii models are 4990 kg [1100].

^{***} CrewCab, long box [172.4 in WB], 48 states, Diesel Engine: 5216 kg [11,500] GVWR.

^{****} Hawaii only: 4990. kg [11,00] .

U.S. AND CANADA SAFETY STANDARDS INCOMPLETE VEHICLES

2002 MODEL YEAR

Page 70 SAFETY/EMISSION

Each Ford incomplete vehicle product is accompanied by an *Incomplete Vehicle Manual* (see manuals on this page). These manuals contain the information required to comply with Part 568 of Title 49 of the Code of Federal Regulations for vehicles offered for sale in the United States and with Section 6 of the Canadian Motor Vehicle Safety Regulations for vehicles offered for sale in Canada. Ford incomplete vehicles offered for sale in the United States and Canada will be provided with an *Incomplete Vehicle Manual*.

The manual must be forwarded with the vehicle until the final stage manufacturer has installed a Safety Compliance label on the completed vehicle.

INCOMPLETE VEHICLE MANUAL COVER

The cover of the IVM identifies the incomplete vehicle configurations for which compliance representations are identified. Also, a label is affixed to the cover which includes the vehicle identification number (VIN) for the specific vehicle to which the manual belongs. The label identifies the following information which pertains only to the vehicle with the corresponding VIN.

- The GVWR
- · The front and rear GAWRs
- Tire and wheel size
- Cold tire inflation pressure (PSI)
- Completed vehicle type(s) into which the incomplete vehicle may be manufactured.
- Optional prep package when the vehicle is so equipped.

INCOMPLETE VEHICLE LABEL

Each incomplete vehicle is manufactured by Ford Motor Company will have an incomplete vehicle label affixed to the driver-door lock pillar. The sample labels on this page are typical of those provided for U.S. production. A detailed explanation of all label information is available in the *Ford Truck Source Book* for the appropriate model year, at your local Ford Dealer.


The 5th, 6th & 7th digits of the Vehicle Identification Number (VIN) will identify the incomplete vehicle type. These three digits are used in the Completed Vehicle Type chart on page 73 of this section. Additional VIN information is available in the *Ford Truck Source Book* for the appropriate model year.


California Air Resources Board (CARB), requires a Vehicle Emission Control Label with a vehicle identification number (VIN) having a non-contact, barcode reading wand capability. The bar-code directly below the VIN on the incomplete vehicle label will comply with this regulation.


OPTIONAL PREP PACKAGES

Incomplete vehicles produced by Ford Motor Company, in some instances, are equipped with optional prep packages. The completed vehicle type chart on page 73 of this section, will identify incomplete vehicles and the optional Prep Packages that may be required by Ford if final stage manufacturers wish to rely on the Statements of Conformity or, in some cases, preserve the Ford new vehicle warranty.

If an incomplete vehicle is equipped with an optional Prep Package, both the incomplete vehicle label affixed to the vehicle and the label on the front of the IVM will identify the Prep Package.

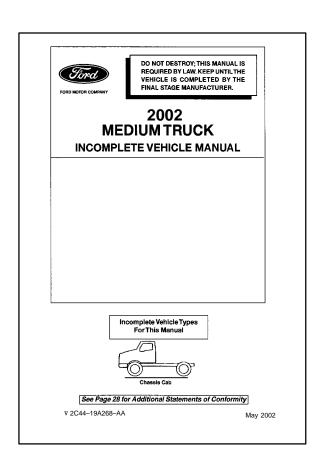

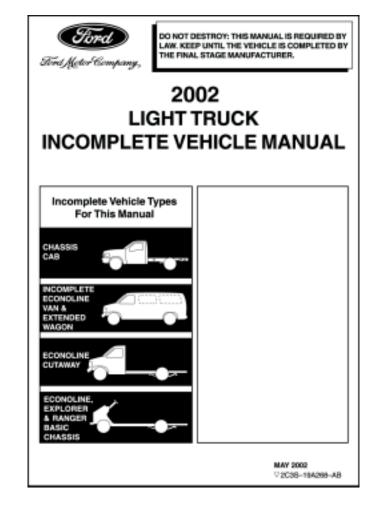

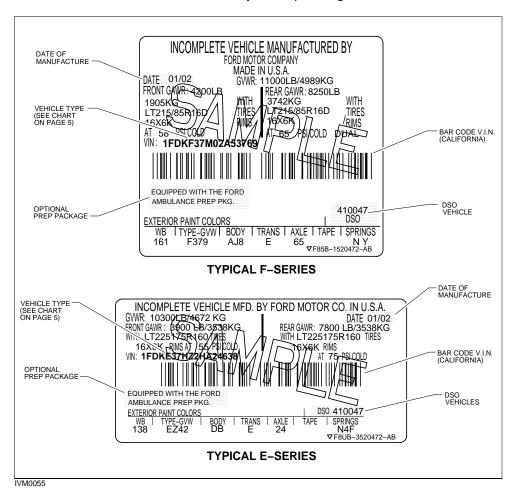

U.S. AND CANADA SAFETY STANDARDS INCOMPLETE VEHICLES

2002 MODEL YEAR

Page 71 SAFETY/EMISSION

The Canadian Motor Vehicle Safety Act and Regulations require installation of an incomplete vehicle certification label with the National Safety Mark on it on vehicles manufactured for sale in Canada. A label representative of those installed by Ford assembly plants is shown below.



BB052

All chassis cabs manufactured for sale in the United States are required by Part 567.5 of Title 49 of the Code of Federal Regulations to bear a chassis cab conformity label. For current model year, Ford Truck Chassis Cabs include: Super Duty F-350/450/550 Chassis Cabs. A sample label is shown below.

Medium trucks get a label similar to the chassis cab label shown below.

(Sample Shown is for a Chassis Cab Manufactured in the United States)

THIS CHASSIS-CAB CONFORMS TO FEDERAL MOTOR VEHICLE SAFETY STANDARD NOS. 101, 102, 103, 104, 106, 111, 113, 115, 116, 124, 205, 206, 207, 208, 209, 210, and 302. THIS VEHICLE WILL CONFORM TO STANDARD NOS. 108, 120, and 105 or 121 (AS APPLICABLE) IF IT IS COMPLETED IN ACCORDANCE WITH THE INSTRUCTIONS CONTAINED IN THE INCOMPLETE VEHICLE DOCUMENT FURNISHED PURSUANT TO 49 CFR PART 568. CONFORMITY TO THE OTHER SAFETY STANDARDS APPLICABLE TO THIS VEHICLE WHEN COMPLETED IS NOT SUBSTANTIALLY AFFECTED BY THE DESIGN OF THE CHASSIS-CAB. CHASSIS-CAB MANUFACTURED BY FORD MOTOR COMPANY IN U.S.A.

∇ E5HT-19A349-AA

The following section headed "Multi-Stage Manufacture: Safety Certification Regulations" identifies some of the responsibilities of the incomplete, intermediate and final stage vehicle manufacturers pursuant to Part 567.5 and 568 of Title 49 of the Code of Federal Regulations and/or under the National Traffic and Motor Vehicle Safety Act of 1966 in the United States and the Canada Motor Vehicle Safety Act in Canada.

MULTI-STAGE MANUFACTURE: SAFETY CERTIFICATION REGULATIONS

United States Manufacturers

Requirements concerning certification of compliance to Federal Motor Vehicle Safety Standards (FMVSS) of vehicles manufactured in two or more stages are contained in Parts 567.5 and 568 of Title 49, Code of Federal Regulations. These regulations set forth the requirements for (i) manufacturers of completed motor vehicles; (ii) persons who, prior to the first retail sale, alter a certified vehicle in a manner that affects its compliance; (iii) persons who perform manufacturing operations on an incomplete vehicle in furtherance of its completion and (iv) persons who do not alter certified vehicles or do so with readily attachable components, in such a manner that the vehicle's stated weight ratings are still valid. These regulations require among other things that each completed motor vehicle has a permanently affixed label certifying that such vehicle conformed with all applicable FMVSS on the stated date of manufacture.

All completed vehicles manufactured by Ford Motor Company have affixed the required certification label when the vehicle leaves the assembly plant. This certification label on a completed vehicle specifies the Gross Axle Weight Rating (GAWR) for each axle of the vehicle and the Gross Vehicle Weight Rating (GVWR) of the total vehicle. The label also lists the tire and rim data required by FMVSS 120. Any person who alters a completed vehicle prior to the first retail sale should be aware of the legal obligations arising from Parts 567.5 and 568 of Title 49. Code of Federal Regulations.

All incomplete vehicles manufactured by Ford Motor Company have attached an Incomplete Vehicle Manual (IVM). This manual contains information which an incomplete vehicle manufacturer is required to furnish subsequent stage manufacturers under Part 568 of Title 49, Code of Federal Regulations. This information includes the identification of the particular vehicle to which the manual applies, the designation by Ford of the type of vehicle into which the incomplete vehicle may be manufactured, and a listing of the applicable FMVSS. Each applicable standard is accompanied by a statement indicating the degree of compliance of the vehicle with that standard at the time of manufacture by Ford. In some cases, Ford has provided statements as to the conditions under which the vehicle may be manufactured so as to conform when completed. Ford makes no representation that the conditions indicated represent the only conditions under which the vehicle may be completed; however, when a subsequent stage manufacturer deviates from these conditions, it must independently provide the basis for certification to the particular standard. In those cases where conformity with a standard is not substantially affected by the incomplete vehicle design, Ford has provided a statement indicating that no representation as to conformity with the standard is made.

Part 568 of Title 49, Code of Federal Regulations, requires the incomplete vehicle manufacturer to specify the Gross Axle Weight Rating (GAWR) for each axle of the vehicle, and the Gross Vehicle Weight Rating (GVWR) of the total vehicle. Ford provides this information on the cover of the *Incomplete Vehicle Manual* that accompanies each incomplete vehicle as it leaves Ford's assembly plant.

Chassis-Cabs manufactured by Ford Motor Company are required to bear a "Chassis-Cab Conformity Label." This label contains statements which a Chassis-Cab manufacturer is required to furnish under Part 567.5 of Title 49 of the Code of Federal Regulations. These statements specify the FMVSS to which the Chassis-Cab conforms, the FMVSS to which the vehicle will conform if completed in accordance with the instructions contained in the incomplete vehicle manual, and that conformity with the other FMVSS is not substantially affected by the design of the Chassis-Cab. Also specified is the manufacturer of the Chassis-Cab and date of manufacture. (See preceding page of this section for sample label.)

THIS CHASSIS-CAB CONFORMS TO FEDERAL MOTOR VEHICLE SAFETY STANDARD NOS. 101, 102, 103, 104, 106, 111, 113, 115, 116, 124, 205, 206, 207, 208, 209, 210, AND 302. THIS VEHICLE WILL CONFORM TO STANDARD NOS. 108, 120 and 105 OR 121 (AS APPLICABLE) IF IT IS COMPLETED IN ACCORDANCE WITH THE INSTRUCTIONS CONTAINED IN THE INCOMPLETE VEHICLE DOCUMENT FURNISHED PURSUANT TO 49 CFR PART 568. CONFORMITY TO THE OTHER SAFETY STANDARDS APPLICABLE TO THIS VEHICLE WHEN COMPLETED IS NOT SUBSTANTIALLY AFFECTED BY THE DESIGN OF THE CHASSIS-CAB. CHASSIS-CAB MANUFACTURED BY FORD MOTOR COMPANY IN MEXICO.

∇ YC35-19A349-AA

U.S. AND CANADA SAFETY STANDARDS INCOMPLETE VEHICLES

2002 MODEL YEAR

Page 72 SAFETY/EMISSION

Canadian Manufacturers

Canadian requirements concerning certification of compliance to Canada Motor Vehicle Safety Standards of vehicles require each completed truck, truck tractor, bus, school bus, and multipurpose passenger vehicle (except chassis-cabs and truck tractors not fitted with fifth wheel couplings) to have a label permanently affixed that includes the National Safety Mark and a statement certifying that that vehicle conformed with all applicable CMVSS on the stated date of manufacture.

All completed trucks, buses, and multipurpose passenger vehicles manufactured by Ford Motor Company have the required certification label which contains the National Safety Mark affixed to it when the vehicle leaves the assembly plant. This certification label on a completed truck, bus, or multipurpose passenger vehicle specifies the Gross Axle Weight Rating (GAWR) for each axle of the vehicle and the Gross Vehicle Weight Rating (GVWR) of the total vehicle. Any person who alters a completed truck, bus, or multipurpose passenger vehicle prior to the first retail sale may be considered a manufacturer and, therefore, should be aware of the legal obligations arising from the Canadian Motor Vehicle Safety Act and Regulations.

All Chassis-Cabs manufactured by Ford Motor Company have a label that includes the National Safety Mark and an *Incomplete Vehicle Manual*. The *Incomplete Vehicle Manual* and the table on page 75 contain a list of those standards to which the Chassis-Cab conforms in full.

Section 8 of the Canadian Motor Vehicle Safety Regulations specifies requirements for manufacturers who assemble trucks, buses, school buses, and multipurpose passenger vehicles from certain Chassis-Cabs.

Section 6 of the Canadian Motor Vehicle Safety Regulations requires the manufacturer of a chassis-cab to specify the Gross Axle Weight Rating (GAWR) for each axle of the chassis-cab and the Gross Vehicle Weight Rating (GVWR) of the total chassis-cab. Ford provides this information on the cover of the *Incomplete Vehicle Manual* that accompanies each Chassis-Cab as it leaves Ford assembly plants.

NOTE: As defined by Canadian Motor Vehicle Safety Standards, chassis-cab includes all types of incomplete vehicles, including stripped chassis and chassis-cab. See pages 26-27 of this section for definitions.

Guidelines for revising GAWR/GVWR capacities for Truck Incomplete Vehicles

Representations as to the compliance of Ford incomplete vehicles to United States and Canadian Federal Safety Regulations are provided in an Incomplete Vehicle Manual attached to each incomplete vehicle. While purchasers and dealers should seek to order incomplete vehicles having GAWR and GVWR that correspond to the intended application of the vehicle, it may be appropriate in some circumstances for final stage manufacturers to revise the weight ratings of a particular vehicle if the vehicle is revised so that it has the same components and specifications as the corresponding Ford factory-built unit with identical weight ratings. In such cases, it may be appropriate for subsequent stage manufacturers to rely on the representation in the *Incomplete Vehicle Manual* in certifying that the completed vehicle conforms to all applicable motor vehicle safety standards. Ford Truck Body Builder Advisory Service should be consulted in such cases.

U.S. AND CANADA SAFETY STANDARDS



Page 73 SAFETY/EMISSION

THE FOLLOWING CHARTS RELATE FORD MOTOR COMPANY TRUCK PRODUCTS TO FEDERAL VEHICLE CLASSIFICATIONS (CHART A) AND SPECIFY THE MOTOR VEHICLE STANDARDS WHICH APPLY TO EACH CLASSIFICATION (CHART B).

CHART A COMPLETED VEHICLES - CERTIFIED AS MANUFACTURED BY FORD MOTOR CO.

Model	FWD	4x2	4x4 (4WD)	AWD	Certified For Use As
E-Series Vans		E14, E24, S24, E34, S34			Truck
E-Series Wagons		E11, E31, S31			MPV or Bus (not School Bus)
Windstar Van	A54				MPV
Windstar Wagon	A50, A51, A52, A53				MPV
Escape	U01, U03		U02, U04		MPV
Excursion		U40, U42	U41, U43		MPV
Expedition		U15, U17	U16, U18		MPV
Explorer		U62, U63, U64, U65	U72, U73, U74, U75	U83, U84, U85	MPV
Explorer Sport		U60	U70		MPV
Explorer Sport Trac		U67	U77		Truck
Ranger Regular Pickups		R10	R11		Truck
Ranger SuperCab Pickups		R14	R15		Truck
F150 Regular Pickups		F07, F17	F08, F18		Truck
F150 SuperCab Pickups		X07, X17	X08, X18		Truck
F150 SuperCrew Pickups		W07	W08		Truck
Super Duty F-Series Regular Pickups-SRW		F20, F30	F21, F31		Truck
Super Duty F-Series Regular Pickups-DRW		F32	F33		Truck
Super Duty F-Series SuperCab Pickups-SRW		X20, X30	X21, X31		Truck
Super Duty F-Series SuperCab Pickups-DRW		X32	X33		Truck
Super Duty F-Series CrewCab Pickups-SRW		W20, W30	W21, W31		Truck
Super Duty F-Series CrewCab Pickups-DRW		W32	W33		Truck

CHART B INCOMPLETE VEHICLES REQUIRE COMPLETION AND CERTIFICATION BY SUBSEQUENT STAGE MANUFACTURERS

5TH 6TH 7TH VIN DIGIT	MODEL	TRUCK	TRUCK (WALK-IN VAN)	MPV	MPV (AMBULANCE)	BUS (NOT SCHOOL BUS)	SCHOOL BILE
	INCOMPLETE VEHICLES		COM	PLET	EVEHI	CLES	
E-SERIES							
E14		Х		5			
E24		Х		5			
E27†		Х					
E29			Х				
E34		Х		5	1		
E35		Х		3	1	4	2
E39			Х				
E45		Х		3	1	4	2
E49			Χ				
S24		Х		5			
S31		Х		6		6	
S34		Х		5	1	5	
SUPER DUTY F-SERIES							
F20, F30, F34		Х			1		
F21, F31, F35		Х			1		
F32, F36, F46, F56		Х			1		
F33, F37, F47, F57		Х			1		
F53				Χ		Х	
W20, W30, W34		Х			1		
W21, W31, W35		Х			1		
W32, W36, W46, W56		Х			1		
W33, W37, W47, W57		Х			1		
X20, X30, X34		Х			1		
X21, X31, X35		X			1		
X32, X36		Х			1		
X33, X37		X			1		_

- † Domestic Special Order
- (1) Ambulance Prep Package (Super Duty F-Series available on narrow frame Chassis Cab models only)
- (2) School Bus Prep Package (E-350 available on 9600 lb GVWR SRW and 10,000 lb GVWR DRW only)
- (3) Motorhome Prep Package
- (4) Shuttle Bus Prep Package
- (5) Recreational Trim
- (6) Commuter Van Package

IMPORTANT: Ford Motor Company makes no representation that the completed vehicle types listed in Chart B are the only vehicle types appropriate for the incomplete vehicles listed. However, if a unit is completed as a vehicle type other than as listed above, the Statements of Conformity in the *Incomplete Vehicle Manual* may not be applicable.

U.S. AND CANADA SAFETY STANDARDS



Page 74 SAFETY/EMISSION

U.S. MOTOR VEHICLE SAFETY STANDARDS (APPLICATION BY VEHICLE TYPE)

Bus (Not Truck **FMVSS** School School Truck (Walk-in (1) Equip. Number (Not Walk-in Van) MPV Title of Standard Bus) Bus Van) Control Location. 101 Identification and Illumination Χ Χ Χ Χ Χ Transmission Shift Lever 102 Sequence, Starter Interlock & Transmission Braking Effect Χ Χ Χ Χ Χ Windshield Defrosting & 103 **Defogging Systems** Χ Χ Χ Χ Χ Windshield Wiping and 104 Washing Systems Χ Χ Χ Χ Χ Hydraulic and Electric Brake 105 Systems Χ Χ Χ Χ Χ 106 **Brake Hoses** Х Χ Χ Χ Χ Χ Lamps, Reflective Devices & 108 Associated Equipment Χ Χ Χ Χ Χ Χ **New Pneumatic Tires** 109 Χ 111 Rearview Mirrors Χ Χ Χ Χ 113 Hood Latch Systems Χ Χ Χ Χ Χ 114 Theft Protection X(2) X(2) 116 Hydraulic Brake Fluids Χ Χ Χ Χ Χ Χ Power Operated Window, Partition, and Roof Panel 118 Systems X(2) X(2) X(2) New Pneumatic Tires for 119 Vehicles Other Than Χ Passenger Cars Tire Selection and Rims for Motor Vehicles Other Than 120 Χ Χ Χ Χ Χ Χ Passenger Cars 121 Air Brake Systems Χ Χ Χ Χ 124 Χ Χ Χ Χ Accelerator Control Systems Χ 125 Warning Devices Χ School Bus Pedestrian 131 Safety Devices Χ Occupant Protection in 201 Interior Impact X(2) X(2) X(2) X(2) X(2) 202 Head Restraints X(2) X(2) X(2) X(2) X(2)

U.S. MOTOR VEHICLE SAFETY STANDARDS (APPLICATION BY VEHICLE TYPE)

FMVSS Number	Title of Standard	Bus (Not School Bus)	School Bus	Truck (Not Walk-in Van)	MPV	Truck (Walk-in Van)	(1) Equip.
203	Impact Protection for the Driver from the Steering Control System	X(2)	X(2)	X(2)	X(2)		
204	Steering Control Rearward Displacement	X(4)	X(4)	X(4)	X(4)		
205	Glazing Materials						Х
206	Door Locks and Door Retention Components			Х	Х	Х	
207	Seating System	Х	Х	X	Χ	Х	
208	Occupant Crash Protection	Х	Х	X(6)(7)	X(6)(7)	X(7)	Х
209	Seat Belt Assemblies						Х
210	Seat Belt Assembly Anchorages	х	Х	Х	Х	Х	
212	Windshield Mounting	X(2)	X(2)	X(2)	X(2)		
213	Child Restraint Systems	Х	Х	X	Χ	Х	Х
214	Side Impact Protection	X(2)(8)	X(2)	X(2)(8)	X(2)(8)		
216	Roof Crush Resistance	X(5)		X(5)	X(5)	X(5)	
217	Bus Window Retention and Release	Х	Х				
219	Windshield Zone Intrusion	X(2)	X(2)	X(2)	X(2)		
220	School Bus Rollover Protection		Х				
221	School Bus Body Joint Strength		X(3)				
222	School Bus Passenger Seating and Crash Protection		X				
225	Child Restraint Anchorage Systems	X(9)	X(9)	X(9)	X(9)	X(9)	
301	Fuel System Integrity	X(2)	Χ	X(2)	X(2)	X(2)	
302	Flammability of Interior Materials	х	Х	Х	Х	Х	
303	Fuel System Integrity of CNG Vehicles	X(2)	Х	X(2)	X(2)	X(2)	
304	CNG Fuel Container						Х
PART 565	Vehicle Identification Number (Applicable to incomplete vehicles as well)	х	Х	х	Х	Х	

⁽¹⁾ Applicable to equipment for use on applicable vehicles types.

⁽²⁾ Applicable to vehicles with a GVWR of 4536 kg [10,000 lb] or less.

⁽³⁾ Applicable to vehicles with a GVWR over 4536 kg [10,000 lb].

⁽⁴⁾ Applicable to vehicles with a GVWR of 4536 kg [10,000 lb] or less and an unloaded vehicle weight of 2495 kg [5500 lb] or less.

⁽⁵⁾ Applicable to vehicles with a GVWR of 2722 kg [6000 lb] or less.

⁽⁶⁾ Injury criteria applicable to vehicles with a GVWR of 3855 kg [8500 lb] or less and an unloaded vehicle weight of 2495 kg [5500 lb] or less.

⁽⁷⁾ Injury criteria is optional on Walk-in-Van-Type Trucks and Motor Homes.

⁽⁸⁾ Dynamic Performance Requirements apply to MPV, truck or a bus with a GVWR of 2722 kg [6000 lb] or less.

⁽⁹⁾ Tether anchorages that are installed voluntary or regulated by FMVSS 225 must comply with this Standard.

U.S. AND CANADA SAFETY STANDARDS



Page 75 SAFETY/EMISSION

CANADIAN MOTOR VEHICLE SAFETY STANDARD (CMVSS) TABLE FOR VEHICLES AT OR UNDER 8618 Kg [19,000 LB]*

(Vehicles to which the Incomplete Motor Vehicle conforms in full at the time of manufacture are designated by Xs)

		INCOMPLETE VEHICLE TYPE				
		6			6	
CMVSS	CMVSS DESCRIPTION	CHASSIS CAB	INCOMPLETE E-SERIES VAN (1)	CUTAWAY	E-SERIES EXPLORER STRIPPED CHASSIS	
101 102 103	Control Location and Identification Transmission Shift Control Sequence Windshield Defrosting and Defogging	X X X	X(3) X X	X(3) X X		
104 106	Windshield Wiping and Washing System Brake Hoses	X X	X X	X X	Х	
108 108.1	Lighting Equipment Headlamps	Х	X X	Х		
112 113 115	Headlamp Concealment Devices Hood Latch System Vehicle Identification Number	X X	X X	X X		
116 120	Hydraulic Brake Fluid Tire Selection and Rims for Vehicles other than Passenger Cars	X X	X X	X X	X X(4)	
121 124 205	Air Brake System Accelerator Control Systems Glazing Materials	X X	X X	X X	Х	
206 207 209	Door Latches, Hinges and Locks Anchorage of Seats Seat Belt Assemblies	X X X	X X(2) X(2)	X X(2) X(2)		
210 301.1 301.2	Seat Belt Assembly Anchorages LPG Fuel Systems CNG Fuel Systems	X X	X(2)	X(2) X		
302	Flammability	X	X	Х		
1100	Vehicle Emissions	Х	Х	Х	Х	

CMVSS 1106 — Although this standard does not apply to the described incomplete vehicles because it does not apply to "Chassis Cabs," the exterior noise emissions of the following such vehicles, as manufactured by Ford Motor Company, conforms to the applicable noise limits of CMVSS 1106 (1)(b) for the following vehicles:

- Chassis Cab (Super Duty F-Series)
- E-Series Cutaway

Chassis Cab (F-Series) with a GVWR over 4536 kg [10,000 lb], will comply with CMVSS 1106 (b) Interior Noise Emission requirements for vehicles with a GVWR over 4536 kg [10,000 lb], as manufactured by Ford Motor Company.

- (1) E-Series Van type vehicles when equipped with Ambulance Prep Package or Recreational Trim are incomplete vehicles.
- (2) The E-Series Van and Cutaway type vehicles, when equipped with the Recreational Trim may not conform in full to Standards 207, 209 and 210.
- (3) The E-Series Van with Recreational Trim or Cutaway type vehicles with the front seat delete option do not conform in full to Standard 101.
- (4) The tire and rim information requirements of Standard 120 will require a label to be affixed to the completed vehicle, by the final stage manufacturer with tire size, rim size, cold inflation pressure and gross axle weight ratings.

CANADA MOTOR VEHICLE SAFETY STANDARDS (CMVSS) FOR VEHICLES OVER 8618 Kg [19,000 LB] (APPLICATION BY CLASSIFICATION)

CMVSS Number	Title of Standard	Chassis- Cab
101	Control Location, Identification and Illumination	Х
102	Transmission Shift Control Sequence	Χ
103	Windshield Defrosting & Defogging Systems	Χ
104	Windshield Wiping and Washing Systems	Χ
108	Lighting Equipment	Χ
108.1	Headlamps	Χ
112	Headlamp Concealment Devices	Χ
113	Hood Latch Systems	Χ
115	Vehicle Identification Number	Χ
120	Tire Section and Rims for vehicles other than Passenger Cars	Χ
121	Air Brake Systems	Χ
124	Accelerator Control Systems	Χ
205	Glazing Materials	Χ
206	Door Latches, Hinges and Locks	Χ
207	Seat Anchorages	Χ
209	Seat Belt Assemblies	Χ
210	Seat Belt Assembly Anchorages	Χ
301.1	LPG Fuel System Integrity	Χ
301.2	CNG Fuel System Integrity	Χ
302	Flammability of Interior Materials	Χ
1101	Emission Device	Χ
1102	Crankcase Emissions (Gasoline Engines only)	Χ
1103	Hydrocarbons and CO (Gasoline Engines only)	Χ
1104	Diesel Opacity (Diesel Engines only) (a)	Χ
1105	Evaporative Emission	Χ
1106	Noise	

⁽a) Vehicles over 2722 kg/6000 lb curb weight or over 3856 kg/8500 lb GVWR


^{*} Canadian incomplete vehicle types are illustrated at the top of the table on this page. Compliance with Canadian Motor Vehicle Safety Standards is designated by an "X" in each column. The table lists all safety standards in effect on the date of manufacture of the incomplete vehicle and applicable to a "Chassis Cab" which, as defined by Canadian regulations, includes all the incomplete vehicles as shown in this table.

DIMENSIONAL DATA ESCAPE 4 DR - FWD/4X4



Page 76

ESCAPE

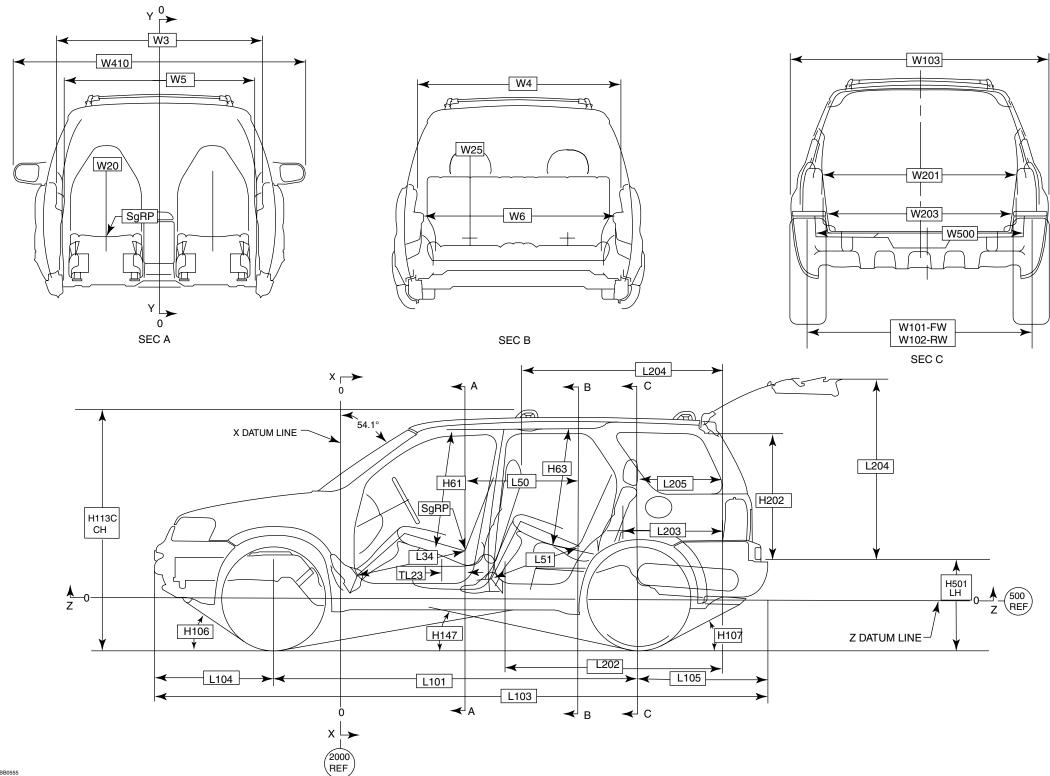

Page 77 ESCAPE

DIMENSIONAL DATA ESCAPE 4 DR - FWD/4X4




		i
CODE	DESCRIPTION	4-DR
H61	EFFECTIVE HEADROOM — FRONT	1026 [40.4]
H63	EFFECTIVE HEADROOM — REAR	995 [39.2]
H103	FRONT BUMPER TO GROUND — CURB	294 [11.5]
H105	REAR BUMPER TO GROUND — CURB	359 [14.1]
H106	APPROACH ANGLE FRONT BUMPER	28.5°
H107	DEPARTURE ANGLE REAR BUMPER	22°
H113	VEHICLE HEIGHT WITH ROOF RACK — CURB	1755 [69.1]
H147	RAMP BREAK OVER ANGLE	20°
H202	REAR OPENING HEIGHT	886 [34.9]
H501	CARGO FLOOR HEIGHT TO GROUND CURB (LH)	644 [25.4]
H504	WHEELHOUSE HEIGHT	192 [7.6]
H505	CARGO HEIGHT — MAXIMUM	987 [38.9]
TL23	SEAT TRACK TRAVEL	209 [8.2]
L31	SgRP — FRONT `X' COORDINATE	2349 [92.4]
L34	EFFECTIVE LEG ROOM — FRONT	1057 [41.6]
L35	SgRP — SECOND `X' COORDINATE	3165 [124.6]
L50	COUPLING DISTANCE FRONT TO REAR	816 [32.1]
L51	EFFECTIVE LEG ROOM — REAR	925 [36.4]
L101	WHEELBASE	2620 [103.1]
L103	OVERALL LENGTH	4393 [173.0]
L104	FRONT OVERHANG	848 [33.4]

CODE	DESCRIPTION	4-DR
L105	REAR OVERHANG	925 [36.4]
L202	CARGO LENGTH @ FLOOR — REAR SEAT FOLDED DOWN	1500 [59.0]
L203	CARGO LENGTH @ FLOOR — REAR SEAT UPRIGHT	912 [35.9]
L204	CARGO LENGTH @ BELT — REAR SEAT FOLDED DOWN	1535 [60.4]
L205	CARGO LENGTH @ BELT — REAR SEAT UP	689 [27.1]
V6	CARGO VOLUME REAR SEAT FOLDED DOWN (CU. FT)	64.8
V7	CARGO VOLUME REAR SEAT UPRIGHT (CU. FT)	33.0
W3	SHOULDER ROOM — FRONT	1430 [56.3]
W4	SHOULDER ROOM — REAR	1420 [55.9]
W5	HIP ROOM — FRONT	1356 [53.4]
W6	HIP ROOM — REAR	1244 [49.0]
W20	SgRP (Y)	± 370
W25	SgRP 2ND (Y)	± 340
W101	TREAD — FRONT (FW) @ CURB	1551 [61.0]
W102	TREAD — REAR (RW) @ CURB	1530 [6.20]
W103	VEHICLE WIDTH	1780 [70.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1036 [40.8]
W203	REAR OPENING WIDTH @ FLOOR	1042 [41.0]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2016 [79.4]
W500	CARGO BODY WIDTH @ FLOOR	1335 [52.6]

DIMENSIONAL DATA EXPLORER 4 DR - 4x2/4x4



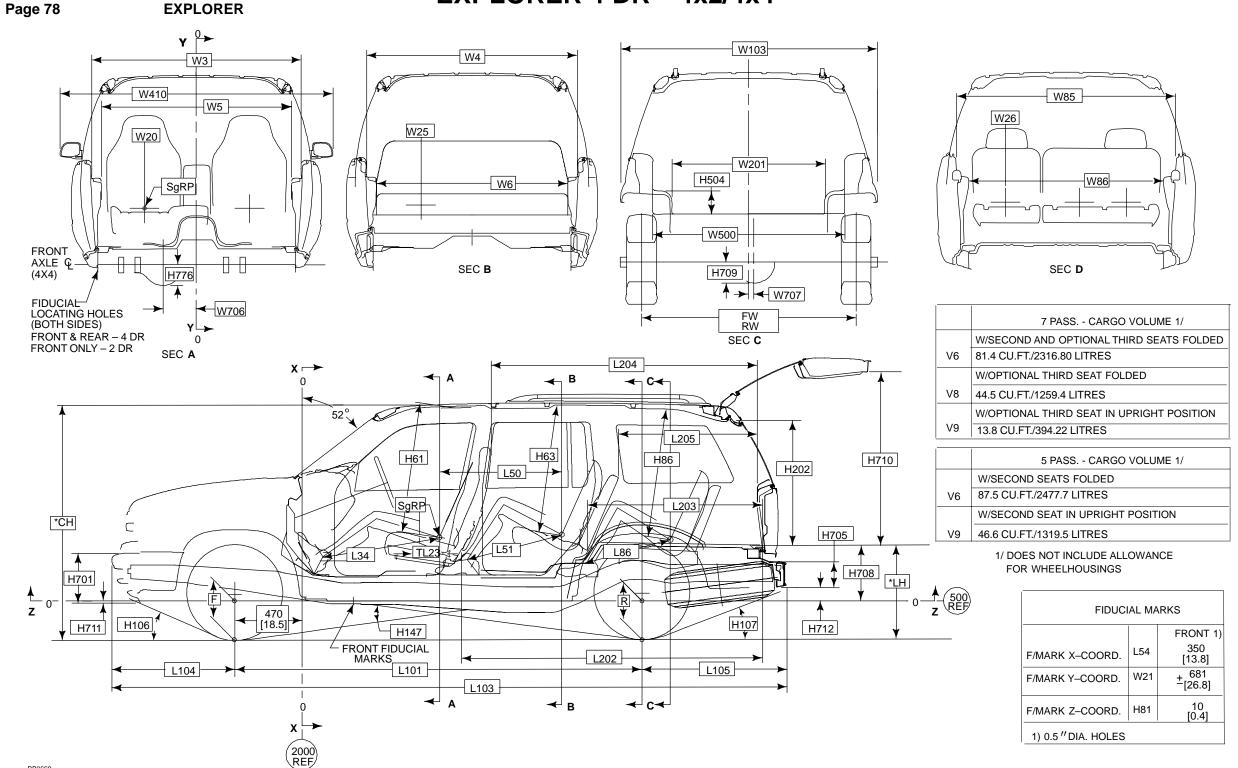

BB0668

DIMENSIONAL DATA EXPLORER 4 DR - 4x2/4x4

Page 79 EXPLORER



CODE	DESCRIPTION	
H61	HEADROOM — FRONT	1013 [39.9]
H63	HEADROOM — SECOND ROW	988 [38.9]
H86	HEADROOM — OPTIONAL THIRD ROW	991 [39.0]
H106	APPROACH ANGLE FRONT BUMPER (4x4) UNLOADED	27.6°
H106	APPROACH ANGLE FRONT BUMPER (4x2) UNLOADED	27.6°
H107	DEPARTURE ANGLE REAR BUMPER (4X2/4x4) UNLOADED	23.6°
H147	RAMP BREAKOVER ANGLE (4X2/4x4)	18.2°
H202	REAR OPENING HEIGHT	840 [33.0]
H504	WHEELHOUSE HEIGHT	156 [6.1]
H701	FRONT BUMPER HEIGHT	383 [15.0]
_	FRONT BUMPER WIDTH (NOT SHOWN)	1784 [70.2]
H705	REAR BUMPER HEIGHT	96 [3.7]
_	REAR BUMPER WIDTH (NOT SHOWN)	1729 [68.0]
H708	Z DATUM LINE TO TOP OF FLOOR (AT REAR)	415 [16.3]
H709	€OF REAR AXLE TO BOTTOM OF AXLE HOUSING	NA
H710	REAR LIFTGATE OPENING FROM FLOOR TO OPEN LIFTGATE	1060 [41.7]
H711	Z DATUM LINE TO BOTTOM OF FRONT BUMPER *	-39 [-1.5]
H712	Z DATUM LINE TO BOTTOM OF REAR BUMPER	174 [6.8]
H776	€ FRONT AXLE TO BOTTOM OF AXLE HOUSING (4x4 ONLY)	NA
TL23	SEAT TRACK TRAVEL — MANUAL/POWER SEATS	247 [10.0]
L34	LEG ROOM — FRONT MAX	1116 [43.9]
L50	COUPLE DISTANCE FRONT TO REAR	853 [33.6]
L51	LEG ROOM — SECOND ROW	945 [37.2]
L86	LEG ROOM — OPTIONAL THIRD ROW	884 [34.8]


^{*} Includes lower valance panel.

CODE	DESCRIPTION	
L101	WHEELBASE	2890 [113.8]
L103	OVERALL LENGTH	4813 [189.5]
L104	FRONT OVERHANG	803 [31.6]
L105	REAR OVERHANG	1120 [44.1]
L202	CARGO LENGTH @ FLOOR — RR SEAT FOLDED — 5 PASS/7PASS	2026 [80.0]/ 2001 [79.0]
L203	CARGO LENGTH @ FLOOR — RR SEAT UP — 5 PASS/7PASS	1157 [45.5]/ 1215 [47.8]
L204	CARGO LENGTH @ BELT — RR SEATS FOLDED	1920 [75.6]
L205	CARGO LENGTH @ BELT — THIRD ROW SEAT FOLDED	1051 [41.4]
W3	SHOULDER ROOM — FRONT	1501 [59.1]
W4	SHOULDER ROOM — SECOND ROW	1496 [58.9]
W5	HIP ROOM — FRONT	1397 [55.0]
W6	HIP ROOM — SECOND ROW	1377 [54.2]
W20	SgRP (Y)	-385 [-15.2]
W25	SgRP 2ND — 4 DOOR (LH POSITION) (Y)	432 [17.0]
W26	SgRP 3RD ROW	230 [9.0]
W85	SHOULDER ROOM — OPTIONAL THIRD ROW	1331 [52.4]
W86	HIP ROOM — OPTIONAL THIRD ROW	1152 [45.3]
W103	VEHICLE WIDTH	1831 [72.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1152 [45.3]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2139 [84.2]
W500	CARGO WIDTH @ FLOOR	1457 [57.3]
W706	€ OF VEHICLE TO € OF FRONT AXLE HOUSING (4x4 ONLY)	169 [6.6]
W707	€ OF VEHICLE TO € REAR AXLE HOUSING	17 [0.6]

DIMENSIONAL DATA EXPLORER SPORT 2 DR - 4x2/4x4

2002 MODEL YEAR

Page 80 EXPLORER

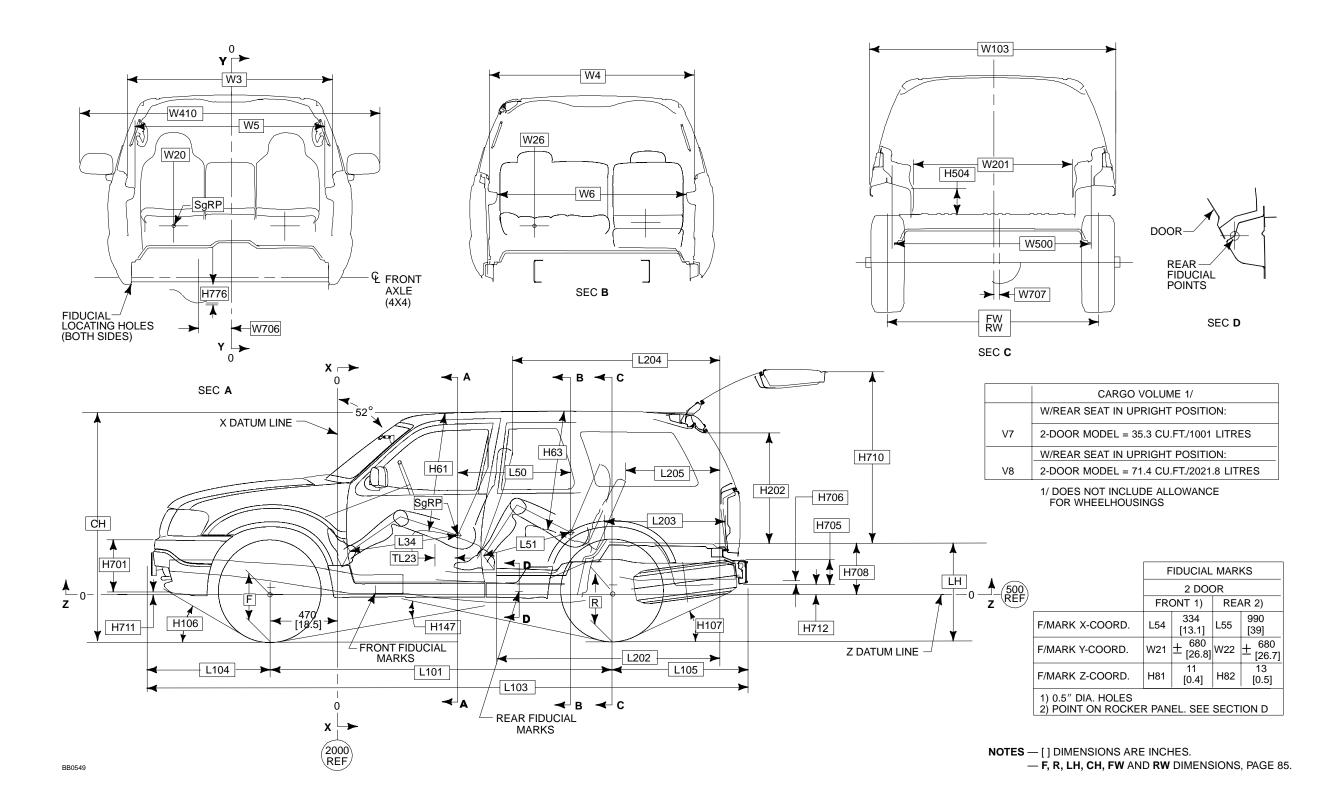

DIMENSIONAL DATA EXPLORER SPORT 2 DR - 4x2/4x4

Page 81 EXPLORER



CODE	DESCRIPTION	2-DR
H61	HEADROOM — FRONT	1002 [39.4]
H63	HEADROOM — REAR	987 [38.9]
H106	APPROACH ANGLE FRONT BUMPER (4x4) ⁽¹⁾	26.6°
H106	APPROACH ANGLE FRONT BUMPER (4x2) ⁽¹⁾	28.3°
H107	DEPARTURE ANGLE REAR BUMPER (4x4) ⁽¹⁾	23.5°
H107	DEPARTURE ANGLE REAR BUMPER (4x2) ⁽¹⁾	23.1°
H147	RAMP BREAKOVER ANGLE (4x4)	22.8°
H147	RAMP BREAKOVER ANGLE (4x2)	22.9°
H202	REAR OPENING HEIGHT	854.2 [33.6]
H504	WHEELHOUSE HEIGHT	150 [5.9]
H701	FRONT BUMPER HEIGHT *	429 [16.9]
_	FRONT BUMPER WIDTH (NOT SHOWN)	1714 [67.5]
H705	REAR BUMPER HEIGHT	230 [9.1]
_	REAR BUMPER WIDTH (NOT SHOWN)	1673 [65.9]
H706	BOTTOM OF BUMPER TO TOP OF HITCH PLATE	38.6 [1.5]
H708	Z DATUM LINE TO TOP OF FLOOR (AT REAR)	358 [14.1]
H710	REAR LIFTGATE OPENING FROM FLOOR TO OPEN LIFTGATE	1166 [45.9]
H711	Z DATUM LINE TO BOTTOM OF FRONT BUMPER *	-20 [-0.8]
H712	Z DATUM LINE TO BOTTOM OF REAR BUMPER	+28 [+1.1]
H776	€ FRONT AXLE TO BOTTOM OF AXLE HOUSING (4x4 ONLY)	140 [5.5]
TL23	SEAT TRACK TRAVEL	230 [9.0]
L34	LEG ROOM — FRONT	1077 [42.4]

⁽¹⁾ At curb weight.


CODE	DESCRIPTION	2-DR
L50	COUPLING DISTANCE FRONT TO REAR	819 [32.2]
L51	LEG ROOM — REAR	929 [36.6]
L101	WHEELBASE	2585 [101.8]
L103	OVERALL LENGTH	4583 [180.4]
L104	FRONT OVERHANG	879 [34.6]
L105	REAR OVERHANG	1119 [44.0]
L202	CARGO LENGTH @ FLOOR — RR SEAT FOLDED DOWN	1781 [70.1]
L203	CARGO LENGTH @ FLOOR — RR SEAT UP	993 [39.1]
L204	CARGO LENGTH @ BELT — RR SEAT FOLDED DOWN	1600 [63.0]
L205	CARGO LENGTH @ BELT — RR SEAT UP	781 [30.7]
W3	SHOULDER — FRONT	1440 [56.7]
W4	SHOULDER — REAR	1472 [57.9]
W5	HIP — FRONT	1318 [51.9]
W6	HIP — REAR	1108 [43.6]
W20	SgRP (Y)	-365 [-14.4]
W25	SgRP 2ND — 2 DOOR (LH POSITION) (Y)	300 [11.8]
W103	VEHICLE WIDTH	1783 [70.2]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1064 [41.9]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2057 [81.0]
W500	CARGO WIDTH @ FLOOR	1338 [52.7]
W706	€ OF VEHICLE TO € OF FRONT AXLE HOUSING (4x4 ONLY)	236 [9.3]
W707	€ OF VEHICLE TO € REAR AXLE HOUSING	30 [1.2]

^{*} Includes lower fascia.

DIMENSIONAL DATA EXPLORER SPORT TRAC 2 DR - 4x2/4x4



Page 82 EXPLORER

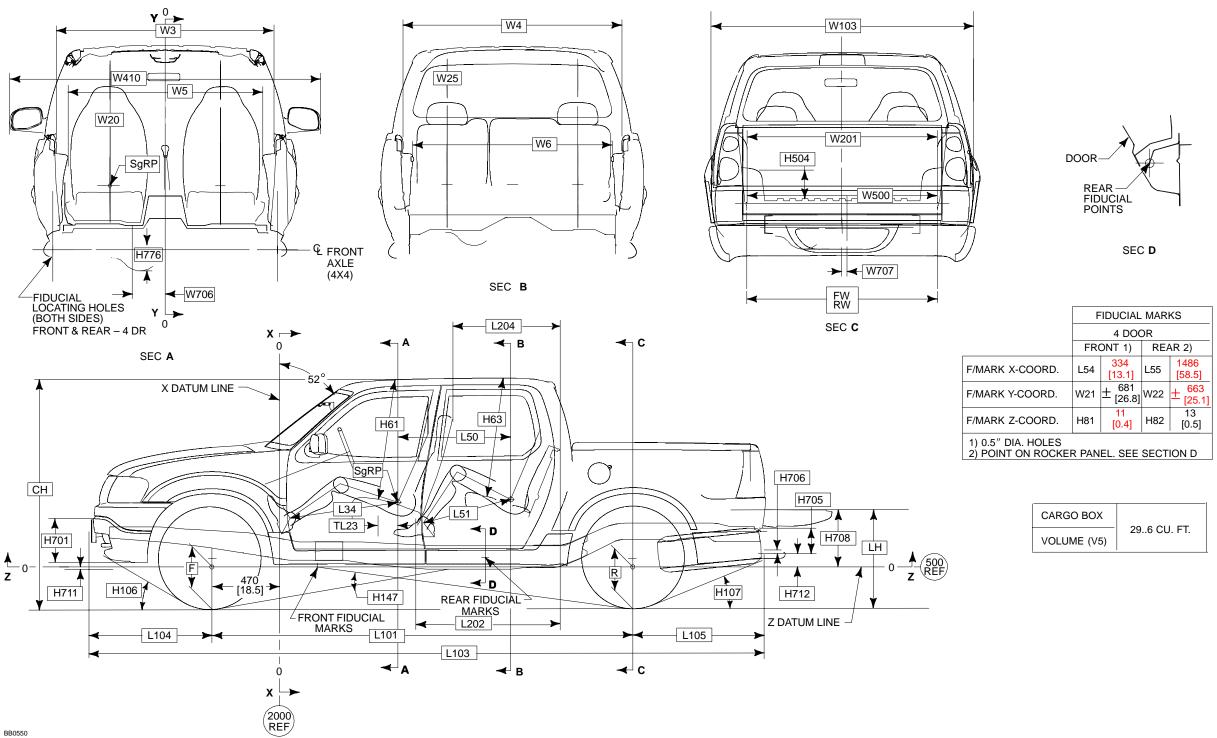

Page 83 EXPLORER

DIMENSIONAL DATA EXPLORER SPORT TRAC 4 DR _ 4x2/4x4



CODE	DESCRIPTION	4-DR
H61	HEADROOM — FRONT	1002 [39.4]
H63	HEADROOM — REAR	988 [38.9]
H106	APPROACH ANGLE FRONT BUMPER (4x4) ⁽¹⁾	26.6°
H106	APPROACH ANGLE FRONT BUMPER (4x2) ⁽¹⁾	26.7°
H107	DEPARTURE ANGLE REAR BUMPER (4x4) ⁽¹⁾	23.5°
H107	DEPARTURE ANGLE REAR BUMPER (4x2) ⁽¹⁾	23.5°
H147	RAMP BREAKOVER ANGLE (4x4)	22.4°
H147	RAMP BREAKOVER ANGLE (4x2)	22.3°
H504	WHEELHOUSE HEIGHT	204 [8.0]
H701	FRONT BUMPER HEIGHT *	429 [16.9]
_	FRONT BUMPER WIDTH (NOT SHOWN)	1714 [67.5]
H705	REAR BUMPER HEIGHT	252 [9.9]
_	REAR BUMPER WIDTH (NOT SHOWN)	1760 [69.3]
H706	BOTTOM OF BUMPER TO TOP OF HITCH PLATE	53 [2.1]
H708	Z DATUM LINE TO TOP OF FLOOR (AT REAR)	358 [14.1]
H711	Z DATUM LINE TO BOTTOM OF FRONT BUMPER *	-20 [-0.8]
H712	Z DATUM LINE TO BOTTOM OF REAR BUMPER	+28 [+1.1]
H776	€ FRONT AXLE TO BOTTOM OF AXLE HOUSING (4x4 ONLY)	140 [5.5]
TL23	SEAT TRACK TRAVEL	214 [8.4]
L34	LEG ROOM — FRONT	1077 [42.4]

(1) At cur	b weight.
------------	-----------

^{*} Includes lower fascia.


CODE	DESCRIPTION	4-DR
L50	COUPLING DISTANCE FRONT TO REAR	853 [33.6]
L51	LEG ROOM — REAR	935 [36.8]
L101	WHEELBASE	3199 [125.9]
L103	OVERALL LENGTH	5230 [205.9]
L104	FRONT OVERHANG	878 [34.6]
L105	REAR OVERHANG	1152 [45.4]
L202	CARGO LENGTH @ FLOOR — RR SEAT FOLDED DOWN	893 [35.2]
L204	CARGO LENGTH @ BELT — RR SEAT FOLDED DOWN	866 [34.1]
W3	SHOULDER — FRONT	1439 [56.7]
W4	SHOULDER — REAR	1446 [56.9]
W5	HIP — FRONT	1337 [52.7]
W6	HIP — REAR	1337 [52.7]
W20	SgRP (Y)	-365 [-14.4]
W25	SgRP 2ND — 4 DOOR (LH POSITION) (Y)	432 [17.0]
W103	VEHICLE WIDTH	1823 [71.8]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1046 [41.2]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2057 [81.0]
W500	CARGO WIDTH @ FLOOR	1340 [52.8]
W706	€ OF VEHICLE TO €OF FRONT AXLE HOUSING (4x4 ONLY)	236 [9.3]
W707	€ OF VEHICLE TO € REAR AXLE HOUSING	30 [1.2]


DIMENSIONS AND FEATURES EXPLORER SPORT TRAC PICKUP BOX

Page 84

EXPLORER



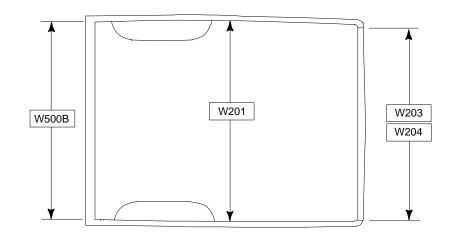

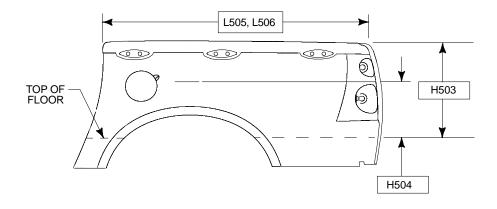

4' BOX

BB0551

CODE	DESCRIPTION	
	NOMINAL CARGO BODY SIZE	4 FT.
L505	CARGO BODY LENGTH @ FLOOR	1270 [50.0]
L506	CARGO BODY LENGTH @ TOP	1285 [50.6]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1046 [41.2]
W203	REAR OPENING WIDTH AT FLOOR	1256 [49.5]
W204	REAR OPENING WIDTH AT BELT	1367 [53.8]
W500B	CARGO BODY MAX. INSIDE WIDTH	1305 [51.4]
H503	CARGO BODY HEIGHT W/MOLDING	501 [19.7]
H504	WHEELHOUSE HEIGHT	204 [8.0]
V5	CARGO VOLUME - LITRES/CU.FT.	839/29.6

Page 85 EXPLORER

EXPLORER/SPORT/SPORT TRAC AXLE/TIRE/VEHICLE HEIGHT DATA



				F Height @	Front Axle (1)	R Height @	҈ Rear Axle (¹)						
	WB	GVWR (2)		Height at Base Curb Weight mm [in]	Loaded Height at Spring Rating mm [in]	Height at Base Curb Weight mm [in]	Loaded Height at Spring Rating mm [in]		(1) [in]	_	⁽¹⁾ [in]	FW	RW
Explorer Model	inches	pounds	Base Tire	Std. Spring	Std. Spring	Std. Spring	Std. Spring	Empty	Loaded	Empty	Loaded	mm [in]	mm [in]
4 Dr 4x2	113.8	5200	P235/70R16AS	236 [9.3]	211 [8.3]	243 [9.6]	188 [7.4]	780 [30.7]	718 [28.3]	1813 [71.4]	1747 [68.8]	1547 [60.9]	1554 [61.2]
4 Dr 4x4	113.8	5420	P235/70R16AS	236 [9.3]	211 [8.3]	243 [9.6]	188 [7.4]	780 [30.7]	718 [28.3]	1813 [71.4]	1747 [68.8]	1547 [60.9]	1554 [61.2]
Sport 2 Dr 4x2	101.8	4760	P235/70R16AS	343 [13.5]	339 [13.3]	348 [13.7]	339 [13.3]	740 [29.1]	672 [26.5]	1737 [68.4]	1685 [66.3]	1486 [58.5]	1486 [58.5]
Sport 2 Dr 4x4	101.8	4920	P235/70R16AS	341 [13.4]	336 [13.2]	347 [13.7]	339 [13.3]	740 [29.1]	673 [26.5]	1736 [68.3]	1684 [66.3]	1486 [58.5]	1486 [58.5]
Sport Trac 4 Dr 4x2	125.9	5660	P235/70R16AS	340 [13.4]	335 [13.2]	347 [13.7]	334 [13.1]	823 [32.4]	704 [27.7]	1790 [70.5]	1714 [67.5]	1486 [58.5]	1480 [58.3]
Sport Trac 4 Dr 4x4	125.9	5840	P235/70R16AS	339 [13.3]	333 [13.1]	347 [13.7]	334 [13.1]	823 [32.4]	704 [27.7]	1789 [70.4]	1713 [67.4]	1486 [58.5]	1480 [58.3]

⁽¹⁾ The height data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances.

⁽²⁾ Base computer selected GVWR shown.

Page 86 EXPLORER


EXPLORER/SPORT/SPORT TRAC TIRE DATA



EXPLORER/SPORT/SPORT TRAC TIRE DATA						
Tire Size	Rim Width mm [in]	AA Maximum Section Width mm [in]	BB Maximum Diameter mm [in]	*CC Minimum Loaded Radius mm [in]		
P235/70R16 A/S	178 [7.0]	244 [9.6]	739 [29.1]	355 [13.9]		
P235/70R16 A/S	178 [7.0]	237 [9.3]	738 [29.0]	338 [13.3]		
P255/70R16 A/T	178 [7.0]	262 [10.3]	772 [30.4]	352 [13.9]		

^{*} This number represents Radius-Axle Centerline to Ground with Maximum Rated Load on Tire at Maximum Pressure.


Page 87 EXPLORER

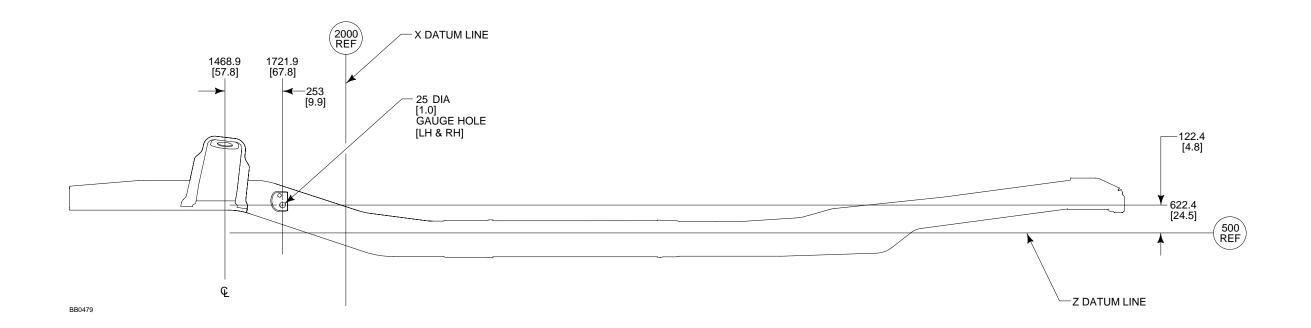

RANGER

DIMENSIONAL DATA RANGER REGULAR CAB STYLESIDE 4X2/4X4



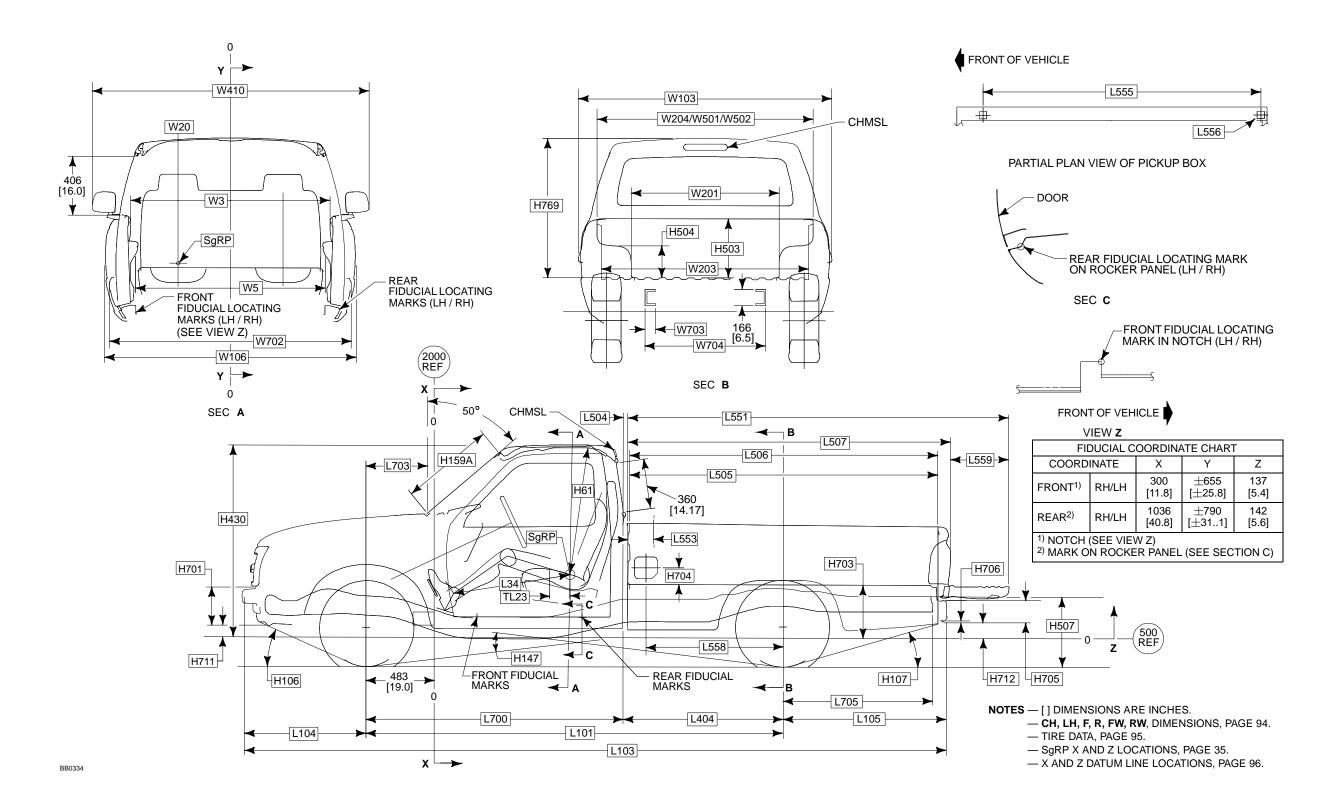

DIMENSIONAL DATA RANGER REGULAR CAB STYLESIDE 4X2/4X4

2002 MODEL YEAR

Page 89

CHASSIS

CODE	DESCRIPTION	LWB		SV	VB
		4X2	4X4	4X2	4X4
H106	ANGLE OF APPROACH	20.0°	31.6°	18.2°	28.2°
H107	ANGLE OF DEPARTURE	14.9°	21.8°	16.5°	21.1°
H147	RAMP BREAKOVER ANGLE	16.9°	14.6°	15.3°	15.7°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]	843 [33.2]	843 [33.2]
L101	WHEELBASE	2985 [117.5]	2987 [117.6]	2835 [111.6]	2835 [111.6]
L103	OVERALL LENGTH	5098 [200.7]	5067 [199.5]	4763 [187.5]	4793 [188.7]
L104	FRONT OVERHANG	846 [33.3]	846 [33.3]	846 [33.3]	846 [33.3]
L105	REAR OVERHANG	1267 [49.9]	1234 [48.6]	1082 [42.6]	1113 [43.8]
L404	CAB TO Q OF REAR AXLE	1105 [43.5]	1107 [43.6]	955 [37.6]	955 [37.6]
L700	© OF FRT AXLE TO END OF CAB	1880 [74.0]	1880 [74.0]	1880 [74.0]	1880 [74.0]
L705	€ REAR AXLE TO END OF FRAME	1046 [41.2]	1046 [41.2]	894 [35.2]	894 [35.2]
W703	FRAME RAIL WIDTH	74 [2.9]	74 [2.9]	74 [2.9]	74 [2.9]
W704	WIDTH-REAR FRAMES	834 [32.8]	834 [32.8]	834 [32.8]	834 [32.8]

RANGER

PICKUP BODY

CODE	DESCRIPTION	LWB	SWB
	NOMINAL CARGO BODY SIZE	7 FT.	6 FT.
H503	CARGO BODY HEIGHT	419 [16.5]	419 [16.5]
H504	WHEELHOUSE HEIGHT	226 [8.9]	226 [8.9]
H703	Z DATUM LINE TO CARGO 4X2 BODY FLOOR 4X4	389 [15.3] 439 [17.3]	391 [15.4] 442 [17.4]
H704	TOP OF FLOOR TO Q OF FUEL FILLER	132 [5.2]	132 [5.2]
H705	REAR BUMPER HEIGHT	178 [7.0]	178 [7.0]
H706	BOTTOM OF REAR BUMPER TO TOP OF HITCH PLATE	43 [1.7]	43 [1.7]
H712	Z DATUM LINE TO BOTTOM 4X2 OF REAR BUMPER 4X4	99 [3.9] 127 [5.0]	102 [4.0] 152 [6.0]
H769	TOP OF FLOOR TO TOP OF CAB @ & REAR WHEELS	975 [38.4]	975 [38.4]
L504	CAB TO PICKUP BODY	23 [0.9]	23 [0.9]
L505	CARGO BODY LENGTH @ FLOOR	2129 [83.8]	1824 [71.8]
L506	CARGO BODY LENGTH @ BELT	2134 [84.0]	1829 [72.0]
L507	CARGO BODY OVERALL LENGTH	2240 [88.2]	1935 [76.2]
L553	FRONT OF BOX TO © STAKE #1	180 [7.1]	180 [7.1]
L555	© STAKE #1 TO ©STAKE #2	1925 [75.8]	1623 [63.9]
L556	STAKE POCKET SIZE	52 X 40 [2 X 1.6]	52 X 40 [2 X 1.6]
L558	© REAR AXLE TO © FUEL 4X2 FILLER 4X4	775 [30.5] 777 [30.6]	777 [30.6] 777 [30.6]
L559	OPEN TAILGATE	409 [16.1]	409 [16.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1026 [40.4]	1026 [40.4]
W203	REAR OPENING WIDTH AT FLOOR	1321 [52.0]	1321 [52.0]
W204	TAILGATE OPENING AT BELT	1379 [54.3]	1379 [54.3]
W501	CARGO BODY WIDTH AT BELT	1377 [54.2]	1377 [54.2]
W502	MAX. INSIDE BOX	1382 [54.4]	1382 [54.4]
V5	CARGO VOLUME — LITERS/CU. FT.	1230.4 43.4	1057.6 37.3

CAB


CODE	DESCRIPTION		LWB	SWB
		LINED		
H61	EFFECTIVE HEADROOM W/HEAD	LINER	996 [39.2]	996 [39.2]
H159A	WINDSHIELD HEIGHT		673 [26.5]	673 [26.5]
H430	Z DATUM TO TOP OF CAB	4X2 4X4	1318 [51.9] 1351 [53.2]	1308 [51.5] 1351 [53.2]
H701	FRONT BUMPER HEIGHT *	4X2 4X4	358 [14.1] 277 [10.9]	358 [14.1] 277 [10.9]
H711	Z DATUM LINE TO BOTTOM OF BUMPER *	4X2 4X4	- 53 [- 2.1] 43 [1.7]	- 53 [- 2.1] 43 [1.7]
TL23	SEAT TRACK TRAVEL		168 [6.6]	168 [6.6]
L34	MAX. EFFECTIVE LEG ROOM		1072 [42.4]	1072 [42.4]
L703	€ FRONT AXLE TO COWL POINT		442 [17.4]	442 [17.4]
W3	SHOULDER ROOM	4X2 4X4	1384 [54.5] 1367 [53.8]	1384 [54.5] 1367 [53.8]
W5	HIP ROOM		1339 [52.7]	1339 [52.7]
W20	SgRP(Y)		- 365 [- 14.4]	- 365 [- 14.4]
W103	VEHICLE WIDTH	4X2 4X4	1763 [69.4] 1786 [70.3]	1763 [69.4] 1786 [70.3]
W106	FRONT FENDER WIDTH	4X2 4X4	1755 [69.1] 1768 [69.6]	1755 [69.1] 1768 [69.6]
W410	OVERALL WIDTH WITH STANDAR	D MIRRORS	1953 [76.9]	1953 [76.9]
W702	FRONT BUMPER WIDTH		1687 [66.4]	1687 [66.4]

^{*} Includes lower valance panel.

DIMENSIONAL DATA RANGER SUPERCAB STYLESIDE 4X2/4X4

2002 MODEL YEAR

Page 90 RANGER

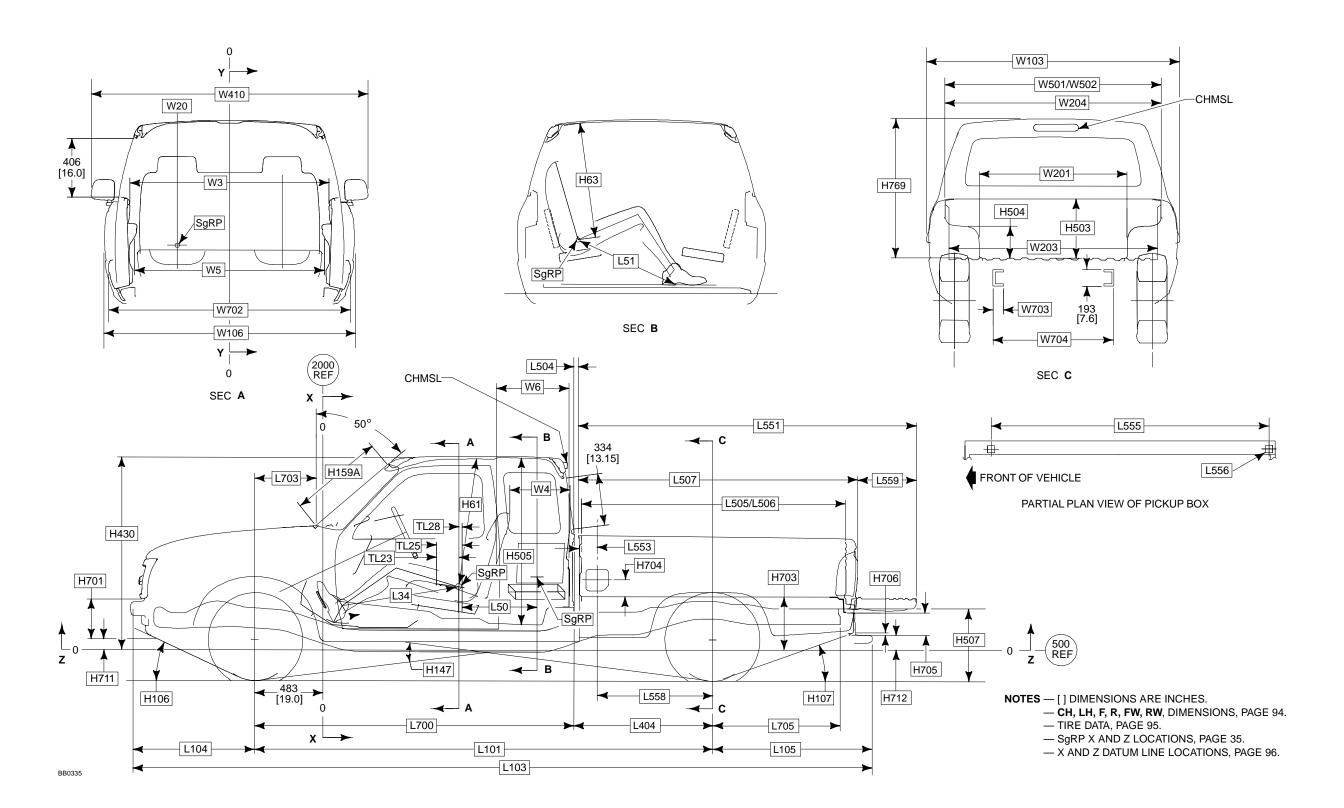

DIMENSIONAL DATA RANGER SUPERCAB STYLESIDE 4X2/4X4

2002 MODEL YEAR

Page 91

CHASSIS

CODE	DESCRIPTION	4X2	4X4
H106	ANGLE OF APPROACH	18.2°	30.8°
H107	ANGLE OF DEPARTURE	16.6°	22.6°
H147	RAMP BREAKOVER ANGLE	14.5°	16.0°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]
L101	WHEELBASE	3193 [125.7]	3198 [125.9]
L103	OVERALL LENGTH	5154 [202.9]	5123 [201.7]
L104	FRONT OVERHANG	846 [33.3]	846 [33.3]
L105	REAR OVERHANG	1115 [43.9]	1080 [42.5]
L404	CAB TO Q OF REAR AXLE	958 [37.7]	960 [37.8]
L700	© OF FRT AXLE TO BACK OF CAB	2235 [88.0]	2235 [88.0]
L705	© REAR AXLE TO END OF FRAME	894 [35.2]	894 [35.2]
W703	FRAME RAIL WIDTH	63 [2.5]	63 [2.5]
W704	WIDTH-REAR FRAMES	834 [32.8]	834 [32.8]

RANGER

PICKUP BODY

		6 I	FT.
	NOMINAL CARGO BODY SIZE	4X2	4X4
H503	CARGO BODY HEIGHT	419 [16.5]	419 [16.5]
H504	WHEELHOUSE HEIGHT	226 [8.9]	226 [8.9]
H703	Z DATUM LINE TO CARGO BODY FLOOR	378 [14.9]	434 [17.1]
H704	TOP OF FLOOR TO € OF FUEL FILLER	132 [5.2]	132 [5.2]
H705	REAR BUMPER HEIGHT	178 [7.0]	178 [7.0]
H706	BOTTOM OF BUMPER TO TOP OF HITCH PLATE	43 [1.7]	43 [1.7]
H712	Z DATUM LINE TO BOTTOM OF REAR BUMPER	89 [3.5]	124 [4.9]
_	REAR BUMPER WIDTH (NOT SHOWN)	1628 [64.1]	1628 [64.1]
H769	TOP OF FLOOR TO TOP OF CAB @ CREAR WHEELS	978 [38.5]	978 [38.5]
L504	CAB TO PICKUP BODY	28 [1.1]	28 [1.1]
L505	CARGO BODY LENGTH @ FLOOR	1824 [71.8]	1824 [71.8]
L506	CARGO BODY LENGTH @ BELT	1829 [72.0]	1829 [72.0]
L507	CARGO BODY OVERALL LENGTH	1935 [76.2]	1935 [76.2]
L551	OVERALL LENGTH TO OPEN TAILGATE	2344 [92.3]	2344 [92.3]
L553	FRONT OF BOX TO Q OF STAKE #1	180 [7.1]	180 [7.1]
L555	€ STAKE #1 TO €STAKE #2	1925 [75.8]	1925 [75.8]
L556	STAKE POCKET SIZE	52 X 40 [2 X 1.6]	52 X 40 [2 X 1.6]
L558	€ REAR AXLE TO € FUEL FILLER	775 [30.5]	777 [30.6]
L559	OPEN TAILGATE	409 [16.1]	409 [16.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1026 [40.4]	1026 [40.4]
W203	REAR OPENING AT FLOOR	1321 [52.0]	1321 [52.0]
W204	TAILGATE OPENING AT BELT	1379 [54.3]	1379 [54.3]
W501	CARGO BODY WIDTH AT BELT	1377 [54.2]	1377 [54.2]
W502	MAX. INSIDE BOX	1382 [54.4]	1382 [54.4]
V5	CARGO VOLUME — LITERS/CU. FT.	1057.6 37.3	1057.6 37.3

CAB


		DIMEN	SIONS
CODE	DESCRIPTION	4X2	4X4
H61	EFFECTIVE HEADROOM — FRONT (WITH HEADLINER)	996 [39.2]	996 [39.2]
H63	EFFECTIVE HEADROOM — REAR SIDE FACING	903 [35.6]	903 [35.6]
H159A	WINDSHIELD HEIGHT	673 [26.5]	673 [26.5]
H430	Z DATUM LINE TO TOP OF CAB	1311 [51.6]	1354 [53.3]
H505	INTERIOR CARGO HEIGHT — MAX.	1113 [43.8]	1113 [43.8]
H701	FRONT BUMPER *	358 [14.1]	302 [11.9]
H711	Z DATUM LINE TO BOTTOM OF FRONT BUMPER*	– 53 [– 2.1]	43 [1.7]
TL23	SEAT TRACK TRAVEL	211 [8.3]	211 [8.3]
TL25	TRUE TRACK TRAVEL LENGTH	250 [9.8]	250 [9.8]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SGRP BENCH SEAT	38 [1.5]	38 [1.5]
L34	MAXIMUM EFFECTIVE LEG ROOM — FRONT	1072 [42.2]	1072 [42.2]
L50	H POINT COUPLE DISTANCE	544 [21.4]	544 [21.4]
L51	EFFECTIVE LEG ROOM — REAR	1024 [40.3]	1024 [40.3]
L703	€FRONT AXLE TO COWL POINT	442 [17.4]	442 [17.4]
W3	SHOULDER ROOM — FRONT	1367 [53.8]	1367 [53.8]
W4	SHOULDER ROOM — REAR SIDE FACING	389 [15.3]	389 [15.3]
W5	HIP ROOM — FRONT	1339 [52.7]	1339 [52.7]
W6	HIP ROOM — REAR SIDE FACING	503 [19.8]	503 [19.8]
W20	SgRP(Y)	- 365 [- 14.4]	- 365 [- 14.4]
W103	VEHICLE WIDTH	1763 [69.4]	1786 [70.3]
W106	FRONT FENDER WIDTH	1755 [69.1]	1765 [69.6]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	1953 [76.9]	1953 [76.9]
W702	FRONT BUMPER WIDTH	1687 [66.4]	1687 [66.4]

^{*} Includes lower valance panel.

DIMENSIONAL DATA RANGER REGULAR/SUPER CAB FLARESIDE 4X2/4X4



Page 92 RANGER

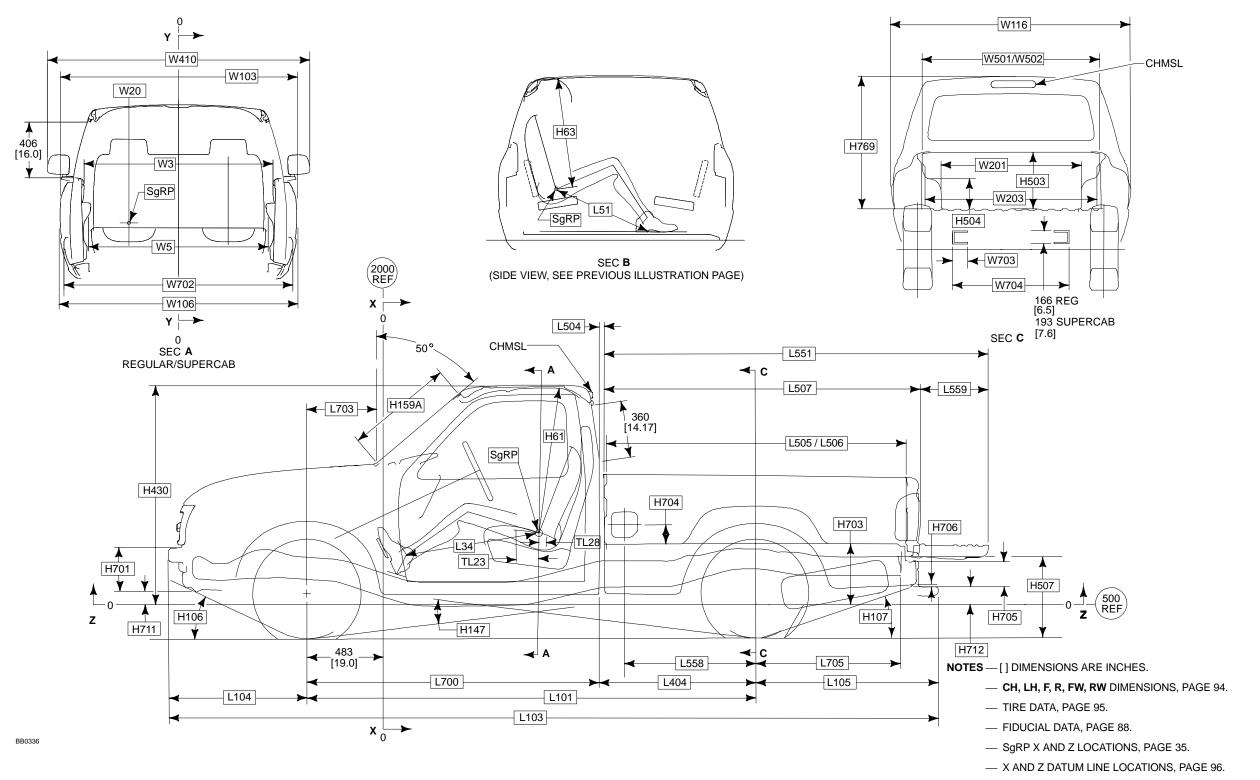

- FLARESIDE BOX DOES NOT HAVE STAKE POCKETS.

DIMENSIONAL DATA RANGER REGULAR/SUPERCAB FLARESIDE 4X2/4X4

2002 MODEL YEAR

Page 93

_

CHASSIS

CODE	DESCRIPTION	REGUL	AR CAB	SUPE	RCAB
		4X2	4X4	4X2	4X4
H106	ANGLE OF APPROACH	18.6°	29.0°	18.5°	29.1°
H107	ANGLE OF DEPARTURE	17.3°	21.6°	17.4°	21.6°
H147	RAMP BREAKOVER ANGLE	20.4°	21.4°	18.5°	19.0°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]	843 [33.2]	843 [33.2]
L101	WHEELBASE	2832 [111.5]	2835 [111.6]	3193 [125.7]	3198 [125.9]
L103	OVERALL LENGTH	4793 [188.7]	4793 [188.7]	5154 [202.9]	5154 [202.9]
L104	FRONT OVERHANG	846 [33.3]	846 [33.3]	846 [33.3]	846 [33.3]
L105	REAR OVERHANG	1115 [43.9]	1112 [43.8]	1115 [43.9]	1110 [43.7]
L404	CAB TO € OF REAR AXLE	952 [37.5]	955 [37.6]	958 [37.7]	963 [37.9]
L700	© OF FRONT AXLE TO END OF CAB	1880 [74.0]	1880 [74.0]	2235 [88.0]	2235 [88.0]
L705	\mathbb{Q} REAR AXLE TO END OF FRAME	894 [35.2]	894 [35.2]	894 [35.2]	894 [35.2]
W703	FRAME RAIL WIDTH	74 [2.9]	74 [2.9]	63 [2.5]	63 [2.5]
W704	WIDTH-REAR FRAMES	834 [32.8]	834 [32.8]	834 [32.8]	834 [32.8]

RANGER

PICKUP BOX

		REGUL	AR CAB	SUPERCAB		
CODE	DESCRIPTION	4X2	4X4	4X2	4X4	
NO	MINAL CARGO BODY SIZE	6 FT.	6 FT.	6 FT.	6 FT.	
H503	CARGO BODY HEIGHT	424 [16.7]	424 [16.7]	424 [16.7]	424 [16.7]	
H504	WHEELHOUSE HEIGHT	221 [8.7]	221 [8.7]	220 [8.7]	220 [8.7]	
H703	Z DATUM LINE TO CARGO BODY FLOOR	389 [15.3]	445 [17.5]	378 [14.9]	432 [17.0]	
H704	TOP OF FLOOR TO € OF FUEL FILLER	132 [5.2]	132 [5.2]	132 [5.2]	132 [5.2]	
H705	REAR BUMPER HEIGHT	178 [7.0]	178 [7.0]	178 [7.0]	178 [7.0]	
H706	BOTTOM OF BUMPER TO TOP OF HITCH PLATE	43 [1.7]	43 [1.7]	43 [1.7]	43 [1.7]	
H712	DATUM LINE TO BOTTOM OF REAR BUMPER	97 [3.8]	152 [6.0]	86 [3.4]	142 [5.6]	
H769	TOP OF FLOOR TO TOP OF CAB @ © REAR WHEELS	975 [38.4]	975 [38.4]	978 [38.5]	978 [38.5]	
L504	CAB TO PICKUP BODY	23 [0.9]	23 [0.9]	28 [1.1]	28 [1.1]	
L505	CARGO BODY LENGTH @ FLOOR	1821 [71.7]	1821 [71.7]	1821 [71.7]	1821 [71.7]	
L506	CARGO BODY LENGTH @ BELT	1816 [71.5]	1816 [71.5]	1816 [71.5]	1816 [71.5]	
L507	CARGO BODY OVERALL LENGTH	1938 [76.3]	1938 [76.3]	1938 [76.3]	1938 [76.3]	
L551	OVERALL TO OPEN TAILGATE	2344 [92.3]	2344 [92.3]	2344 [92.3]	2344 [92.3]	
L558	€ REAR AXLE TO € FUEL FILLER	775 [30.5]	777 [30.6]	775 [30.5]	777 [30.6]	
L559	OPEN TAILGATE	409 [16.1]	409 [16.1]	409 [16.1]	409 [16.1]	
W116	MAXIMUM OUTSIDE FENDER	1763 [69.4]	1763 [69.4]	1763 [69.4]	1763 [69.4]	
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1026 [40.4]	1026 [40.4]	1026 [40.4]	1026 [40.4]	
W203	REAR OPENING AT FLOOR	1115 [43.9]	1115 [43.9]	1115 [43.9]	1115 [43.9]	
W501	CARGO BODY WIDTH AT BELT	1163 [45.8]	1163 [45.8]	1163 [45.8]	1163 [45.8]	
W502	MAXIMUM INSIDE BOX	1273 [50.1]	1273 [50.1]	1273 [50.1]	1273 [50.1]	
V5	CARGO VOLUME — LITERS/ CU. FT.	980.5 34.4	980.5 34.4	980.5 34.4	980.5 34.4	

CAB


		REGUL	AR CAB	SUPE	RCAB
CODE	DESCRIPTION	4X2	4X4	4X2	4X4
H61	EFFECTIVE HEADROOM (WITH HEADLINER)	996 [39.2]	996 [39.2]	996 [39.2]	996 [39.2]
H63	EFFECTIVE HEADROOM — REAR SIDE FACING	_	_	904 [35.6]	904 [35.6]
H159A	WINDSHIELD HEIGHT	673 [26.5]	673 [26.5]	673 [26.5]	673 [26.5]
H430	Z DATUM LINE TO TOP OF CAB	1290 [50.8]	1351 [53.2]	1293 [50.9]	1354 [53.3]
H505	INTERIOR CARGO HEIGHT — MAX. (NOT SHOWN)	_	_	1113 [43.8]	1113 [43.8]
H701	FRONT BUMPER *	358 [14.1]	277 [10.9]	358 [14.1]	302 [11.9]
H711	Z DATUM LINE TO BOTTOM OF FRT BUMPER *	- 18 [- 0.7]	43 [1.7]	- 71 [- 2.8]	43 [1.7]
TL23	SEAT TRACK TRAVEL	_	_	211 [8.3]	211 [8.3]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SgRP — BENCH SEAT	_	_	38 [1.5]	38 [1.5]
L34	MAXIMUM EFFECTIVE LEG ROOM	1077 [42.4]	1077 [42.4]	1077 [42.4]	1077 [42.4]
L50	H POINT COUPLE DISTANCE (NOT SHOWN)	_	_	544 [21.4]	544 [21.4]
L51	EFFECTIVE LEG ROOM — REAR	_	_	1024 [40.3]	1024 [40.3]
L703	€ FRONT AXLE TO COWL POINT	442 [17.4]	442 [17.4]	442 [17.4]	442 [17.4]
W3	SHOULDER ROOM — FRONT	1367 [53.8]	1367 [53.8]	1367 [53.8]	1367 [53.8]
W4	SHOULDER ROOM — REAR SIDE FACING (NOT SHOWN)	_	_	389 [15.3]	389 [15.3]
W5	HIP ROOM	1338 [52.7]	1338 [52.7]	1338 [52.7]	1338 [52.7]
W6	HIP ROOM — REAR SIDE FACING (NOT SHOWN)	_	_	503 [19.8]	503 [19.8]
W20	SgRP(Y)	- 365 [- 14.4]	- 365 [- 14.4]	- 365 [- 14.4]	- 365 [- 14.4]
W103	VEHICLE WIDTH	1763 [69.4]	1786 [70.3]	1763 [69.4]	1786 [70.3]
W106	FRONT FENDER WIDTH	1755 [69.1]	1755 [69.1]	1755 [69.1]	1755 [69.1]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	1954 [76.9]	1954 [76.9]	1954 [76.9]	1954 [76.9]
W702	FRONT BUMPER	1687 [66.4]	1687 [66.4]	1687 [66.4]	1687 [66.4]

^{*} Includes lower valance panel. **NOTES** — [] DIMENSIONS ARE INCHES.

RANGER AXLE/TIRE/VEHICLE HEIGHT DATA



Page 94 RANGER

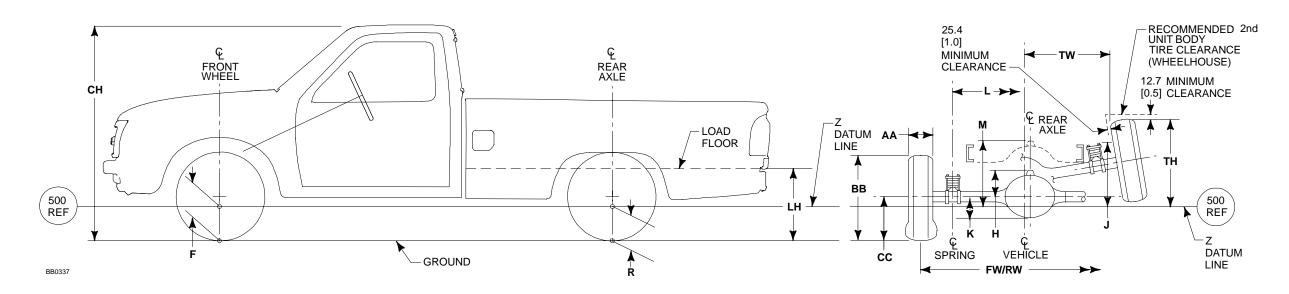

	WB	GVWR			t @ Front eel ^{1/}		nt @ Rear le ^{1/}											FW			
Model	(in)	[lb]	Base Tire	Height at Base	Loaded Height	Height at Base	Loaded Height	L	.H ^{1/}	С	H ^{1/}	H ^{2/3/}	J	K4/	L	$M^{2/3/}$	CC ^{5/}	At Base Curb	RW	TW	TH
				Curb Weight	@ Spring Rating	Curb Weight	@ Spring Rating	Empty	Loaded	Empty	Loaded							Weight			
Regular Cab	112	4400 4760	P225/70R-15SL	269 [10.6]	234 [9.2]	326 [12.8]	217 [8.5]	724 [28.5]	586 [23.1]	1650 [64.9]	1575 [62.0]	157 [6.2]	338 [13.3]	130 [5.10]	986 [38.8]	335 [13.2]	300 [11.8]	1488 [58.6]	1455 [57.3]	559 [22.0] 546 [21.5]	411 [16.2]
Styleside 4x2	118	4420 4820	P225/70R-15SL	269 [10.6]	234 [9.2]	323 [12.7]	217 [8.5]	714 [28.1]	572 [22.5]	1649 [64.9]	1575 [62.0]	157 [6.2]	338 [13.3]	130 [5.10]	986 [38.8]	335 [13.2]	300 [11.8]	1488 [58.6]	1455 [57.3]	559 [22.0] 546 [21.5]	411 [16.2]
SuperCab Styleside 4x2	126	4740 4920	P225/70R-15SL	268 [10.5]	234 [9.2]	314 [12.4]	217 [8.5]	708 [27.9]	587 [23.1]	1645 [64.8]	1577 [62.0]	157 [6.2]	338 [13.3]	130 [5.10]	986 [38.8]	335 [13.2]	300 [11.8]	1488 [58.6]	1455 [57.3]	559 [22.0] 546 [21.5]	411 [16.2]
Regular Cab Styleside	112	4700 4960	D245/75D 45CL	343 [13.5]	302 [11.9]	407 [16.0]	308 [12.1]	796 [31.3]	684 [26.9]	1716 [67.6]	1655 [65.2]	157 [6.2]	302 [11.9]	130 [5.10]	986 [38.8]	249 [9.8]	320 [12.6]	1488 [58.6]	1455 [57.3]	569 [22.4]	340 [13.4]
4x4	118	4760 5020	P215/75R-15SL	342 [13.5]	302 [11.9]	405 [15.9]	308 [12.1]	796 [31.3]	684 [26.9]	1718 [67.6]	1654 [65.2]	157 [6.2]	302 [11.9]	130 [5.10]	986 [38.8]	249 [9.8]	320 [12.6]	1488 [58.6]	1455 [57.3]	569 [22.4]	411 [16.2]
SuperCab Styleside 4x4	126	4940 5100	P215/75R-15SL	341 [13.4]	302 [11.9]	395 [15.6]	308 [12.1]	787 [31.0]	684 [26.9]	1715 [67.5]	1656 [65.2]	157 [6.2]	302 [11.9]	130 [5.10]	986 [38.8]	249 [9.8]	320 [12.6]	1488 [58.6]	1455 [57.3]	569 [22.4]	366 [14.4]

^{1/ —} The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances.

2/ — Add 0.5" on vehicles equipped with 4.0L engine.

NOTES — [] DIMENSIONS ARE INCHES.

- TIRE DATA ON PAGE 95.

^{3/ —} To top of brake tube union.

^{4/ — 5.7&}quot; on vehicles equipped w/ 4.0L engine.

^{5/ —} Minimum loaded radius.

[—] VEHICLE RIDE HEIGHTS ARE GIVEN AT TIRE MINIMUM LOAD RADIUS.



	ALL-SEASON TIRE DATA									
Tire Size	Rim Width	AA Maximum Section Width	BB Maximum Diameter	*CC Minimum Loaded Radius						
P225/70R-15SL	178 [7.0]	241 [9.5]	702 [27.6]	315 [12.4]						
ALL-TERRAIN TIRE DATA										
P215/75R-15SL ⁽¹⁾	152 [6.0]	221 [8.7]	714 [28.1]	320 [12.6]						
P235/75R-15SL ⁽¹⁾	178 [7.0]	245 [9.6]	744 [29.3]	328 [12.9]						
P245/75R-16SL (2)	178 [7.0]	261 [10.3]	783 [30.8]	345 [13.6]						
31x10.50R-15C (3)	178 [7.0]	259 [10.2]	783 [30.8]	356 [14.0]						

^{*} This number represents Radius – Axle centerline to ground with maximum rated load on tire at maximum pressure.


⁽¹⁾ Available 4x4 only.

⁽²⁾ Available XLT 4x4 Off-Road group only.

⁽³⁾ Available FX4 4x4 only.

RANGER X AND Z DATUM LINE LOCATION


Page 96 RANGER

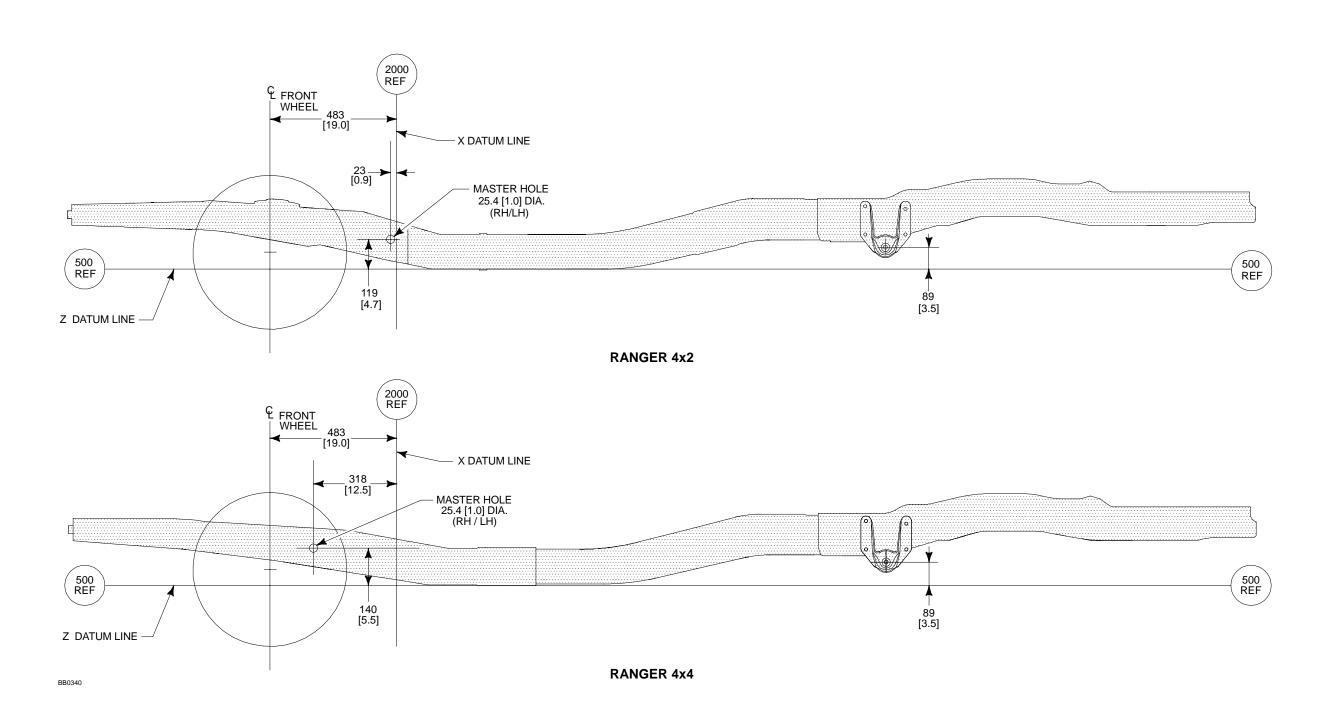

FUEL AND VAPOR SYSTEM TYPICAL FOR ALL LENGTHS OF RANGER




Page 97 RANGER

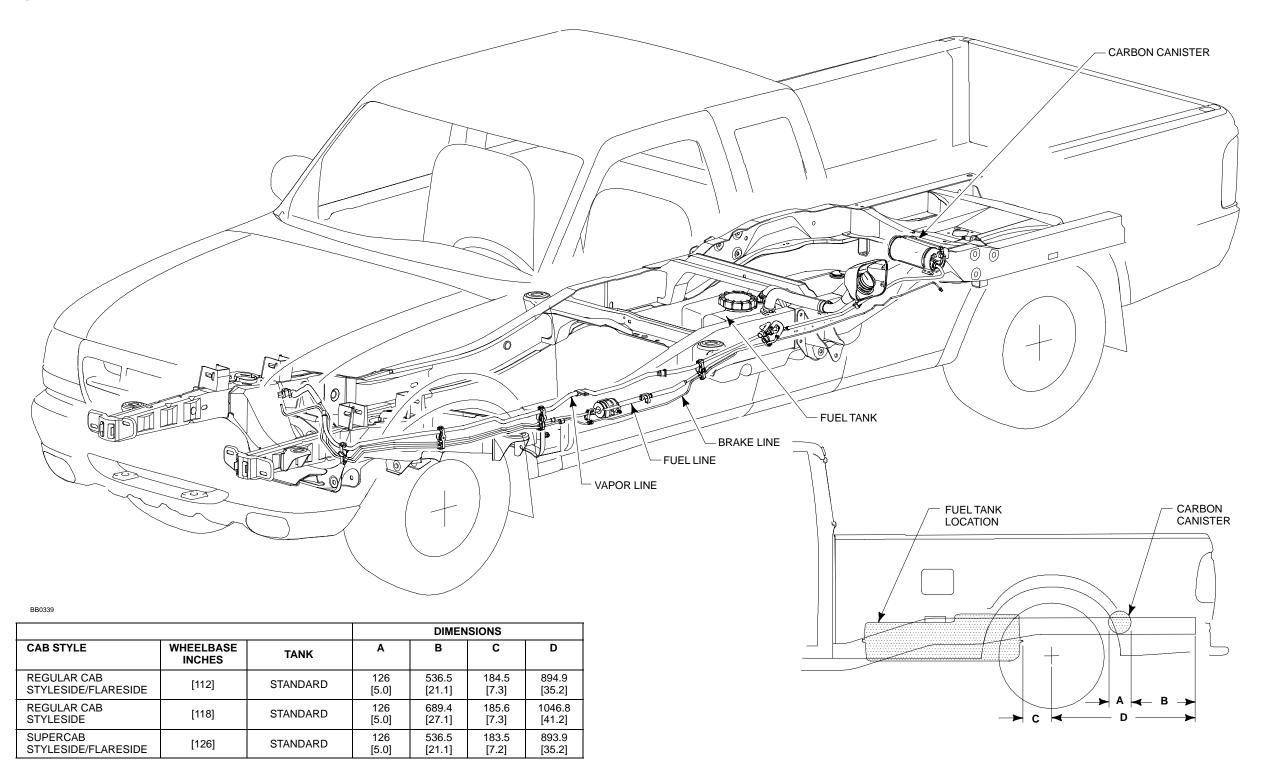

DIMENSIONAL DATA WINDSTAR 7-PASSENGER WAGON

2002 MODEL YEAR

Page 98 WINDSTAR

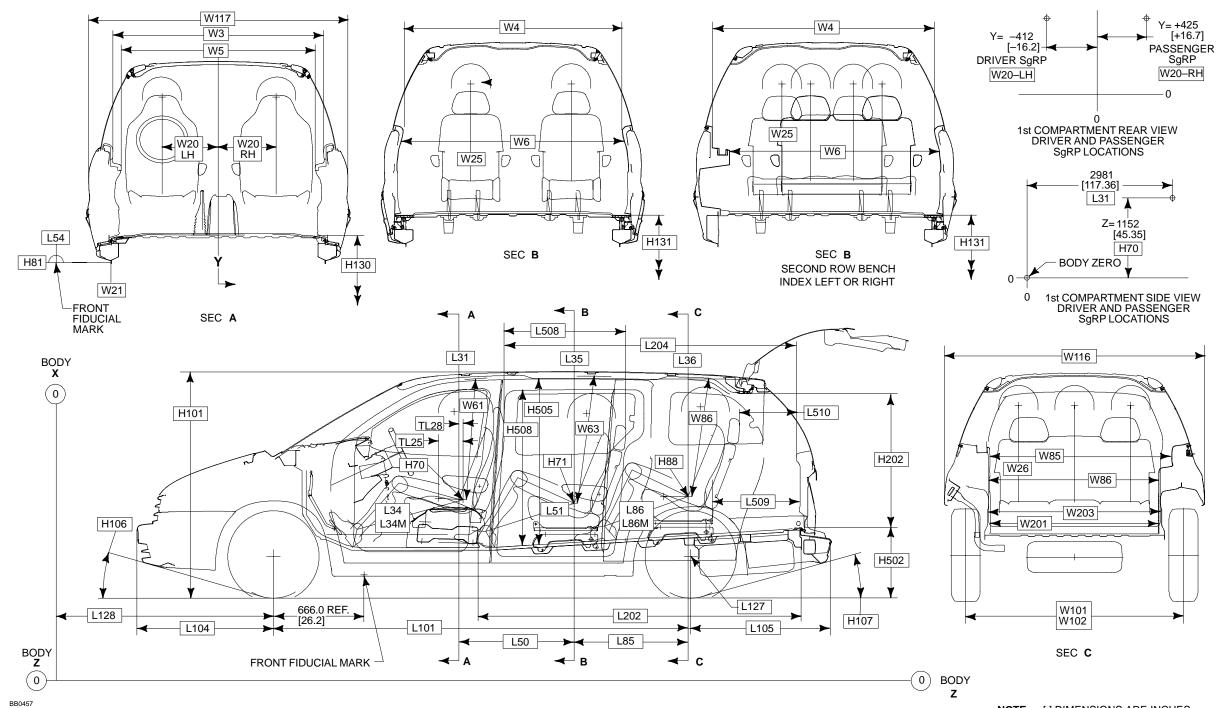

2002 MODEL YEAR

DIMENSIONAL DATA WINDSTAR 7-PASSENGER WAGON


Page 99 WINDSTAR

CODE	DESCRIPTION	3-DOOR	4-DOOR
EXTERIOR	•		
L101	WHEELBASE	3066 [1	20.7]
L103	OVERALL LENGTH	5102 [2	200.9]
L104	OVERHANG – FRONT	1002 [39.5]
L105	OVERHANG – REAR	1034 [40.7]
L127	REAR WHEELS € X-COORDINATE	4685 [1	84.5]
L128	FRONT WHEELS €X-COORDINATE	1619 [63.7]
W101	TREAD – FRONT	1634 [64.3]
W102	TREAD – REAR	1600 [63.0]
W103	VEHICLE WIDTH MAXIMUM WITH MOLDINGS	1942 [76.5]	1945 [76.6]
W116	VEHICLE WIDTH – MAXIMUM	1917 [75.5]
W117	BODY WIDTH AT DRIVER SgRP	1917 [75.5]
H101	VEHICLE HEIGHT – CURB	1728 [68.0]
H101	VEHICLE HEIGHT – LOADED	1665 [65.6]
H106	ANGLE OF APPROACH	16.0)°
H107	ANGLE OF DEPARTURE	15.	5°
H130	STEP HEIGHT FRONT DOORS AT CURB	407 [1	6.0]
H131	STEP HEIGHT SLIDING DOOR AT CURB	455 [1	7.9]
H502	CARGO FLOOR TO GROUND AT CURB	605 [2	23.8]
FRONT CO	MPARTMENT		
TL25	DESIGN H-POINT TRAVEL	180 [7.1]
TL28	SEAT TRACK TRAVEL REAR OF H-POINT	30 [1	.2]
L34	MAXIMUM EFFECTIVE LEGROOM	1033 [-	40.7]
L34M	MAXIMUM EFFECTIVE LEGROOM (SgRP AT REARMOST)	1061 [41.8]
W3	SHOULDER ROOM – FRONT	1548 [60.9]
W5	HIP ROOM – FRONT	1464 [57.6]
H61	EFFECTIVE HEADROOM – FRONT	997 [3	9.3]
REAR COM	IPARTMENT – CARGO		
L202	CARGO LENGTH – CLOSED LIFTGATE TO BACK OF FRONT SEAT AT FLOOR	2394 [94.3]
L204	CARGO LENGTH AT BELT TO FRONT SEAT	2150 [84.7]
L509	CARGO LENGTH 3RD SEAT	668 [2	26.3]
L510	CARGO LENGTH @ BELT - BEHIND 3RD SEAT	436 [1	7.2]
W201	CARGO WIDTH BETWEEN WHEELHOUSES	1237 [
W500	CARGO BODY WIDTH AT FLOOR	1588 [62.5]
H202	REAR OPENING HEIGHT	1019 [40.1]
H505	CARGO HEIGHT – MAXIMUM	1258 [_
V6	CARGO VOLUME – CU. FT. – TOTAL	145.7	148.5
V9	CARGO VOLUME BEHIND 3RD SEAT – CU. FT.	19.2	19.5

CODE	DESCRIPTION	3-DOOR	4-DOOR
REAR COM	PARTMENT - SEAT	•	•
L50	SgRP COUPLE DISTANCE – FRONT SEAT TO 2ND SEAT	848 [3	33.4]
L51	EFFECTIVE LEGROOM – 2ND SEAT	935 [3	36.8]
L85	SgRP COUPLE DISTANCE 2ND TO 3RD SEAT	837 [3	33.0]
L86	EFFECTIVE LEGROOM – 3RD SEAT	905 [3	35.6]
L86M	MAXIMUM EFFECTIVE LEGROOM – 3RD SEAT (REARMOST)	905 [3	35.6]
W4	SHOULDER ROOM – 2ND SEAT	1629 [[64.1]
W6	HIP ROOM – 2ND SEAT	1548 [[60.9]
W85	SHOULDER ROOM – 3RD SEAT	1333 [52.5]
W86	HIP ROOM 3RD SEAT	1237 [[48.7]
H63	EFFECTIVE HEADROOM – 2ND SEAT	1044 [41.1]
H86	EFFECTIVE HEADROOM – 3RD SEAT	962 [3	37.9]
DOOR OPE	NINGS [ENTRANCE]		
L508-R	ENTRANCE LENGTH – CARGO SIDE DOOR	714 [2	28.1]
L508-L	ENTRANCE LENGTH – CARGO SIDE DOOR	_	646 [25.4]
W203	REAR OPENING WIDTH AT FLOOR	1224 [48.2]
H508	ENTRANCE HEIGHT – CARGO SIDE DOOR	1127 [44.4]
SEATING R	EFERENCE POINTS [SgRP]		
L31	SgRP FRONT LH/RH SEAT (X)	2981 [1	17.36]
L35	SgRP 2ND SEAT (X)	3829 [1	50.75]
L36	SgRP 3RD SEAT (X)	4666 [1	83.70]
W20	SgRP FRONT SEAT LH/RH (Y)	- 412 [- 16.2	2]/425 [16.7]
W25	SgRP 2ND SEAT LH/RH QUAD BENCH (Y)	- 308.4 [429.6	
W25	SgRP 2ND SEAT LH/RH (Y) BENCH – INDEX LEFT	- 317 [- 12.	5]/207 [8.2]
W25	SgRP 2ND SEAT LH/RH (Y) BENCH – INDEX RIGHT	- 106 [- 4.2]]/418 [16.5]
W26	SgRP 3RD SEAT LH/RH (Y)	- 412 [- 16.2	2]/412 [16.2]
H70	SgRP FRONT SEAT LH/RH (Z)	1152 [4	45.35]
H71	SgRP 2ND SEAT LH/RH (Z)	1124 [4	14.25]
H88	SgRP 3RD SEAT LH/RH (Z)	1173 [4	46.18]
FRONT FID	UCIAL MARK	•	
L54	1ST X-COORDINATE	2285 [8	39.96]
W21	1ST Y-COORDINATE LH/RH (Y)	- 787.4 [787.4	
H81	1ST Z-COORDINATE	596.5 [

DIMENSIONAL DATA WINDSTAR CARGO VAN



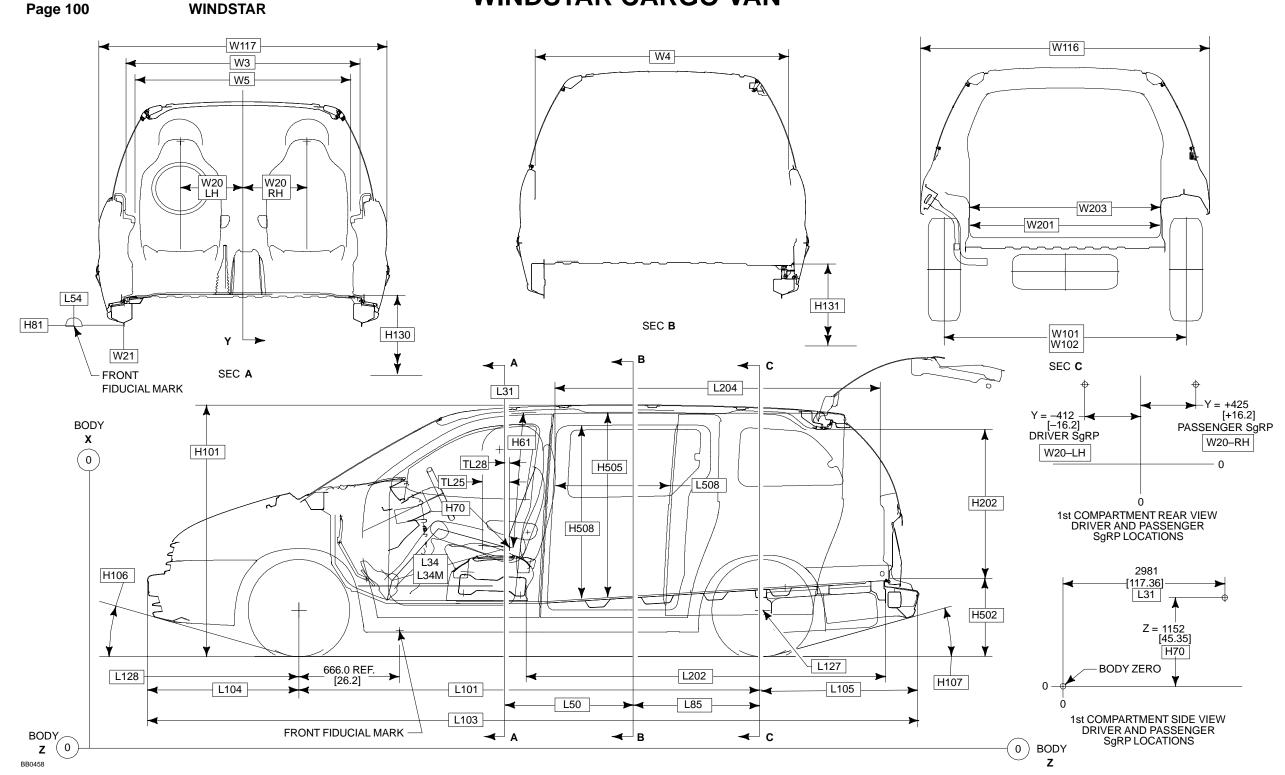

DIMENSIONAL DATA WINDSTAR CARGO VAN

Page 101 WINDSTAR



CODE	DESCRIPTION	CARGO
EXTERIOR		
L101	WHEELBASE	3066 [120.7]
L103	OVERALL LENGTH	5102 [200.9]
L104	OVERHANG – FRONT	1002 [39.5]
L105	OVERHANG – REAR	1034 [40.7]
L127	REAR WHEELS € X-COORDINATE	4685 [184.5]
L128	FRONT WHEELS & X-COORDINATE	1619 [63.7]
W101	TREAD – FRONT	1634 [64.3]
W102	TREAD – REAR	1600 [63.0]
W103	VEHICLE WIDTH MAXIMUM WITH MOLDINGS	1942 [76.5]
W116	VEHICLE WIDTH	1917 [75.5]
W117	BODY WIDTH AT DRIVER SGRP	1917 [75.5]
H101	VEHICLE HEIGHT – CURB	1728 [68.0]
H101	VEHICLE HEIGHT – LOADED	1665 [65.6]
H106	ANGLE OF APPROACH	16.0°
H107	ANGLE OF DEPARTURE	15.5°
H130	STEP HEIGHT FRONT DOORS AT CURB	407 [16.0]
H131	STEP HEIGHT SLIDING DOOR AT CURB	455 [17.9]
H502	CARGO FLOOR TO GROUND AT CURB	605 [23.8]
FRONT COMP	ARTMENT	
TL25	DESIGN H-POINT TRAVEL	180 [7.1]
TL28	SEAT TRACK TRAVEL REAR OF H-POINT	30 [1.2]
L34	MAXIMUM EFFECTIVE LEGROOM	1033 [40.7]
L34M	MAXIMUM EFFECTIVE LEGROOM (SgRP AT REARMOST)	1061 [41.8]
W3	SHOULDER ROOM – FRONT	1548 [60.9]
W5	HIP ROOM – FRONT	1464 [57.6]
H61	EFFECTIVE HEADROOM – FRONT	997 [39.3]


CODE	DESCRIPTION	CARGO
REAR COMPA	RTMENT – CARGO	
L202	CARGO LENGTH – CLOSED LIFTGATE TO BACK OF FRONT SEAT AT FLOOR	2394 [94.3]
L204	CARGO LENGTH – CLOSED LIFTGATE TO BACK OF FRONT SEAT AT BELT	2150 [84.7]
W201	CARGO WIDTH BETWEEN WHEELHOUSES	1237 [48.7]
W500	CARGO BODY WIDTH AT FLOOR	1588 [62.5]
H202	REAR OPENING HEIGHT	1019 [40.1]
H505	CARGO HEIGHT – MAXIMUM	1258 [49.5]
V6	CARGO VOLUME – CU. FT. – TOTAL	152.6
DOOR OPENI	NGS	
L508	ENTRANCE LENGTH - CARGO SIDE DOOR	714 [28.1]
W203	REAR OPENING WIDTH AT FLOOR	1224 [48.2]
H508	ENTRANCE HEIGHT – CARGO SIDE DOOR	1127 [44.4]
SEATING REF	ERENCE POINTS (SgRP)	
L31	SgRP FRONT SEAT LH/RH (X)	2981 [117.36]
W20	SgRP FRONT SEAT LH/RH (Y)	- 412 [- 16.2]/412 [16.2]
H70	SgRP FRONT SEAT LH/RH (Z)	1152 [45.35]
FRONT FIDUC	CIAL MARK	
L54	1ST X-COORDINATE	2285 [89.96]
W21	1ST Y-COORDINATE LH/RH	- 787.4 [- 31.0]/787.4 [31.0]
H81	1ST Z-COORDINATE	596.5 [23.48]

DIMENSIONAL DATA WINDSTAR WAGON/VAN



2020 [79.53] 1514 [59.59] 927 [36.50] 32 [1.27] 340 [13.40] __ 42 [1.67] 30 [1.19] 126 177 [3.89] [4.95] 75 [2.96] [6.98] 50 [1.98]


PLAN VIEW OF REAR FLOOR CARGO VAN

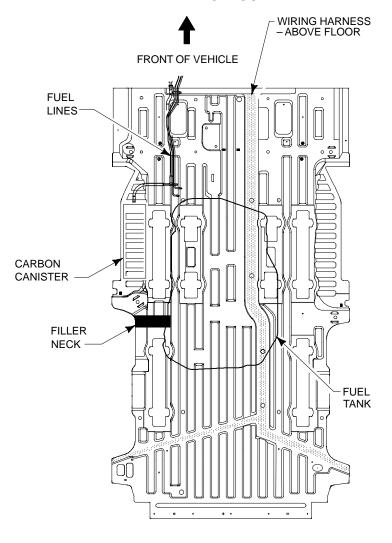

CAUTION – WHEN DRILLING THE FLOOR, UNDERSTAND THE LOCATION OF COMPONENTS BELOW FLOOR AND DO NOT DRILL IN AREAS IDENTIFIED IN THE ILLUSTRATION ABOVE.

DIMENSIONAL DATA WINDSTAR WAGON/VAN



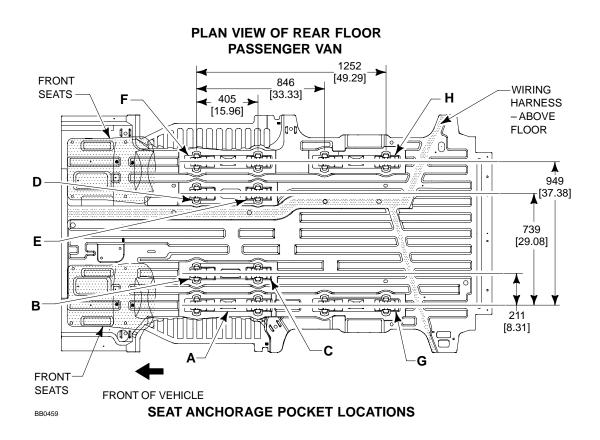

SEATING CONFIGURATION/LOCATIONS

A, D, & E: 2ND ROW BENCH INDEXED LEFT
B, C, & F: 2ND ROW BENCH INDEXED RIGHT

A, B, & C: 2ND ROW DRIVER SIDE BUCKET

D, E, & F: 2ND ROW PASSENGER SIDE BUCKET

A & F : 3RD ROW BENCH IN 2ND ROW POSITION


ZIVE KOW I COMICIO

G & H : 3RD ROW BENCH

DIMENSIONAL DATA EXPEDITION/4 DR/4X2/4X4

2002 MODEL YEAR

Page 104 EXPEDITION

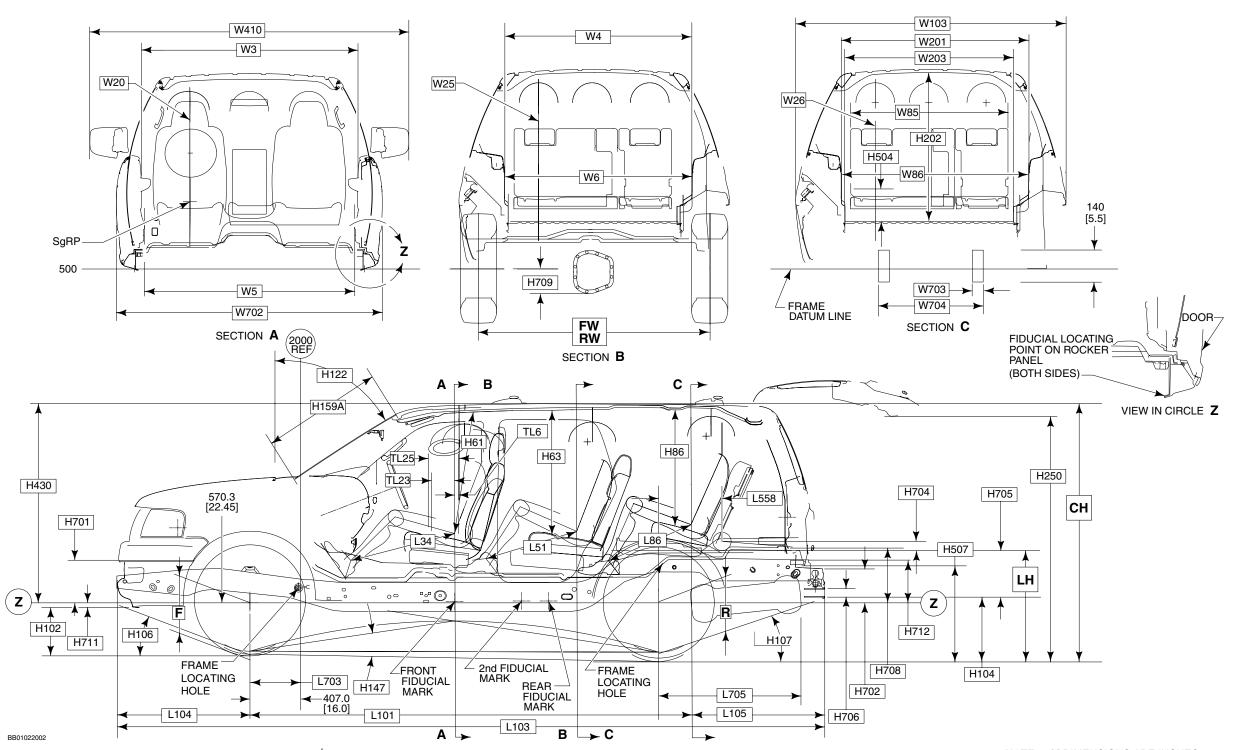

DIMENSIONAL DATA EXPEDITION 4 DR - 4X2/4X4



Page 105 EXPEDITION

CODE	DESCRIPTION	4X2	4X4
EXTERIO	R	!	!
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	305 [12.0]	383 [15.1]
H106	ANGLE OF APPROACH	21.8°	26.8°
H107	ANGLE OF DEPARTURE	19.0°	21.0°
H122	ANGLE OF WINDSHIELD	56.6°	56.6°
H147	RAMP BREAKOVER ANGLE	22.0°	22.5°
H159A	WINDSHIELD HEIGHT	924 [36.39]	924 [36.39]
H202	REAR OPENING HEIGHT	914 [35.99]	914 [35.99]
H250	OVERALL TO OPEN LIFTGATE	1830 [72.05]	1875 [73.82]
H430	Z DATUM LINE TO TOP OF CAB	1532 [60.33]*	1532 [60.33]*
H507	TOP OF FRAME TO GROUND	876 [34.5]	876 [34.5]
H701	FRONT BUMPER HEIGHT	302 [11.91]	302 [11.91]
H702	REAR BUMPER HEIGHT (W/STEP PAD)	224 [8.81]	224 [8.81]
H704	TOP OF FLOOR TO & OF FUEL FILLER	74 [2.91]	74 [2.91]
H705	REAR BUMPER HEIGHT	217 [8.53]	217 [8.53]
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	50 [1.97]	50 [1.97]
H708	500 DATUM LINE TO TOP OF FLOOR BEADS	466 [18.34]	466 [18.34]
H709	Ç OF REAR AXLE TO BOTTOM OF AXLE HOUSING	150 [5.9]	150 [5.9]
H711	Z DATUM BOTTOM OF FRONT BUMPER	11 [0.44]	11 [0.44]
H712	Z DATUM BOTTOM OF REAR BUMPER	113 [4.46]	113 [4.46]
L101	WHEELBASE	3025 [119.1]	3025 [119.1]
L103	OVERALL LENGTH	5197 [204.6]	5197 [204.6]
L104	FRONT OVERHANG	980 [38.6]	980 [38.6]
L105	REAR OVERHANG	1191 [46.9]	1191 [46.9]
L558	© REAR AXLE TO € FUEL FILLER	619 [24.37]	619 [24.37]

^{*} Height of roof rack to roof is 94 [3.74]

DATUM REFERENCE LINES		FIDUCIAL MARKS	Х	Y	Z
€ FRONT AXLE TO 2000 — HORIZONTAL	16.02	Front	3105.0	829.0	555.0
€ FRONT AXLE TO 500 — VERTICAL	22.45	2nd	3600.0	844.2	559.0
		Rear	3800.0	844.2	559.0
FRAME LOCATING HOLES		Front	2000.0	386.52	630.0
		Rear	4650.0	625.15	775.0

H106	CODE	DESCRIPTION	4X2	4X4
H106	EXTERIO	R	1	l
W103 VEHICLE WIDTH 1996 [78.58] 1996 [78.58] 1996 [78.58] W203 REAR OPEN WIDTH @ FLOOR 1448 [57.00] 1650 [57.744] 1967 [77.44	L703	€ FRONT AXLE TO COWL POINT	340 [13.40]	340 [13.40]
W203 REAR OPEN WIDTH @ FLOOR 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 1448 [57.00] 2293 [90.28] 265 [256] 65 [25.6] 65 [25.6] 65 [25.6] 65 [25.6] 65 [25.6] 65 [25.6] 65 [25.6] 66 [61.5] 156 [61.5] 156 [61.5] 157 [39.8] 1011 [39.80] 1	H106	Ç REAR AXLE TO END OF FRAME	1025 [40.35]	1025 [40.35]
W410 OVERALL WIDTH WITH STANDARD MIRRORS 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 2293 [90.28] 190	W103	VEHICLE WIDTH	1996 [78.58]	1996 [78.58]
W702 FRONT BUMPER WIDTH 1967 [77.44] 1967 [77.44] 1967 [77.44] W703 FRAME RAIL WIDTH 65 [2.56] 65 [2.56] W704 REAR FRAME WIDTH 156 [6.15] 156 [6.15] INTERIOR H61 EFFECTIVE HEADROOM 1011 [39.80] 1011 [39.80] H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.1] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 <	W203	REAR OPEN WIDTH @ FLOOR	1448 [57.00]	1448 [57.00]
W703 FRAME RAIL WIDTH 65 [2.56] 65 [2.56] W704 REAR FRAME WIDTH 156 [6.15] 156 [6.15] INTERIOR H61 EFFECTIVE HEADROOM 1011 [39.80] 1011 [39.80] H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.1] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM 1562 [61.50] 1562 [61.50] W4 SHOULDER ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM 5ECOND ROW	W410	OVERALL WIDTH WITH STANDARD MIRRORS	2293 [90.28]	2293 [90.28]
W704 REAR FRAME WIDTH 156 [6.15] 156 [6.15] INTERIOR H61 EFFECTIVE HEADROOM 1011 [39.80] 1011 [39.83] H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHELHOUSE HEIGHT 155 [6.1] 155 [6.2] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1562 [61.50] 1562 [61.50] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440	W702	FRONT BUMPER WIDTH	1967 [77.44]	1967 [77.44]
INTERIOR H61 EFFECTIVE HEADROOM 1011 [39.80] 1011 [39.80] 1011 [39.80] H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.2] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SGRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	W703	FRAME RAIL WIDTH	65 [2.56]	65 [2.56]
H61 EFFECTIVE HEADROOM 1011 [39.80] 1011 [39.80] 1011 [39.80] H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.2] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.41] W5 HIP ROOM — SECOND ROW 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	W704	REAR FRAME WIDTH	156 [6.15]	156 [6.15]
H63 HEADROOM — SECOND ROW 1012 [39.83] 1012 [39.83] 1012 [39.83] H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.1] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM — SECOND ROW 1563 [62.32] 1563 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	INTERIOR	र		
H86 HEADROOM — THRID ROW 889 [35.0] 889 [35.0] H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.1] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	H61	EFFECTIVE HEADROOM	1011 [39.80]	1011 [39.80]
H504 WHEELHOUSE HEIGHT 155 [6.1] 155 [6.1] 155 [6.1] TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	H63	HEADROOM — SECOND ROW	1012 [39.83]	1012 [39.83]
TL23 SEAT TRACK TRAVEL 159 [6.25] 159 [6.25] 159 [6.25] TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1562 [61.50] 1562 [61.50] W5 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W6 HIP ROOM — SECOND ROW 1583 [62.32] -440 [-17.32] -440 [-17.32]	H86	HEADROOM — THRID ROW	889 [35.0]	889 [35.0]
TL25 TRUE TRACK TRAVEL LENGTH 220 [8.66] 220 [8.66] 220 [8.66] TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	H504	WHEELHOUSE HEIGHT	155 [6.1]	155 [6.1]
TL28 TRUE TRACK TRAVEL — REAR OF SgRP 40 [1.57] 40 [1.57] 40 [1.57] L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	TL23	SEAT TRACK TRAVEL	159 [6.25]	159 [6.25]
L34 MAX. EFFECTIVE LEG ROOM 1040 [40.94] 1040 [40.94] 1040 [40.94] L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	TL25	TRUE TRACK TRAVEL LENGTH	220 [8.66]	220 [8.66]
L51 LEG ROOM — SECOND ROW 988 [38.90] 988 [38.90] 988 [38.90] L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.41] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	TL28	TRUE TRACK TRAVEL — REAR OF SgRP	40 [1.57]	40 [1.57]
L86 LEG ROOM — THIRD ROW 686 [27.0] 686 [27.0] 686 [27.0] W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	L34	MAX. EFFECTIVE LEG ROOM	1040 [40.94]	1040 [40.94]
W3 SHOULDER ROOM 1624 [63.94] 1624 [63.94] 1624 [63.94] W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	L51	LEG ROOM — SECOND ROW	988 [38.90]	988 [38.90]
W4 SHOULDER ROOM — SECOND ROW 1636 [64.41] 1636 [64.42] W5 HIP ROOM 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	L86	LEG ROOM — THIRD ROW	686 [27.0]	686 [27.0]
W5 HIP ROOM 1562 [61.50] 1562 [61.50] 1562 [61.50] W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32] -440 [-17.32]	W3	SHOULDER ROOM	1624 [63.94]	1624 [63.94]
W6 HIP ROOM — SECOND ROW 1583 [62.32] 1583 [62.32] 1583 [62.32] W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	W4	SHOULDER ROOM — SECOND ROW	1636 [64.41]	1636 [64.41]
W20 SgRP (Y) -440 [-17.32] -440 [-17.32]	W5	HIP ROOM	1562 [61.50]	1562 [61.50]
	W6	HIP ROOM — SECOND ROW	1583 [62.32]	1583 [62.32]
W25 2ND ROW SEAT — OUTBOARD SEATING POSITION 465 [18.31] 465 [18.37]	W20	SgRP (Y)	-440 [-17.32]	-440 [-17.32]
	W25	2ND ROW SEAT — OUTBOARD SEATING POSITION	465 [18.31]	465 [18.31]
W85 SHOULDER ROOM — THIRD ROW 1636 [64.4] 1636 [64.4]	W85	SHOULDER ROOM — THIRD ROW	1636 [64.4]	1636 [64.4]
W86 HIP ROOM — THIRD ROW 1519 [59.8] 1519 [59.8]	W86	HIP ROOM — THIRD ROW	1519 [59.8]	1519 [59.8]
W201 CARGO WIDTH BETWEEN WHEELHOUSE 1233 [48.54] 1233 [48.54]	W201	CARGO WIDTH BETWEEN WHEELHOUSE	1233 [48.54]	1233 [48.54]

EXPEDITION CARGO VOLUMES

CODE	DESCRIPTION	LITRES/ CUBIC FEET
V6	Max cargo volume behind front seats	3135/110.7
V7	Cargo volume behind 2nd row seats	1724/60.9
V9	Cargo volume behind 3rd row seats (measured from floor to beltline)	580/20.5

NOTES — [] DIMENSIONS ARE INCHES.

— TIRE DATA, PAGE 107.

AXLE/TIRE/VEHICLE HEIGHT DATA EXPEDITION

2002 MODEL YEAR

Page 106 EXPEDITION

	F Height at Front Axle∆		R Height at Rear Axle∆		LH		СН		H104
RIDE HEIGHT DATA	HEIGHT AT BASE CURB WEIGHT	LOADED HEIGHT @ SPRING RATING	HEIGHT AT BASE CURB WEIGHT	LOADED HEIGHT @ SPRING RATING	EMPTY (CURB)	LOADED (DESIGN)	EMPTY (CURB)	LOADED (DESIGN)	BOTTOM (CURB)
4X2 BASE	287 [11.3]	259 [10.2]	358 [14.1]	269 [10.6]	849 [33.43]	743 [29.26]	1887 [74.31]	1802 [70.95]	498 [19.6]
4X2 AIR SUSPENSION	287 [11.3]	259 [10.2]	320 [12.6]	307 [12.1]	805 [31.69]	788 [31.04]	1847 [72.75]	1836 [72.30]	444 [17.5]
4X4 BASE	356 [14.0]	335 [13.2]	411 [16.2]	322 [12.7]	899 [35.39]	786 [30.94]	1945 [76.57]	1854 [73.00]	546 [21.5]
4X4 AIR SUSPENSION – KNEEL	315 [12.4]	310 [12.2]	330 [13.0]	317 [12.5]	804 [31.67]	786 [30.94]	1861 [73.29]	1849 [72.79]	449 [17.7]
4X4 AIR SUSPENSION – NORMAL	340 [13.4]	335 [13.2]	356 [14.0]	343 [13.5]	829 [32.64]	812 [31.98]	1886 [74.27]	1874 [73.79]	475 [18.7]
4X4 AIR SUSPENSION – OFFROAD	366 [14.4]	361 [14.2]	381 [15.0]	368 [14.5]	856 [33.70]	839 [33.02]	1913 [75.30]	1899 [74.78]	500 [19.7]
4X4 BASE W/OPTIONAL TIRE	378 [14.9]	366 [14.4]	434 [17.1]	345 [13.6]	941 [37.06]	828 [32.61]	1987 [78.23]	1897 [74.67]	566 [22.3]
4X4 A/S W/OPTIONAL TIRE – KNEEL	335 [13.2]	333 [13.1]	353 [13.9]	340 [13.4]	847 [33.34]	828 [32.61]	1904 [74.96]	1891 [74.46]	470 [18.5]
4X4 A/S W/OPTIONAL TIRE – NORMAL	361 [14.2]	358 [14.1]	378 [14.9]	366 [14.4]	871 [34.31]	854 [33.64]	1929 [75.94]	1917 [75.46]	495 [19.5]
4X4 A/S W/OPTIONAL TIRE – OFFROAD	386 [15.2]	383 [15.1]	404 [15.9]	391 [15.4]	898 [35.37]	881 [34.69]	1955 [76.96]	1941 [76.44]	521 [20.5]

Standard tire is P255/70Rx16; Optional tire is P265/70R17; WB is 119"

[△] The height shown represents dimensions of a base, standard vehicle with no options. Actual height may vary due to production tolerances.

EXPEDITION TIRE DATA

Page 107 EXPEDITION


		AA MAXIMUM SECTION WIDTH		BB MAXIMUM S	SECTION WIDTH	*CC MINIMUM LOADED RADIUS		
TIRE SIZE	RIM WIDTH	ALL-SEASON	ALL-TERRAIN	ALL-SEASON	ALL-TERRAIN	ALL-SEASON	ALL-TERRAIN	
P255/70R16SL	178 [7.0]	269 [10.6]	269 [10.6]	777 [30.6]	780 [30.7]	345 [13.6]	348 [13.7]	
P265/70R17SL	190 [7.5]	_	284 [11.2]	_	825 [32.5]	_	371 [14.6]	
P275/60R17SL	190 [7.5]	273 [10.75]	_	772 [30.04]	_	342 [13.47]	_	

^{*} This number represents Radius-Axle Centerline to Ground with Maximum Rated Load on Tire at Maximum Pressure.

DIMENSIONAL DATA EXCURSION 4 DR/4X2/4X4

2002 MODEL YEAR

Page 108 EXCURSION

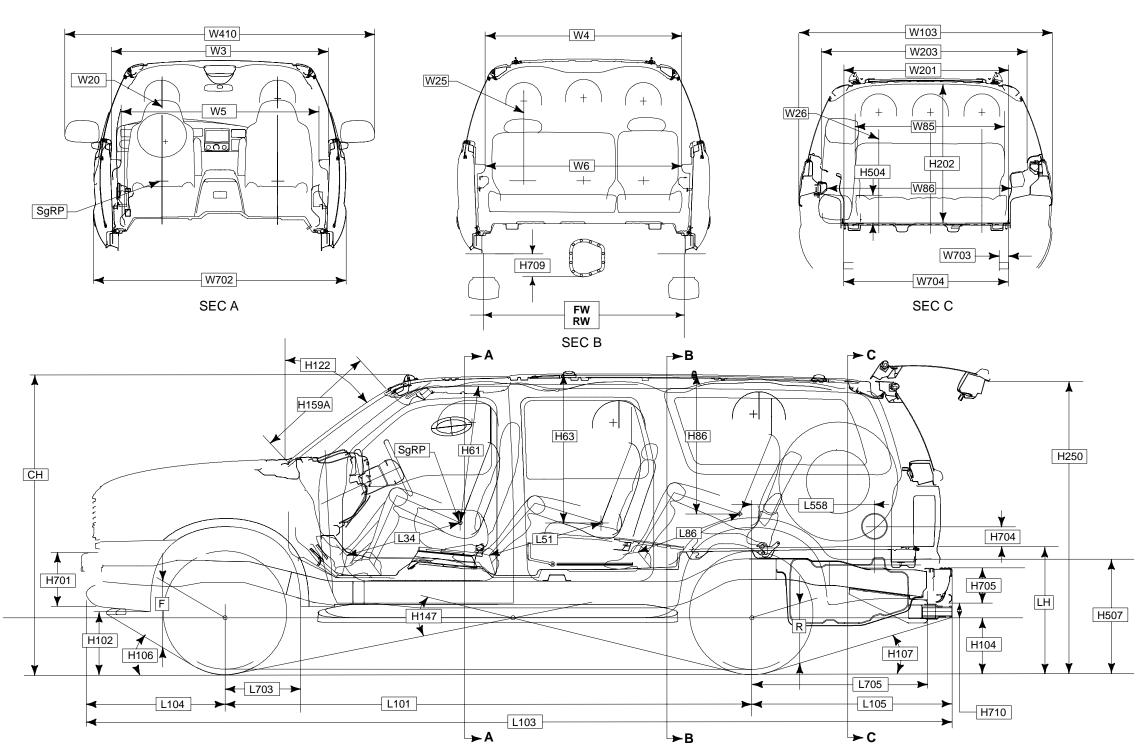

DIMENSIONAL DATA EXCURSION 4 DR/4X2/4X4

2002 MODEL YEAR

Page 109 EXCURSION

CODE	DESCRIPTION	4X2	4X4
EXTERIOR			
H102	FRONT BUMPER HEIGHT TO GROUND	350 [13.8]	410 [16.1]
H103	FRONT BUMPER HEIGHT TO CURB GROUND	379 [14.9]	439 [17.2]
H104	REAR BUMPER HEIGHT TO CURB GROUND	447 [17.6]	529 [20.8]
H106	ANGLE OF APPROACH AT GVW	20.7°	25.3°
H107	ANGLE OF DEPARTURE AT GVW	11.6°	15.1°
H122	ANGLE OF WINDSHIELD	52.8°	52.8°
H147	RAMP BREAKOVER ANGLE	6.8°	7.0°
H159A	WINDSHIELD HEIGHT	826 [32.5]	826 [32.5]
H202	REAR OPENING HEIGHT	968 [38.1]	968 [38.1]
H250	OVERALL TO OPEN LIFTGATE	1884 [74.2]	1887 [74.3]
H507	TOP OF FRAME TO GROUND	1830 [72.0]	1830 [72.0]
H701	FRONT BUMPER HEIGHT	362 [14.2]	362 [14.2]
H702	REAR BUMPER HEIGHT (W/STEP PAD)	229 [9.0]	229 [9.0]
H704	TOP OF FLOOR TO € OF FUEL FILLER	150 [5.9]	150 [5.9]
H705	REAR BUMPER HEIGHT	219 [8.6]	219 [8.6]
H709	ပုံ OF REAR AXLE TO BOTTOM OF AXLE HOUSING	165.9 [6.5]	165.9 [6.5]
H710	BOTTOM OF HITCH TO BOTTOM OF BUMPER	100 [3.9]	100 [3.9]
L101	WHEELBASE	3480 [137.0]	3484 [137.1]
L103	OVERALL LENGTH	5759 [226.7]	5759 [226.7]
L104	FRONT OVERHANG	952 [37.5]	952 [37.5]
L105	REAR OVERHANG	1327 [52.2]	1328 [52.3]
L558	€ REAR AXLE TO € FUEL FILLER	814 [32.0]	814 [32.0]
L703	FRONT AXLE TO COWL POINT AT GVW	441 [17.4]	441[17.4]
L705	E REAR AXLE TO END OF FRAME	1159 [45.6]	1159 [45.6]
W103	VEHICLE WIDTH	2032 [80.0]	2032 [80.0]
W203	REAR OPEN WIDTH @ FLOOR	1417 [55.8]	1417 [55.8]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2484 [97.8]	2484 [97.8]
W702	FRONT BUMPER WIDTH	2006 [79.0]	2006 [79.0]
W703	FRAME RAIL WIDTH	68 [2.7]	68 [2.7]
W704	REAR FRAME RAIL WIDTH	955 [37.6]	955 [37.6]

CODE	DESCRIPTION	4X2	4X4
INTERIOR			
H61	EFFECTIVE HEADROOM — FRONT	1042 [41.0]	1042 [41.0]
H63	HEADROOM — SECOND ROW	1045 [41.1]	1045 [41.1]
H86	HEADROOM — THIRD ROW	980 [38.6]	980 [38.6]
H504	WHEELHOUSE HEIGHT	216 [8.5]	216 [8.5]
L34	MAXIMUM EFFECTIVE LEG ROOM — FRONT	1033 [40.7]	1033 [40.7]
L51	LEG ROOM — SECOND ROW	1024 [40.3]	1035 [40.7]
L86	LEG ROOM — THIRD ROW	990 [39.0]	990 [39.0]
TL23	SEAT TRACK TRAVEL	139 [5.5]	139 [5.5]
TL25	TRUE TRACK TRAVEL LENGTH	180 [7.1]	180 [7.1]
TL28	TRUE TRACK TRAVEL LENGTH REARWARD OF SgRP	40 [1.6]	40 [1.6]
V6	MAXIMUM CARGO VOLUME BEHIND FRONT SEATS — LITRES/CU.FT.	4130 /145.8	4130 /145.8
V7	CARGO VOLUME BEHIND 2nd ROW SEATS — LITRES/CU.FT.	2825/99.7	2825/99.7
V9	CARGO VOLUME BEHIND 3rd ROW SEATS (MEASURED FROM FLOOR TO BELTLINE) — LITRES/CU.FT.	1346/47.5	1346/47.5
W3	SHOULDER ROOM — FRONT	1736 [68.3]	1736 [68.3]
W4	SHOULDER ROOM — SECOND ROW	1702 [67.0]	1702 [67.0]
W5	HIP ROOM — FRONT	1715 [67.5]	1715 [67.5]
W6	HIP ROOM — SECOND ROW	1698 [66.9]	1698 [66.9]
W20	SgRP (Y)	-464 [-18.3]	-464 [-18.3]
W25	SgRP (Y) 2nd ROW SEAT — OUTBOARD SEATING POSITION	-479 [-18.9]	-479 [-18.9]
W85	SHOULDER ROOM — THIRD ROW	1648 [64.9]	1648 [64.9]
W86	HIP ROOM — THIRD ROW	1334 [52.5]	1334 [52.5]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1321 [52.0]	1321 [52.0]



Page 110 EXCURSION



	F Height at	Front Axle ∆	R Height at	Rear Axle \triangle	L	Н	C	Н	H104
RIDE HEIGHT DATA	HEIGHT AT BASE CURB WEIGHT	LOADED HEIGHT @ SPRING RATING	HEIGHT AT BASE CURB WEIGHT	LOADED HEIGHT @ SPRING RATING	EMPTY (CURB)	LOADED (DESIGN)	EMPTY (CURB)	LOADED (DESIGN)	BOTTOM (CURB)
4X2	526 [20.7]	516 [20.3]	632 [24.9]	505 [19.9]	917 [36.12]	811 [31.95]	1966 [77.4]	1880 [74.04]	447 [17.6]
4X4	627 [24.7]	604 [23.8]	731 [28.8]	604 [23.8]	996 [39.22]	883 [34.77]	2042 [80.4]	2030 [79.95]	529 [20.8]

Standard tire is LT265/75Rx16; Optional tire is P265/70R17; WB is 119"

[△] The height shown represents dimensions of a base, standard vehicle with no options. Actual height may vary due to production tolerances.

EXCURSION TIRE AND WHEEL DATA

Page 111 EXCURSION

TIRE SPECIFICATIONS

	RIM WIDTH	AA MAXIMUM SECTION WIDTH [in] BB MAXIMUM DIAMETER *CC MINIMUM LOADED R		BB MAXIMUM DIAMETER		ADED RADIUS [in]	
TIRE SIZE	[in]	ALL-SEASON	ALL-TERRAIN	ALL-SEASON	ALL-TERRAIN	ALL-SEASON	ALL-TERRAIN
LT265/75R16	7.0	10.51	_	32.28	_	14.60	_
LT265/75R16	7.0	_	10.51		32.52		14.80


^{*} This number represents Radius-Axle Centerline to Ground with Maximum Rated Load on Tire at Maximum Pressure.

WHEEL SPECIFICATIONS

WHEEL TYPE	WHEEL SIZE	INSET [in]	NO. OF STUDS	BOLT CIRCLE [in]	MAX. WHEEL CAPACITY [lb @ Ground]
Styled Steel	16" x 7.0" K	0.25	8	6.7	3415
Chrome Styled Aluminum	16" x 7.0" K	0.25	8	6.7	3415
Premium Aluminum	16" x 7.0" K	0.25	8	6.7	3415

DIMENSIONAL DATA E-150/350 SUPER DUTY WAGON 8/12-PASSENGER



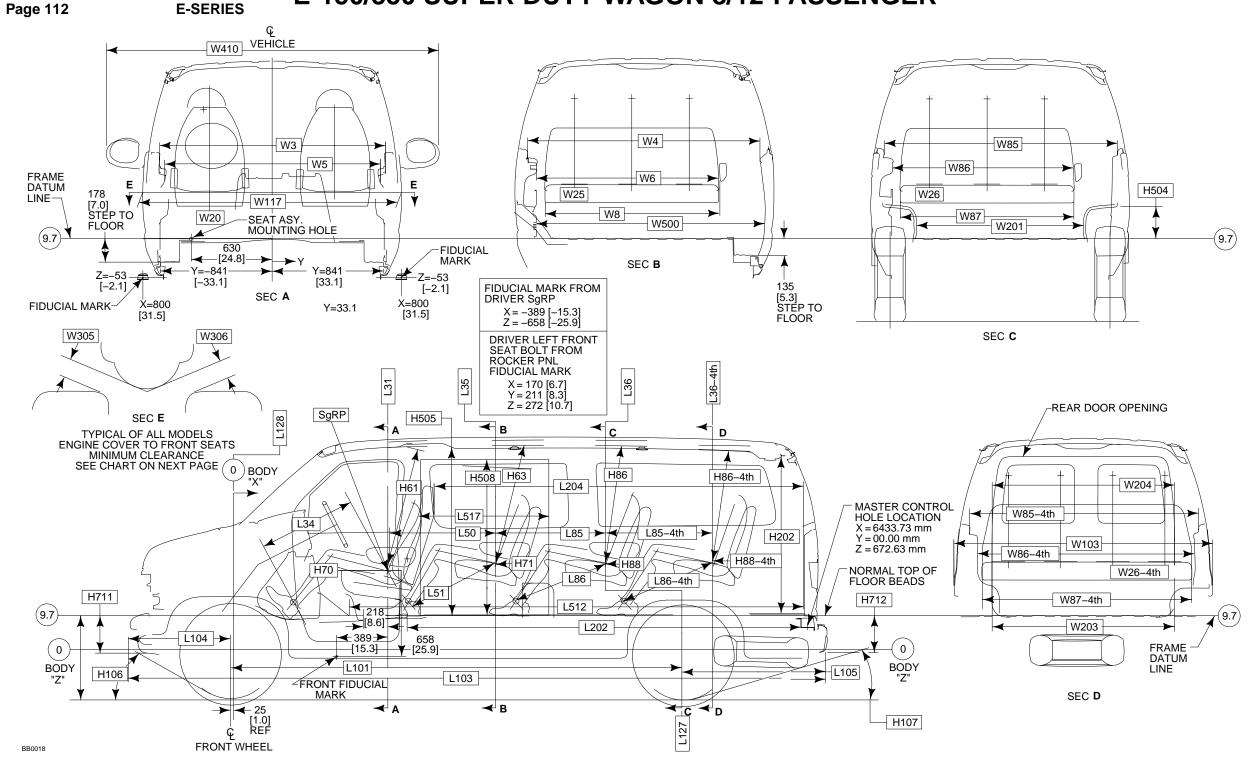

⁻ CH, LH, F, R, FW AND RW, PAGE 122.

SEAT TRACK TRAVEL, PAGE 36.

2002 MODEL YEAR

DIMENSIONAL DATA E-150/350 SUPER DUTY WAGON 8/12-PASSENGER

Page 113	E-SERIE

CODE	DESCRIPTION	BASE	BASE	CAPTAIN'S	CAPTAIN'S
		BUCKET 8-PASS	BUCKET 12-PASS	CHAIR 8-PASS	CHAIR 12-PASS
		CARGO	SLIDING	SLIDING	SLIDING
		DOOR	DOOR	DOOR	DOOR
EXTERI	OR	.1		l	
H106	ANGLE OF APPROACH	24.4°	28.6°	24.4°	28.7°
H107	ANGLE OF DEPARTURE	13.4°	16.5°	13.4°	16.4°
H711	FRAME DATUM LINE TO BOTTOM OF FRONT BUMPER	206 [8.1]	206 [8.1]	206 [8.1]	206 [8.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	256 [10.1]	256 [10.1]	256 [10.1]	256 [10.1]
L101	WHEELBASE	3505 [138.0]	3505 [138.0]	3505 [138.0]	3505 [138.0]
L103	OVERALL LENGTH	5382 [211.9]	5382 [211.9]	5382 [211.9]	5382 [211.9]
L104	OVERHANG — FRONT	764 [30.1]	764 [30.1]	764 [30.1]	764 [30.1]
L105	OVERHANG — REAR	1112 [43.8]	1112 [43.8]	1112 [43.8]	1112 [43.8]
L127	REAR WHEEL € X-COORDINATE	3480 [137.0]	3480 [137.0]	3480 [137.0]	3480 [137.0]
L128	FRONT WHEEL & X-COORDINATE	-25 [-1.0]	-25 [-1.0]	-25 [-1.0]	-25 [-1.0]
W103	VEHICLE WIDTH	2014 [79.3]	2014 [79.3]	2014 [79.3]	2014 [79.3]
W117	BODY WIDTH AT H-POINT	1999 [78.7]	1999 [78.7]	1999 [78.7]	1999 [78.7]
	2002 SAIL MOUNT — MANUAL MIRROR	2560 [100.8]	2560 [100.8]	2560 [100.8]	2560 [100.8]
	2002 SAIL MOUNT — POWER MIRROR	2471 [97.3]	2471 [97.3]	2471 [97.3]	2471 [97.3]
W410	2002 RECREATIONAL MIRROR	2590 [102.0]	2590 [102.0]	2590 [102.0]	2590 [102.0]
	2002.5 SAIL MOUNT — MAN/PWR MIRROR	2434 [93.9]	2434 [93.9]	2434 [93.9]	2434 [93.9]
	2002.5 TRAILER TOW MIRROR	2605 [102.5]	2605 [102.5]	2605 [102.5]	2605 [102.5]
	2002.5 TRAILER TOW MIRROR (EXTENDED)	2753 [108.4]	2753 [108.4]	2753 [108.4]	2753 [108.4]
FRONT	COMPARTMENT				
H61	EFFECTIVE HEAD ROOM — FRONT	1079[42.5]	1079[42.5]	1069 [42.1]	1069 [42.1]
H70	SgRP FRONT LEFT/RIGHT (Z)	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]
		1189 [46.8]/	1189 [46.8]/	1189 [46.8]/	1189 [46.8]/
L31	SgRP FRONT LEFT/RIGHT (X)	1247 [49.1]	1247 [49.1]	1247 [49.1]	1247 [49.1]
L34	MAXIMUM EFFECTIVE LEG ROOM	1016 [40.0]	1016 [40.0]	1016 [40.0]	1016 [40.0]
W3	SHOULDER ROOM — FRONT	1737 [68.4]	1737 [68.4]	1737 [68.4]	1737 [68.4]
W5	HIP ROOM — FRONT	1666 [65.6]	1666 [65.6]	1666 [65.6]	1666 [65.6]
W20	SgRP FRONT LEFT/RIGHT (Y)	-518 [-20.4]/ 518 [20.4]	-518 [-20.4]/ 518 [20.4]	-518 [-20.4]/ 518 [20.4]	-518 [-20.4]/ 518 [20.4]
W305	SEAT TO ENGINE COVER — DRIVER	185 [7.3]	185 [7.3]	132 [5.2]	132 [5.2]
W306	SEAT TO ENGINE COVER — PASSENGER	167 [6.6]	167 [6.6]	132 [5.2]	132 [5.2]
REAR C	OMPARTMENT — CARGO	ı			
H504	WHEELHOUSE HEIGHT	241 [9.5]	241 [9.5]	236 [9.3]	236 [9.3]
H505	CARGO HEIGHT — MAXIMUM	1333 [52.5]	1333 [52.5]	1333 [52.5]	1333 [52.5]
L202	CARGO LENGTH — CLOSED FRONT	3058 [120.4]	3058 [120.4]	3058 [120.4]	3058 [120.4]
L204	CARGO LENGTH AT BELT — CLOSED FRONT	2857 [112.5]	2857 [112.5]	2852 [112.3]	2852 [112.3]
L512	CARGO LENGTH TO ENGINE COVER	3711 [146.1]	3711 [146.1]	3711 [146.1]	3711 [146.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1303 [51.3]	1303 [51.3]	1303 [51.3]	1303 [51.3]
W500	CARGO BODY WIDTH AT FLOOR	1686 [66.4]	1686 [66.4]	1686 [66.4]	1686 [66.4]
V16	CARGO VOLUME — REAR OF FRONT SEAT - CU.FT.	236.2	236.2	234.9	234.9
	ı	T.	1	1	1


CODE	DESCRIPTION	BASE BUCKET 8-PASS CARGO DOOR	BASE BUCKET 12-PASS SLIDING DOOR	CAPTAIN'S CHAIR 8-PASS SLIDING DOOR	CAPTAIN'S CHAIR 12-PASS SLIDING DOOR
REAR COM	MPARTMENT — SEATING				
H63	EFFECTIVE HEAD ROOM — 2ND	1021 [40.2]	1021 [40.2]	1021 [40.2]	1021 [40.2]
H71	SgRP 2ND LEFT/CENTER (Z)	665/[26.2]/ 665/[26.2]	665/[26.2]/ 665/[26.2]	665/[26.2]/ 665/[26.2]	665/[26.2]/ 665/[26.2]
H86	EFFECTIVE HEAD ROOM — 3RD	1018 [40.1]	1018 [40.1]	1018 [40.1]	1018 [40.1]
H86-4TH	EFFECTIVE HEAD ROOM — 4TH	_	983 [38.7]	_	983 [38.7]
H88	SgRP 3RD (Z)	665 [26.2]	665 [26.2]	665 [26.2]	665 [26.2]
H88-4TH	SgRP 4TH (Z)	-	665 [26.2]	_	665 [26.2]
L35	SgRP 2ND LEFT/CENTER (X)	2032[80.0]/ 2032 [80.0]	2032[80.0]/ 2032 [80.0]	2032[80.0]/ 2032 [80.0]	2032[80.0]/ 2032 [80.0]
L36	SgRP 3RD (X)	2883 [113.5]	2883 [113.5]	2883 [113.5]	2883 [113.5]
L36-4TH	SgRP 4TH (X)	_	3718 [146.4]	_	3718 [146.4]
L50	H-POINT COUPLE DISTANCE	843 [33.2]	843 [33.2]	843 [33.2]	843 [33.2]
L51	EFFECTIVE LEG ROOM — 2ND	937 [36.9]	937 [36.9]	937 [36.9]	937 [36.9]
L85	SgRP COUPLE DISTANCE — 3RD	851 [33.5]	851 [33.5]	851 [33.5]	851 [33.5]
L85-4TH	SgRP COUPLE DISTANCE — 4TH	-	836 [32.9]	-	836 [32.9]
L86	EFFECTIVE LEG ROOM — 3RD	1051 [41.4]	1051 [41.4	1051 [41.4	1051 [41.4
L86-4TH	EFFECTIVE LEG ROOM — 4TH	_	1036 [40.8]	_	1036 [40.8]
W4	SHOULDER ROOM — 2ND	1791 [70.5]	1801 [70.9]	1801 [70.9]	1801 [70.9]
W6	HIP ROOM — 2ND ARMREST DOWN/UP	1417 [55.8]/ 1689 [66.5]	1417 [55.8]/ 1689 [66.5]	1417 [55.8]/ 1689 [66.5]	1417 [55.8]/ 1689 [66.5]
W8	SEATING WIDTH — 2ND	1354 [53.3]	1354 [53.3]	1354 [53.3]	1354 [53.3]
W25	SgRP 2ND LEFT/CENTER (Y)	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]
W26	SgRP 3RD LEFT/CENTER (Y)	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]
W26-4TH	SgRP 4TH — RIGHT OUTSIDE (Y)	_	632 [24.9]	-	632 [24.9]
W85	SHOULDER ROOM — 3RD	1808 [71.2]	1808 [71.2]	1808 [71.2]	1808 [71.2]
W85-4TH	SHOULDER ROOM — 4TH	_	1770 [69.7]	_	1770 [69.7]
W86	HIP ROOM — 3RD ARMREST DOWN/UP	1415 [55.7]/ 1699 [66.9]	1415 [55.7]/ 1699 [66.9]	1415 [55.7]/ 1699 [66.9]	1415 [55.7]/ 1699 [66.9]
W86-4TH	HIP ROOM — 4TH	_	1684 [66.3]	-	1684 [66.3]
W87	SEATING WIDTH — 3RD	1354 [53.3]	1354 [53.3]	1354 [53.3]	1354 [53.3]
W87-4TH	SEATING WIDTH — 4TH	-	1623 [63.9]	_	1623 [63.9]
DOOR OPE	NINGS (ENTRANCE ROOM)				
H202	REAR OPENING HEIGHT	1226 [48.3]	1226 [48.3]	1206 [47.5]	1206 [47.5]
H508	ENTRANCE HEIGHT — CARGO SIDE	1226 [48.3]	1226 [48.3]	1206 [47.5]	1206 [47.5]
L517	ENTRANCE LENGTH — CARGO SIDE	1196 [47.1]	1006 [39.6]	1006 [39.6]	1006 [39.6]
W203	REAR OPENING WIDTH @ FLOOR	1305 [51.4]	1305 [51.4]	1305 [51.4]	1305 [51.4]
W204	REAR OPENING WIDTH AT BELT	1382 [54.4]	1382 [54.4]	1382 [54.4]	1382 [54.4]

NOTE — [] DIMENSIONS ARE INCHES.

DIMENSIONAL DATA E-350 SUPER DUTY EXTENDED WAGON 12/15-PASSENGER

2002 MODEL YEAR

Page 114 E-SERIES

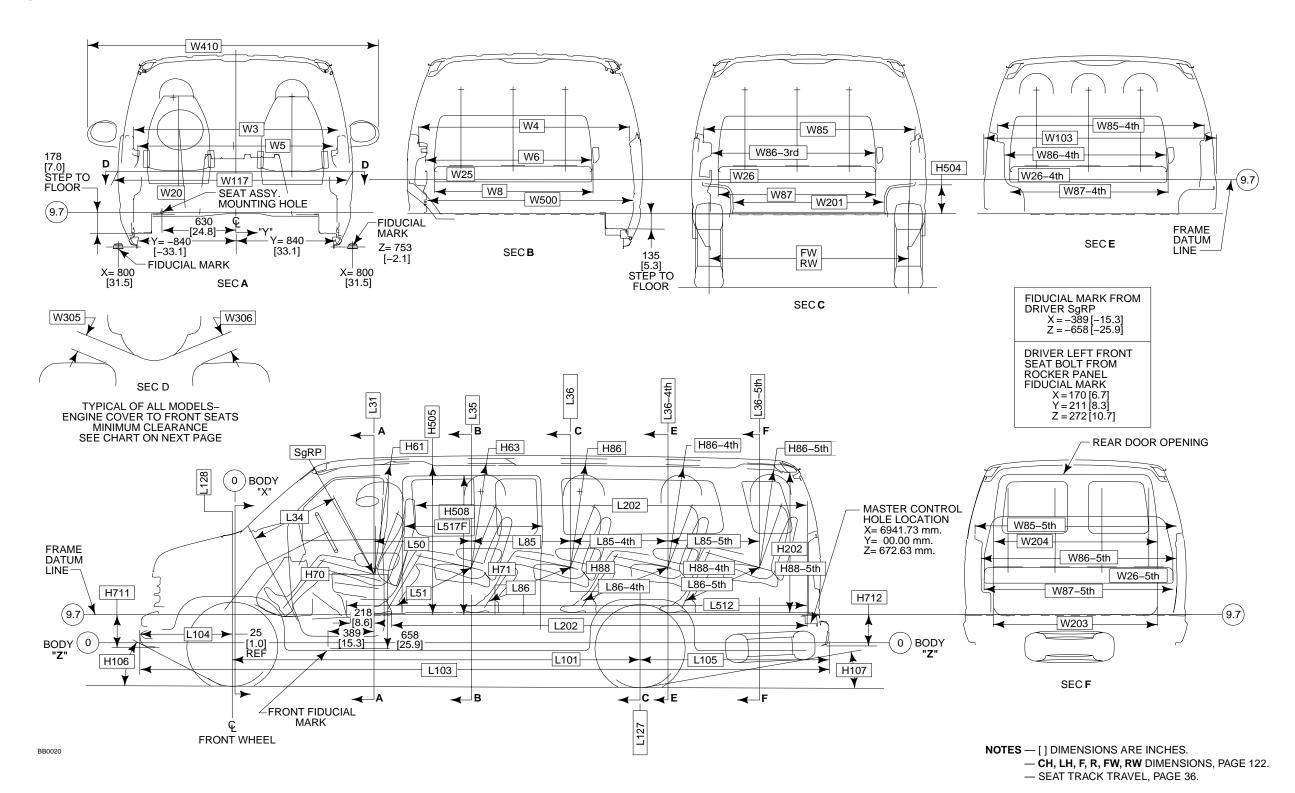

2002 MODEL YEAR

DIMENSIONAL DATA E-350 SUPER DUTY EXTENDED 12/15-PASSENGER

Page 115	E-SERIE
. ago o	

CODE	DESCRIPTION	BASE BUCKET CARGO DOOR	CAPTAIN'S CHAIR SLIDING DOOR
EXTERIOR			
H106	ANGLE OF APPROACH	29.7°	29.7°
H107	ANGLE OF DEPARTURE	10.8°	10.8°
H711	FRAME DATUM LINE TO BOTTOM OF FRONT BUMPER	206 [8.1]	206 [8.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	256 [10.1]	256 [10.1]
L101	WHEELBASE	3505 [138.0]	3505 [138.0]
L103	OVERALL LENGTH	5890 [231.9]	5890 [231.9]
L104	OVERHANG – FRONT	764 [30.1]	764 [30.1
L105	OVERHANG – REAR	1620 [63.8]	1620 [63.8]
L127	REAR WHEEL € X-COORDINATE	3480 [137.0]	3480 [137.0]
L128	FRONT WHEEL € X-COORDINATE	-25 [–1.0]	-25 [-1.0]
W103	VEHICLE WIDTH	2014 [79.3]	2014 [79.3]
W117	BODY WIDTH AT H-POINT	1999 [78.7]	1999 [78.7]
	2002 SAIL MOUNT – MANUAL MIRROR	2560 [100.8]	2560 [100.8]
	2002 SAIL MOUNT – POWER MIRROR	2471 [97.3]	2471 [97.3]
	2002 RECREATIONAL MIRROR	2590 [102.0]	2590 [102.0]
W410	2002.5 SAIL MOUNT – MAN/PWR	2434 [93.9]	2434 [93.9]
	2002.5 TRAILER TOW MIRROR	2605 [102.5]	2605 [102.5]
	2002.5 TRAILER TOW MIRROR (EXTENDED)	2753 [108.4]	2753 [108.4]
FRONT COM	IPARTMENT		
H61	EFFECTIVE HEAD ROOM – FRONT	1079 [42.5]	1069 [42.1]
H70	SgRP FRONT LH/RH (Z)	604 [23.8]/	604 [23.8]/
	, ,	597 [23.5]	597 [23.5]
L31	SgRP FRONT LH/RH (X)	1189 [46.8]/ 1247 [49.1]	1189 [46.8]/ 1247 [49.1]
L34	MAX EFFECTIVE LEG ROOM	1016 [40.0]	1016 [40.0]
W3	SHOULDER ROOM – FRONT	1737 [68.4]	1737 [68.4]
W5	HIP ROOM – FRONT	1666 [65.6]	1666 [65.6]
W20	SgRP FRONT LH/RH (Y)	- 518 [– 20.4]/ 518 [20.4]	- 518 [– 20.4]/ 518 [20.4]
REAR COMP	PARTMENT - CARGO		
H504	WHEELHOUSE HEIGHT	236 [9.3]	236 [9.3]
H505	CARGO HEIGHT – MAX	1333 [52.5]	1326 [52.2]
L202	CARGO LENGTH - CLOSED FRONT	3566 [140.4]	3566 [140.4]
L204	CARGO LENGTH AT BELT – FRONT	3365 [132.5]	3360 [132.3]
L512	CARGO LENGTH TO ENGINE COVER	4219 [166.1]	4219 [166.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1318 [51.9]	1318 [51.9]
W305	SEAT TO ENGINE COVER – DRIVER	185 [7.3]	132 [5.2]
W306	SEAT TO ENGINE COVER – PASSENGER	168 [6.6]	132 [5.2]
W500	CARGO BODY WIDTH AT FLOOR	1686 [66.4]	1686 [66.4]
V16	CARGO VOLUME – REAR OF FRONT SEAT	7023 [276.5]	6982 [274.9]
REAR COMP	PARTMENT - SEATING		
H63	EFFECTIVE HEAD ROOM – 2ND	1021 [40.2]	1021 [40.2]
H71	SgRP 2ND LEFT/CENTER (Z)	665 [26.2]/ 665 [26.2]	665 [26.2]/ 665 [26.2]
H86	EFFECTIVE HEAD ROOM – 3RD	1018 [40.1]	1018 [40.1]
H86–4TH	EFFECTIVE HEAD ROOM – 4TH	1006 [39.6]	1006 [39.6]

CODE	DESCRIPTION	BASE BUCKET CARGO DOOR	CAPTAIN'S CHAIR SLIDING DOOR
REAR COMP	ARTMENT - SEATING (continued)		
H86–5TH	EFFECTIVE HEAD ROOM – 5TH	965 [38.0]	965 [38.0]
H88	SgRP 3RD (Z)	665 [26.2]	665 [26.2]
H88–4TH	SgRP 4TH (Z)	665 [26.2]	665 [26.2]
H88–5TH	SgRP 5TH (Z)	665 [26.2]	665 [26.2]
L35	SgRP 2ND LEFT/CENTER (X)	2032 [80.0]	2032 [80.0]
L36	SgRP 3RD (X)	2883 [113.5]	2883 [113.5]
L36–4TH	SgRP 4TH (X)	3718 [146.4]	3718 [146.4]
L36–5TH	SgRP 5TH (X)	4508 [177.5]	4508 [177.5]
L50	H-POINT COUPLE DISTANCE	843 [33.2]	843 [33.2]
L51	EFFECTIVE LEG ROOM – 2ND	937 [36.9]	937 [36.9]
L85	SgRP COUPLE DISTANCE – 3RD	851 [33.5]	851 [33.5]
L85–4TH	SgRP COUPLE DISTANCE – 4TH	836 [32.9]	836 [32.9]
L85–5TH	SgRP COUPLE DISTANCE – 5TH	787 [31.0]	787 [31.0]
L86	EFFECTIVE LEG ROOM – 3RD	1051 [41.4]	1051 [41.4]
L86–4TH	EFFECTIVE LEG ROOM – 4TH	1036 [40.8]	1036 [40.8]
L86–5TH	EFFECTIVE LEG ROOM – 5TH	978 [38.5]	978 [38.5]
W4	SHOULDER ROOM 2ND	1791 [70.5]	1801 [70.9]
W6	HIP ROOM 2ND – ARMREST DOWN/UP	1417 [55.8]/ 1689 [66.5]	1417 [55.8]/ 1689 [66.5]
W8	SEATING WIDTH – 2ND	1354 [53.3]	1354 [53.3]
W25	SgRP 2ND LEFT/CENTER (Y)	- 543 [– 21.4]/ - 99 [– 3.9]	- 543 [– 21.4]/ - 99 [– 3.9]
W26	SgRP 3RD LH/CENTER (Y)	- 543 [– 21.4]/ - 99 [– 3.9]	- 543 [– 21.4]/ - 99 [– 3.9]
W26-4TH	SgRP 4TH LH (Y)	- 546 [– 21.5]	- 546 [– 21.5]
W26-5TH	SgRP 5TH LH (Y)	- 632 [– 24.9]	- 632 [– 24.9]
W85	SHOULDER ROOM – 3RD	1808 [71.2]	1808 [71.2]
W85–4TH	SHOULDER ROOM – 4TH	1768 [69.6]	1768 [69.6]
W85–5TH	SHOULDER ROOM – 5TH	1730 [68.1]	1730 [68.1]
W86–3RD	HIP ROOM – 3RD ARMREST DOWN/UP	1415 [55.7]/ 1699 [66.9]	1415 [55.7]/ 1699 [66.9]
W86–4TH	HIP ROOM – 4TH ARMREST DOWN/UP (3-PASSENGER)	1402 [55.2]/ 1681 [66.2]	1402 [55.2]/ 1681 [66.2]
W86–5TH	HIP ROOM – 4TH/5TH (4-PASSENGER)	1684 [66.3]/ 1676 [66.0]	1684 [66.3]/ 1676 [66.0]
W87	SEATING WIDTH – 3RD	1354 [53.3]	1354 [53.3]
W87–4TH	SEATING WIDTH – 4TH (3-PASSENGER)	1351 [53.2]	1351 [53.2]
W87-5TH	SEATING WIDTH – 4TH/5TH (4-PASSENGER)	1623 [63.9]	1623 [63.9]
DOOR OPEN	INGS (ENTRANCE ROOM)		
H202	REAR OPENING HEIGHT	1226 [48.3]	1206 [47.5]
H508	ENTRANCE HEIGHT – CARGO SIDE	1226 [48.3]	1206 [47.5]
L517F	ENTRANCE LENGTH – CARGO SIDE	1196 [47.1]	1006 [39.6]
W203	REAR OPENING WIDTH @ FLOOR	1308 [51.5]	1308 [51.5]
W204	REAR OPENING WIDTH @ BELT	1382 [54.4]	1382 [54.4]

DIMENSIONAL DATA E-150/E-350 SUPER DUTY WAGON 7-PASSENGER (QUAD CAPTAIN'S CHAIRS/3-PASSENGER BENCH)

2002 MODEL YEAR

NOTES - [] DIMENSIONS ARE INCHES.

- SEAT TRACK TRAVEL, PAGE 36.

- CH, LH, F, R, FW, RW DIMENSIONS, PAGE 122.

Page 116

BB0021

E-SERIES

FRONT WHEEL

W410 W4 W85 W3 W5 W86 135 [5.3] STEP TO W6 178 [7.0] STEP TO FLOOR W26 W25 ₩117 ⊢FLOOR **▼** W8 → W87 W20 W500 W201 (9.7) Y=-840 [-33.1] H504 FIDUCIAL MARK
Z=-53
[-2.1] Y=840 Z=-53 [-2.1] [33.1] FRAME DATUM LINE SEC B -FIDUCIAL MARK X=800 [31.5] X=800 [31.5] SEC A SEC C H61 SgRP H505 W305 W306 0 BODY H86 H63 L204 L34 L85 L50 FRAME DATUM H88 **→** H71 SEC D LINE -TYPICAL OF ALL MODELS -L86 ENGINE COVER TO FRONT SEATS
MINIMUM CLEARANCE L512 SEE CHART ON NEXT PAGE (9.7) (9.7) L202 [8.6] 25 0 BODY "Z" —[1.0] **∢**REF (0) BODY "Z" **≺** 389 **≻** 658 [25.9] [15.3] MASTER CONTROL HOLE LOCATION X = 6433.73 mm**⊸** B C FRONT FIDUCIAL Y = 00.0 mmL127 Z = 672.63 mm

DIMENSIONAL DATA E-150/E-350 SUPER DUTY WAGON 7-PASSENGER (QUAD CAPTAIN'S CHAIRS/3-PASSENGER BENCH)

2002 MODEL YEAR

Page 117 E-SERIES


CODE	DESCRIPTION	7-PASSENGER QUAD CAPTAIN'S CHAIRS/ 3-PASSENGER BENCH
RONT CO	MPARTMENT	
H61	EFFECTIVE HEAD ROOM – FRONT	1069 [42.1]
H70	SgRP FRONT LH/RH (Z)	604 [23.8]/ 597 [23.5]
L31	SgRP FRONT LH/RH (X)	1189 [46.8]/ 1247 [49.1]
L34	MAX EFFECTIVE LEG ROOM	1016 [40.0]
W3	SHOULDER ROOM – FRONT	1737 [68.4]
W5	HIP ROOM – FRONT	1666 [65.6]
W20	SgRP FRONT LH/RH (Y)	- 518 [– 20.4]/ 518 [20.4]
W117	BODY WIDTH AT H-POINT	1999 [78.7]
	2002 SAIL MOUNTED – MANUAL MIRROR	2560 [100.8]
	2002 SAIL MOUNTED – POWER MIRROR	2471 [97.3]
W440	2002 RECREATIONAL MIRROR	2591 [102.0]
W410	2002.5 SAIL MOUNT – MAN/PWR	2434 [93.9]
	2002.5 TRAILER TOW MIRROR	2605 [102.5]
	2002.5 TRAILER TOW MIRROR (EXTENDED)	2753 [108.4]
REAR COM	PARTMENT - CARGO	
H504	WHEELHOUSE HEIGHT	236 [9.3]
H505	CARGO HEIGHT – MAX	1326 [52.2]
L202	CARGO LENGTH - CLOSED FRONT	3058 [120.4]
L204	CARGO LENGTH AT BELT – FRONT	2852 [112.3]
L512	CARGO LENGTH TO ENGINE COVER	3711 [146.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1303 [51.3]
W500	CARGO BODY WIDTH AT FLOOR	1686 [66.4]
V16	CARGO VOLUME – REAR OF FRONT SEAT – CU. FT.	234.9

CODE	DESCRIPTION	7-PASSENGER QUAD CAPTAIN'S CHAIRS/ 3-PASSENGER BENCH
REAR COM	PARTMENT – SEATING	
H63	EFFECTIVE HEAD ROOM – 2ND	1051 [41.4]
H71	SgRP 2ND (Z)	645 [25.4]
H86	EFFECTIVE HEAD ROOM – 3RD	1018 [40.1]
H88	SgRP 3RD (Z)	665 [26.2]
L35	SgRP 2ND (X)	2134 [84.0]
L36	SgRP 3RD (X)	3020 [118.9]
L50	H-POINT COUPLE DISTANCE	945 [37.2]
L51	EFFECTIVE LEG ROOM – 2ND	1024 [40.3]
L85	SgRP COUPLE DISTANCE – 3RD	886 [34.9]
L86	LEG ROOM – 3RD	1057 [41.6]
W4	SHOULDER ROOM - 2ND	1651 [65.0]
W6	HIP ROOM – 2ND – ARMREST UP/DOWN	1745 [68.7]/ 1417 [55.8]
W8	SEATING WIDTH – 2ND	516 [20.3]
W25	SgRP 2ND LH (Y)	- 432 [– 17.0]
W26	SgRP 3RD LH (Y)	- 546 [– 21.5]
W85	SHOULDER ROOM – 3RD	1651 [65.0]
W86	HIP ROOM – 3RD – ARMREST UP/DOWN	1699 [66.9]/ 1415 [55.7]
W87	SEATING WIDTH	1349 [53.1]
W305	SEAT TO ENGINE COVER – DRIVER	133 [5.24]
W306	SEAT TO ENGINE COVER – PASSENGER	131 [5.17]

DIMENSIONAL DATA E-150/250/350 SUPER DUTY VAN

2002 MODEL YEAR

Page 118 E-SERIES

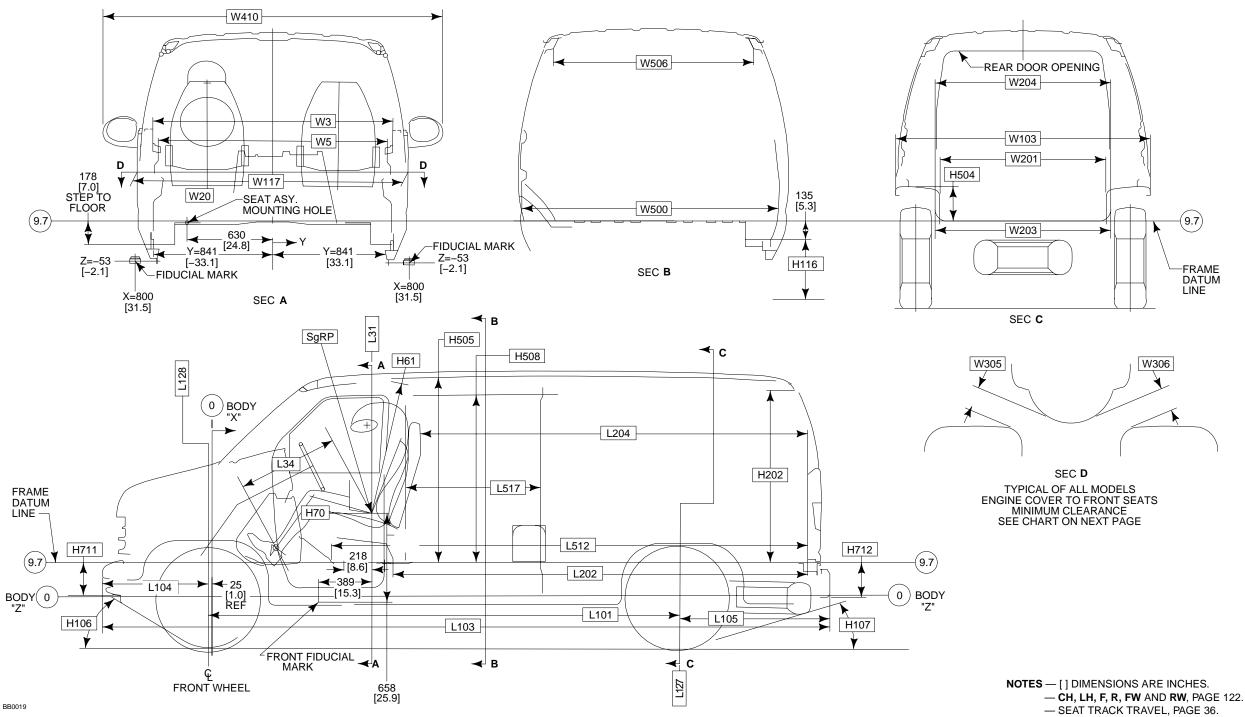

DIMENSIONAL DATA E-150/250/350 SUPER DUTY VAN



Page 119 E-SERIES

CODE	DESCRIPTION	REGULAR VAN BASE BUCKET 2-PASS SLIDING DOOR	REGULAR VAN BASE BUCKET 2-PASS CARGO DOOR	SUPER VAN CAPTAIN'S CHAIR 2-PASS CARGO DOOR
EXTERIOR				
H106	ANGLE OF APPROACH	24.5°	24.5°	24.5°
H107	ANGLE OF DEPARTURE	13.4°	13.4°	10.8°
H711	FRAME DATUM LINE TO BOTTOM OF FRONT BUMPER	206 [8.1]	206 [8.1]	206 [8.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	256 [10.1]	256 [10.1]	256 [10.1]
L101	WHEELBASE	3505 [138.0]	3505 [138.0]	3505 [138.0]
L103	OVERALL LENGTH	5382 [211.9]	5382 [211.9]	5890 [231.9]
L104	OVERHANG – FRONT	764 [30.1]	764 [30.1]	764 [30.1]
L105	OVERHANG – REAR	1112 [43.8]	1112 [43.8]	1620 [63.8]
L127	REAR WHEEL € X-COORDINATE	3480 [137.0]	3480 [137.0]	3480 [137.0]
L128	FRONT WHEEL€ X-COORDINATE	- 25 [- 1.0]	- 25 [- 1.0]	- 25 [- 1.0]
W103	VEHICLE WIDTH	2014 [79.3]	2014 [79.3]	2014 [79.3]
W117	BODY WIDTH AT H-POINT	1999 [78.7]	1999 [78.7]	1999 [78.7]
	2002 SAIL MOUNT – MANUAL MIRROR	2560 [100.8]	2560 [100.8]	2560 [100.8]
	2002 SAIL MOUNT – POWER MIRROR	2471 [97.3]	2471 [97.3]	2471 [97.3]
W440	2002 RECREATIONAL MIRROR	2591 [102.0]	2591 [102.0]	2591 [102.0]
W410	2002.5 SAIL MOUNT – MAN/PWR	2434 [93.9]	2434 [93.9]	2434 [93.9]
	2002.5 TRAILER TOW MIRROR	2605 [102.5]	2605 [102.5]	2605 [102.5]
	2002.5 TRAILER TOW MIRROR (EXTENDED)	2753 [108.4]	2753 [108.4]	2753 [108.4]
FRONT CO	MPARTMENT			
H61	EFFECTIVE HEAD ROOM – FRONT	1079 [42.5]	1079 [42.5]	1069 [42.1]
H70	SgRP – LH/RH – FRONT (Z)	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]
L31	SgRP – LH/RH – FRONT (X)	1189 [46.8]/ 1247 [49.1]	1189 [46.8]/ 1247 [49.1]	1189 [46.8]/ 1247 [49.1]
L34	MAXIMUM EFFECTIVE LEG ROOM – FRONT	1016 [40.0]	1016 [40.0]	1016 [40.0]
154W3	SHOULDER ROOM - FRONT	1737 [68.4]	1737 [68.4]	1737 [68.4]

		REGULAR VAN BASE BUCKET	REGULAR VAN BASE BUCKET	SUPER VAN CAPTAIN'S CHAIR
CODE	DESCRIPTION	2-PASS SLIDING DOOR	2-PASS CARGO DOOR	2-PASS CARGO DOOR
FRONT CO	MPARTMENT (continued)			•
W5	HIP ROOM – FRONT	1666 [65.6]	1666 [65.6]	1666 [65.6]
W20	SgRP – LH/RH – FRONT (Y)	- 518 [- 20.4]/ 518 [20.4]	- 518 [- 20.4]/ 518 [20.4]	- 518 [- 20.4]/ 518 [20.4]
W305	SEAT TO ENGINE COVER – DRIVER	185 [7.3]	185 [7.3]	132 [5.2]
W306	SEAT TO ENGINE COVER – PASSENGER	168 [6.6]	168 [6.6]	132 [5.2]
REAR COM	IPARTMENT – CARGO			
H504	WHEELHOUSE HEIGHT	241 [9.5]	241 [9.5]	241 [9.5]
H505	CARGO HEIGHT – MAXIMUM	1333 [52.5]	1333 [52.5]	1333 [52.5]
L202	CARGO LENGTH – CLOSED FRONT	3061 [120.5]	3061 [120.5]	3566 [140.4]
L204	CARGO LENGTH AT BELT – FRONT	2857 [112.5]	2857 [112.5]	3360 [132.3]
L512	CARGO LENGTH TO ENGINE COVER	3711 [146.1]	3711 [146.1]	4219 [166.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1341 [52.8]	1341 [52.8]	1341 [52.8]
W500	CARGO BODY WIDTH AT FLOOR	1839 [72.4]	1839 [72.4]	1839 [72.4]
W506	CARGO WIDTH AT ROOF RAIL	1559 [61.4]	1559 [61.4]	1559 [61.4]
V16	CARGO VOLUME – REAR OF FRONT SEAT WHICH IS IN ITS FORWARD-MOST ADJUSTMENT – CU.FT.	256.5	256.5	309.4
DOOR OPE	ENINGS (ENTRANCE ROOM)			
H116	STEP HEIGHT – 2ND	457 [18.0]	457 [18.0]	518 [20.4]
H202	REAR OPENING HEIGHT	1227 [48.3]	1227 [48.3]	1206 [47.5]
H508	ENTRANCE HEIGHT – CARGO SIDE	1227 [48.3]	1227 [48.3]	1206 [47.5]
L517	ENTRANCE LENGTH – CARGO SIDE	1006 [39.6]	1196 [47.1]	1196 [47.1]
W203	REAR OPENING WIDTH AT FLOOR	1305 [51.4]	1305 [51.4]	1305 [51.4]
W204	REAR OPENING WIDTH AT BELT	1382 [54.4]	1382 [54.4]	1382 [54.4]

E-SERIES

FRONT WHEEL

DIMENSIONAL DATA E-150/250/350 SUPER DUTY **CREW VAN (REGULAR/EXTENDED LENGTH)**



NOTES — [] DIMENSIONS ARE INCHES.

- SEAT TRACK TRAVEL, PAGE 36.

- CH, LH, F, R, FW, RW DIMENSIONS, PAGE 122.

W410 W506 **REAR DOOR OPENING** W204 W3 W103 W5 W201 D 178 [7.0] STEP TO FLOOR H504 W117 W20 5.3 -SEAT ASY. MOUNTING HOLE [0.2]W500 (9.7) W203 630 [24.8] Y FIDUCIAL MARK Y=841 FIDUCIAL MARK Z=-53 [-2.1] [33.1] H116 FRAME [-2.1] SEC B DATUM LINE X=800 X=800 [31.5] H505 SEC A [31.5] H508 SEC C SgRP L128 **→** A H61 **⊸** в **≺**⊓c W305 W306 0)BODY L204 L34 H202 1826.7 [71.9] REG. VAN FRAME DATUM LINE — L517 ⊀ SEC D 2334.7 [91.9] EXTENDED VAN TYPICAL OF ALL MODELS ENGINE COVER TO FRONT SEATS H70 MINIMUM CLEARANCE SEE CHART ON NEXT PAGE L512 H712 H711 (9.7) (9.7)[8.6] L202 **◄** 389 **►** L104 ➤ **←**25 0 BODY "Z" __[15.3]___ BODY 0 -[1.0] REF L101 ► L105 H106 H107 L103 **⊸** В **⊸**¦c FRONT FIDUCIAL L127 MARK 658 [25.9]

Page 120

DIMENSIONAL DATA E-150/250/350 SUPER DUTY CREW VAN (REGULAR/EXTENDED LENGTH)

2002 MODEL YEAR

Page 121 E-SERIES


CODE	DESCRIPTION	REGULAR LENGTH BASE BUCKET 5-PASS CARGO DOOR	EXTENDED LENGTH BASE BUCKET 5-PASS CARGO DOOR
EXTERIO	OR		
H106	ANGLE OF APPROACH	24.5°	24.5°
H107	ANGLE OF DEPARTURE	13.4°	10.8°
H711	FRAME DATUM LINE TO BOTTOM OF FRONT BUMPER	206 [8.1]	206 [8.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	256 [10.1]	256 [10.1]
L101	WHEELBASE	3505 [138.0]	3505 [138.0]
L103	OVERALL LENGTH	5382 [211.9]	5890 [231.9]
L104	OVERHANG - FRONT	764 [30.1]	764 [30.1]
L105	OVERHANG — REAR	1112 [43.8]	1620 [63.8]
L127	REAR WHEEL & X-COORDINATE	3480 [137.0]	3480 [137.0]
L128	FRONT WHEEL & X-COORDINATE	-25 [-1.0]	-25 [-1.0]
W103	VEHICLE WIDTH	2014 [79.3]	2014 [79.3]
W117	BODY WIDTH AT H-POINT	1999 [78.7]	1999 [78.7]
	2002 SAIL MOUNT — MANUAL MIRROR	2560 [100.8]	2560 [100.8]
	2002 SAIL MOUNT — POWER MIRROR	2471 [97.3]	2471 [97.3]
W410	2002 RECREATIONAL MIRROR	2590 [102.0]	2590 [102.0]
VV-10	2002.5 SAIL MOUNT — MAN/PWR MIRROR	2434 [93.9]	2434 [93.9]
	2002.5 TRAILER TOW MIRROR	2605 [102.5]	2605 [102.5]
	2002.5 TRAILER TOW MIRROR (EXTENDED)	2753 [108.4]	2753 [108.4]
FRONT	COMPARTMENT		
H61	EFFECTIVE HEAD ROOM — FRONT	1079 [42.5]	1069 [42.1]
H70	SgPR — LH/RH — FRONT (Z)	604 [23.8]/ 597 [23.5]	604 [23.8]/ 597 [23.5]
L31	SgPR — LH/RH — FRONT (X)	1189 [46.8]/ 1247 [49.1]	1189 [46.8]/ 1247 [49.1]
L34	MAXIMUM EFFECTIVE LEG ROOM — FRONT	1016 [40.0]	1016 [40.0]
W3	SHOULDER ROOM — FRONT	1737 [68.4]	1737 [68.4]
W5	HIP ROOM — FRONT	1666 [65.6]	1666 [65.6]
W20	SgRP — LH/RH — FRONT (Y)	-518 [-20.4]/ 518 [20.4]	-518 [-20.4]/ 518 [20.4]
W305	SEAT TO ENGINE COVER - DRIVER	185 [7.3]	132 [5.2]
W306	SEAT TO ENGINE COVER — PASSENGER	168 [6.6]	132 [5.2]

CODE	DESCRIPTION	REGULAR LENGTH BASE BUCKET 5-PASS CARGO DOOR	EXTENDED LENGTH BASE BUCKET 5-PASS CARGO DOOR
REAR C	OMPARTMENT — SEATING		
H63	EFFECTIVE HEAD ROOM — 2ND	1021 [40.2]	1021 [40.2]
H71	SgRP 2ND LEFT/CENTER (Z)	665 [26.2]/ 665 [26.2]	665 [26.2]/ 665 [26.2]
L35	SgRP 2ND LEFT/CENTER (X)	2032 [80.0]	2032 [80.0]
L50	H-POINT COUPLE DISTANCE	843 [33.2]	843 [33.2]
L51	EFFECTIVE LEG ROOM — 2ND	937 [36.9]	937 [36.9]
W4	SHOULDER ROOM - 2ND	1791 [70.5]	1801 [70.9]
W6	HIP ROOM — 2ND ARMREST DOWN/UP	1417 [55.8]/ 1689 [66.5]	1417 [55.8]/ 1689 [66.5]
W8	SEATING WIDTH - 2ND	1354 [53.3]	1354 [53.3]
W25	SgRP 2ND LEFT/CENTER (Y)	-543 [-21.4]/ -99 [-3.9]	-543 [-21.4]/ -99 [-3.9]
REAR C	OMPARTMENT — CARGO		
H504	WHEELHOUSE HEIGHT	241 [9.5]	241 [9.5]
H505	CARGO HEIGHT — MAXIMUM	1333 [52.5]	1333 [52.5]
L202	CARGO LENGTH - CLOSED FRONT	3061 [120.5]	3566 [140.4]
L204	CARGO LENGTH AT BELT — FRONT	2857 [112.5]	3360 [132.3]
L512	CARGO LENGTH TO ENGINE COVER	3711 [146.1]	4219 [166.1]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1341 [52.8]	1341 [52.8]
W500	CARGO BODY WIDTH AT FLOOR	1839 [72.4]	1839 [72.4]
W506	CARGO WIDTH AT ROOF RAIL	1559 [61.4]	1559 [61.4]
V16	CARGO VOLUME — REAR OF PARTITION LITERS/CU.FT.	3805.7/134.4	4872.7/172.1
DOOR C	PENINGS (ENTRANCE ROOM)	·	
H116	STEP HEIGHT — 2ND	457 [18.0]	518 [20.4]
H202	REAR OPENING HEIGHT	1227 [48.3]	1206 [47.5]
H508	ENTRANCE HEIGHT — CARGO SIDE	1227 [48.3]	1206 [47.5]
L517	ENTRANCE LENGTH — CARGO SIDE	1196 [47.1]	1196 [47.1]
W203	REAR OPENING WIDTH AT FLOOR	1305 [51.4]	1305 [51.4]
W204	REAR OPENING WIDTH AT BELT	1382 [54.4]	1382 [54.4]

AXLE/TIRE/VEHICLE HEIGHT DATA E-SERIES VAN/WAGON

2002 MODEL YEAR

Page 122 E-SERIES

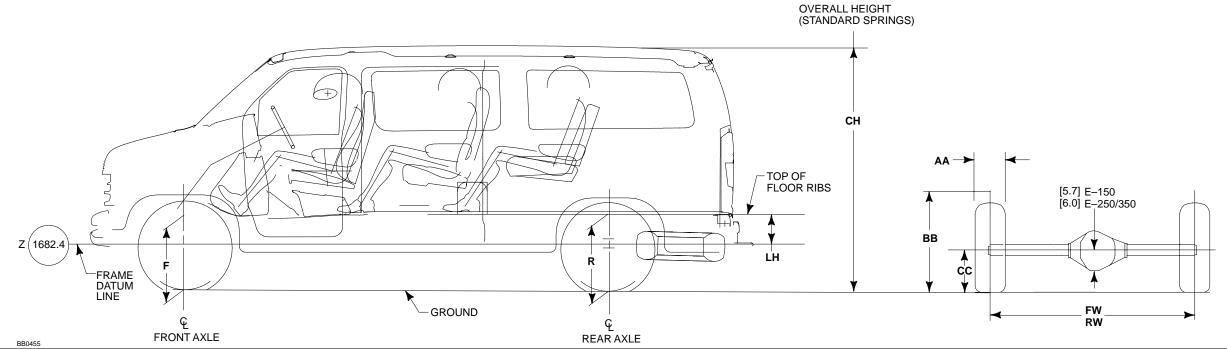

				F HEIGHT AT WH	EEL FRONT ⁽¹⁾	R HEIGHT AT A	XLE REAR ⁽¹⁾	L	.H ⁽¹⁾	С	H ⁽¹⁾					
MODEL	WB [IN]	GVWR [LB]	BASE TIRE(5)	CURB ⁽²⁾	LOADED(3)	CURB ⁽²⁾	LOADED(3)	EMPTY	LOADED	EMPTY	LOADED	AA	ВВ	CC*	FW	RW
E-150 VAN	138	6050 6700	P225/75R15SL P235/75R15XL	597 [23.5]	564 [22.2]	637 [25.1]	561 [22.1]	683 [26.9]	574 [22.6]	2050 [80.7]	1976 [77.8]	218 [8.6]	676 [26.6]	328 [12.9]	1763 [69.4]	1702 [67.0]
E-150 VAN ⁽⁴⁾	138	7000	P235/75R15XL	625 [24.6]	576 [22.7]	655 [25.8]	569 [22.4]	686 [27.0]	584 [23.0]	2055 [80.9]	1984 [78.1]	236 [9.3]	754 [29.7]	333 [13.1]	1763 [69.4]	1702 [67.0]
E-250 VAN	138	7200	LT225/75R16D	663 [26.1]	625 [24.6]	703 [27.7]	640 [25.2]	742 [29.2]	640 [25.2]	2118 [83.4]	2032 [80.0]	223 [8.8]	752 [29.6]	345 [13.6]	1763 [69.4]	1702 [67.0]
E-250 EXTENDED VAN	138	7300	LT225/75R16D	663 [26.1]	625 [24.6]	734 [28.9]	640 [25.2]	752 [29.6]	645 [25.4]	2118 [83.4]	2032 [80.0]	223 [8.8]	752 [29.6]	345 [13.6]	1763 [69.4]	1702 [67.0]
E-350 SUPER DUTY VAN	138	9500	LT245/75R16E	703 [27.7]	643 [25.3]	790 [31.1]	665 [26.2]	808 [31.8]	668 [26.3]	2136 [84.1]	2045 [80.5]	249 [9.8]	767 [30.2]	358 [14.1]	1763 [69.4]	1702 [67.0]
E-350 SUPER DUTY EXTENDED VAN	138	9400	LT245/75R16E	711 [28.0]	640 [25.2]	785 [30.9]	668 [26.3]	813 [32.0]	676 [26.6]	2136 [84.1]	2045 [80.5]	249 [9.8]	767 [30.2]	358 [14.1]	1763 [69.4]	1702 [67.0]
E-150 WAGON	138	7000	P235/75R15XL	620 [24.4]	576 [22.7]	665 [26.2]	561 [22.1]	683 [26.9]	584 [23.0]	2055 [80.9]	1984 [78.1]	236 [9.3]	754 [29.7]	333 [13.1]	1763 [69.4]	1702 [67.0]
E-350 SUPER DUTY WAGON	138	8700	LT225/75R16E	703 [27.7]	627 [24.7]	721 [28.4]	612 [24.1]	731 [28.8]	610 [24.0]	2118 [83.4]	2032 [80.0]	249 [9.8]	752 [29.6]	345 [13.6]	1763 [69.4]	1702 [67.0]
E-350 SUPER DUTY EXTENDED WAGON	138	9100 9300	LT245/75R16E	706 [27.8]	643 [25.3]	747 [29.4]	645 [25.4]	767 [30.2]	645 [25.4]	2136 [84.1]	2045 [80.5]	249 [9.8]	780 [30.7]	358 [14.1]	1763 [69.4]	1702 [67.0]

⁽¹⁾ THE HEIGHT DATA SHOWN REPRESENTS DIMENSIONS OF A BASE/STANDARD VEHICLE WITH NO OPTIONS. ACTUAL HEIGHT MAY VARY DUE TO PRODUCTION TOLERANCES.

NOTES — [] DIMENSIONS ARE INCHES.

F/R - TO FRAME DATUM LINE 633.7 MM (24.95 INCHES);
 TO TOP OF FLOOR BEADS ADD 113.2 MM (4.46 INCHES).

⁽²⁾ HEIGHT AT BASE CURB WEIGHT WITH STANDARD SPRINGS

⁽³⁾ LOADED HEIGHT AT SPRING RATING WITH STANDARD SPRINGS

⁽⁴⁾ RV CONVERSION

⁽⁵⁾ ADDITIONAL TIRE DATA, PAGE 139.

^{* —} STATIC LOADED RADIUS REPRESENTS AXLE \P TO GROUND WITH MAXIMUM RATED LOAD ON TIRE AT MAXIMUM PRESSURE.

INCOMPLETE E-150/250/350 SUPER DUTY WITH RECREATIONAL TRIM


Page 123 E-SERIES

NOTE: This sketch identifies the locations in 138-inch wheelbase Regular Length E-Series van equipped with Recreational Trim where Ford Motor Company provides anchorages for attachment of the upper or "D-ring" ends of the torso restraints for second and third row seats that

maybe installed by subsequent-stage manufacturers. The longitudinal distances from the vertical reference line for the second and third row seat anchorages are 116.4 inches and 158.5 inches, respectively.

NOTE: If a left-hand, second-row seat is installed, an anchorage must be installed by the subsequent-stage manufacturer on the left side of the vehicle at 16.4 inches. (This anchorage should be located symmetrically opposite the corresponding right-hand anchorage installed by Ford.) A nut mounted to a reinforcement plate and four rivets are furnished for this

purpose by Ford with the incomplete vehicle as part of the Recreational Trim. The sketch also identifies the rearmost seating reference points (SgRP's) for second and third row seats that may be installed. These are 106.1 inches and 148.4 inches (longitudinal), respectively. Call the Ford Truck Body Builders Advisory Service if there are any questions regarding this sketch.

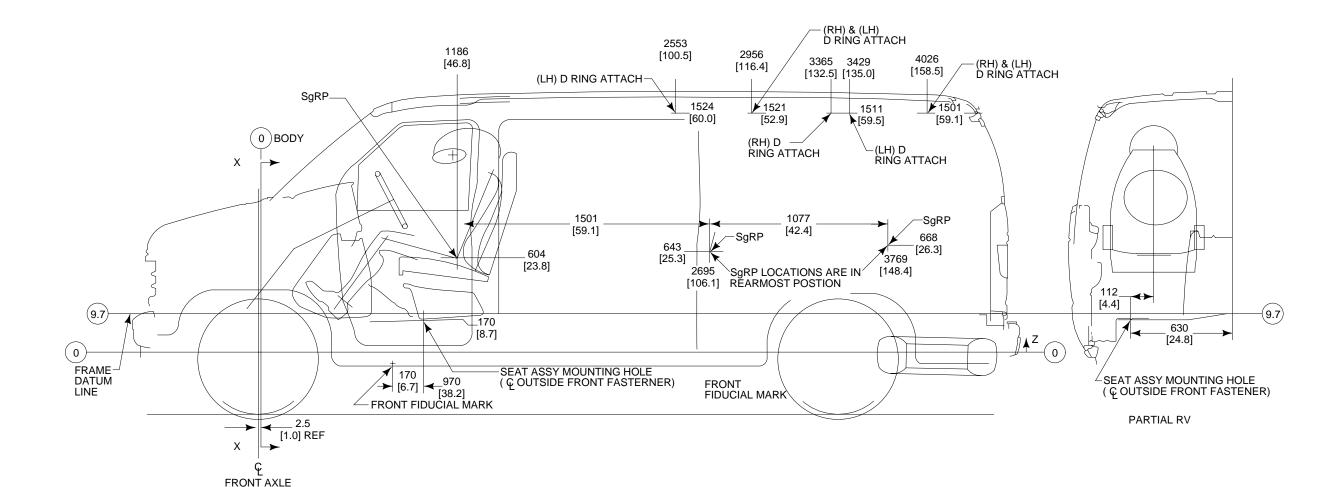


Page 124 E-SERIES

E-350 SUPER DUTY CUTAWAY 138" WHEELBASE (SRW/DRW)




- FOR FUEL FILLER LOCATIONS, SEE PAGE 140.

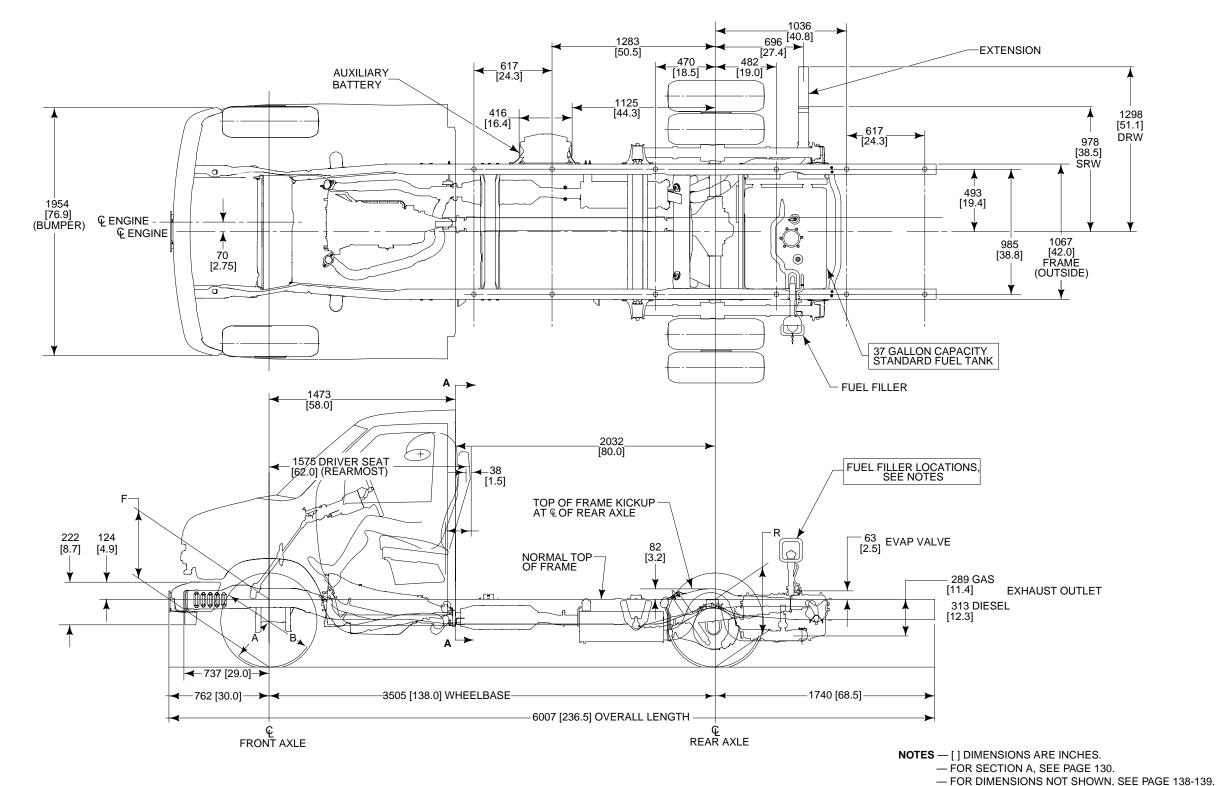


E-350/450 SUPER DUTY CUTAWAY 138" WHEELBASE (SRW/DRW)




Page 125 E-SERIES

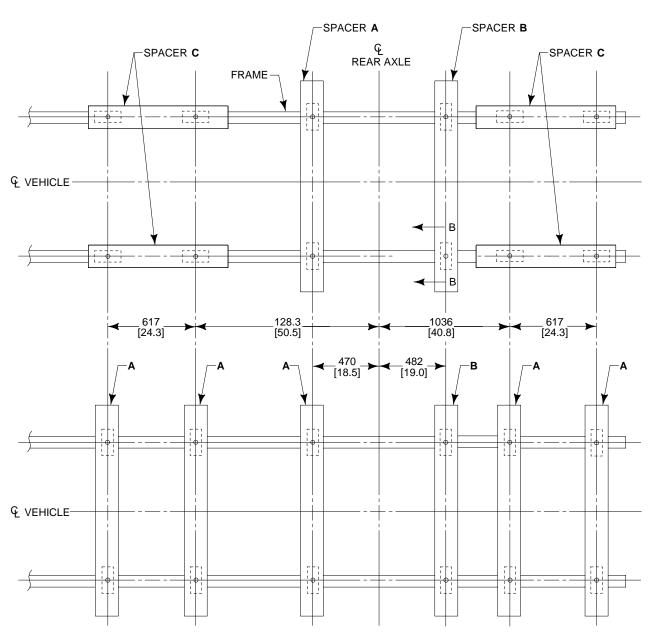

INCLUDES 6 LATERAL FRAME SPACERS WITH 12 BODY MOUNTS. USES SAME FRAME HOLES FOR LONGITUDINAL/LATERAL FRAME SPACER STANDARD SYSTEM.

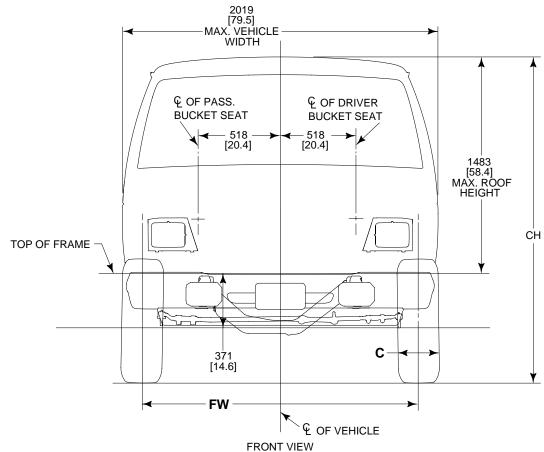

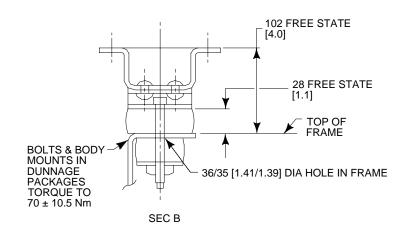

NOTES — [] DIMENSIONS ARE INCHES.

- FOR SECTION A, SEE PAGE 130.
- FOR DIMENSIONS NOT SHOWN, SEE PAGE 138-139.

E-350/450 SUPER DUTY CUTAWAY 158" WHEELBASE (SRW/DRW)



- FOR FUEL FILLER LOCATIONS,

SEE PAGE 140.

E-SERIES Page 126 1036 696 [40.8] [27.4] [50.5] **EXTENSION** 470 [18.5] 482 [19.0] **AUXILIARY** [38.9] **BATTERY** 1633 [64.3] **←**416→ [16.4] **←** 617_ [24.3] 1298 [51.1] 978 [38.5] SRW DRW 493 1954 [76.9] [19.4] ENGINE -(BUMPER) ♥ ENGINE 9 1067 [42.0] FRAME (OUTSIDE) 70 [38.8] [2.75] 37 GALLON FUEL TANK IS STANDARD ON ALL E-350. 55 GALLON FUEL TANK IS STANDARD ON ALL E-450 OR ALL 176" WHEELBASE - FUEL FILLER 800 [31.5] E-350 _1473_ [58.0] AND OPTIONAL ON 158" _620 _ [24.4] WHEELBASE 858 [33.8] E-450 (+) 1575 DRIVER SEAT [62.0] (REARMOST) FUEL FILLER LOCATIONS, SEE NOTES [1.5] TOP OF FRAME KICKUP – AT © OF REAR AXLE 124 - 63 [2.5] EVAP VALVE 82 [3.2] [8.7] [4.9]NORMAL TOP -OF FRAME 289 GAS [11.4] **EXHAUST OUTLET** 313 DIESEL [12.3] NOTES — [] DIMENSIONS ARE INCHES. - FOR SECTION A, SEE PAGE 130. **←** 660 [26.0] - FOR DIMENSIONS NOT SHOWN, SEE PAGE 138-139. -762 [30.0] - 4013 [158.0] WHEELBASE **—1740 [68.5]**

-6515 [256.5] OVERALL LENGTH


REAR AXLE

FRONT AXLE

E-350/450 SUPER DUTY CUTAWAY 158" WHEELBASE (SRW/DRW)

2002 MODEL YEAR

Page 127 E-SERIES

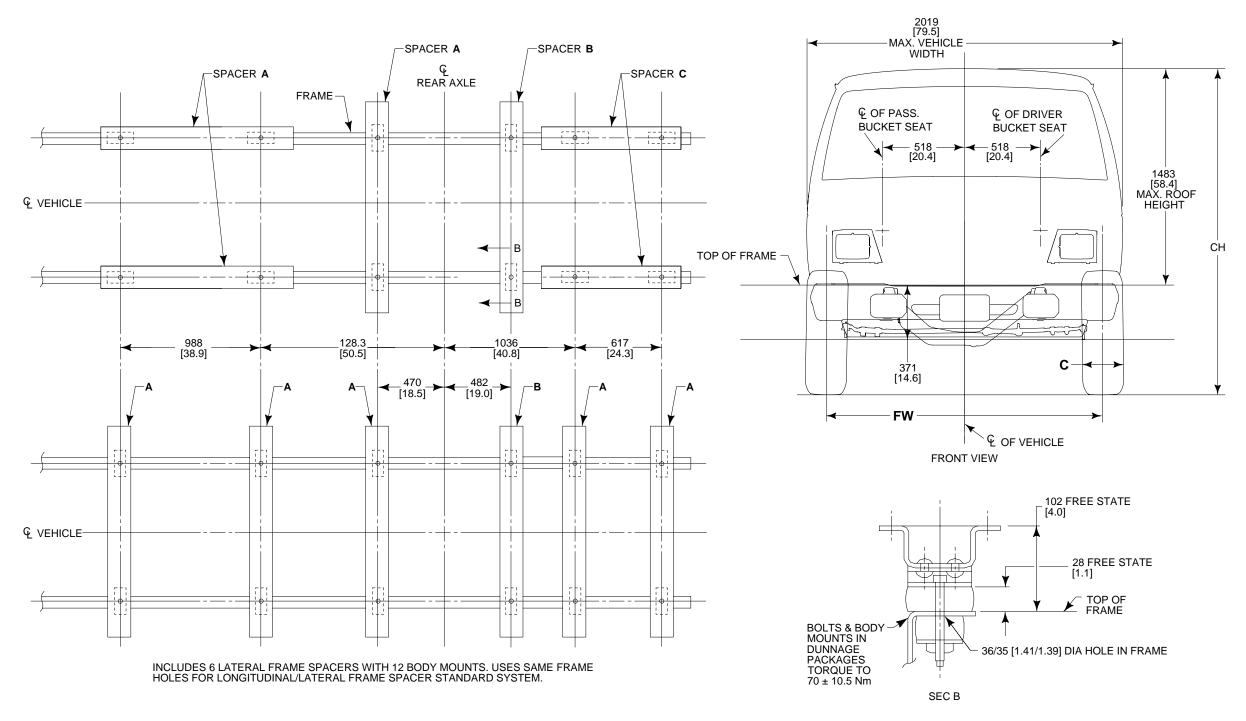


NOTES — [] DIMENSIONS ARE INCHES.

- FOR DIMENSIONS NOT SHOWN, SEE PAGE 137-139.
- FOR DETAILED SPACER INFORMATION, SEE PAGE 129.

E-350/450 SUPER DUTY CUTAWAY 176" WHEELBASE (DRW)

2002 MODEL YEAR


Page 128 E-SERIES

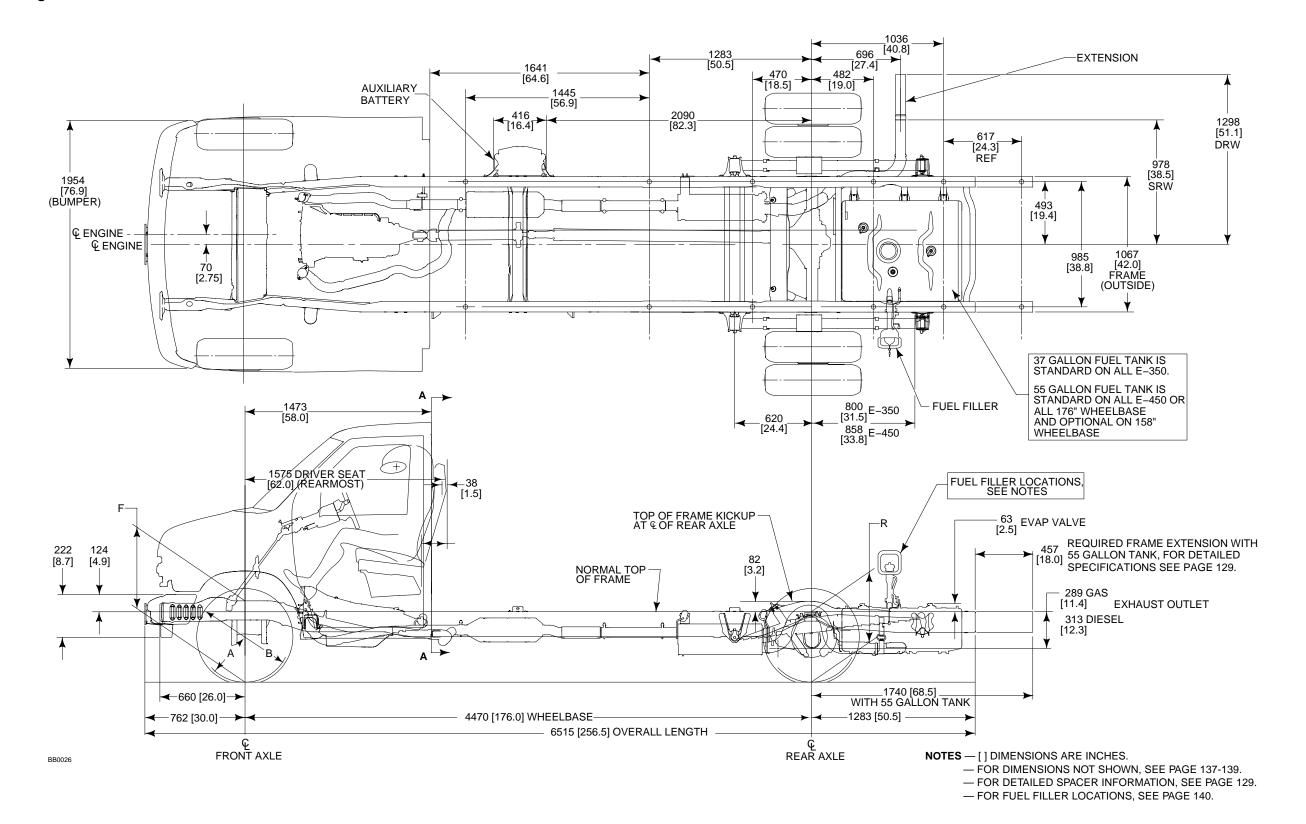

E-350/450 SUPER DUTY CUTAWAY 176" WHEELBASE (DRW)

2002 MODEL YEAR


Page 129 E-SERIES

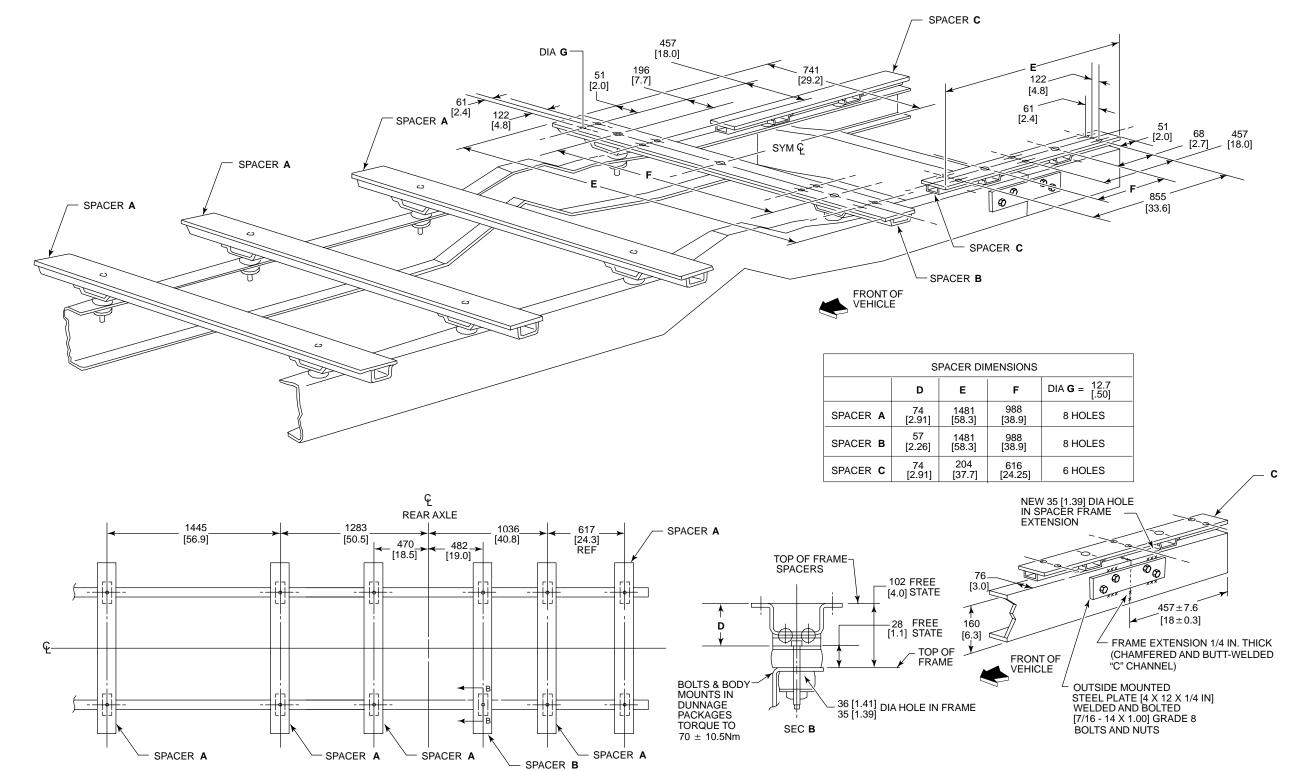

E-350/450 SUPER DUTY CUTAWAY BODY "SECTION A"




Page 130 E-SERIES

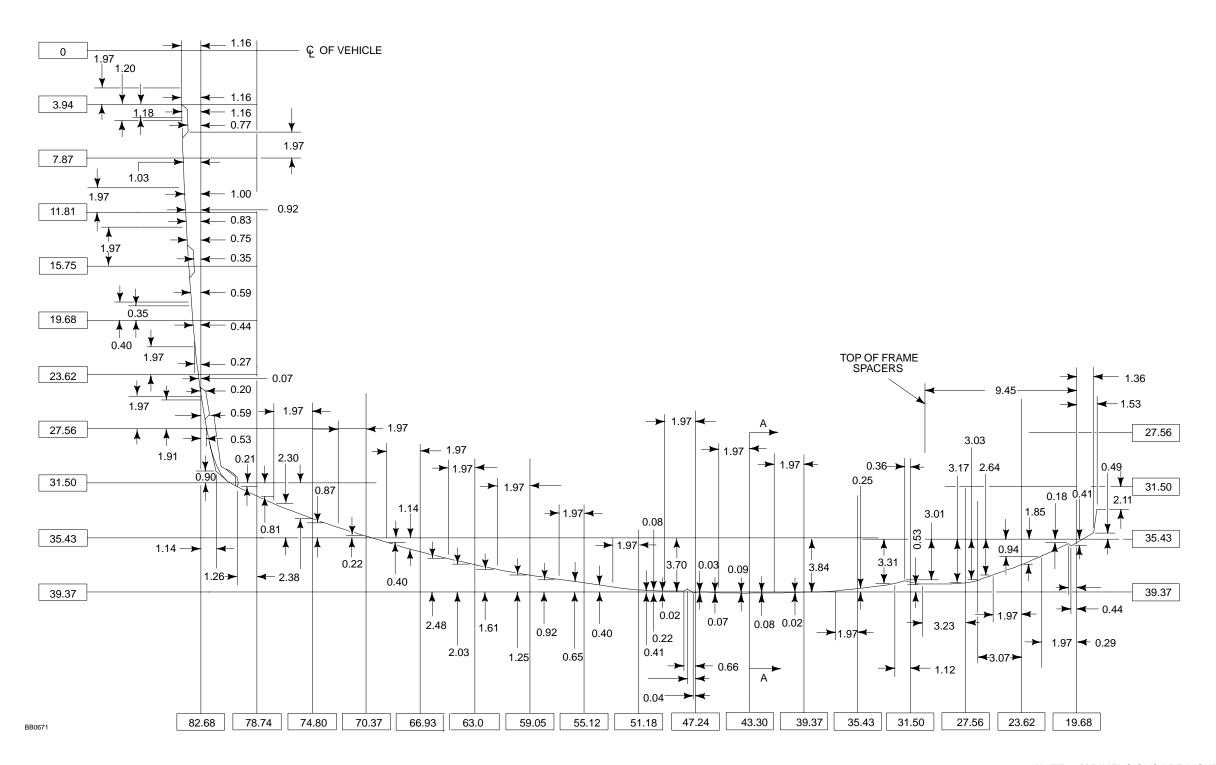

Page 131 E-SERIES

DIMENSIONAL DATA E-350/450 SUPER DUTY CUTAWAY



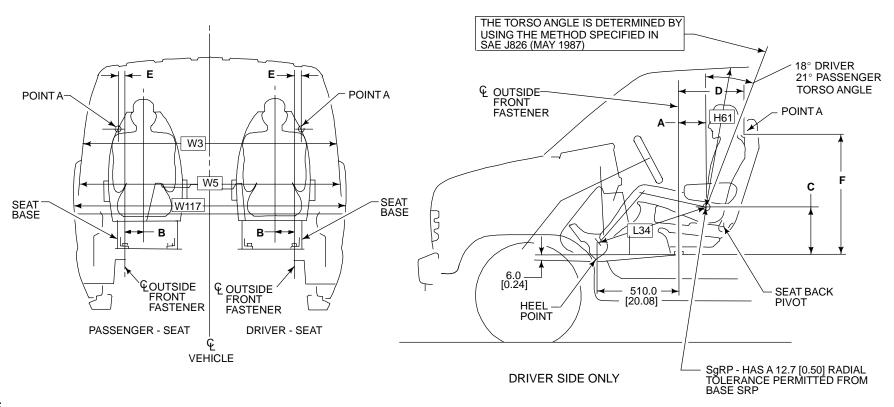

IMPORTANT:

THE DIMENSIONS IN THIS FIGURE REQUIRE THE VEHICLE TO BE AT DESIGN POSITION. E-SERIES VEHICLES AT DESIGN POSITION WILL BE LEVEL FRONT TO REAR, AND SIDE TO SIDE, ON THE UPPER SURFACE OF THE RIBBED FLOOR PANEL FROM THE B-PILLAR REARWARD.

BB06


SRP INFORMATION (SEAT POSITION IS 10.0mm [0.39] FORWARD REARMOST POSITION)	POINT A (SEAT POSITION IS AT THE MIDPOINT OF AVAILABLE TRAVEL)					
	А	В	С	D	Е	F
DRIVER - SEAT (CUTAWAY)	217.8	105.0	384.2	356.0	67.0	937.4
	[8.57]	[4.13]	[15.13]	[14.01]	[2.64]	[36.90]
PASSENGER - SEAT (CUTAWAY)	277.3	103.0	377.0	412.0	65.0	960.1
	[10.92]	[4.06]	[14.84]	[16.22]	[2.56]	[37.80]

CODE	DESCRIPTION									
FRONT COMPA	FRONT COMPARTMENT									
L34	MAXIMUM EFFECTIVE LEG ROOM – FRONT	1016 [40.0]								
W3	SHOULDER ROOM - FRONT	1737 [68.4]								
W5	HIP ROOM – FRONT	1666 [65.6]								
W117	BODY WIDTH AT H-POINT	1999 [78.7]								
H61	EFFECTIVE HEAD ROOM – FRONT	1069 [42.1]								

E-SERIES

E-250 SUPER DUTY CUTAWAY STRIPPED CHASSIS 124" WHEELBASE (SRW)




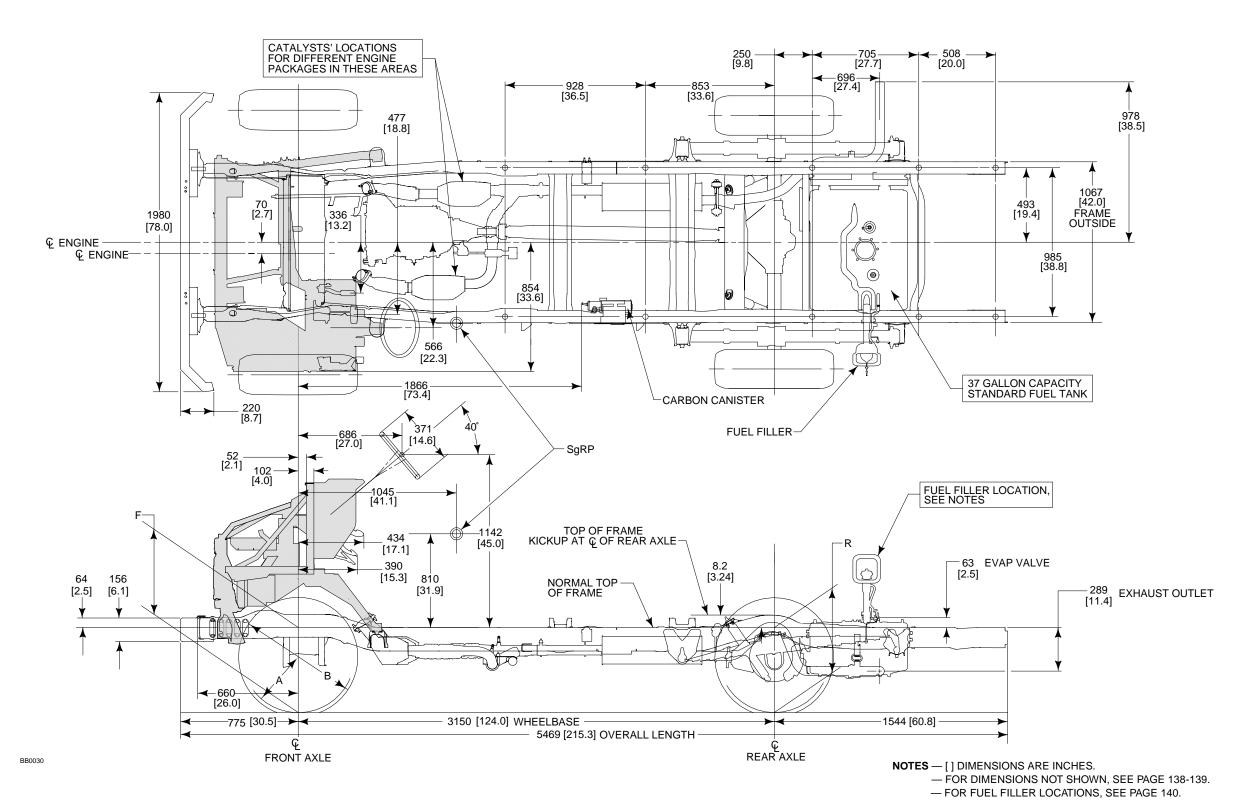

E-350 SUPER DUTY STRIPPED CHASSIS 138" WHEELBASE (SRW/DRW)



Page 133 E-SERIES

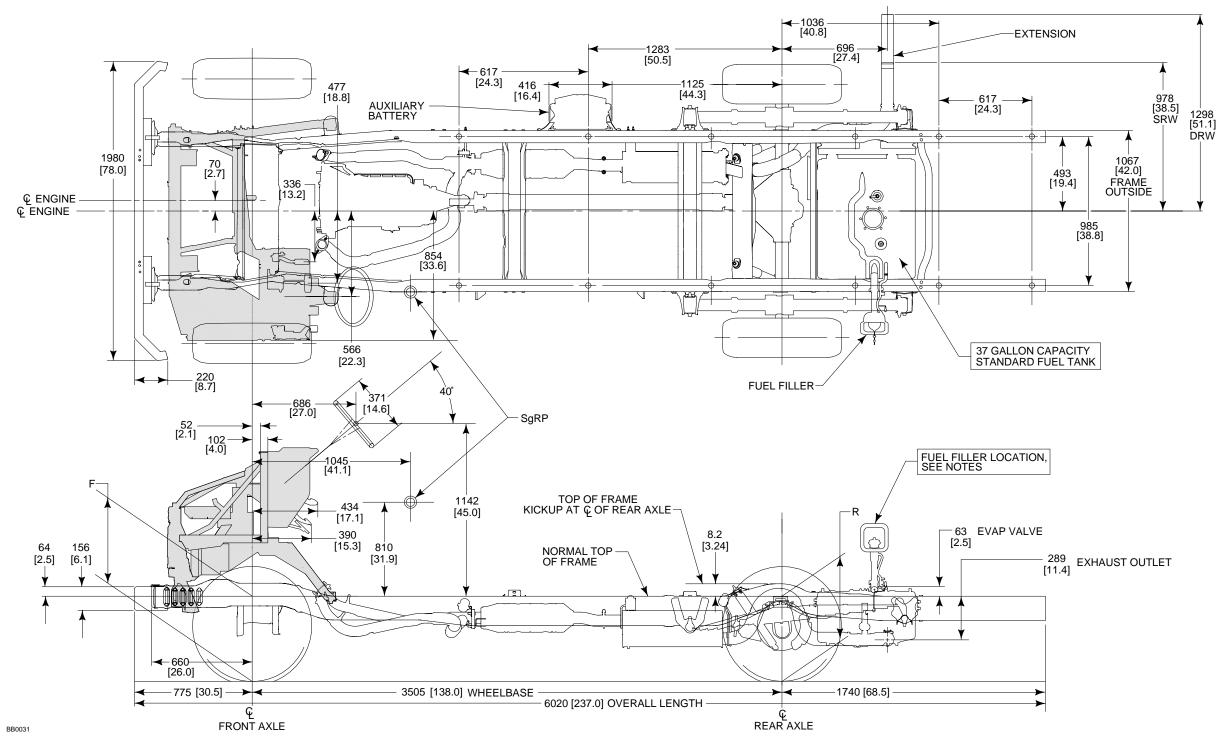


NOTES — [] DIMENSIONS ARE INCHES.

- FOR FUEL FILLER LOCATIONS, SEE PAGE 140.
- FOR DIMENSIONS NOT SHOWN, SEE PAGE 138-139.

E-350/450 SUPER DUTY STRIPPED CHASSIS 158" WHEELBASE (SRW/DRW)



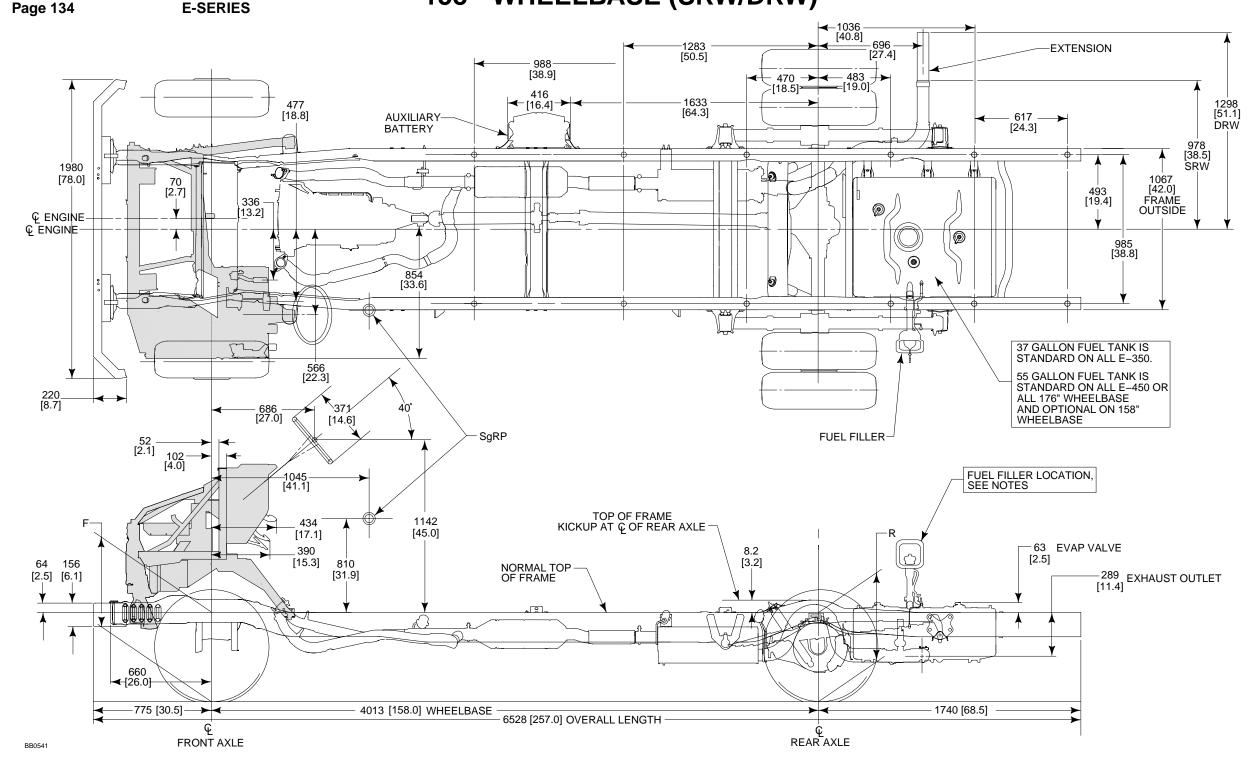


 ${f NOTES}$ — [] DIMENSIONS ARE INCHES.

- FOR FUEL FILLER LOCATIONS, SEE PAGE 140.
- FOR DIMENSIONS NOT SHOWN, SEE PAGE 138-139.

E-350/450 SUPER DUTY STRIPPED CHASSIS 176" WHEELBASE (DRW)



Page 135 E-SERIES

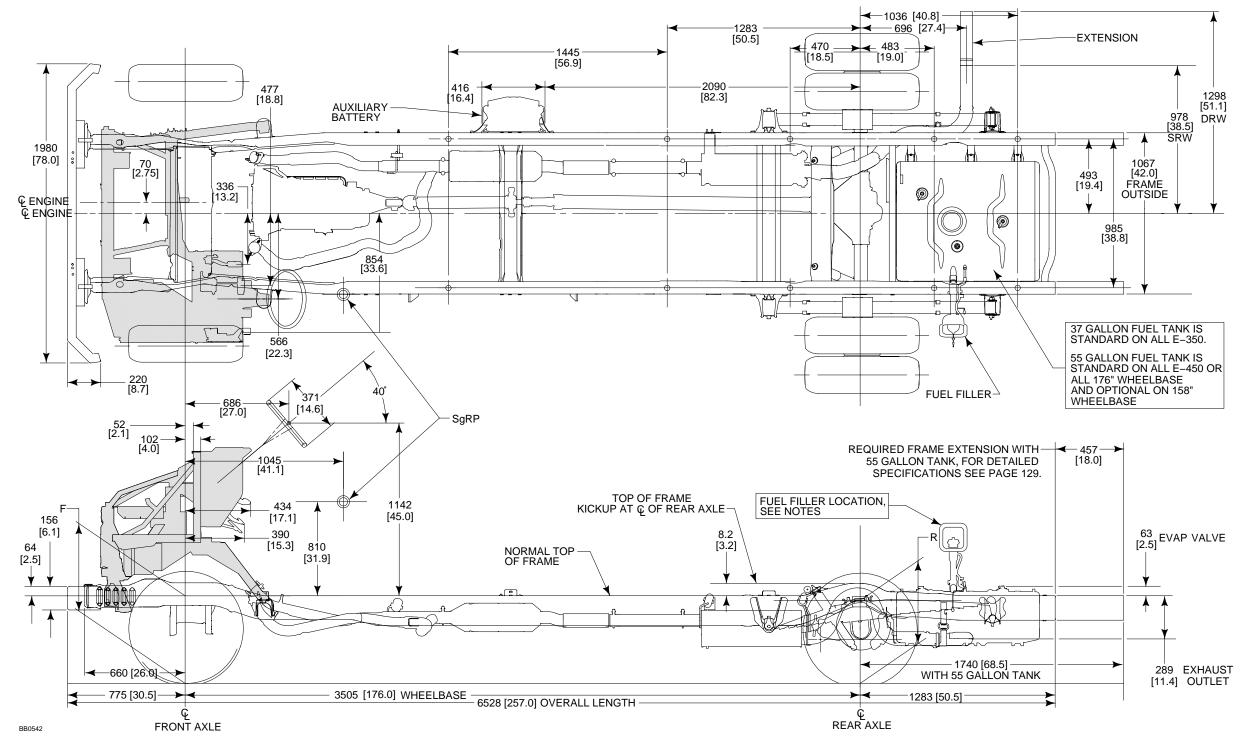

NOTES — [] DIMENSIONS ARE INCHES.


- FOR DIMENSIONS NOT SHOWN, SEE PAGE 138-139.
- FOR FUEL FILLER LOCATIONS, SEE PAGE 140.

E-450 SUPER DUTY STRIPPED CHASSIS 158"/176" WHEELBASE (DRW) PARKING BRAKE CABLE ATTACHMENT

E-SERIES

Page 136



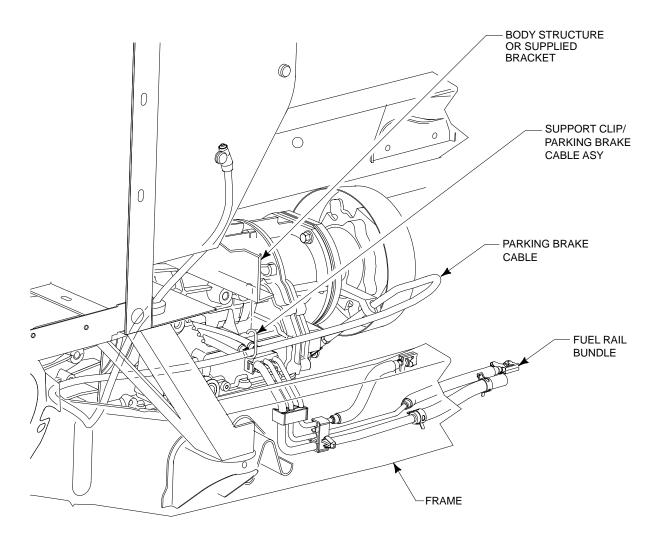



BB0548

RECOMMENDED PARKING BRAKE CABLE ATTACHMENT TO BODY


- 1. REMOVE TIE STRAP SECURING PARKING BRAKE CABLE TO FUEL BUNDLE.
- USING CLIP SUPPLIED ON PARKING BRAKE CABLE, ATTACH CABLE TO BODY STRUCTURE OR BRACKET SUPPLIED BY BODY BUILDER IN AREA SHOWN.
- TO ASSURE PROPER PARKING BRAKE FUNCTION THE CABLE SHOULD NOT DEVIATE FROM CURRENT PATH BY MORE THAN 2" SIDE TO SIDE.
- 4. NO PAINT IS ALLOWED ON CABLE ATTACHMENT ENDS OR ON PARKING BRAKE PEDAL ASSEMBLY.


E-350/450 SUPER DUTY CUTAWAY/STRIPPED CHASSIS ALL WHEELBASE (SRW/DRW)



Page 137

E-SERIES

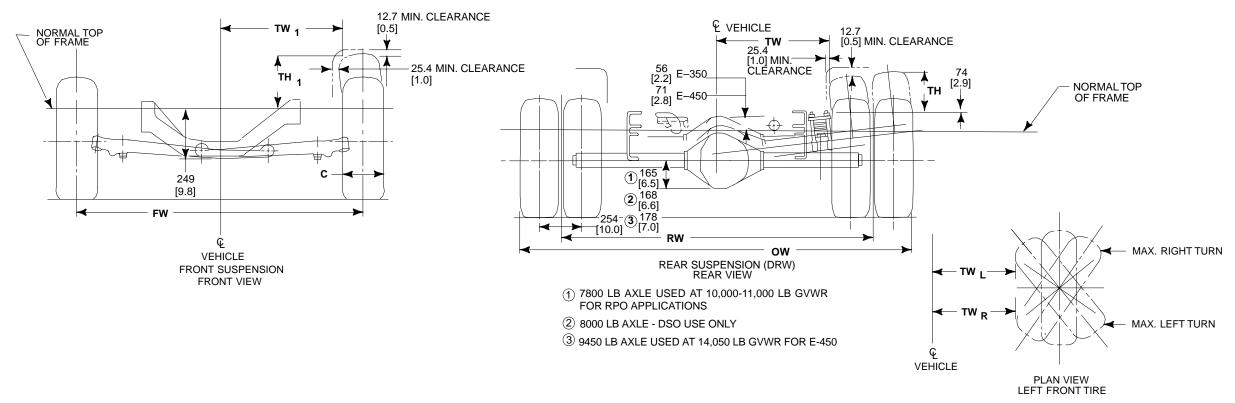

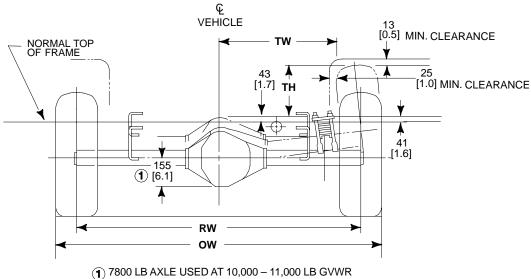

	TW ₁	TH 1	TW L	TW R
LT225/75R16D	670	254	566	541
	[26.4]	[10.0]	[22.3]	[21.3]
LT225/75R16E	655	254	549	541
	[25.8]	[10.0]	[21.6]	[20.5]
DRW LT225/75R16D	670	254	566	541
	[26.4]	[10.0]	[22.3]	[21.3]
DRW LT225/75R16E	655	259	549	521
	[25.8]	[10.2]	[21.6]	[20.5]
SRW LT245/75R16E	655	259	549	521
	[25.8]	[10.2]	[21.6]	[20.5]

TW = DISTANCE FROM & OF VEHICLE TO SIDE OF TIRE IN MODIFIED JOUNCE.

TH = DISTANCE FROM NORMAL TOP OF FRAME TO TOP OF TIRE IN MODIFIED JOUNCE.

REAR SUSPENSION (SRW) REAR VIEW

FOR ALL RPO APPLICATIONS

NOTES — [] DIMENSIONS ARE INCHES.

- REFER TO PAGE 129 FOR DETAIL INFORMATION ON FRAME EXTENSION METHOD.
- FOR DIMENSIONS NOT SHOWN, SEE PAGE 139.

Page 138

E-SERIES

VEHICLE HEIGHT DATA E-SERIES SUPER DUTY CUTAWAY/STRIPPED CHASSIS



						F HEIGHT AT FRONT AXLE(1)	F HEIGHT AT FRONT AXLE(1)			R HEIGHT @ REAR AXLE(1)	R HEIGHT @ REAR AXLE(1)		
	WB	GVWR		FRONT GAWR	COMBINED FRONT SPRING CAPACITY RATE pounds	BASE CURB WEIGHT mm [in]	LOADED mm [in]	REAR GAWR MIN/MAX pounds	COMBINED REAR SPRING CAPACITY RATE pounds	BASE CURB WEIGHT mm [in]	LOADED mm [in]	CH OVERA OF VE (STANDARD mm	HICLE
MODEL	inches	pounds	MINIMUM TIRE	pounds	STD SPRING	STD SPRING	STD SPRING		STD SPRING	STD SPRING	STD SPRING	CURB	LOADED
CUTAWAY													
E-350	138	9600(2)(4)	LT245/75R16D	3700/4400 ⁽³⁾⁽⁵⁾	3700/4400	574 [22.6]	545 [21.5]	6084	7810	666 [26.2]	598 [23.4]	2045 [80.5]	1981 [78.0]
	138	10,000 ⁽⁴⁾	LT225/75R16E	3550/4050 ⁽⁵⁾	3550/4050	556 [21.9]	528 [20.8]	7500	7810	648 [25.5]	580 [22.8]	2078 [81.8]	2019 [79.5]
	136	10,700	LT225/75R16E	3550/4400 ⁽³⁾	3550/4400	556 [21.9]	528 [20.8]	7500	7810	648 [25.5]	580 [22.8]	2078 [81.8]	2019 [79.5]
E-350	158	11,500	LT225/75R16E	4050/4600 ⁽³⁾	4050/4600	556 [21.9]	519 [20.4]	8350	8350	648 [25.5]	580 [22.8]	2108 [83.0]	2019 [79.5]
	176	11,500	LT225/75R16E	4050/4600 4400/4600	4050/4600	556 [21.9]	519 [20.4]	8350	8350	648 [25.5]	580 [22.8]	2103 [82.8]	2019 [79.5]
E-450	158/176	14,050	LT225/75R16E	4400/4600	4400/4600	557 [21.9]	520 [20.5]	9450	9450	652 [25.7]	575 [22.6]	2108 [83.0]	2019 [79.5]
STRIPPED	CHASSIS												
E-250	124	8450 ⁽²⁾	LT225/75R16D	3550/3700	3550/3700	_	518 [20.4]	5360	5545	_	526 [20.7]		
E-250	124	8600 ⁽²⁾	LT225/75R16D	3550/3580	3550/3700	_	518 [20.4]	5360	5545	_	526 [20.7]		
	138	10,000	LT225/75R16E	3700/3900	3700/3900	_	528 [20.8]	7800	7810	_	580 [22.8]		
	136	9600 ⁽²⁾	LT245/75R16D	3550/3900	3550/3900	_	545 [21.5]	6084	7810	_	598 [23.4]		
		11,000	LT225/75R16E	3800/4200	3800/4200	_	519 [20.4]	7800	7810	_	580 [22.8]		
E-350	158	10,000	LT225/75R16E	3700/3900	3700/3900	_	519 [20.4]	7800	7810	_	580 [22.8]		
		9600 ⁽²⁾	LT245/75R16D	3700/3900	3700/3900	_	545 [21.5]	6084	7810	_	598 [23.4]		
	176	11,000	LT225/75R16E	4050/4400	4050/4400	_	519 [20.4]	7800	7810	_	580 [22.8]		
	011	10,000	LT225/75R16E	3800/4050	3800/4050	_	519 [20.4]	7200	7810	_	580 [22.8]		
E-450	158	14,050	LT225/75R16E	4600	4600	_	520 [20.5]	9450	9450	_	575 [22.6]		
E-400	176	14,050	LT225/75R16E	4600	4600	_	520 [20.5]	9450	9450	_	575 [22.6]		

^{(1) —} The Height Data shown represents dimensions of a nominal vehicle with no options. Actual height may vary due to production tolerances.

^{(2) —} Single Rear Wheels.

^{(3) — 4600} lb Standard with Ambulance Prep Package.


^{(4) —} School Bus Prep Package.

 $^{^{(5)}}$ — 3900/4050 when completed as a School Bus.

Page 139 E-SERIES

TIRE/GROUND CLEARANCE DATA SUPER DUTY CUTAWAY/STRIPPED CHASSIS



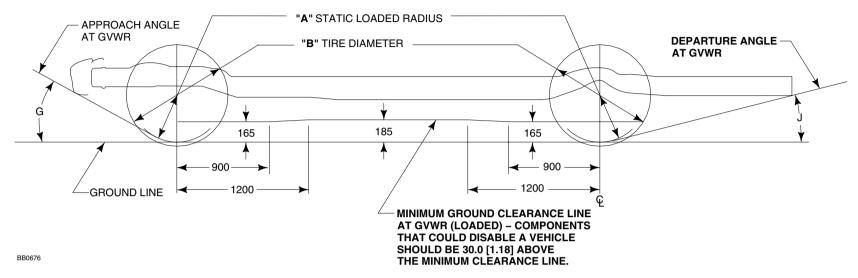

E-SERIES CUTAWAY/STRIPPED CHASSIS TIRE/GROUND CLEARANCE DATA (BASE VEHICLE UNLOADED)

	ALL SEASON TIRE DATA						TREAD OW WIDTH			TW	GROUND CLEARANCE									
		Α	В	С		FW	RW	OVERALL WIDTH	STD	STD	G APPROACH ANGLE					J				
MODEL	TIRE SIZE							WIDIII								DEPARTURE ANGLE				
		STATIC LOADED RADIUS	MAX. DIAMETER	MAX. SECTION WIDTH	RIM WIDTH	FRONT	REAR	REAR	SPRING	SPRING	124" WB	138" WB	158" WB	176" WB	124" WB	138" WB	158" WB	176" WB		
E-250 Stripped Chassis SRW	LT225/75R16E	346 [13.6]	757 [29.8]	236 [9.3]	178 [7.0]	1763 [69.4]	1692 [66.6]	1928 [75.9]	297 [11.6]	628 [24.7]	31°	N/A	N/A	N/A	17°	N/A	N/A	N/A		
E-350 Cutaway SRW	LT245/75R16E	342 [13.5]	787 [31.0]	263 [10.3]	178 [7.0]	1763 [69.4]	1819 [71.6]	2082 [81.9]	307 [12.1]	710 [28.0]	N/A	33°	N/A	N/A	N/A	14°	N/A	N/A		
E-350 Cutaway DRW	LT225/75R16E	346 [13.6]	757 [29.8]	236 [9.3]	152 [6.0]	1763 [69.4]	1859 [73.2]	2349 [92.5]	329 [12.9]	684 [26.9]	N/A	34°	34°	34°	N/A	14°	14°♦	14° ♦		
E-350 Stripped Chassis SRW	LT245/75R16E	342 [13.5]	787 [31.0]	263 [10.3]	178 [7.0]	1763 [69.4]	1687 [66.4]	1950 [76.7]	298 [11.7]	638 [25.1]	N/A	31°	31°	N/A	N/A	14°	14°	N/A		
E-350 Stripped Chassis DRW	LT225/75R16E	346 [13.6]	757 [29.8]	236 [9.3]	152 [6.0]	1763 [69.4]	1859 [73.2]	2349 [92.5]	329 [12.9]	684 [26.9]	N/A	31°	31°	32°	N/A	14°	14°	14°		
E-450 Cutaway DRW	LT225/75R16E	346 [13.6]	757 [29.8]	236 [9.3]	152 [6.0]	1763 [69.4]	1974 [77.7]	2464 [97.0]	325 [12.8]	743 [29.2]	N/A	N/A	34°	34°	N/A	N/A	14°♦	14° ♦		
E-450 Stripped Chassis DRW	LT225/75R16E	346 [13.6]	757 [29.8]	236 [9.3]	152 [6.0]	1763 [69.4]	1974 [77.7]	2464 [97.0]	325 [12.8]	743 [29.2]	N/A	N/A	31°	32°	N/A	N/A	14°♦	14° ♦		


^{♦ 55-}gallon tank and 18 inch frame extension.

E-SERIES CUTAWAY/SUPER DUTY STRIPPED CHASSIS FUEL FILLER SYSTEMS




Page 140 E-SERIES

E-250 CUTAWAY MIDSHIP TANK FUEL FILLER SYSTEM

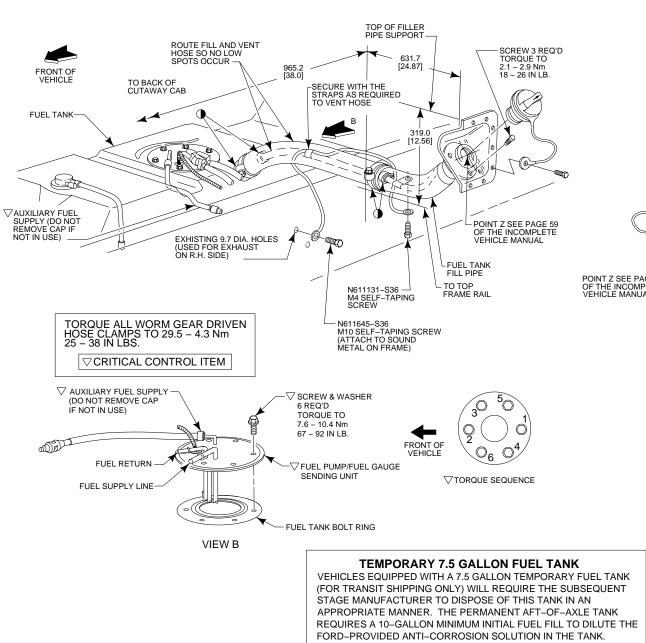


E-350/450 CUTAWAY AND STRIPPED CHASSIS AFT-OF-AXLE FUEL FILLER SYSTEM

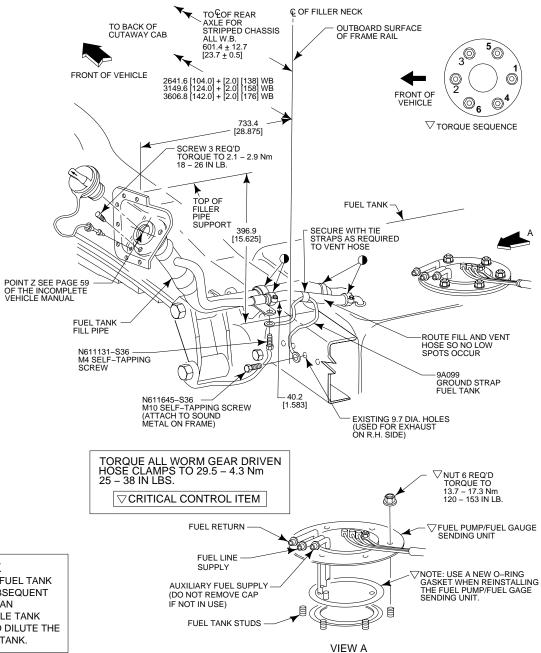

E-350/450 SUPER DUTY CUTAWAY/STRIPPED CHASSIS 37/55 GALLON AFT-OF-AXLE FUEL TANK

2002 MODEL YEAR

Page 141 E-SERIES

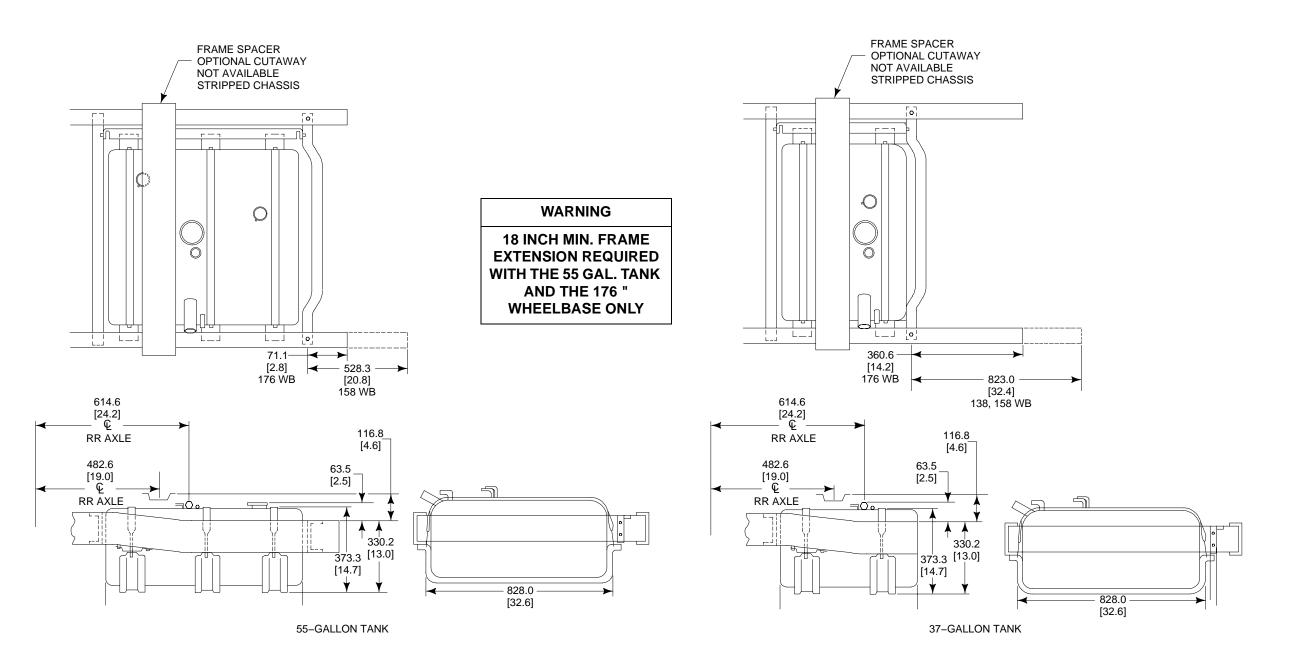

E-SERIES TRAILER TOW WIRING

2002 MODEL YEAR

Page 142 E-SERIES

ELECTRONIC BRAKE CIRCUITS


			RECOMMENDED MAX ALLOWABLE					
			WIRE LENGTH (FEET)					
CRKT. COLOR	CODE	DESCRIPTION	14 AWG 12 AWG 10 AV					
Dark Blue	DB	Trailer Electric Brake	50	50	50			
Orange	0	Trailer Battery Feed	N/A	20	20			
Yellow	Υ	Trailer LH Turn/Stop Lamp	50	50	50			
Dark Green	DG	Trailer RH Turn/Stop Lamp	50	50	50			
White	W	Trailer Ground	N/A	N/A	10 GA only			
Brown-White	BR-W	Trailer Run Lamps	50	50	50			
Black-Light Green	BK-LG	Trailer Back-Up Lamps	50	50	50			


ELECTRONIC BRAKE CIRCUITS

Dark Blue	DB	Trailer Electric Brake
Brown	В	Vehicle Tail Lamp and Marker Lamp
Red	R	Vehicle Control Feed
Light Green	LG	Vehicle Brake Signal
White	W	Trailer Ground

VEHICLE CIRCUIT

Orange-Light Blue	O-LB	Vehicle RH Rear Turn Signal
Light Green-Orange	LG-O	Vehicle LH Rear Turn Signal
Black-Pink	BK-PK	Vehicle Back-Up Lamp Feed
Yellow	Υ	Vehicle Battery Feed
White-Purple	W-P	Vehicle Fuse Accessory Feed
White-Light Green	W-LG	Vehicle Tail and Marker Lamp

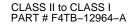

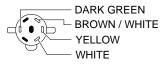



CLASS I PART # F7UB-13A576-A






CLASS II WITH PIN TERMINALS PART # F7UB-14A678-C






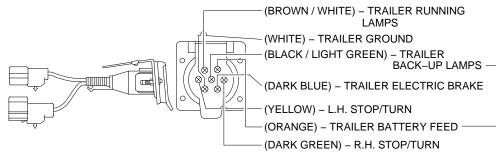


CLASS II WITH PIN TERMINALS TO CLASS I PART # F2TB-13A576-AA



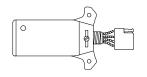

(WHITE) – GROUND
(BROWN / WHITE) – RUNNING LAMPS
(YELLOW) – L.H. STOP/TURN
(DARK GREEN) – R.H. STOP /TURN


FORD SERVICE ALTERNATIVES AVAILABLE AT YOUR FORD DEALER (NOT SUPPLIED WITH TRAILER KIT)

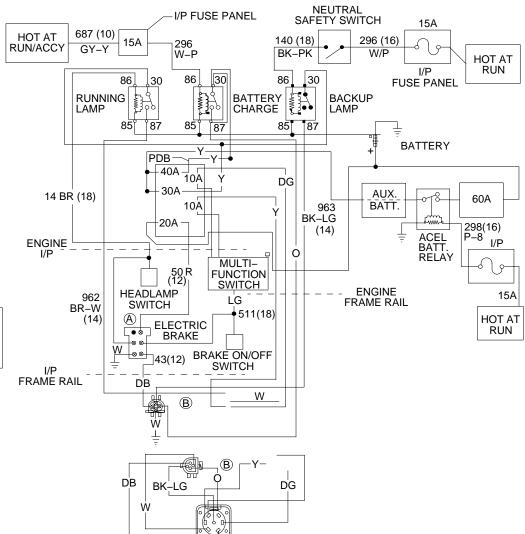

E-SERIES TRAILER TOW WIRING



Page 143 E-SERIES

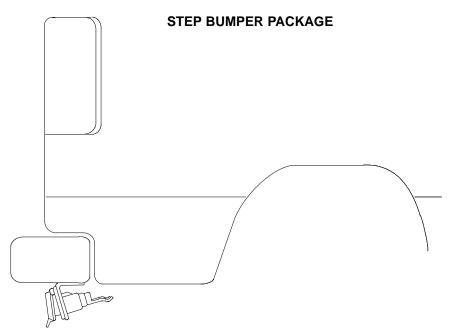

SLIDE TRAILER TOW BRACKET ASSEMBLY TO THE MOST FORWARD POSITION IN VEHICLE. FAILURE TO DO SO MAY RESULT IN BRACKET DAMAGE. THIS APPLIES TO VEHICLES WITH OR WITHOUT A HITCH. THIS NOTE APPLIES TO BOTH THE CONTOUR AND STEP BUMPER PACKAGES.


CONTOUR BUMPER PACKAGE

LEFT-HAND SIDE OF FRAME SHOWING THE CONNECTION TO TRAILER TOW BRACKET ASSEMBLY

FRAME CONNECTIONS

CHECK TRAILER LIGHTS AFTER INSTALLATION TO DETERMINE IF THEY FUNCTION CORRECTLY.
DO NOT OPERATE THE VEHICLE WITH A TRAILER IF A PROBLEM EXISTS.

ELECTRIC BRAKE CONTROL

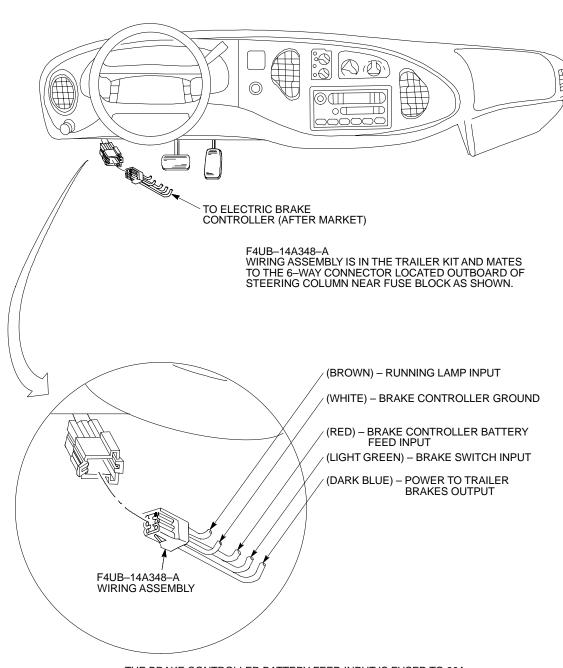


THE BRAKE CONTROLLER BATTERY FEED INPUT IS FUSED TO 30A IN THE ENGINE COMPARTMENT'S DISTRIBUTION BOX.


E-SERIES TRAILER LAMP PLUG AND WIRING


TO CIRCLED CONNECTOR UNDER DASH



Page 144 E-SERIES

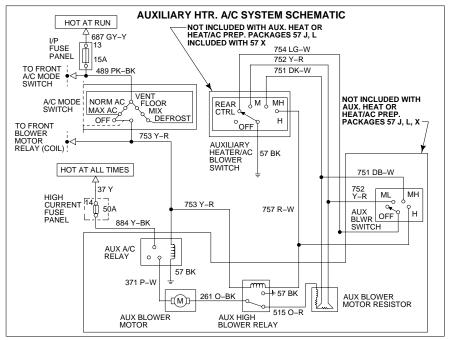

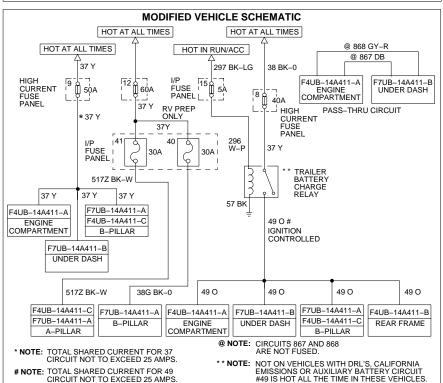


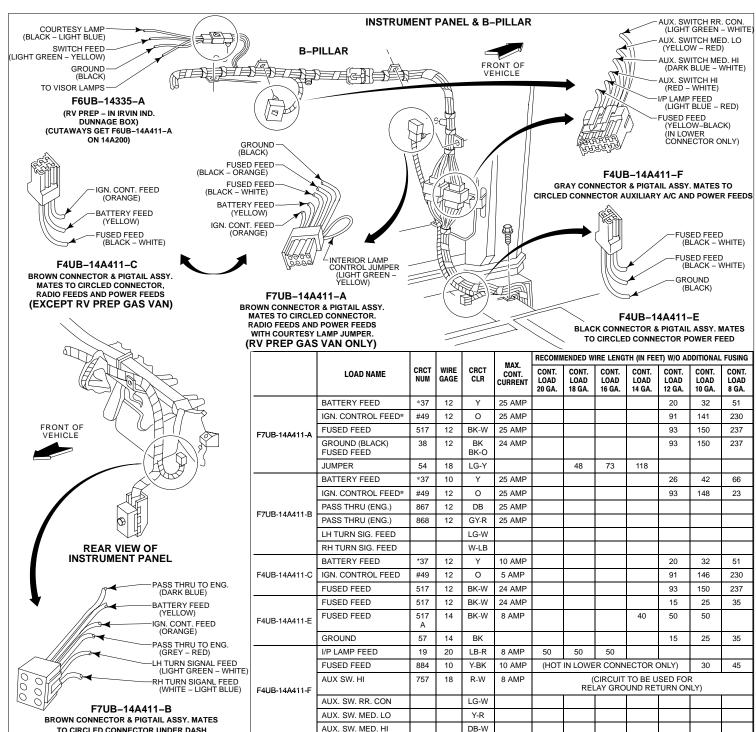



E-SERIES TRAILER LAMP PLUG AND WIRING




Page 145 E-SERIES

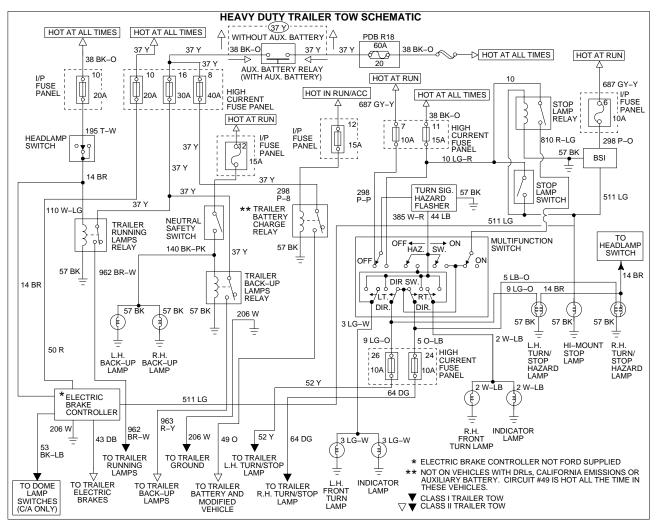

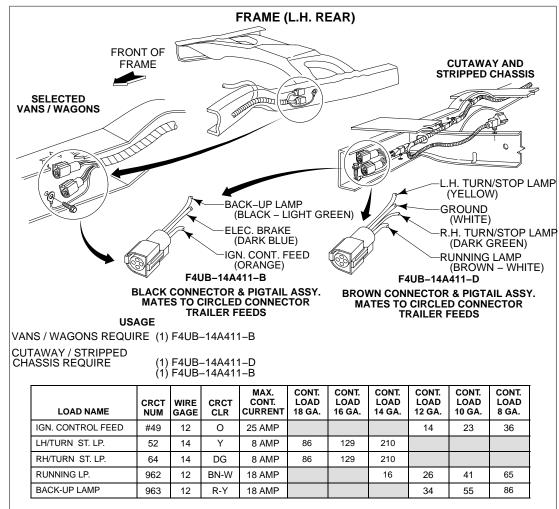

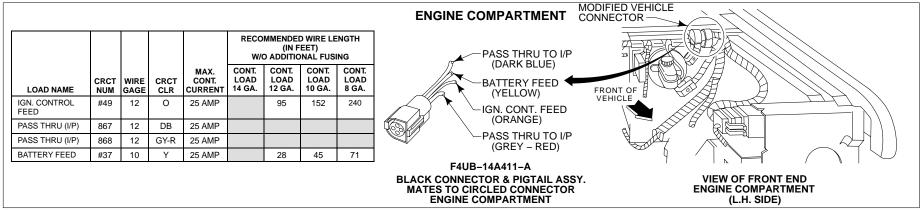

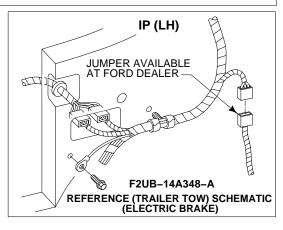


BB00402002


DIMENSIONAL DATA F-150 REGULAR CAB STYLESIDE 4X2/4X4








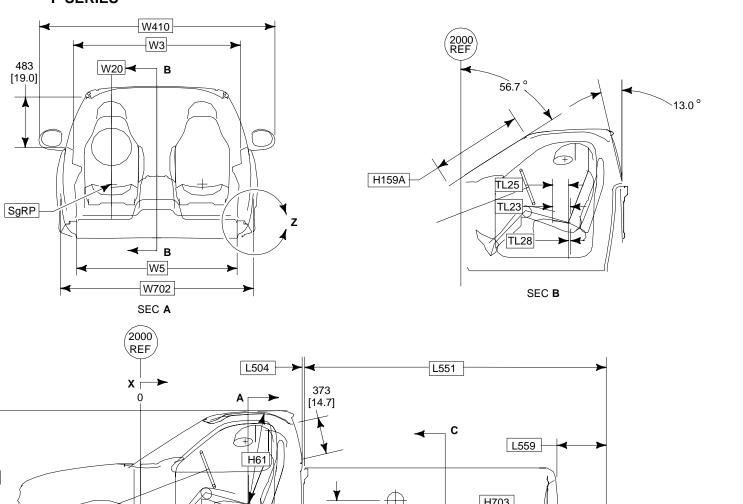

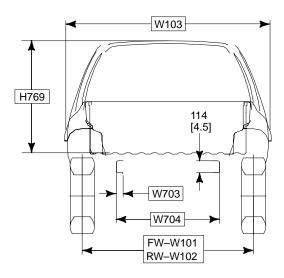


SEC C

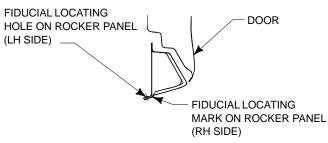

VIEW IN CIRCLE Z

FIDUCIAL COORDINATE CHART					
PT.		Х	Υ	Z	
FRONT	R _H	2350 [92.5]	829 [32.6]	556 [21.8]	
FRONT	LH				
REAR	R _H	3476 [136.8]	829 [32.6]	555 [21.8]	
KEAK	LH	3105 [122.2]	829 [32.6]	554 [21.8]	

- CH, LH, F, R, FW, RW DIMENSIONS, SEE PAGE 161.
- TIRE DATA, PAGE 163.
- INTERIOR BOX DIMENSIONS, PAGE 157.
- SgRP X AND Z LOCATIONS, PAGE 37.
- X AND Z REFERENCE LINE LOCATIONS, PAGE 159.

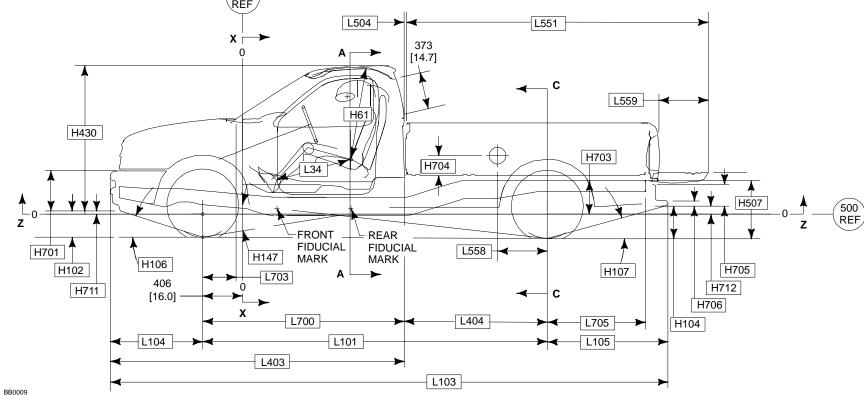

DIMENSIONAL DATA F-150 REGULAR CAB STYLESIDE 4X2/4X4

2002 MODEL YEAR

Page 147

F-SERIES

CHASSIS

		LWB F-150		_	VB 150
CODE	DESCRIPTION	4x2	4x4	4x2	4x4
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	256 [10.1]	338 [13.3]	272 [10.7]	343 [13.5]
H104	BOTTOM OF REAR BUMPER TO GROUND @ CURB	341 [13.4]	433 [17.0]	351 [13.8]	458 [18.0]
H106	ANGLE OF APPROACH	18.2°	25.7°	18.5°	26.0°
H107	ANGLE OF DEPARTURE	16.3°	20.7°	16.2°	19.9°
H147	RAMP BREAKOVER ANGLE	15.0°	19.8°	17.4°	21.7°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]	843 [33.2]	843 [33.2]
L101	WHEELBASE	3519 [138.5]	3526 [138.8]	3046 [119.9]	3054 [120.2]
L103	OVERALL LENGTH — STANDARD REAR STEP BUMPER	5729 [225.5]	5736 [225.8]	5256 [206.9]	5264 [207.2]
L104	FRONT OVERHANG	983 [38.7]	983 [38.7]	983 [38.7]	983 [38.7]
L105	REAR OVERHANG — STANDARD REAR STEP BUMPER	1227 [48.3]	1227 [48.3]	1277 [48.3]	1227 [48.3]
L403	FRONT BUMPER TO REAR OF CAB	3043 [119.8]	3043 [119.8]	3043 [119.8]	3043 [119.8]
L404	CAB TO Q OF REAR AXLE	1458 [57.4]	1465 [57.7]	985 [38.8]	993 [39.1]
L700	[©] OF FRONT AXLE TO REAR OF CAB	2061 [81.1]	2061 [81.1]	2061 [81.1]	2061 [81.1]
L705	E REAR AXLE TO END OF FRAME (INCLUDES REAR BUMPER MOUNTING BRACKET)	1039 [40.9]	1031 [40.6]	1039 [40.9]	1031 [40.6]
W703	FRAME RAIL WIDTH	66 [2.6]	66 [2.6]	66 [2.6]	66 [2.6]
W704	REAR FRAME WIDTH	1001 [39.4]	1001 [39.4]	1001 [39.4]	1001 [39.4]

PICKUP BODY

		LWB F-150			VB 150
CODE	DESCRIPTION	4x2	4x4	4x2	4x4
NOM	INAL CARGO BODY SIZE	81	8 FT. 6.5 FT.		FT.
H703	Z REFERENCE LINE TO CARGO BODY FLOOR	424 [16.7]	424 [16.7]	424 [16.7]	424 [16.7]
H704	TOP OF FLOOR TO & OF FUEL FILLER	170 [6.7]	170 [6.7]	170 [6.7]	170 [6.7]
H705	REAR BUMPER HEIGHT	221 [8.7]	221 [8.7]	221 [8.7]	221 [8.7]
_	REAR BUMPER WIDTH (NOT SHOWN)	1872 [73.7]	1872 [73.7]	1872 [73.7]	1872 [73.7]
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	51 [2.0]	51 [2.0]	51 [2.0]	51 [2.0]
H712	Z REFERENCE LINE TO BOTTOM OF REAR BUMPER	178 [7.0]	178 [7.0]	178 [7.0]	178 [7.0]
H769	TOP OF FLOOR TO TOP OF CAB @ & REAR WHEELS	1092 [43.0]	1092 [43.0]	1092 [43.0]	1092 [43.0]
L504	CAB TO PICKUP BODY	30 [1.2]	30 [1.2]	30 [1.2]	30 [1.2]
L551	BOX OVERALL LENGTH TO OPEN TAILGATE	3068 [120.8]	3068 [120.8]	2601 [102.4]	2601 [102.4]
L558	€ REAR AXLE TO € FUEL FILLER	505 [19.9]	513 [20.2]	505 [19.9]	513 [20.2]
L559	OPEN TAILGATE	498 [19.6]	498 [19.6]	498 [19.6]	498 [19.6]

CAB

CODE	DESCRIPTION	4x2	4x4
H61	EFFECTIVE HEADROOM	1036 [40.8]	1036 [40.8]
H159A	WINDSHIELD HEIGHT	889 [35.0]	889 [35.0]
H430	Z REFERENCE LINE TO TOP OF CAB	1516 [59.7]	1516 [59.7]
H701	FRONT BUMPER HEIGHT	259 [10.2]	282 [11.1]
H711	Z REFERENCE LINE TO BOTTOM OF FRONT BUMPER (LESS LOWER VALANCE)	178 [7.0]	142 [5.6]
TL23	FORWARD SEAT TRACK	159 [6.3]	159 [6.3]
TL25	TRUE TRACK TRAVEL LENGTH	220 [8.7]	220 [8.7]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SgRP	40 [1.6]	40 [1.6]
L34	EFFECTIVE LEG ROOM	1039 [40.9]	1039 [40.9]
L703	€ FRONT AXLE TO COWL POINT	345 [13.6]	345 [13.6]
W3	SHOULDER ROOM	1620 [63.8]	1620 [63.8]
W5	HIP ROOM	1549 [61.0]	1549 [61.0]
W20	SgRP (Y)	- 439 [- 17.3]	- 439 [- 17.3]
W103	VEHICLE WIDTH	2014 [79.3]	2019 [79.4]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2278 [89.7]	2278 [89.7]
W702	FRONT BUMPER WIDTH	1880 [74.0]	1892 [74.5]


DIMENSIONAL DATA F-150 SUPERCAB STYLESIDE 4X2/4X4



- SgRP X AND Z LOCATIONS, PAGE 37.

— X AND Z REFERENCE LINE LOCATIONS, PAGE 159.

Page 148 F-SERIES

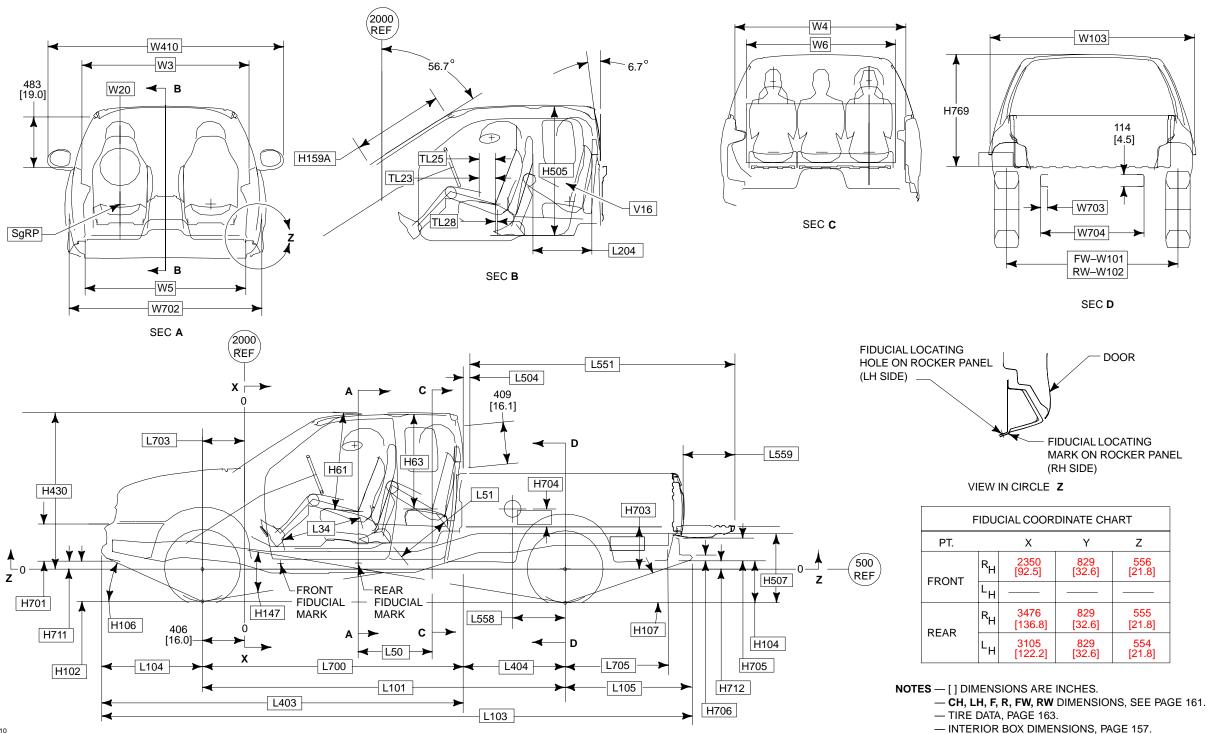

BB0010

DIMENSIONAL DATA F-150 SUPERCAB STYLESIDE 4X2/4X4

F-SERIES

2002 MODEL YEAR

CHASSIS

Page 149

		LWB F-150		_	VB 150
CODE	DESCRIPTION	4X2	4X4	4X2	4X4
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	256 [10.1]	338 [13.3]	272 [10.7]	343 [13.5]
H104	BOTTOM OF REAR BUMPER TO GROUND @ CURB	341 [13.4]	433 [17.0]	351 [13.8]	458 [18.0]
H106	ANGLE OF APPROACH	18.3°	26.0°	18.1°	25.8°
H107	ANGLE OF DEPARTURE	16.1°	19.8°	16.1°	19.8°
H147	RAMP BREAKOVER ANGLE	13.6°	16.6°	14.7°	18.7°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]	843 [33.2]	843 [33.2]
L101	WHEELBASE	3991 [157.1]	3998 [157.4]	3518 [138.5]	3525 [138.8]
L103	OVERALL LENGTH — STANDARD REAR STEP BUMPER	6201 [244.1]	6208 [244.4]	5728 [225.5]	5735 [225.8]
L104	FRONT OVERHANG	983 [38.7]	983 [38.7]	983 [38.7]	983 [38.7]
L105	REAR OVERHANG — STANDARD REAR STEP BUMPER	1227 [48.3]	1227 [48.3]	1227 [48.3]	1227 [48.3]
L403	FRONT BUMPER TO REAR OF CAB	3515 [138.4]	3515 [138.4]	3515 [138.4]	3515 [138.4]
L404	CAB TO € OF REAR AXLE	1459 [57.4]	1466 [57.7]	986 [38.8]	993 [39.1]
L700	©OF FRONT AXLE TO REAR OF CAB	2532 [99.7]	2532 [99.7]	2532 [99.7]	2532 [99.7]
L705	© REAR AXLE TO END OF FRAME (INCLUDES REAR BUMPER MOUNTING BRACKET)	1039 [40.9]	1031 [40.6]	1039 [40.9]	1031 [40.6]
W703	FRAME RAIL WIDTH	66 [2.6]	66 [2.6]	66 [2.6]	66 [2.6]
W704	REAR FRAME WIDTH	1001 [39.4]	1001 [39.4]	1001 [39.4]	1001 [39.4]

PICKUP BODY

			VB 150		VB 50
CODE	DESCRIPTION	4X2	4X4	4X2	4X4
NO	MINAL CARGO BODY SIZE	8 1	FT.	6.5	FT.
H703	Z REFERENCE LINE TO CARGO BODY FLOOR	424 [16.7]	424 [16.7]	424 [16.7]	424 [16.7]
H704	TOP OF FLOOR TO &OF FUEL FILLER	170 [6.7]	170 [6.7]	170 [6.7]	170 [6.7]
H705	REAR BUMPER HEIGHT	221 [8.7]	221 [8.7]	221 [8.7]	221 [8.7]
_	REAR BUMPER WIDTH (NOT SHOWN)	1872 [73.7]	1872 [73.7]	1872 [73.7]	1872 [73.7]
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	51 [2.0]	51 [2.0]	51 [2.0]	51 [2.0]
H712	Z REFERENCE LINE TO BOTTOM OF REAR BUMPER	178 [7.0]	178 [7.0]	178 [7.0]	178 [7.0]
H769	TOP OF FLOOR TO TOP OF CAB @ \$\text{Q}\$REAR WHEELS	1092 [43.0]	1092 [43.0]	1092 [43.0]	1092 [43.0]
L504	CAB TO PICKUP BODY	30 [1.2]	30 [1.2]	30 [1.2]	30 [1.2]
L551	BOX OVERALL LENGTH TO OPEN TAILGATE	3068 [120.8]	3068 [120.8]	2601 [102.4]	2601 [102.4]
L558	€REAR AXLE TO €FUEL FILLER	505 [19.9]	513 [20.2]	505 [19.9]	513 [20.2]
L559	OPEN TAILGATE	498 [19.6]	498 [19.6]	498 [19.6]	498 [19.6]

CAB

CODE	DESCRIPTION	4X2	4X4
H61	EFFECTIVE HEADROOM — FRONT	1036 [40.8]	1036 [40.8]
H63	EFFECTIVE HEADROOM — REAR	960 [37.8]	960 [37.8]
H159A	WINDSHIELD HEIGHT	889 [35.0]	889 [35.0]
H430	Z REFERENCE LINE TO TOP OF CAB	1516 [59.7]	1516 [59.7]
H505	MAXIMUM INTERIOR CARGO HEIGHT (REAR SEAT)	1166 [45.9]	1166 [45.9]
H701	FRONT BUMPER HEIGHT	259 [10.2]	282 [11.1]
H711	Z REFERENCE LINE TO BOTTOM OF FRONT BUMPER (LESS LOWER VALANCE)	178 [7.0]	142 [5.6]
TL23	FORWARD SEAT TRACK	159 [6.3]	159 [6.3]
TL25	TRUE TRACK TRAVEL LENGTH	220 [8.7]	220 [8.7]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SgRP	40 [1.6]	40 [1.6]
L34	EFFECTIVE LEG ROOM — FRONT	1039 [40.9]	1039 [40.9]
L50	H-POINT COUPLE DISTANCE	719 [28.3]	719 [28.3]
L51	EFFECTIVE LEG ROOM — REAR	818 [32.2]	818 [32.2]
L204	BACK OF FRONT SEAT TO BACK PANEL	571 [22.5]	571 [22.5]
L703	€FRONT AXLE TO COWL POINT	345 [13.6]	345 [13.6]
W3	SHOULDER ROOM — FRONT	1620 [63.8]	1620 [63.8]
W4	SHOULDER ROOM — REAR	1620 [63.8]	1620 [63.8]
W5	HIP ROOM — FRONT	1549 [61.0]	1549 [61.0]
W6	HIP ROOM — REAR	1605 [63.2]	1605 [63.2]
W20	SgRP (Y)	- 439 [- 17.3]	- 439 [- 17.3]
W103	VEHICLE WIDTH	2014 [79.3]	2019 [79.5]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2278 [89.7]	2278 [89.7]
W702	FRONT BUMPER WIDTH	1880 [74.0]	1892 [74.5]
V16	REAR CARGO VOLUME WITH REAR SEAT CUSHION FOLDED UP — LITRES/CU. FT.	1082/ 38.2	1082/ 38.2


DIMENSIONAL DATA F-150 REGULAR CAB FLARESIDE 4X2/4X4


2002 MODEL YEAR


Page 150

BB0011

F-SERIES

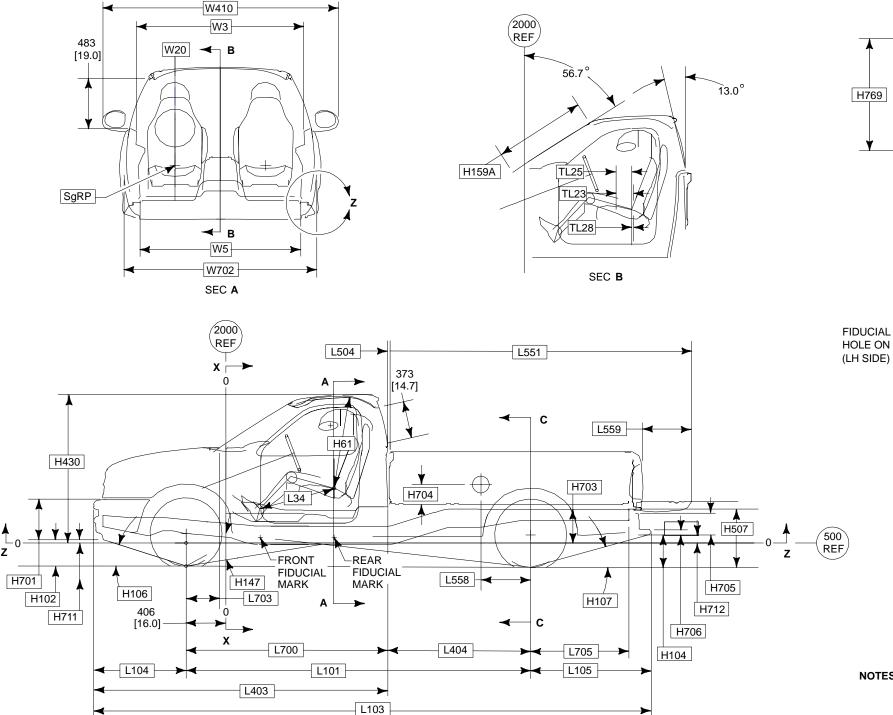

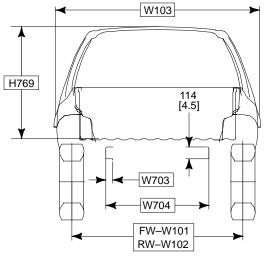

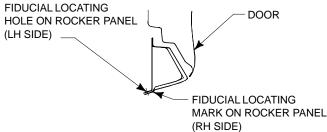

SEC C

VIEW IN CIRCLE Z

FIDUCIAL COORDINATE CHART					
PT.		Х	Υ	Z	
FRONT	R _H	2350 [92.5]	829 [32.6]	556 [21.8]	
FRONT	LH				
REAR	R _H	3105 [122.2]	829 [32.6]	554 [21.8]	
NLAK	L _H	3105 [122.2]	829 [32.6]	554 [21.8]	

- CH, LH, F, R, FW, RW DIMENSIONS, SEE PAGE 161.
- TIRE DATA, PAGE 163.
- INTERIOR BOX DIMENSIONS, PAGE 157.
- SgRP X AND Z LOCATIONS, PAGE 37.
- X AND Z REFERENCE LINE LOCATIONS, PAGE 159.
- REFER TO PAGE 146 FOR FIDUCIAL LOCATIONS.

DIMENSIONAL DATA F-150 REGULAR CAB FLARESIDE 4X2/4X4

Page 151

F-SERIES



CHASSIS

		SV	VB
CODE	DESCRIPTION	4X2	4X4
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	262 [10.3]	343 [13.5]
H104	BOTTOM OF REAR BUMPER TO GROUND @ CURB	351 [13.8]	458 [18.0]
H106	ANGLE OF APPROACH	18.5°	26.0°
H107	ANGLE OF DEPARTURE	16.2°	19.9°
H147	RAMP BREAKOVER ANGLE	17.4°	21.7°
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]
L101	WHEELBASE	3045 [119.9]	3053 [120.2]
L103	OVERALL LENGTH — WITH STANDARD REAR STEP BUMPER	5255 [206.9]	5263 [207.2]
L104	FRONT OVERHANG	983 [38.7]	983 [38.7]
L105	REAR OVERHANG — WITH STANDARD REAR STEP BUMPER	1227 [48.3]	1227 [48.3]
L403	FRONT BUMPER TO REAR OF CAB	3043 [119.8]	3043 [119.8]
L404	CAB TO © OF REAR AXLE	985 [38.8]	993 [39.1]
L700	€OF FRONT AXLE TO REAR OF CAB	2060 [81.1]	2060 [81.1]
L705	EREAR AXLE TO END OF FRAME (INCLUDES REAR BUMPER MOUNTING BRACKET)	1039 [40.9]	1031 [40.6]
W703	FRAME RAIL WIDTH	66 [2.6]	66 [2.6]
W704	REAR FRAME WIDTH	1001 [39.4]	1001 [39.4]

PICKUP BODY


CODE	DESCRIPTION	4X2	4X4
	NOMINAL CARGO BODY SIZE	6.5	FT.
H703	Z REFERENCE LINE TO CARGO BODY FLOOR	424 [16.7]	424 [16.7]
H704	TOP OF FLOOR TO [©] OF FUEL FILLER	170 [6.7]	170 [6.7]
H705	REAR BUMPER HEIGHT	221 [8.7]	221 [8.7]
_	REAR BUMPER WIDTH (NOT SHOWN)	1760 [69.3]	1760 [69.3]
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	51 [2.0]	51 [2.0]
H712	Z REFERENCE LINE TO BOTTOM OF REAR BUMPER	74 [2.9]	74 [2.9]
H769	TOP OF FLOOR TO TOP OF CAB @ £ REAR WHEELS	1092 [43.0]	1092 [43.0]
L504	CAB TO PICKUP BODY	30 [1.2]	30 [1.2]
L551	OVERALL LENGTH TO OPEN TAILGATE	2603 [102.5]	2603 [102.5]
L558	€ REAR AXLE TO €FUEL FILLER	505 [19.9]	513 [20.2]
L559	OPEN TAILGATE	498 [19.6]	498 [19.6]

CAB

CODE	DESCRIPTION	4X2	4X4
H61	EFFECTIVE HEADROOM	1036 [40.8]	1036 [40.8]
H159A	WINDSHIELD HEIGHT	889 [35.0]	889 [35.0]
H430	Z REFERENCE LINE TO TOP OF CAB	1516 [59.7]	1516 [59.7]
H701	FRONT BUMPER HEIGHT	259 [10.2]	282 [11.1]
H711	Z REFERENCE LINE TO BOTTOM OF FRONT BUMPER (LESS LOWER VALANCE)	178 [7.0]	142 [5.6]
TL23	FORWARD SEAT TRACK	159 [6.3]	159 [6.3]
TL25	TRUE TRACK TRAVEL LENGTH	220 [8.7]	220 [8.7]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SgRP	40 [1.6]	40 [1.6]
L34	EFFECTIVE LEG ROOM	1039 [40.9]	1039 [40.9]
L703	©FRONT AXLE TO COWL POINT	345 [13.6]	345 [13.6]
W3	SHOULDER ROOM	1620 [63.8]	1620 [63.8]
W5	HIP ROOM	1549 [61.0]	1549 [61.0]
W20	SgRP (Y)	- 439 [- 17.3]	- 439 [- 17.3]
W103	VEHICLE WIDTH	2014 [79.3]	2019 [79.4]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2278 [89.7]	2278 [89.7]
W702	FRONT BUMPER WIDTH	1880 [74.0]	1892 [74.5]

DIMENSIONAL DATA F-150 SUPERCAB FLARESIDE 4X2/4X4



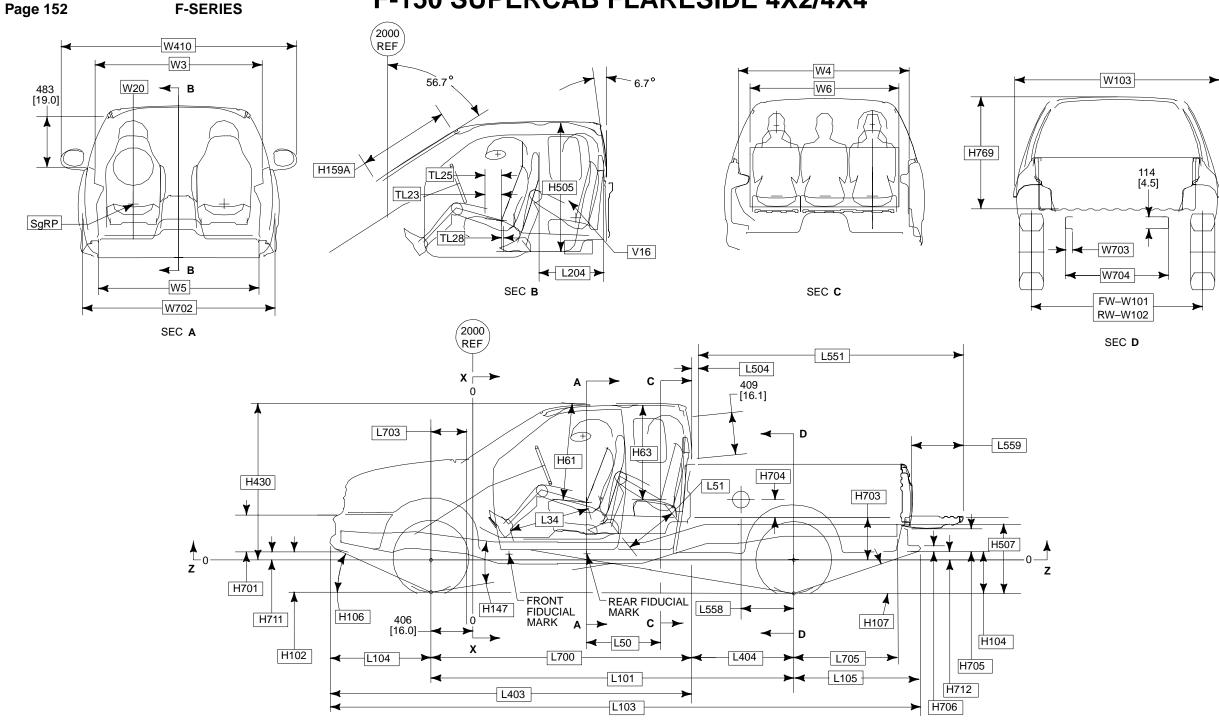

BB0012

F-SERIES

- NOTES [] DIMENSIONS ARE INCHES.
 - CH, LH, F, R, FW, RW DIMENSIONS, SEE PAGE 161.
 - TIRE DATA, PAGE 163.
 - INTERIOR BOX DIMENSIONS, PAGE 157.
 - SgRP X AND Z LOCATIONS, PAGE 37.
 - X AND Z REFERENCE LINE LOCATIONS, PAGE 159.
 - REFER TO PAGE 148 FOR FIDUCIAL LOCATIONS.

Page 153 F-SERIES

DIMENSIONAL DATA F-150 SUPERCAB FLARESIDE 4X2/4X4



CHASSIS

2225	D-0001071011	sv	VB	
CODE	DESCRIPTION	4X2	4X4	
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	256 [10.1]	340 [13.4]	
H104	BOTTOM OF REAR BUMPER TO GROUND @ CURB	351 [13.8]	458 [18.0]	
H106	ANGLE OF APPROACH	18.1°	25.8°	
H107	ANGLE OF DEPARTURE	16.1°	19.8°	
H147	RAMP BREAKOVER ANGLE	14.7°	18.7°	
H507	TOP OF FRAME TO GROUND	843 [33.2]	843 [33.2]	
L101	WHEELBASE	3518 [138.5]	3526 [138.8]	
L103	OVERALL LENGTH — WITH STANDARD REAR STEP BUMPER	5728 [225.5]	5735 [225.8]	
L104	FRONT OVERHANG	983 [38.7]	983 [38.7]	
L105	REAR OVERHANG — WITH STANDARD REAR STEP BUMPER	1227 [48.3]	1227 [48.3]	
L403	FRONT BUMPER TO REAR OF CAB	3515 [138.4]	3515 [138.4]	
L404	CAB TO € OF REAR AXLE	985 [38.8]	993 [39.1]	
L700	 €OF FRONT AXLE TO REAR OF CAB	2533 [99.7]	2533 [99.7]	
L705	€ REAR AXLE TO END OF FRAME (INCLUDES REAR BUMPER MOUNTING BRACKET)	1039 [40.9]	1031 [40.6]	
W703	FRAME RAIL WIDTH	66 [2.6]	66 [2.6]	
W704	REAR FRAME WIDTH	1001 [39.4]	1001 [39.4]	

PICKUP

CODE	DESCRIPTION	4X2	4X4					
	NOMINAL CARGO BODY SIZE							
H703	Z REFERENCE LINE TO CARGO BODY FLOOR	424 [16.7]	424 [16.7]					
H704	TOP OF FLOOR TO Q OF FUEL FILLER	170 [6.7]	170 [6.7]					
H705	REAR BUMPER HEIGHT	221 [8.7]	221 [8.7]					
_	REAR BUMPER WIDTH (NOT SHOWN)	1760 [69.3]	1760 [69.3]					
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	51 [2.0]	51 [2.0]					
H712	Z REFERENCE LINE TO BOTTOM OF REAR BUMPER	74 [2.9]	74 [2.9]					
H769	TOP OF FLOOR TO TOP OF CAB @ © REAR WHEELS	1092 [43.0]	1092 [43.0]					
L504	CAB TO PICKUP BODY	30 [1.2]	30 [1.2]					
L551	OVERALL LENGTH TO OPEN TAILGATE	2603 [102.5]	2603 [102.5]					
L558	€ REAR AXLE TO €FUEL FILLER	505 [19.9]	513 [20.2]					
L559	OPEN TAILGATE	498 [19.6]	498 [19.6]					


CAB

CODE	DESCRIPTION	4X2	4X4
H61	EFFECTIVE HEADROOM — FRONT	1036 [40.8]	1036 [40.8]
H63	EFFECTIVE HEADROOM — REAR	960 [37.8]	960 [37.8]
H159A	WINDSHIELD HEIGHT	889 [35.0]	889 [35.0]
H430	Z REFERENCE LINE TO TOP OF CAB	1516 [59.7]	1516 [59.7]
H505	MAXIMUM CARGO HEIGHT	1166 [45.9]	1166 [45.9]
H701	FRONT BUMPER HEIGHT	259 [10.2]	282 [11.1]
H711	Z REFERENCE LINE TO BOTTOM OF FRONT BUMPER (LESS LOWER VALANCE)	178 [7.0]	142 [5.6]
TL23	FORWARD SEAT TRACK	159 [6.3]	159 [6.3]
TL25	TRUE TRACK TRAVEL LENGTH	220 [8.7]	220 [8.7]
TL28	TRUE TRACK TRAVEL REAR OF SgRP	40 [1.6]	40 [1.6]
L34	EFFECTIVE LEG ROOM — FRONT	1039 [40.9]	1039 [40.9]
L50	H-POINT COUPLE DISTANCE	719 [28.3]	719 [28.3]
L51	EFFECTIVE LEG ROOM — REAR	818 [32.2]	818 [32.2]
L703	€ FRONT AXLE TO COWL POINT	345 [13.6]	345 [13.6]
W3	SHOULDER ROOM — FRONT	1620 [63.8]	1620 [63.8]
W4	SHOULDER ROOM — REAR	1620 [63.8]	1620 [63.8]
W5	HIP ROOM — FRONT	1549 [61.0]	1549 [61.0]
W6	HIP ROOM — REAR	1605 [63.2]	1605 [63.2]
W20	SgRP (Y)	- 439 [- 17.3]	- 439 [- 17.3]
W103	VEHICLE WIDTH	2014 [79.3]	2019 [79.5]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2278 [89.7]	2278 [89.7]
W702	FRONT BUMPER WIDTH	1880 [74.0]	1892 [74.5]
V16	REAR CARGO VOLUME WITH REAR SEAT CUSHION FOLDED UP — LITRES/CU. FT.	1082/ 38.2	1082/ 38.2

DIMENSIONAL DATA F-150 SUPERCREW PICKUP 4X2/4X4

2002 MODEL YEAR

Page 154 F-SERIES

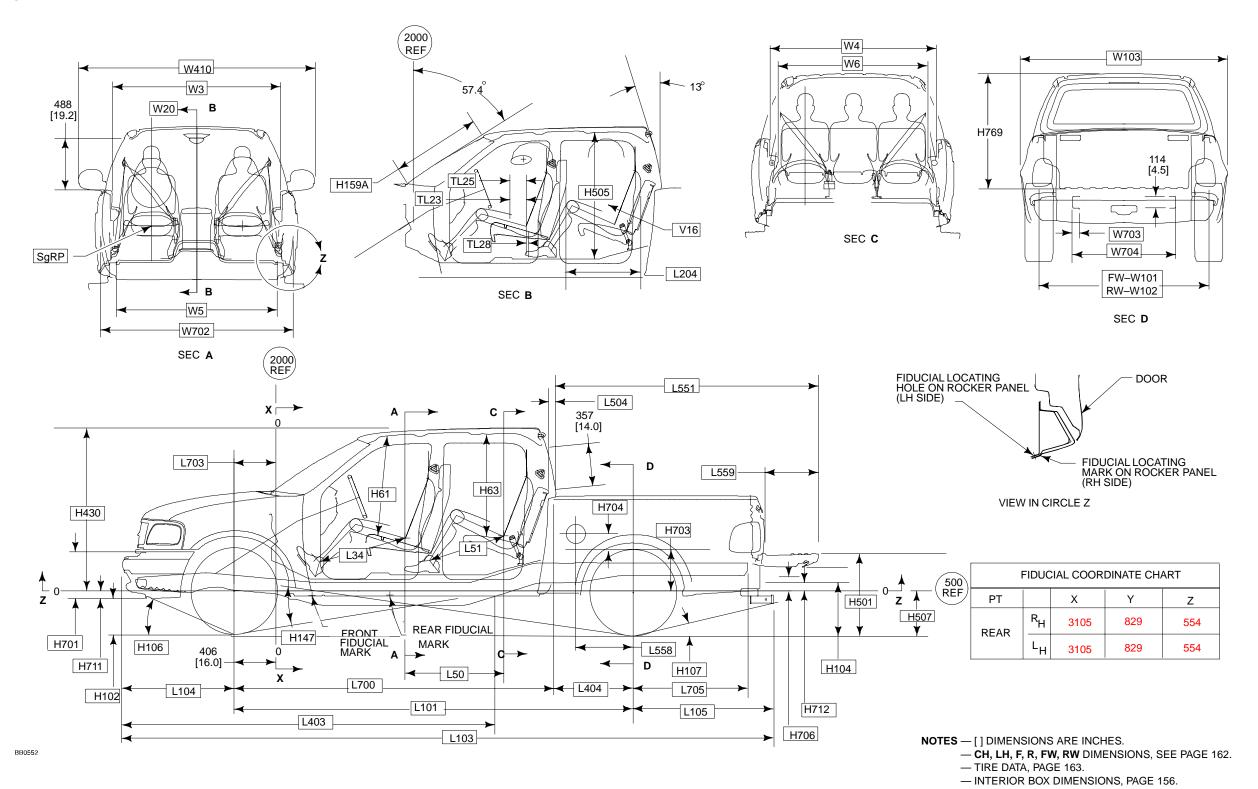

DIMENSIONAL DATA F-150 SUPERCREW PICKUP 4X2/4X4

Page 155 F-SERIES



CHASSIS

	<u> </u>		
CODE	DESCRIPTION	4X2	4X4
H102	BOTTOM OF FRONT BUMPER VALANCE TO GROUND @ CURB	306 [12.0]	380 [15.0]
H104	BOTTOM OF REAR BUMPER TO GROUND @ CURB	355 [14.0]	455 [17.9]
H106	ANGLE OF APPROACH	21.6°	28.4°
H107	ANGLE OF DEPARTURE	17.0°	21.7°
H147	RAMP BREAKOVER ANGLE	14.7°	18.7°
H507	TOP OF FRAME TO GROUND (DESIGN)	616 [24.3]	751 [29.6]
L101	WHEELBASE	3518 [138.5]	3525 [138.8]
L103	OVERALL LENGTH — STANDARD REAR STEP BUMPER	5738 [225.9]	5745 [226.2]
L104	FRONT OVERHANG	983 [38.7]	983 [38.7]
L105	REAR OVERHANG — STANDARD REAR STEP BUMPER	1238 [48.7]	1238 [48.7]
L403	FRONT BUMPER TO REAR OF CAB	3816 [150.2]	3816 [150.2]
L404	CAB TO € OF REAR AXLE	699 [27.5]	706 [27.8]
L700	Q OF FRONT AXLE TO REAR OF CAB	2819 [111.0]	2819 [111.0]
L705	© REAR AXLE TO END OF FRAME (INCLUDES REAR BUMPER MOUNTING BRACKET)	1039 [40.9]	1031 [40.6]
W703	FRAME RAIL WIDTH	66 [2.6]	66 [2.6]
W704	REAR FRAME WIDTH	1001 [39.4]	1001 [39.4]

PICKUP BODY

CODE	DESCRIPTION	4X2	4X4
	NOMINAL CARGO BODY SIZE	5 ½	FT
H501	TOP OF TAILGATE TO GROUND	697 [27.4]	697 [27.4]
H703	Z REFERENCE LINE TO CARGO BODY FLOOR	421 [16.6]	421 [16.6]
H704	TOP OF FLOOR TO © OF FUEL FILLER	218 [8.6]	218 [8.6]
H705	REAR BUMPER HEIGHT	225 [8.9]	225 [8.9]
_	REAR BUMPER WIDTH (NOT SHOWN)	1755 [69.1]	1755 [69.1]
H706	BOTTOM OF REAR BUMPER TO TOP OF BUMPER HITCH PLATE	59 [2.3]	59 [2.3]
H712	Z REFERENCE LINE TO BOTTOM OF REAR BUMPER	129 [5.0]	129 [5.0]
H769	TOP OF FLOOR TO TOP OF CAB @ © REAR WHEELS	1108 [43.6]	1108 [43.6]
L504	CAB TO PICKUP BODY	12.8 [0.5]	12.8 [0.5]
L551	BOX OVERALL LENGTH TO OPEN TAILGATE	2266 [89.2]	2266 [89.2]
L558	€REAR AXLE TO €FUEL FILLER	508 [20.0]	508 [20.0]
L559	OPEN TAILGATE	480 [18.9]	480 [18.9]

CAB


CODE	DESCRIPTION	4X2	4X4
H61	EFFECTIVE HEADROOM — FRONT	1011 [39.8]	1011 [39.8]
H63	EFFECTIVE HEADROOM — REAR	1011 [39.8]	1011 [39.8]
H159A	WINDSHIELD HEIGHT	816 [32.1]	816 [32.1]
H430	Z REFERENCE LINE TO TOP OF CAB	1532 [60.3]	1532 [60.3]
H505	MAXIMUM INTERIOR CARGO HEIGHT (REAR SEAT)	970 [38.2]	970 [38.2]
H701	FRONT BUMPER HEIGHT	337 [13.3]	337 [13.3]
H711	Z REFERENCE LINE TO BOTTOM OF FRONT BUMPER (LESS LOWER VALANCE)	244 [9.6]	244 [9.6]
TL23	FORWARD SEAT TRACK	179 [7.0]	179 [7.0]
TL25	TRUE TRACK TRAVEL LENGTH	179 [7.0]	179 [7.0]
TL28	TRUE TRACK TRAVEL LENGTH REAR OF SgRP	40 [1.6]	40 [1.6]
L34	EFFECTIVE LEG ROOM — FRONT	1041 [41.0]	1041 [41.0]
L50	H-POINT COUPLE DISTANCE	865 [34.0]	865 [34.0]
L51	EFFECTIVE LEG ROOM — REAR	935 [36.8]	935 [36.8]
L204	BACK OF FRONT SEAT TO BACK PANEL	855 [33.6]	855 [33.6]
L703	€ FRONT AXLE TO COWL POINT	345 [13.6]	345 [13.6]
W3	SHOULDER ROOM — FRONT	1618 [63.7]	1618 [63.7]
W4	SHOULDER ROOM — REAR	1615 [63.6]	1615 [63.6]
W5	HIP ROOM — FRONT	1519 [59.8]	1519 [59.8]
W6	HIP ROOM — REAR	1473 [58.0]	1473 [58.0]
W20	SgRP (Y)	- 440 [-17.3]	- 440 [- 17.3]
W103	VEHICLE WIDTH	2009 [79.1]	2029 [79.9]
W410	OVERALL WIDTH WITH STANDARD MIRRORS	2293 [90.3]	22793 [90.3]
W702	FRONT BUMPER WIDTH	1900 [74.8]	1900 [74.8]
V16	REAR CARGO VOLUME WITH REAR SEAT BACK FOLDED DOWN — LITRES/CU. FT.	1219/ 43	1219/ 43

DIMENSIONS AND FEATURES F-150 SUPERCREW PICKUP BOX

2002 MODEL YEAR

Page 156

F-SERIES

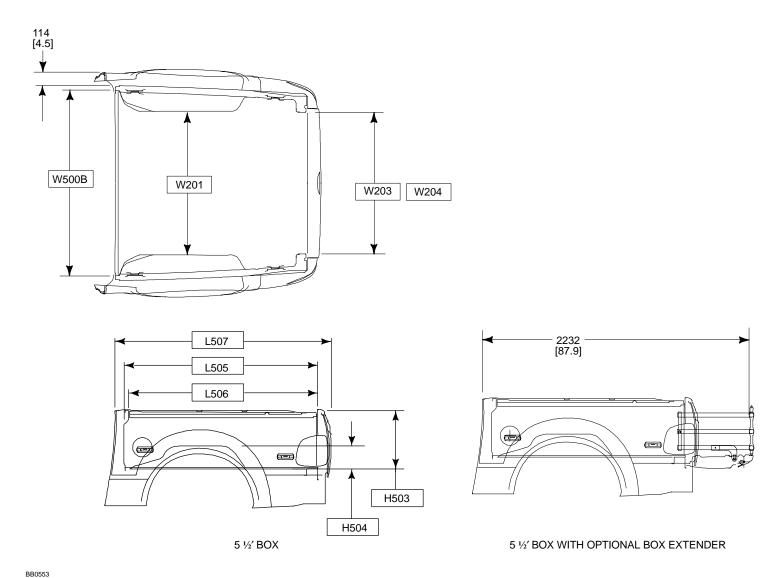


CODE	DESCRIPTION	
	NOMINAL CARGO BODY SIZE	5 ½ FT.
L505	CARGO BODY LENGTH @ FLOOR	1707 [67.2]
L506	CARGO BODY LENGTH @ TOP	1664 [65.5]
L507	CARGO BODY OVERALL LENGTH	1785 [70.2]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1270 [50.0]
W203	REAR OPENING WIDTH AT FLOOR	1253 [49.3]
W204	REAR OPENING WIDTH AT BELT	1253 [49.3]
W500B	CARGO BODY MAX. INSIDE WIDTH	1465 [57.7]
H503	CARGO BODY HEIGHT W/MOLDING	513 [20.2]
H504	WHEELHOUSE HEIGHT	243 [9.6]
V5	CARGO VOLUME - LITRES/CU.FT.	1252/44.2


ввироза


DIMENSIONS AND FEATURES F-150 STYLESIDE PICKUP BOX





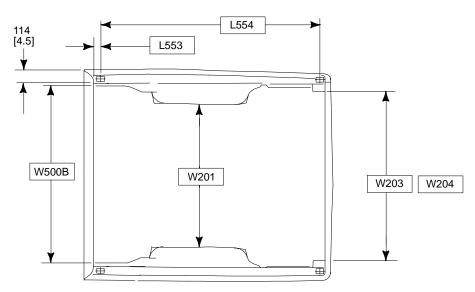

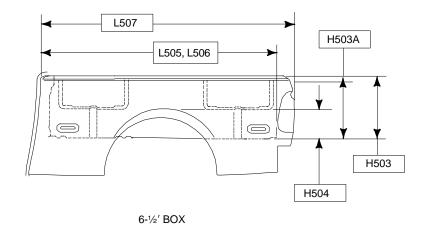

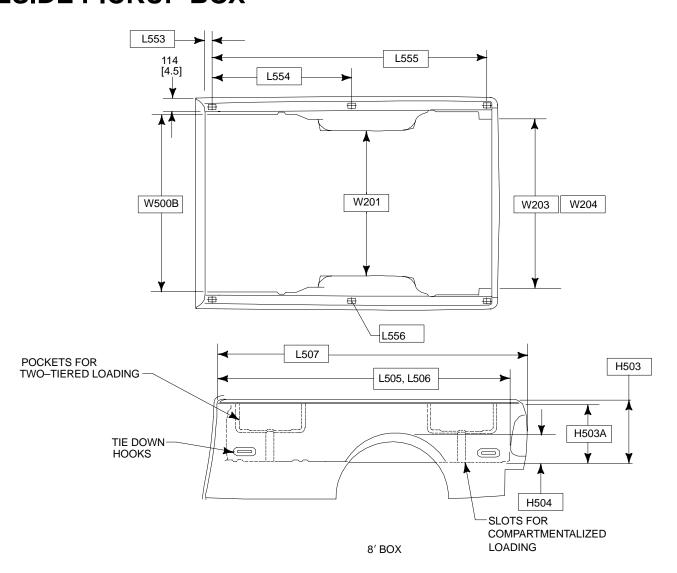


CODE	DESCRIPTION	LWB	SWB
	NOMINAL CARGO BODY SIZE	8 FT.	6.5 FT
L505	CARGO BODY LENGTH @ FLOOR	2464 [97.0]	2001 [78.8]
L506	CARGO BODY LENGTH @ TOP	2443 [96.2]	1966 [77.4]
L507	CARGO BODY OVERALL LENGTH	2588 [101.9]	2118 [83.4]
L553	FRONT OF BOX TO & STAKE #1	68 [2.7]	68 [2.7]
L554	€ OF STAKE #1 TO STAKE #2	1191 [46.9]	1864 [73.4]
L555	€ OF STAKE #1 TO STAKE #3	2354 [92.7]	
L556	STAKE POCKET SIZE	61 X 44 [2.4 x 1.75]	61 X 44 [2.4 x 1.75]

CODE	DESCRIPTION	LWB	SWB
	NOMINAL CARGO BODY SIZE	8 FT.	6.5 FT.
W201	CARGO WIDTH AT WHEELHOUSE	1270 [50.0]	1270 [50.0]
W203	REAR OPENING WIDTH AT FLOOR	1532 [60.3]	1532 [60.3]
W204	REAR OPENING WIDTH AT BELT	1552 [61.1]	1577 [62.1]
W500B	CARGO BODY MAX. INSIDE WIDTH	1656 [65.2]	1656 [65.2]
H503	CARGO BODY HEIGHT W/MOLDING	508 [20.0]	508 [20.0]
H503A	CARGO BODY HEIGHT W/O MOLDING	500 [19.7]	500 [19.7]
H504	WHEELHOUSE HEIGHT	236 [9.3]	236 [9.3]
V5	CARGO VOLUME – LITRES/CU.FT.	2056/72.6	1659/58.6

DIMENSIONS AND FEATURES F-150 FLARESIDE PICKUP BOX



Page 158 F-SERIES

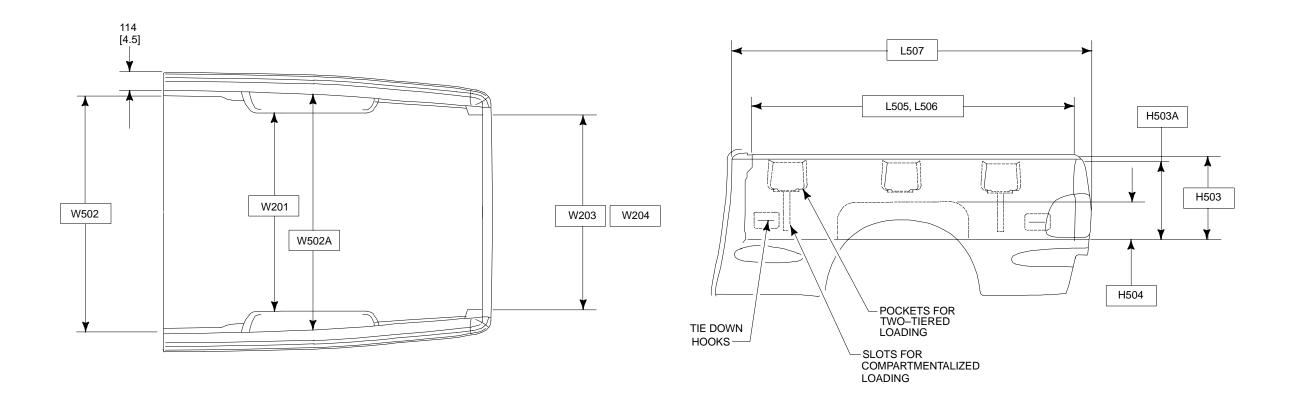


CODE	DESCRIPTION	SWB
	NOMINAL CARGO BODY SIZE	6.5 FT
L505	CARGO BODY LENGTH @ FLOOR	2001 [78.8]
L506	CARGO BODY LENGTH @ TOP	1966 [77.4]
L507	CARGO BODY OVERALL LENGTH	2296 [90.4]
W201	CARGO WIDTH AT WHEELHOUSE	1270 [50.0]
W203	REAR OPENING WIDTH AT FLOOR	1250 [49.2]
W204	REAR OPENING WIDTH AT BELT	1300 [51.2]
W502	CARGO BODY MAX. INSIDE WIDTH	1516 [59.7]
W502A	CARGO BODY MAX. WIDTH INSIDE BOX AT & OF REAR AXLE	1463 [57.6]
H503	CARGO BODY HEIGHT W/ MOLDING	508 [20.0]
H503A	CARGO BODY HEIGHT W/O MOLDING	472 [18.6]
H504	WHEELHOUSE HEIGHT	190 [7.5]
V5	CARGO VOLUME – LITRES/CU.FT.	1421/50.2

FUEL AND VAPOR SYSTEM TYPICAL FOR ALL LENGTHS OF F-150



Page 160 F-SERIES

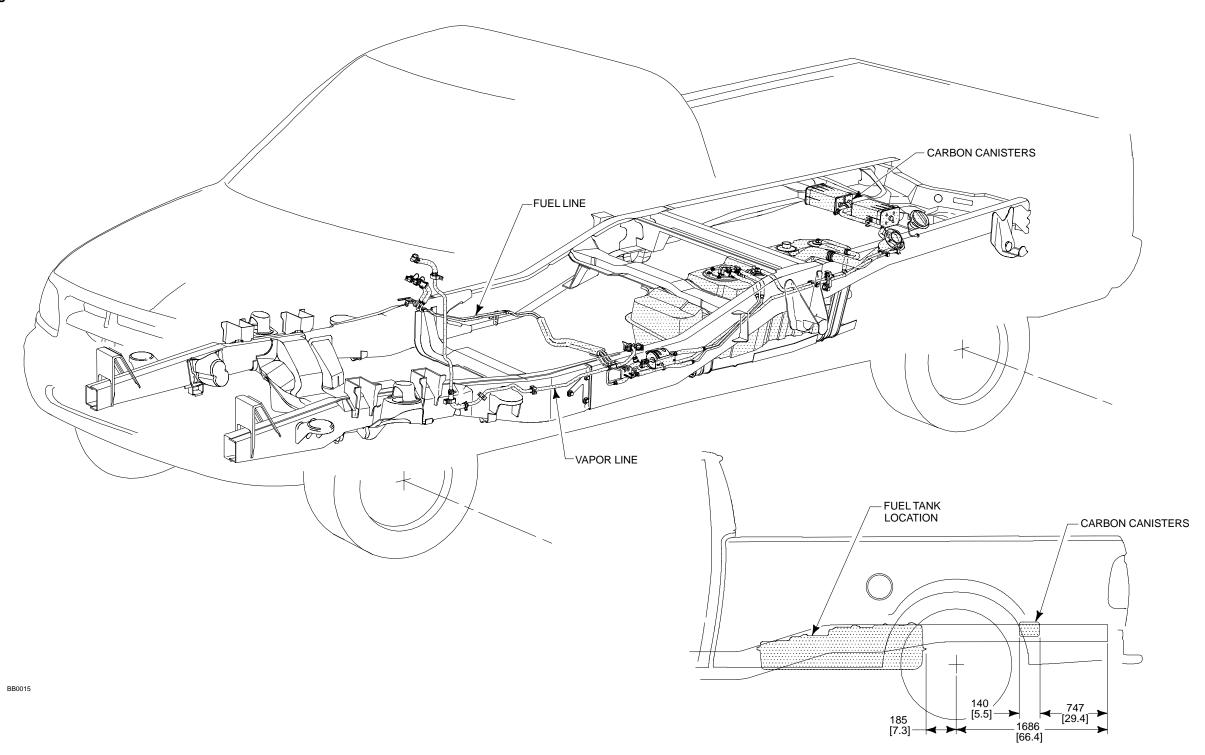

F-150 REGULAR/SUPERCAB AXLE/TIRE/VEHICLE HEIGHT DATA



Page 161

F-SERIES

CH FRONT WHEEL REAR AXLE


CH GROUND

REAR AXLE

Z REFERENCE LINE

S000

REF

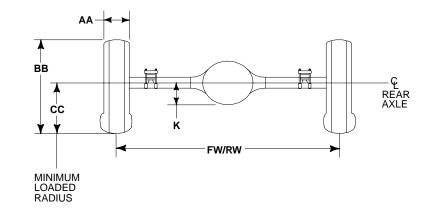

	WB	GVWR	Base	F Height @ I (1)(mm	(2)	(1)	② Rear Axle)(2) ı [in]		(1)(2) n [in]	_	(1)(2) n [in]	k	K AA		СС	FW	RW
Model	inches	pounds	Tire	Height at Base Curb Weight	Loaded Height @ Spring Rating	Height at Base Curb Weight	Loaded Height @ Spring Rating	Empty	Loaded	Empty	Loaded	mm [in]	mm [in]	BB mm [in]	mm [in]	mm [in]	mm [in]
F-150 Regular Cab 4x2 Styleside	119.9	6050	P255/70R-16SL	254 [10.0]	236 [9.3]	343 [13.5]	249 [9.8]	843 [33.2]	691 [27.2]	1864 [73.4]	1778 [70.0]	142 [5.6]	269 [10.6]	777 [30.6]	345 [13.6]	1661 [65.4]	1661 [65.4]
1-130 Negulai Oab 4x2 Styleside	138.5	6050	P235/70R-16SL	256 [10.1]	236 [9.3]	353 [13.9]	249 [9.8]	820 [32.3]	670 [26.4]	1838 [72.4]	1760 [69.3]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
F-150 Regular Cab 4x2 Flareside	119.9	6050	P255/70R-16SL	254 [10.0]	236 [9.3]	343 [13.5]	249 [9.8]	843 [33.2]	691 [27.2]	1864 [73.4]	1778 [70.0]	142 [5.6]	269 [10.6]	777 [30.6]	345 [13.6]	1661 [65.4]	1661 [65.4]
F-150 SuperCab 4x2 Styleside	138.5	6050	P235/70R-16SL	248 [9.7]	236 [9.3]	348 [13.7]	249 [9.8]	820 [32.3]	670 [26.4]	1849 [72.8]	1763 [69.4]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
1-130 SuperCab 4x2 Styleside	157.1	6050	P235/70R-16SL	256 [10.1]	236 [9.3]	348 [13.7]	249 [9.8]	818 [32.2]	673 [26.5]	1841 [72.5]	1763 [69.4]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
F-150 SuperCab 4x2 Flareside	138.5	6050	P235/70R-16SL	248 [9.7]	236 [9.3]	348 [13.7]	249 [9.8]	820 [32.3]	670 [26.4]	1849 [72.8]	1763 [69.4]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
F-150 Regular Cab 4x4 Styleside	120.2	6050	P255/70R-16SL	356 [14.0]	315 [12.4]	424 [16.7]	325 [12.8]	922 [36.3]	770 [30.3]	1935 [76.2]	1859 [73.2]	142 [5.6]	269 [10.6]	780 [30.7]	348 [13.7]	1661 [65.4]	1661 [65.4]
1 - 130 Negulai Cab 4x4 Styleside	138.8	6050	P235/70R-16SL	348 [13.7]	310 [12.2]	432 [17.0]	325 [12.8]	886 [34.9]	754 [29.7]	1907 [75.1]	1836 [72.3]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
F-150 Regular Cab 4x4 Flareside	120.2	6050	P255/70R-16SL	356 [14.0]	312 [12.3]	424 [16.7]	325 [12.8]	922 [36.3]	770 [30.3]	1935 [76.2]	1859 [73.2]	142 [5.6]	269 [10.6]	780 [30.7]	348 [13.7]	1661 [65.4]	1661 [65.4]
F-150 SuperCab 4x4 Styleside	138.8	6250	P235/70R-16SL	348 [13.7]	307 [12.1]	424 [16.7]	325 [12.8]	886 [34.9]	754 [29.7]	1918 [75.5]	1841 [72.5]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]
r-130 SuperCab 4x4 Styleside	157.4	6250	P255/70R-16SL	348 [13.7]	307 [12.1]	424 [16.7]	325 [12.8]	902 [35.5]	775 [30.5]	1925 [75.8]	1857 [73.1]	142 [5.6]	269 [10.6]	780 [30.7]	345 [13.6]	1661 [65.4]	1661 [65.4]
F-150 SuperCab 4x4 Flareside	138.8	6250	P235/70R-16SL	348 [13.7]	307 [12.1]	424 [16.7]	325 [12.8]	886 [34.9]	754 [29.7]	1918 [75.5]	1841 [72.5]	142 [5.6]	249 [9.8]	742 [29.2]	328 [12.9]	1661 [65.4]	1661 [65.4]


⁽¹⁾ The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances.

⁽²⁾ Vehicle ride heights are given at tire minimum loaded radius.

Page 162 F-SERIES

F-150 SUPERCREW AXLE/TIRE/VEHICLE HEIGHT DATA



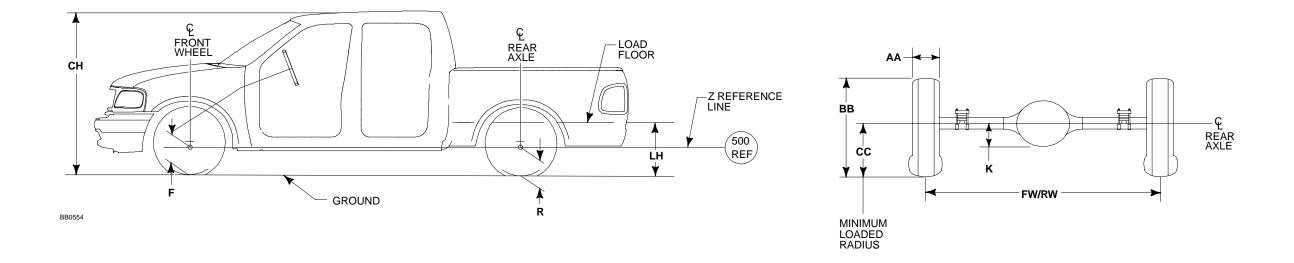

	WB	GVWR	Base		t @ Front _e j (1)(2) [in]	Axle	nt @ Rear (1)(2) [in]		(1)(2) 1 [in]		(1)(2) [in]	K	AA	ВВ	CC mm [in]	FW mm [in]	RW mm [in]
Model	inches	pounds	Tire	Height at Base Curb Weight	Loaded Height @ Spring Rating	Height at Base Curb Weight	Loaded Height @ Spring Rating	Empty	Loaded	Empty	Loaded	mm [in]	mm [in]	mm [in]			
F-150 SuperCrew 4x2	138.5	6350	P255/70R-16SL	286 [11.3]	252 [9.9]	397 [15.6]	266 [10.5]	813 [32.0]	696 [27.4]	1877 [73.9]	1798 [70.8]	142 [5.6]	249 [9.8]	742 [29.2]	345 [13.6]	1661 [65.4]	1661 [65.4]
F-150 SuperCrew 4x4	138.8	6500	P255/70R-16SL	350 [13.8]	326 [12.8]	452 [17.8]	341 [13.4]	889 [35.0]	775 [30.5]	1953 [76.9]	1874 [73.8]	142 [5.6]	249 [9.8]	738 [29.0]	345 [13.6]	1661 [65.4]	1661 [65.4]

⁽¹⁾ The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances.

⁽²⁾ Vehicle ride heights are given at tire minimum loaded radius.

Page 163 F-SERIES

F-150 REGULAR/SUPERCAB/SUPERCREW TIRE DATA

		AA Ma Section		BB Ma Dian		*CC Minimum Loaded Radius		
Tire Size	Rim Width	All-Season	All-Terrain	All-Season	All-Terrain	All-Season	All-Terrain	
P235/70R16SL	178 [7.0]	249 [9.8]	249 [9.8]	742 [29.2]	742 [29.2]	328 [12.9]	328 [12.9]	
P255/70R16SL	178 [7.0]	269 [10.6]	269 [10.6]	777 [30.6]	780 [30.7]	345 [13.6]	348 [13.7]	
P265/70R17SL	190 [7.5]	_	284 [11.2]	_	825 [32.5]	_	371 [14.6]	
P275/60R17SL	190 [7.5]	263 [10.4]		785 [30.9]		350 [13.8]		
LT245/75R16/D	178 [7.0]	264 [10.4]	264 [10.4]	787 [31.0]	792 [31.2]	356 [14.0]	358 [14.1]	
LT265/70R1X17	190 [7.5]	_	264 [10.8]	_	815 [32.1]	_	348 [13.7]	

^{*} This number represents Radius – Axle centerline to ground with maximum rated load on tire at maximum pressure.


F-150 REGULAR/SUPERCAB/SUPERCREW WHEEL DATA

Wheel Type	Wheel Size	Inset	No. of Studs	Bolt Circle	Max. Wheel Capacity [lb @ Ground]
Styled Steel	16 x 7.0J	0.55	5	5.3	1950 Front/2064 Rear
Polished Aluminum	16 x 7.0J	0.55	5	5.3	1900
Cast Aluminum	16 x 7.0J	0.55	5	5.3	1900
Cast Aluminum	17 x 7.5J	0.55	5	5.3	1900 Front/2064 Rear
Cast Aluminum Spoke	17 x 7.5J	0.55	5	5.3	1900 Front/2064 Rear
Chromed Steel	17 x 7.5J	0.55	5	5.3	1950 Front/2064 Rear
Argent Styled Steel	16 x 7.0J	0.55	7	5.9	2100 Front/2400 Rear
Chrome Styled Steel	16 x 7.0J	0.55	7	5.9	2100 Front/2400 Rear

DIMENSIONAL DATA SUPER DUTY F-250/350 REGULAR CAB STYLESIDE PICKUP – 4X2/4X4



Page 164 SUPER DUTY F-SERIES

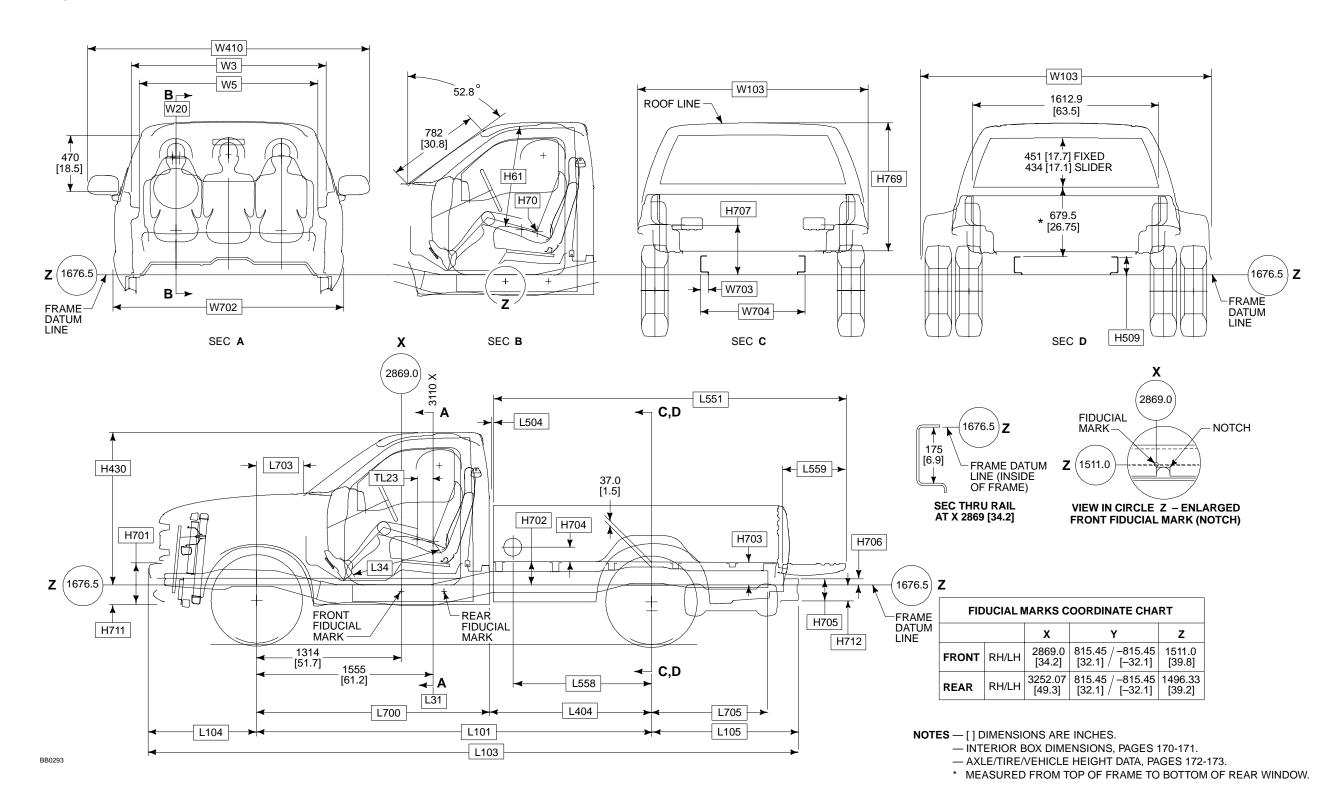

DIMENSIONAL DATA SUPER DUTY F-250/350 REGULAR CAB STYLESIDE PICKUP – 4X2/4X4



Page 165 SUPER DUTY F-SERIES

CHASSIS

CODE	DESCRIPTION	4x2/4x4
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	162 [6.4]
L101	WHEELBASE	3479 [137.0]
L103	OVERALL LENGTH — W/REAR BUMPER	5756 [226.6]
L104	FRONT OVERHANG	950 [37.4]
L105	REAR OVERHANG — W/REAR BUMPER	1326 [52.2]
L404	BACK OF CAB TO € OF REAR AXLE	1427 [56.2]
L705	€ REAR AXLE TO END OF FRAME	1026 [40.4]
W703	FRAME RAIL WIDTH	72 [2.8]
W704	REAR FRAME WIDTH	956 [37.7]

PICKUP BODY

CODE	DESCRIPTION	4x2/4x4
	NOMINAL CARGO BODY SIZE	
H702	FRAME DATUM LINE TO TOP OF CARGO BOX FLOOR — FRONT	211 [8.3]
H703	FRAME DATUM LINE TO CARGO BODY FLOOR — REAR	199 [7.8]
H704	TOP OF FLOOR TO & OF FUEL FILLER DOOR	126 [5.0]
H705	REAR BUMPER HEIGHT	219 [8.6]
H706	FRAME DATUM TO TOP OF BUMPER STEP	124 [4.9]
H707	FRAME DATUM TO TOP OF WHEELHOUSE	435 [17.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	163 [6.4]
H769	TOP OF FLOOR TO TOP OF CAB @ [©] REAR WHEELS	1146 [45.1]
L504	BACK OF CAB TO PICKUP BODY	28 [1.1]
L551	OVERALL TO OPEN TAILGATE	3109 [122.4]
L558	€ REAR AXLE TO €FUEL FILLER DOOR	1223 [48.2]
L559	OPEN TAILGATE	549 [21.6]
W103	VEHICLE WIDTH SRW DRW	2031 [79.9] 2426 [95.5]


CAB

CODE	DESCRIPTION	4x2/4x4
H61	EFFECTIVE HEADROOM	1050 [41.3]
H70	SEATING REFERENCE POINT — SgRP — LH/RH (Z)	2071 [61.9]
H430	FRAME DATUM TO TOP OF CAB	1350 [53.1]
H701	FRONT BUMPER HEIGHT — W/O VALANCE — W/VALANCE	337 [13.3] 361 [14.2]
H711	FRAME DATUM TO BOTTOM OF FRONT BUMPER — W/O VALANCE — W/VALANCE	145 [5.7] 170 [6.7]
TL23	SEAT TRACK TRAVEL	160 [6.3]
L31	SEATING REFERENCE POINT — SgRP — LH/RH (X)	3110 [43.7]
L34	MAXIMUM EFFECTIVE LEG ROOM — W/VINYL MAT — W/CARPET	1034 [40.7] 1036 [40.8]
L700	€FRONT AXLE TO BACK OF CAB	2052 [80.8]
L703	€FRONT AXLE TO COWL POINT	447 [17.6]
W3	SHOULDER ROOM — BASE TRIM — HIGH SERIES TRIM	1728 [68.0] 1701 [67.0]
W5	HIP ROOM	1711 [67.4]
W20	SEATING REFERENCE POINT — SgRP — LH/RH (Y)	- 464/464 [- 18.3/18.3]
W410	OVERALL CAB WIDTH WITH MIRRORS — MANUAL — ELECTRIC — TRAILER TOW	2522 [99.3] 2522 [99.3] 2677 [105.4]
W702	FRONT BUMPER WIDTH	2006 [79.0]

DIMENSIONAL DATA SUPER DUTY F-250/350 SUPERCAB STYLESIDE PICKUP – 4X2/4X4





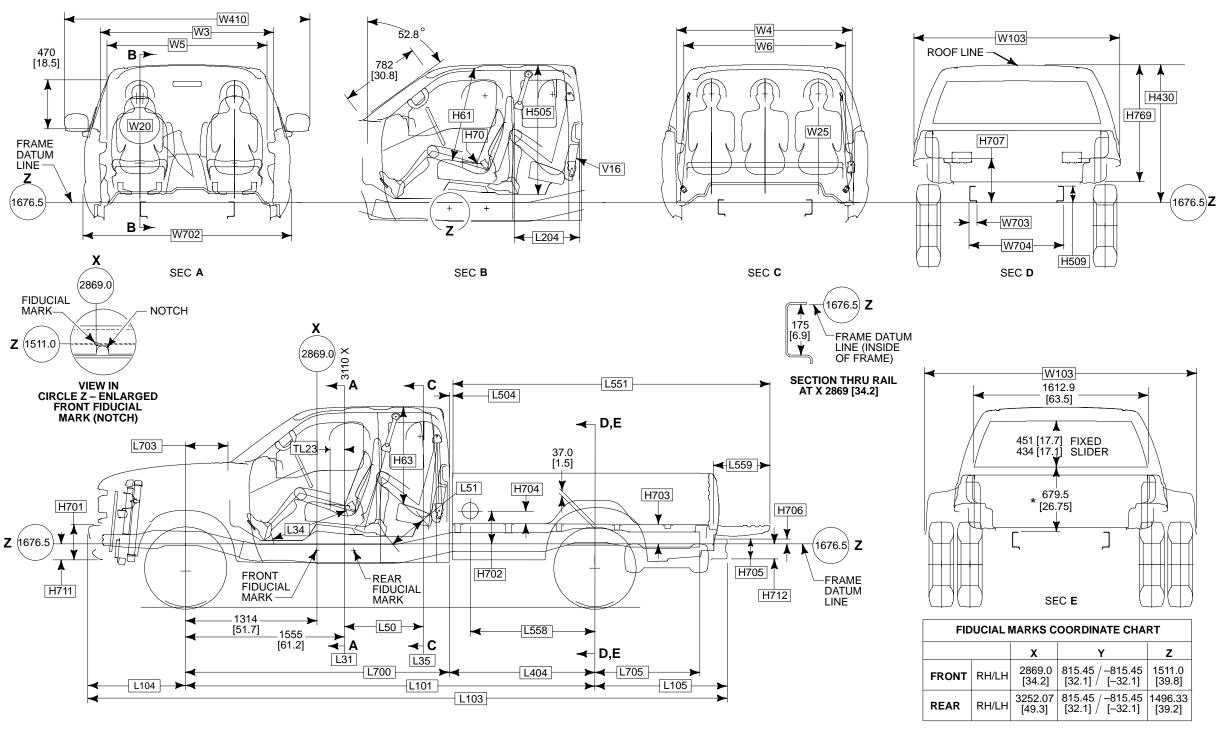

BB0291

- INTERIOR BOX DIMENSIONS, PAGES 170-171.
- AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 172-173.
- * MEASURED FROM TOP OF FRAME TO BOTTOM OF REAR WINDOW.

DIMENSIONAL DATA SUPER DUTY F-250/350 SUPERCAB STYLESIDE PICKUP – 4X2/4X4

Page 167 SUPER DUTY F-SERIES

CHASSIS

CODE	DESCRIPTION	SWB	LWB
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	162 [6.4]	162 [6.4]
L101	WHEELBASE	3602 [141.8]	4013 [158.0]
L103	OVERALL LENGTH — W/REAR BUMPER	5878 [231.4]	6289 [247.6]
L104	FRONT OVERHANG	950 [37.4]	950 [37.4]
L105	REAR OVERHANG — W/ BUMPER	1326 [52.2]	1326 [52.2]
L404	BACK OF CAB TO ÇOF REAR AXLE	1016 [40.0]	1427 [56.2]
L705	€ REAR AXLE TO END OF FRAME	1026 [40.4]	1026 [40.4]
W703	FRAME RAIL WIDTH	72 [2.8]	72 [2.8]
W704	REAR FRAME WIDTH	956 [37.7]	956 [37.7]

PICKUP BODY

CODE	DESCRIPTION	SWB	LWB
	NOMINAL CARGO BODY SIZE		
H702	FRAME DATUM LINE TO TOP OF CARGO BOX FLOOR — FRONT	211 [8.3]	211 [8.3]
H703	FRAME DATUM LINE TO CARGO BODY FLOOR — REAR	199 [7.8]	199 [7.8]
H704	TOP OF FLOOR TO € OF FUEL FILLER DOOR	126 [5.0]	126 [5.0]
H705	REAR BUMPER HEIGHT	219 [8.6]	219 [8.6]
H706	FRAME DATUM TO TOP OF BUMPER STEP	124 [4.9]	124 [4.9]
H707	FRAME DATUM TO TOP OF WHEELHOUSE	435 [17.1]	435 [17.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	163 [6.4]	163 [6.4]
H769	TOP OF FLOOR TO TOP OF CAB @ €REAR WHEELS	1151 [45.3]	1151 [45.3]
L504	BACK OF CAB TO PICKUP BODY	28 [1.1]	28 [1.1]
L551	OVERALL TO OPEN TAILGATE	2698 [106.2]	3109 [122.4]
L558	€ REAR AXLE TO € FUEL FILLER DOOR	597 [23.5]	1223 [48.2]
L559	OPEN TAILGATE	549 [21.6]	549 [21.6]
W103	VEHICLE WIDTH SRW DRW	2031 [79.9] 2426 [95.5]	2031 [79.9] 2426 [95.5]

2002 MODEL YEAR


CAB

CAB		
CODE	DESCRIPTION	4x2/4x4
H61	EFFECTIVE HEADROOM — FRONT	1052 [41.4]
H63	EFFECTIVE HEADROOM — REAR BENCH SEAT	978 [38.5]
H70	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (Z)	2071 [61.9]
H71	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (Z)	2067 [61.7]
H430	FRAME DATUM TO TOP OF CAB	1357 [53.4]
H505	MAXIMUM CARGO HEIGHT	1266 [49.8]
H701	FRONT BUMPER HEIGHT — W/O VALANCE — W/VALANCE	337 [13.3] 361 [14.2]
H711	FRAME DATUM TO BOTTOM OF FRONT BUMPER — W/O VALANCE — W/VALANCE	145 [5.7] 170 [6.7]
L31	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (X)	3110 [43.7]
TL23	SEAT TRACK TRAVEL	160 [6.3]
L34	MAXIMUM EFFECTIVE LEG ROOM — FRONT — W/VINYL MAT — W/CARPET	1034 [40.7] 1036 [40.8]
L35	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (X)	3840 [72.4]
L50	H-POINT COUPLE DISTANCE	729 [28.7]
L51	EFFECTIVE LEG ROOM — REAR — FRONT BENCH/REAR BENCH — FRONT CAPTAIN'S CHAIR, REAR BENCH	822 [32.4] 797 [31.4]
L700	€FRONT AXLE TO BACK OF CAB	2586 [101.8]
L703	€FRONT AXLE TO COWL POINT	447 [17.6]
V16	REAR CARGO VOLUME WITH REAR SEAT CUSHION FOLDED UP — LITERS/CU. FT. REAR CARGO VOLUME WITHOUT REAR SEAT — LITERS/CU. FT.	1230/43.4 1501/53.0
W3	SHOULDER ROOM — FRONT — BASE TRIM — HIGH SERIES TRIM	1728 [68.0] 1701 [67.0]
W4	SHOULDER ROOM — REAR BENCH SEAT — BASE TRIM — HIGH SERIES TRIM	1728 [68.0] 1728 [68.0]
W5	HIP ROOM — FRONT — BASE TRIM — HIGH SERIES TRIM	1711 [67.4] 1711 [67.4]
W6	HIP ROOM — REAR — BASE TRIM BENCH SEAT	1710 [67.3]
W20	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (Y)	-464/464 [-18.3/18.3]
W25	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (Y)	523 [20.6]
W410	OVERALL CAB WIDTH W/MIRRORS — MANUAL — ELECTRIC — TRAILER TOW	2522 [99.3] 2522 [99.3] 2677 [105.4]
W702	FRONT BUMPER WIDTH	2006 [79.0]

DIMENSIONAL DATA SUPER DUTY F-250/350 CREW CAB STYLESIDE PICKUP – 4X2/4X4





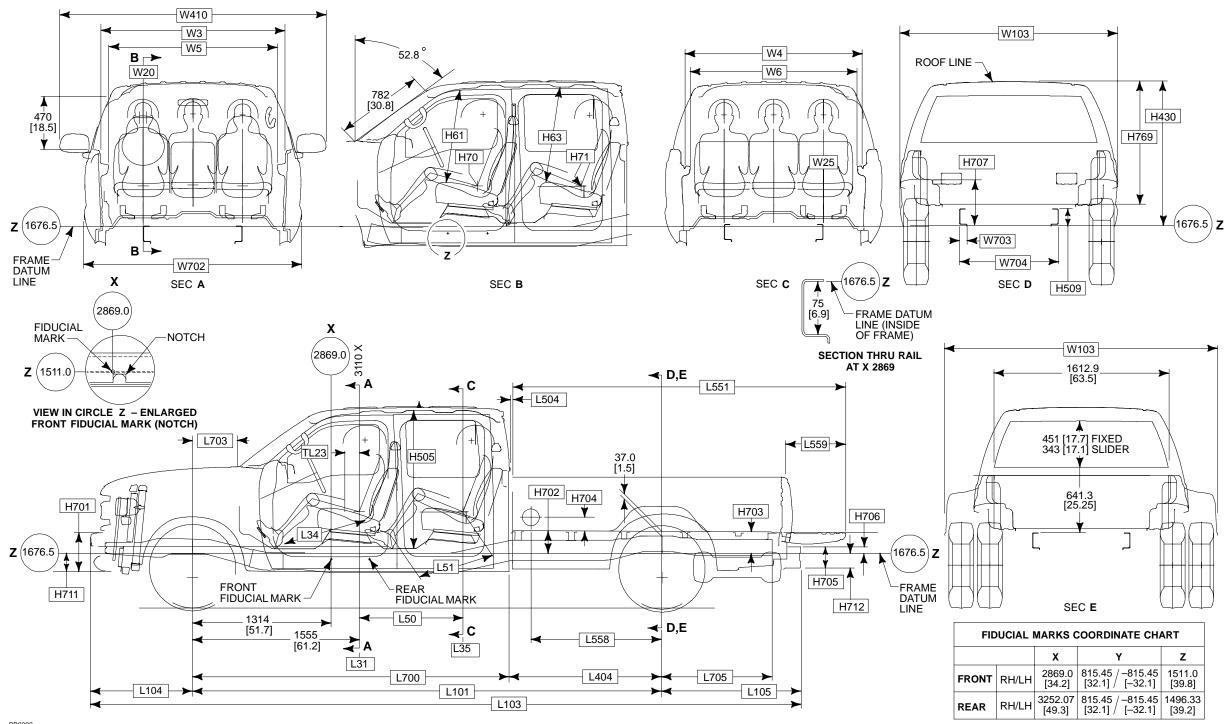

BB0292

- INTERIOR BOX DIMENSIONS, PAGES 170-171.
- AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 176-177.
- * MEASURED FROM TOP OF FRAME TO BOTTOM OF REAR WINDOW.

DIMENSIONAL DATA SUPER DUTY F-250/350 CREW CAB STYLESIDE PICKUP – 4X2/4X4

Page 169 SUPER DUTY F-SERIES

CHASSIS

CODE	DESCRIPTION	SWB	LWB
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	162 [6.4]	162 [6.4]
L101	WHEELBASE	3967 [156.2]	4378 [172.4]
L103	OVERALL LENGTH — W/REAR BUMPER	6243 [245.8]	6654 [262.0]
L104	FRONT OVERHANG	950 [37.4]	950 [37.4]
L105	REAR OVERHANG — W/BUMPER	1326 [52.2]	1326 [52.2]
L404	BACK OF CAB TO ♥OF REAR AXLE	1016 [40.0]	1427 [56.2]
L705	€ REAR AXLE TO END OF FRAME	1026 [40.4]	1026 [40.4]
W703	FRAME RAIL WIDTH	72 [2.8]	72 [2.8]
W704	REAR FRAME WIDTH	956 [37.7]	956 [37.7]

PICKUP BODY

CODE	DESCRIPTION	SWB	LWB
	NOMINAL CARGO BODY SIZE		
H702	FRAME DATUM LINE TO TOP OF CARGO BOX FLOOR — FRONT	211 [8.3]	211 [8.3]
H703	FRAME DATUM LINE TO CARGO BODY FLOOR — REAR	199 [7.8]	199 [7.8]
H704	TOP OF FLOOR TO &OF FUEL FILLER DOOR	126 [5.0]	126 [5.0]
H705	REAR BUMPER HEIGHT	219 [8.6]	219 [8.6]
H706	FRAME DATUM TO TOP OF BUMPER STEP	124 [4.9]	124 [4.9]
H707	FRAME DATUM TO TOP OF WHEELHOUSE	435 [17.1]	435 [17.1]
H712	FRAME DATUM LINE TO BOTTOM OF REAR BUMPER	163 [6.4]	163 [6.4]
H769	TOP OF FLOOR TO TOP OF CAB @ €REAR WHEELS	1164 [45.8]	1164 [45.8]
L504	CAB TO PICKUP BODY	28 [1.1]	28 [1.1]
L551	OVERALL TO OPEN TAILGATE	2698 [106.2]	3109 [122.4]
L558	© REAR AXLE TO ©FUEL FILLER DOOR SRW DRW	597 [23.5] 667 [26.3]	1223 [48.2] 1223 [48.2]
L559	OPEN TAILGATE	549 [21.6]	549 [21.6]
W103	VEHICLE WIDTH SRW DRW	2031 [79.9] 2426 [95.5]	2031 [79.9] 2426 [95.5]




CAB

CAB		
CODE	DESCRIPTION	4x2/4x4
H61	EFFECTIVE HEADROOM — FRONT	1052 [41.4]
H63	EFFECTIVE HEADROOM — REAR BENCH SEAT	1040 [41.0]
H70	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (Z)	2071 [61.9]
H71	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (Z)	2071 [61.9]
H430	FRAME DATUM TO TOP OF CAB	1368 [53.9]
H505	MAXIMUM CARGO HEIGHT	1284 [50.6]
H701	FRONT BUMPER HEIGHT — W/O VALANCE — W/VALANCE	337 [13.3] 361 [14.2]
H711	FRAME DATUM TO BOTTOM OF FRONT BUMPER W/O VALANCE W/VALANCE	145 [5.7] 170 [6.7]
TL23	SEAT TRACK TRAVEL	160 [6.3]
L31	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (X)	3110 [43.7]
L34	MAXIMUM EFFECTIVE LEG ROOM — FRONT — W/VINYL MAT — W/CARPET	1034 [40.7] 1036 [40.8]
L35	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (X)	4078 [81.8]
L50	H-POINT COUPLE DISTANCE	968 [38.1]
L51	EFFECTIVE LEG ROOM — REAR — FRONT BENCH/REAR BENCH — FRONT CAPTAIN'S CHAIR, REAR BENCH	1050 [41.3] 1038 [40.9]
L700	€FRONT AXLE TO BACK OF CAB	2951 [116.2]
L703	€FRONT AXLE TO COWL POINT	447 [17.6]
W3	SHOULDER ROOM — FRONT — BASE TRIM — HIGH SERIES TRIM	1728 [68.0] 1701 [67.0]
W4	SHOULDER ROOM — REAR — BASE TRIM — HIGH SERIES TRIM	1726 [68.0] 1700 [66.9]
W5	HIP ROOM — FRONT — BASE TRIM — HIGH SERIES TRIM	1711 [67.4] 1711 [67.4]
W6	HIP ROOM — REAR BASE TRIM	1708 [67.3]
W20	SEATING REFERENCE POINT — SgRP — LH/RH — FRONT (Y)	- 464/464 [- 18.3/18.3]
W25	SEATING REFERENCE POINT — SgRP — LH/RH — REAR BENCH SEAT (Y)	- 464/464 [- 18.3/18.3]
W410	OVERALL CAB WIDTH W/MIRRORS — MANUAL — ELECTRIC — TRAILER TOW	2522 [99.3] 2522 [99.3] 2677 [105.4]
W702	FRONT BUMPER WIDTH	2006 [79.0]

DIMENSIONS AND FEATURES SUPER DUTY F-250/350 STYLESIDE PICKUP BOX



Page 170 SUPER DUTY F-SERIES

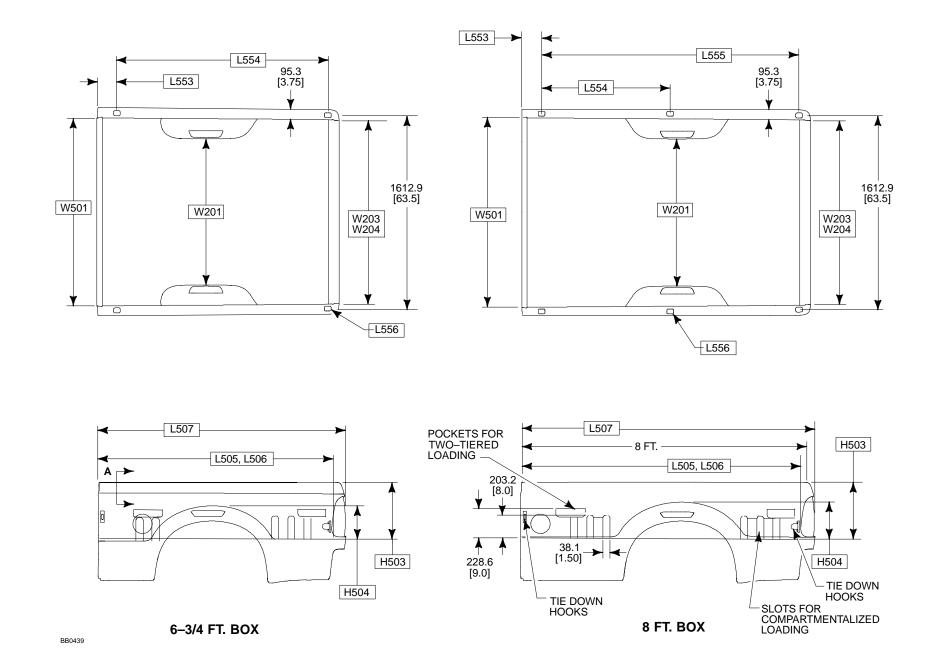

DIMENSIONS AND FEATURES SUPER DUTY F-250/350 STYLESIDE PICKUP BOX



Page 171 SUPER DUTY F-SERIES

	<u></u>	.	
CODE	DESCRIPTION	LWB	SWB
	NOMINAL CARGO BODY SIZE	8 FT	6¾ FT
H503†	CARGO BODY HEIGHT	507 [20.0]	507 [20.0]
H504	WHEELHOUSE HEIGHT	233 [9.2]	233 [9.2]
L505	CARGO BODY LENGTH @ FLOOR	2504 [98.6]	2092 [82.4]
L506	CARGO BODY LENGTH @ TOP	2464 [97.0]	2052 [80.8]
L507	CARGO BODY OVERALL LENGTH	2609 [102.7]	2197 [86.5]
L553	FRONT OF BOX TO €STAKE #1	137 [5.4]	137 [5.4]
L554	€ OF STAKE #1 TO STAKE #2	1135 [44.7]	1859 [73.2]

[†] MEASURED FROM TOP OF FLOOR BEADS


CODE	DESCRIPTION	LWB	SWB
	NOMINAL CARGO BODY SIZE	8 FT	6¾ FT
L555	© OF STAKE #1 TO STAKE #3	2270 [89.4]	
L556	STAKE POCKET SIZE	59 x 44 [2.3] x [1.7]	59 x 44 [2.3] x [1.7]
W201	CARGO WIDTH BETWEEN WHEELHOUSE	1292 [50.9]	1292 [50.9]
W203	REAR OPENING WIDTH AT FLOOR	1540 [60.6]	1540 [60.6]
W204	REAR OPENING WIDTH AT TOP OF BOX OR BELT	1616 [63.6]	1616 [63.6]
W501	INSIDE WIDTH @ TOP OF BOX AT © OF REAR AXLE (CARGO BODY WIDTH @ BELT)	1623 [63.9]	1623 [63.9]
V5#	CARGO VOLUME Liters ³ (Feet ³)	2199 [77.7]	1832 [64.7]

[#] DOES NOT ALLOW FOR WHEELHOUSES

Page 172 SUPER DUTY F-SERIES

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 REGULAR CAB STYLESIDE PICKUP _ 4X2/4X4



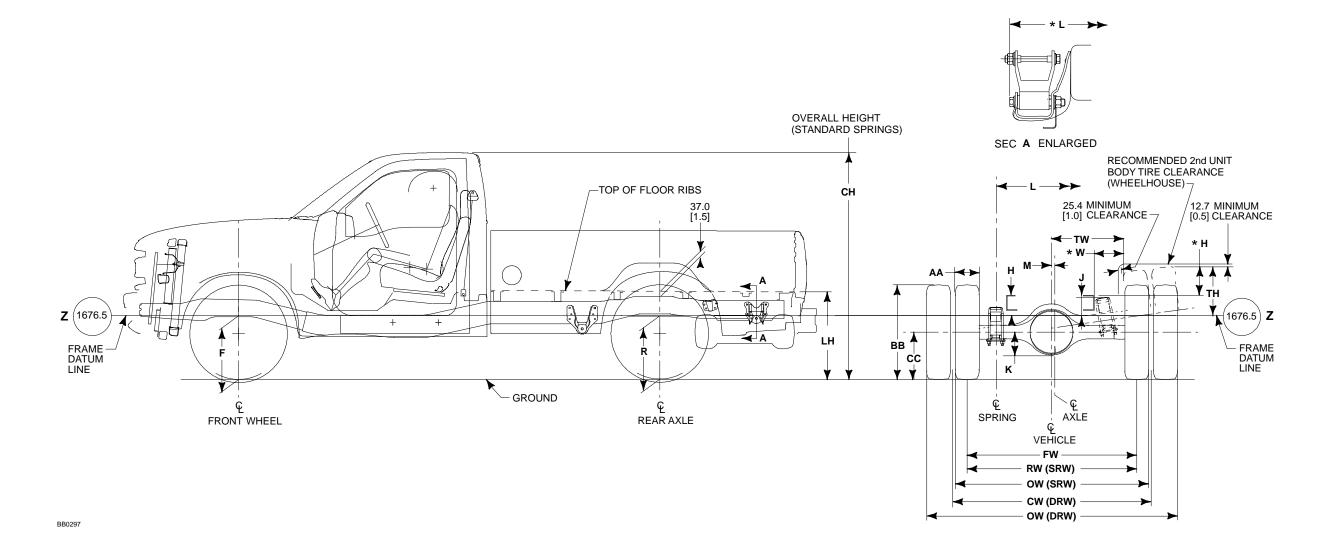

- **F** AND **R** VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE; **LH** IS FROM GROUND TO TOP OF FLOOR RIBS.
- $-*\mathbf{H}$ IS TOP OF FRAME AT $^{\mathbb{Q}}$ OF REAR AXLE TO TOP OF TIRE IN JOUNCE
- *L IS FROM OUTSIDE EDGE OF SHACKLE EYEBOLT
- *W IS FROM FRAME TO TOP OF TIRE IN JOUNCE



Page 173 SUPER DUTY F-SERIES

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 REGULAR CAB STYLESIDE PICKUP — 4X2/4X4

				F HEIGHT AT FRONT WHEEL ⁽⁵⁾		R HEIGHT AT REAR AXLE(5)		LH ⁽⁵⁾⁽⁶⁾		CH ⁽⁵⁾																		
MODEL	WB	GVWR	BASE TIRE	CURB(3)	LOADED ⁽⁴⁾	CURB(3)	LOADED ⁽⁴⁾	EMPTY	LOADED	ЕМРТҮ	LOADED	Н	J	K	L	*L	M	AA ⁽⁷⁾	BB ⁽⁸⁾	CC(8)	FW	RW	ow	cw	тн	*H	TW	*W
Super Duty F-250 Regular Cab 4x2	3480 [137.0]	8800	LT235/85R16E	527 [20.7]	515 [20.3]	633 [24.9]	505 [19.9]	863 [34.0]	697 [27.4]	1935 [76.2]	1864 [73.4]	204 [8.0]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	390 [15.4]	233 [9.2]	716 [28.2]	254 [10.0]
Super Duty F-250 Regular Cab 4x4	3480 [137.0]	8800	LT235/85R16E	626 [24.7]	604 [23.8]	684 [26.9]	558 [22.0]	895 [35.2]	738 [29.0]	2005 [78.9]	1931 [76.0]	204 [8.0]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	298 [11.7]	141 [5.6]	727 [28.6]	262 [10.3]
Super Duty F-350	3480	9900[1]	LT265/75R16E	526 [20.7]	515 [20.3]	633 [24.9]	505 [19.9]	863 [34.0]	697 [27.4]	1938 [76.3]	1860 [73.2]	204 [8.0]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	376 [14.8]	219 [8.6]	707 [27.8]	245 [9.6]
Regular Cab 4x2	[137.0]	11200 ^[2] DRW	LT215/85R16E	520 [20.5]	504 [19.9]	635 [25.0]	494 [19.5]	867 [34.2]	686 [27.0]	1961 [77.2]	1860 [73.2]	204 [8.0]	17 [0.7]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	2380 [93.7]	1880 [74.0]	379 [14.9]	222 [8.7]	664 [26.1]	202 [8.0]
Super Duty F-350	3480	9900[1]	LT265/75R16E	626 [24.7]	604 [23.8]	731 [28.8]	604 [23.8]	960 [37.8]	797 [31.4]	2041 [80.3]	1958 [77.1]	204 [8.0]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	285 [11.2]	128 [5.0]	715 [28.1]	253 [10.0]
Regular Cab 4x4	[137.0]	11200 ^[2] DRW	LT235/85R16E	628 [24.7]	607 [23.9]	699 [27.5]	561 [22.1]	913 [35.9]	740 [29.1]	2018 [79.4]	1956 [77.0]	204 [8.0]	77 [@] [3.0]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2405 [94.7]	1880 [74.0]	317 [12.5]	160 [6.3]	664 [26.1]	202 [8.0]

DRW — Dual Rear Wheels

- (1) 9700 lb California
- (2) 11,000 lb California
- (3) Height at base curb weight with standard springs
- (4) Loaded height at spring rating with standard springs
- (5) The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances [completed vehicles only].
- (6) Distance from Pickup Box Floor to Frame Datum Line is 211 [8.3] at front, 199 [7.8] at rear.
- (7) AA is measured at 80 psi for all season tire.
- (8) BB/CC are measured at design at 60 psi.
- Static load rating of design and curb weight are taken at 60 psi.


- @ The top of the spring seat is below datum line.
- *H Top of frame at € of rear axle to top of tire in jounce
- *L From outside edge of shackle eyebolt
- ${}^*\mathbf{W}$ From frame to top of tire in jounce

- F AND R VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE.
- LH IS FROM GROUND TO TOP OF FLOOR RIBS.

Page 174 SUPER DUTY F-SERIES

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 SUPERCAB STYLESIDE PICKUP – 4X2/4X4



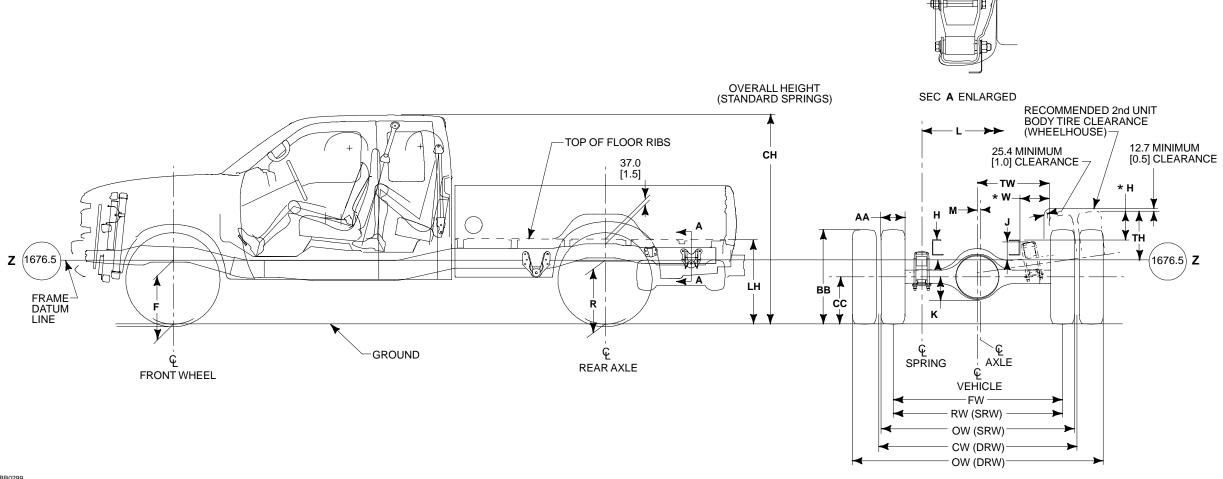

BB0299

- F AND R VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE; LH IS FROM GROUND TO TOP OF FLOOR RIBS.
- * H IS TOP OF FRAME AT € OF REAR AXLE TO TOP OF TIRE IN JOUNCE
- *L IS FROM OUTSIDE EDGE OF SHACKLE EYEBOLT
- -*W IS FROM FRAME TO TOP OF TIRE IN JOUNCE



Page 175 SUPER DUTY F-SERIES

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 SUPERCAB STYLESIDE PICKUP – 4X2/4X4

					IGHT AT WHEEL ⁽⁵⁾		T AT REAR LE ⁽⁵⁾	LH	(5)(6)	CI	H ⁽⁵⁾																	
MODEL	WB	GVWR	BASE TIRE	CURB(3)	LOADED(4)	CURB(3)	LOADED ⁽⁴⁾	EMPTY	LOADED	EMPTY	LOADED	н	J	K	L	*L	М	AA ⁽⁷⁾	BB ⁽⁸⁾	CC(8)	FW	RW	ow	CW	тн	*H	TW	*W
Super Duty	3602 [141.8]	0000	L T005/05D405	526 [20.7]	515 [20.3]	632 [24.9]	505 [19.9]	861 [33.9]	698 [27.5]	1946 [76.6]	1869 [73.6]	205	24	165	1143	1271	45	259	792	375	1745	1729	1983		390	233	716	254
F-250 SuperCab 4x2	4014 [158.0]	8800	LT235/85R16E	526 [20.7]	515 [20.3]	628 [24.7]	505 [19.9]	852 [33.6]	698 [27.5]	1943 [76.5]	1870 [73.6]	[8.1]	[0.9]	[6.5]	[45.0]	[50.0]	[1.8]	[10.2]	[31.2]	[14.8]	[68.7]	[68.1]	[78.1]	_	[15.4]	[9.2]	[28.2]	[10.0]
Super Duty	3602 [141.8]	0000	L T005/05D405	624 [24.6]	604 [23.8]	683 [26.9]	558 [22.0]	894 [35.1]	737 [29.0]	2015 [79.3]	1935 [76.2]	205	77 @	165	1143	1271	45	259	792	375	1745	1729	1983		298	141	727	262
F-250 SuperCab 4x4	4014 [158.0]	8800	LT235/85R16E	621 [24.4]	604 [23.8]	679 [26.7]	558 [22.0]	887 [34.9]	738 [29.0]	2008 [79.0]	1938 [76.3]	[8.1]	[3.0]	[6.5]	[45.0]	[50.0]	[1.8]	[10.2]	[31.2]	[14.8]	[68.7]	[68.1]	[78.1]	_	[11.7]	[5.6]	[28.6]	
Super	3602 [141.8]	9900(1)	LT265/75R16E	525 [20.7]	515 [20.3]	632 [24.9]	505 [19.9]	861 [33.9]	698 [27.5]	1952 [76.8]	1865 [73.4]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1745 [68.7]	1745 [68.7]	2007 [79.0]	_	376 [14.8]	219 [8.6]	707 [27.8]	245 [9.6]
Duty F-350 SuperCab	4014	9900(1)	LT265/75R16E	526 [20.7]	515 [20.3]	627 [24.7]	505 [19.9]	852 [33.5]	698 [27.5]	1963 [77.3]	1870 [73.6]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1745 [68.7]	1745 [68.7]	2007 [79.0]	_	376 [14.8]	219 [8.6]	707 [27.8]	245 [9.6]
4x2	[158.0]	11200 ⁽²⁾ DRW	LT215/85R16E	518 [20.4]	504 [19.9]	633 [24.9]	494 [19.5]	860 [33.9]	687 [27.0]	1939 [76.3]	1850 [72.8]	205 [8.1]	17 [0.7]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1745 [68.7]	_	2380 [93.7]	1880 [74.0]	379 [14.9]	222 [8.7]	664 [26.1]	202 [8.0]
Super	3602 [141.8]	9900(1)	LT265/75R16E	625 [24.6]	604 [23.8]	730 [28.7]	604 [23.8]	959 [37.7]	798 [31.4]	2051 [80.7]	1964 [77.3]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1745 [68.7]	1729 [68.1]	2007 [79.0]	_	285 [11.2]	128 [5.0]	715 [28.1]	253 [10.0]
Super Duty F-350 SuperCab	4014	9900(1)	LT265/75R16E	621 [24.4]	604 [23.8]	725 [28.6]	604 [23.8]	946 [37.2]	796 [31.3]	2039 [80.3]	1960 [77.2]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1745 [68.7]	1729 [68.1]	2007 [79.0]	_	285 [11.2]	128 [5.0]	715 [28.1]	253 [10.0]
4x4	[158.0]	11200 ⁽²⁾ DRW	LT235/85R16E	623 [24.5]	607 [23.9]	698 [27.4]	561 [22.0]	909 [35.8]	741 [29.2]	2019 [79.5]	1959 [77.1]	205 [8.1]	77 [@] [3.0]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1745 [68.7]	_	2405 [94.7]	1880 [74.0]	317 [12.5]	160 [6.3]	664 [26.1]	202 [8.0]

DRW — Dual Rear Wheels

- (1) 9700 lb California
- (2) 11,000 lb California
- (3) Height at base curb weight with standard springs
- (4) Loaded height at spring rating with standard springs

- (5) The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances [completed vehicles only].
- (6) Distance from Pickup Box Floor to Frame Datum Line is 211 [8.3] at front, 199 [7.8] at rear.
- (7) AA is measured at 80 psi for all season tire.
- (8) BB/CC are measured at design at 60 psi.
 - Static load rating of design and curb weight are taken at 60 psi.


- @ The top of the spring seat is below datum line.
- $^*\mathrm{H}$ Top of frame at Φ of rear axle to top of tire in jounce
- *L From outside edge of shackle eyebolt
- *W From frame to top of tire in jounce

- **F** AND **R** VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE.
- LH IS FROM GROUND TO TOP OF FLOOR RIBS.

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 CREW CAB STYLESIDE PICKUP – 4X2/4X4



Page 176 SUPER DUTY F-SERIES

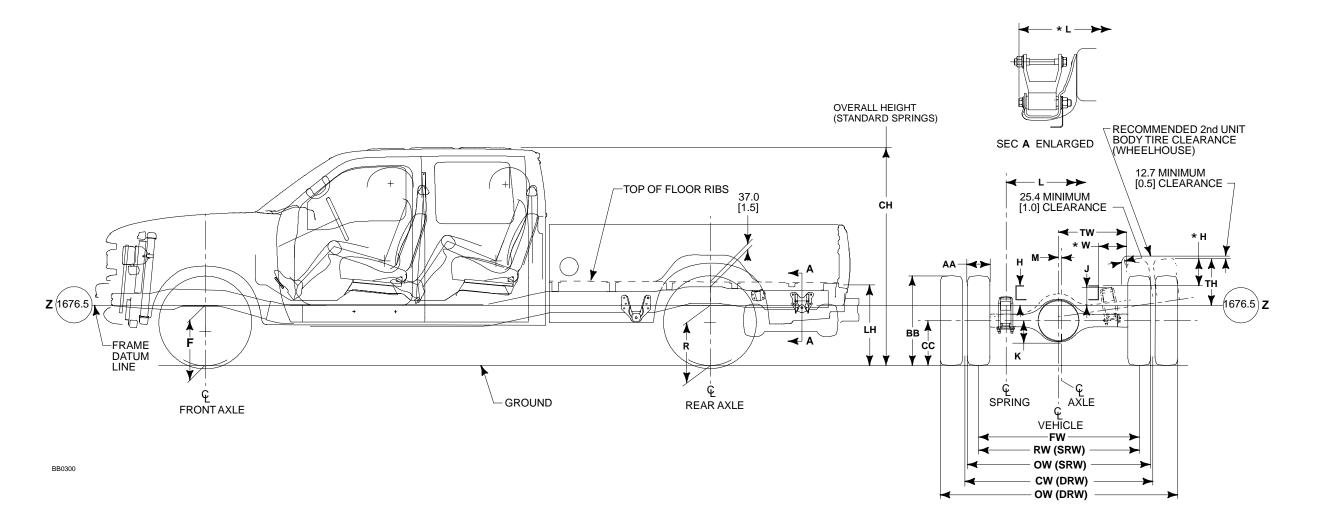

- F AND R VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE: LH IS FROM GROUND TO TOP OF FLOOR RIBS.
- *** H** IS TOP OF FRAME AT ^QOF REAR AXLE TO TOP OF TIRE IN JOUNCE
- *L IS FROM OUTSIDE EDGE OF SHACKLE EYEBOLT
- *W IS FROM FRAME TO TOP OF TIRE IN JOUNCE

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-250/350 CREW CAB STYLESIDE PICKUP – 4X2/4X4

2002 MODEL YEAR

Page 177 SUPER DUTY F-SERIES

					GHT AT WHEEL ⁽⁵⁾		IGHT AT AXLE ⁽⁵⁾	LH((5)(6)	Cł	- (5)																	
MODEL	WB	GVWR	BASE TIRE	CURB(3)	LOADED ⁽⁴⁾	CURB(3)	LOADED ⁽⁴⁾	EMPTY	LOADED	EMPTY	LOADED	н	J	K	L	*L	М	AA ⁽⁷⁾	BB ⁽⁸⁾	CC(8)	FW	RW	ow	cw	тн	*H	TW	*W
Super Duty F-250	3967 [156.2]			533 [21.0]	515 [20.3]	624 [24.6]	505 [19.9]	847 [33.3]	696 [27.4]	1960 [77.2]	1883 [74.1]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	390 [15.4]	233 [9.2]	716 [28.2]	254 [10.0]
Crew Cab 4x2	4379 [172.4]	8800	LT235/85R16E	530 [20.9]	515 [20.3]	622 [24.5]	505 [19.9]	842 [33.2]	698 [27.5]	1957 [77.0]	1884 [74.2]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	390 [15.4]	233 [9.2]	716 [28.2]	254 [10.0]
Super Duty F-250	3967 [156.2]			632 [24.9]	604 [23.8]	722 [28.4]	558 [22.0]	880 [34.6]	738 [29.0]	2027 [79.8]	1950 [76.8]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	298 [11.7]	141 [5.6]	727 [28.6]	262 [10.3]
Crew Cab 4x4	4379 [172.4]	8800	LT235/85R16E	628 [24.7]	604 [23.8]	675 [26.5]	558 [22.0]	878 [34.6]	739 [29.1]	2022 [76.6]	1952 [76.8]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	1729 [68.1]	1983 [78.1]	_	298 [11.7]	141 [5.6]	727 [28.6]	262 [10.3]
	3967	9900 ⁽¹⁾	LT265/75R16E	532 [20.9]	515 [20.3]	624 [24.6]	505 [19.9]	847 [33.3]	697 [27.4]	1955 [77.0]	1879 [74.0]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	376 [14.8]	219 [8.6]	707 [27.8]	245 [9.6]
Super Duty F-350	[156.2]	11200 ⁽²⁾ DRW	LT215/85R16E	520 [20.5]	504 [19.9]	629 [24.8]	494 [19.5]	856 [33.7]	687 [27.0]	1983 [78.1]	1883 [74.1]	205 [8.1]	17 [0.7]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	23.80 [93.7]	1880 [74.0]	379 [14.9]	222 [8.7]	664 [26.1]	202 [8.0]
Crew Cab 4x2	4379	9900 ⁽¹⁾	LT265/75R16E	529 [20.8]	515 [20.3]	622 [24.5]	505 [19.9]	842 [33.1]	698 [27.5]	1964 [77.3]	1880 [74.0]	205 [8.1]	24 [0.9]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	376 [14.8]	219 [8.6]	707 [27.8]	245 [9.6]
	[172.4]	11200 ⁽²⁾ DRW	LT215/85R16E	524 [20.6]	504 [19.9]	627 [24.7]	494 [19.5]	850 [33.5]	686 [27.0]	1976 [77.8]	1884 [74.2]	205 [8.1]	17 [0.7]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	23.80 [93.7]	1880 [74.0]	379 [14.9]	222 [8.7]	664 [26.1]	202 [8.0]
	3967	9900 ⁽¹⁾	LT265/75R16E	632 [24.9]	604 [23.8]	694 [27.3]	561 [22.0]	912 [35.9]	745 [29.3]	1958 [77.1]	1878 [73.9]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	285 [11.2]	128 [5.0]	715 [28.1]	253 [10.0]
Super Duty F-350	[156.2]	11200 ⁽²⁾ DRW	LT235/85R16E	622 [24.2]	607 [23.9]	694 [27.3]	561 [22.0]	906 [35.7]	741 [29.2]	2033 [80.0]	1955 [77.0]	205 [8.1]	77 @ [3.0]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2405 [94.7]	1880 [74.0]	317 [12.5]	160 [6.3]	664 [26.1]	202 [8.0]
Crew Cab 4x4	4379	9900 ⁽¹⁾	LT265/75R16E	628 [24.7]	604 [23.8]	720 [28.4]	604 [23.8]	941 [37.0]	798 [31.4]	1957 [77.0]	1879 [74.0]	205 [8.1]	77 [@] [3.0]	165 [6.5]	1143 [45.0]	1271 [50.0]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	285 [11.2]	128 [5.0]	715 [28.1]	253 [10.0]
	[172.4]	11200 ⁽²⁾ DRW	LT235/85R16E	629 [24.8]	607 [23.9]	690 [27.1]	561 [22.0]	897 [35.3]	762 [30.0]	2031 [80.0]	1955 [77.0]	205 [8.1]	77 [@] [3.0]	177 [7.0]	1143 [45.0]	1271 [50.0]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2405 [94.7]	1880 [74.0]	317 [12.5]	160 [6.3]	664 [26.1]	202 [8.0]

DRW — Dual Rear Wheels

(1) — 9700 lb California

(2) — 11,000 lb California

(3) — Height at base curb weight with standard springs

(4) — Loaded height at spring rating with standard springs

(5) — The Height Data shown represents dimensions of a base/standard vehicle with no options.

(5) Actual height may vary due to production tolerances [completed vehicles only].

(6) — Distance from Pickup Box Floor to Frame Datum Line is 211 [8.3] at front, 199 [7.8] at rear.

(7) — AA is measured at 80 psi for all season tire.

(8) — BB/CC are measured at design at 60 psi.

— Static load rating of design and curb weight are taken at 60 psi.

@ — The top of the spring seat is below datum line.

*H — Top of frame at ♀ of rear axle to top of tire in jounce

*L — From outside edge of shackle eyebolt


 * **W** — From frame to top of tire in jounce

- **F** AND **R** VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE.
- **LH** IS FROM GROUND TO TOP OF FLOOR RIBS.

DIMENSIONAL DATA SUPER DUTY F-350/450/550 REGULAR CHASSIS CAB 4X2/4X4



Page 178 SUPER DUTY F-SERIES

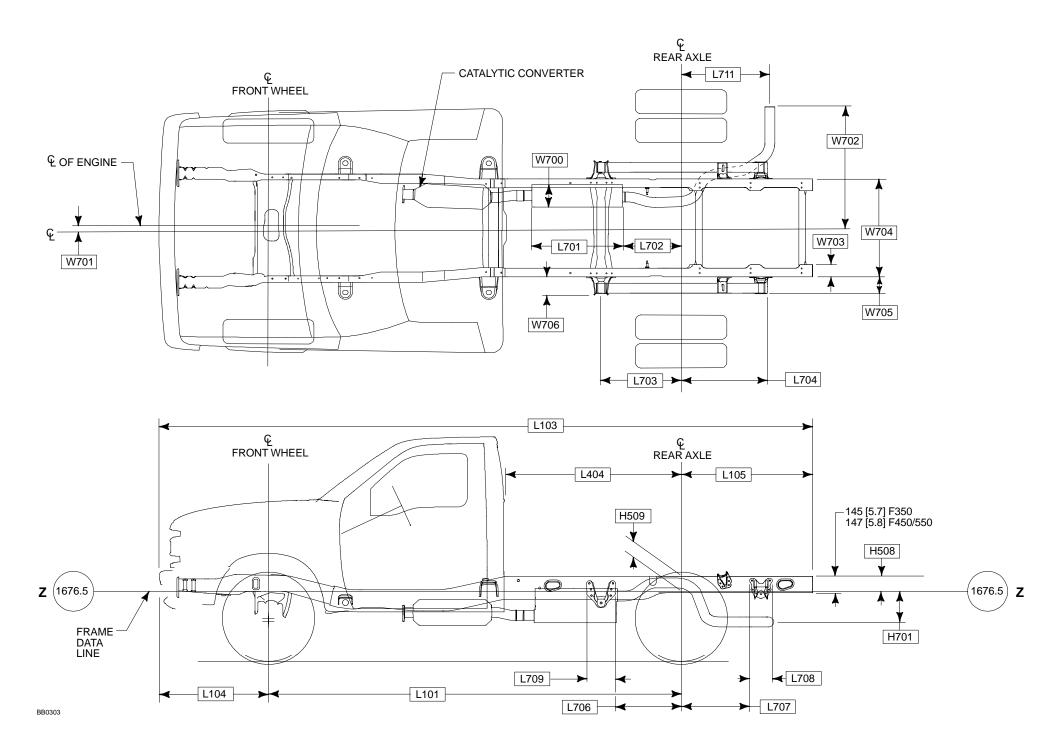

[—] AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 184-185.

[—] GROUND CLEARANCE DATA, PAGES 190-192

DIMENSIONAL DATA SUPER DUTY F-350/450/550 REGULAR CHASSIS CAB 4X2/4X4

Page 179 SUPER DUTY F-SERIES



				F-3	350				F-4	450		F-550							
		SF	RW	DF	RW	DF	RW		DRW 4	1x2/4x4		DRW 4x2/4x4							
CODE	DESCRIPTION	4x2	4x4	4x2	4x4	4x2	4x4												
H508	FRAME DATUM LINE TO TOP OF FRAME	124	[4.9]	124	[4.9]	124	[4.9]		125	[4.9]			125	[4.9]					
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	124	[4.9]	124	[4.9]	124	[4.9]		125	[4.9]			125	[4.9]					
H701	©OF OUTLET PIPE TO FRAME DATUM LINE — 5.4L/6.8L/7.3L	239	[9.4]	239	[9.4]	239	[9.4]		239	[9.4]			239	[9.4]					
L101	WHEELBASE	3576	3576 [140.8] 3576 [140.8] 4186 [164.8] 3576[140.8] 4186 [164.8] 4795 [188.8] 5100 [5100 [200.8]	3576 [140.8]	4186 [164.8]	4795 [188.8]	5100 [200.8]					
L103	OVERALL LENGTH	5733	[225.7]	5733	[225.7]	6343	[249.7]	5733 [225.7]	6343 [249.7]	6952 [273.7]	7257 [285.7]	5733 [225.7]	6343 [249.7]	6952 [273.7]	7257 [285.7]				
L104	FRONT OVERHANG	950	[37.4]	950	[37.4]	950	[37.4]		950	[37.4]			950	[37.4]					
L105	REAR OVERHANG	1207	[47.5]	1207	[47.5]	1207	[47.5]		1207	[47.5]			1207	[47.5]					
L404	BACK OF CAB TO € OF REAR AXLE	1524	[60.0]	1524	[60.0]	2134	[84.0]	1524 [60.0]	2134 [84.0]	2743 [108.0]	3048 [120.0]	1524 [60.0]	2134 [84.0]	2743 [108.0]	3048 [120.0]				
. =	MUFFLER LENGTH — 5.4L/6.8L	609.5	[24.0]	609.5	5 [24.0]	609.5	[24.0]		609.5	[24.0]			609.5	[24.0]					
L701	— 7.3L	508	[20.0]	508	[20.0]	508	[20.0]		508	[20.0]			508	[20.0]					
	MUFFLER REAR TO € REAR AXLE — 5.4L/6.8L	546.5	[21.5]	546.5	5 [21.5]	546.5	[21.5]	1	546.5	[21.5]			546.5	[21.5]					
L702	— 7.3L	638	[25.1]	638	[25.1]	638	[25.1]		638	[25.1]			638	[25.1]					
L703	REAR SPRING FRONT EYE TO REAR AXLE	663[26.1]	671 [26.4]	663 [26.1]	671 [26.4]	663 [26.1]	671 [26.4]		653	[25.7]			654	[25.8]					
L704	€REAR AXLE TO €REAR SPRING SHACKLE BRACKET	748 [29.4]	739 [29.1]	748 [29.4]	739 [29.1]	748 [29.4]	739 [29.1]		757	[29.8]			755	[29.7]					
L706	REAR OF FRONT SPRING BRACKET TO € REAR AXLE	536 [21.1]	544 [21.4]	536 [21.1]	544 [21.4]	536 [21.1]	544 [21.4]		525	[20.7]			526	[20.7]					
L707	€REAR AXLE TO FRONT OF REAR SPRING SHACKLE BRACKET	648 [25.5]	639 [25.2]	648 [25.5]	639 [25.2]	648 [25.5]	639 [25.2]		645	[25.4]			643	[25.3]					
L708	REAR SPRING SHACKLE BRACKET WIDTH	200	[7.9]	200	[7.9]	200	[7.9]		225	[8.9]			225	[8.9]					
L709	FRONT SPRING HANGER BRACKET WIDTH	253	[10.0]	253	[10.0]	253	[10.0]		256	[10.1]			256	[10.1]					
L711	€ OF REAR AXLE TO € OF EXHAUST PIPE — 5.4L/6.8L	664.6	[26.2]	664.6	5 [26.2]	664.6	[26.2]		664.6	[26.2]			664.6	[26.2]					
	— 7.3L	664.2	[26.1]	664.2	2 [26.1]	664.2	[26.1]		664.2	[26.1]			664.2	[26.1]					
W700	MUFFLER CROSS SECTION — 5.4L/6.8L	7 :	x 9	7:	x 9	7	x 9		7	x 9			7	x 9					
	— 7.3L	7.25	x 11	7.25	5 x 11	7.25	i x 11		7.25	5 x 11			7.25	5 x 11					
W701	DISTANCE BETWEEN & ENGINE/VEHICLE	45	1.8]	45	[1.8]	45	[1.8]		45	[1.8]			45	[1.8]					
W702	END OF TAILPIPE TO € VEHICLE — 5.4L/6.8L/7.3L	948	[37.3]	948	[37.3]	948	[37.3]		948	[37.3]			948	[37.3]					
W703	FRAME RAIL WIDTH	107	[4.2]	107	[4.2]	107	[4.2]		108	[4.2]		108 [4.2]							
W704	REAR FRAME WIDTH	866	[34.1]	866	[34.1]	866	[34.1]		868	[34.2]			868	[34.2]					
W705	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING SHACKLE BRACKET	149	[5.9]	149	[5.9]	149	[5.9]		151	[5.9]			151	151 [5.9]					
W706	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING HANGER BRACKET	160	[6.3]	160	[6.3]	160	[6.3]		151	[5.9]			151	[5.9]					


[—] AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 184-185.

[—] GROUND CLEARANCE DATA, PAGES 190-192.

DIMENSIONAL DATA SUPER DUTY F-350/450/550 SUPER CHASSIS CAB 4X2/4X4



Page 180 SUPER DUTY F-SERIES

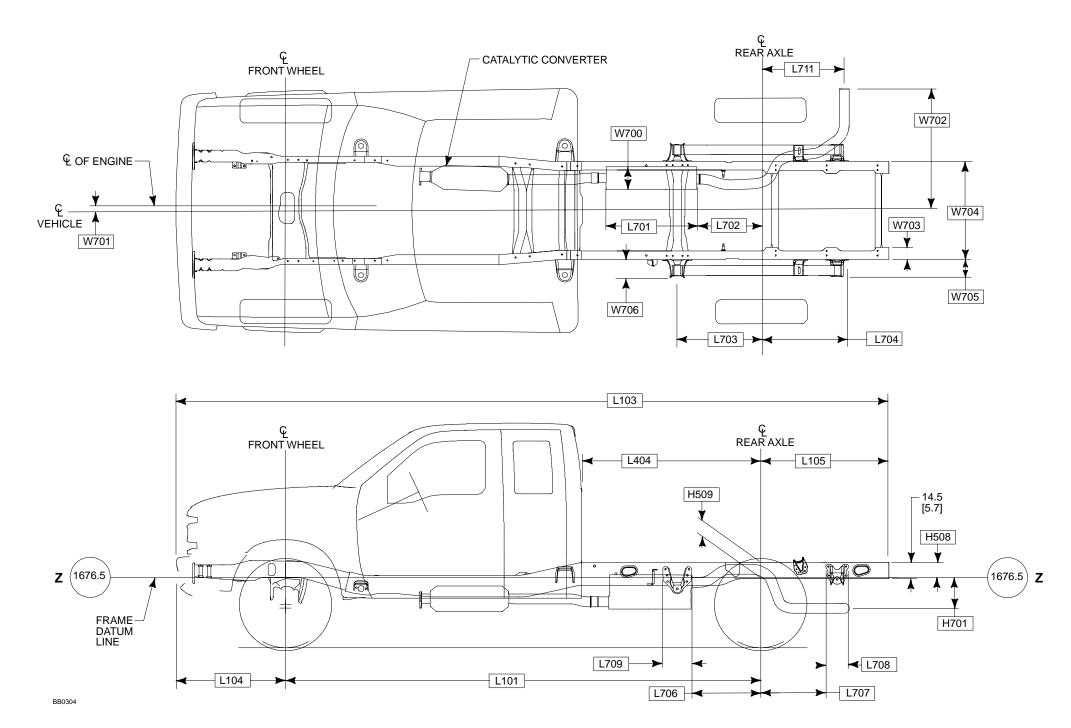

- AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 186-187.
- GROUND CLEARANCE DATA, PAGES 190-192.

DIMENSIONAL DATA SUPER DUTY F-350/450/550 SUPER CHASSIS CAB 4X2/4X4



Page 181 SUPER DUTY F-SERIES

			F-	-350		F-450	F-550
		SF	RW	DF	RW	DRW	DRW
CODE	DESCRIPTION	4x2	4x4	4x2	4x4	4x2/4x4	4x2/4x4
H508	FRAME DATUM LINE TO TOP OF FRAME	124	[4.9]	124	[4.9]	125 [4.9]	125 [4.9]
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	124	[4.9]	124	[4.9]	125 [4.9]	125 [4.9]
H701	© OF OUTLET PIPE TO FRAME DATUM LINE — WITH 5.4L/6.8L/7.3L	239	[9.4]	239	[9.4]	239 [9.4]	239 [9.4]
L101	WHEELBASE	4110 [161.8]	4110 [161.8]	4110 [161.8]	4110 [161.8]
L103	OVERALL LENGTH	6267	[246.7]	6267	[246.7]	6267 [246.7]	6267 [246.7]
L104	FRONT OVERHANG	950 [37.4]	950	37.4]	950 [37.4]	950 [37.4]
L105	REAR OVERHANG	1207	[47.5]	1207	[47.5]	1207 [47.5]	1207 [47.5]
L404	BACK OF CAB TO € OF REAR AXLE	1524	[60.0]	1524	[60.0]	1524 [60.0]	1524 [60.0]
L701	MUFFLER LENGTH — WITH 5.4L/6.8L	609.5	[24.0]	609.5	[24.0]	609.5 [24.0]	609.5 [24.0]
	— WITH 7.3L	508 [20.0]	508	20.0]	508 [20.0]	508 [20.0]
L702	MUFFLER REAR €TO REAR AXLE — WITH 5.4L/6.8L	546.5	[21.5]	546.5	[21.5]	546.5 [21.5]	546.5 [21.5]
	— WITH 7.3L	638.3	[25.1]	638.3	[25.1]	638.3 [25.1]	638.3 [25.1]
L703	REAR SPRING FRONT EYE TO € REAR AXLE	663 [26.1]	671 [26.4]	663 [26.1]	671 [26.4]	653 [25.7]	654 [25.8]
L704	€REAR AXLE TO € REAR SPRING SHACKLE BRACKET	748 [29.4]	739 [29.1]	748 [29.4]	739 [29.1]	757 [29.8]	755 [29.7]
L706	REAR OF FRONT SPRING BRACKET TO € REAR AXLE	536 [21.1]	544 [21.4]	536 [21.1]	544 [21.4]	525 [20.7]	526 [20.7]
L707	€ REAR AXLE TO FRONT OF REAR SPRING SHACKLE BRACKET	648 [25.5]	639 [25.2]	648 [25.5]	639 [25.2]	645 [25.4]	643 [25.3]
L708	REAR SPRING SHACKLE BRACKET WIDTH	200	[7.9]	200	[7.9]	225 [8.9]	225 [8.9]
L709	FRONT SPRING HANGER BRACKET WIDTH	253 [10.0]	253	10.0]	256 [10.1]	256 [10.1]
L711	€OF REAR AXLE TO €OF EXHAUST PIPE — WITH 5.4L/6.8L	664.6	[26.2]	664.6	[26.2]	664.6 [26.2]	664.6 [26.2]
	— WITH 7.3L	664.2	[26.1]	664.2	[26.1]	664.2 [26.1]	664.2 [26.1]
W700	MUFFLER CROSS SECTION — WITH 5.4L/6.8L	7)	(9	7 :	(9	7 x 9	7 x 9
	— WITH 7.3L	7.25	x 11	7.25	x 11	7.25 x 11	7.25 x 11
W701	DISTANCE BETWEEN €ENGINE/VEHICLE	45 [1.8]	45	1.8]	45 [1.8]	45 [1.8]
W702	END OF TAILPIPE TO € VEHICLE — WITH 5.4L/6.8L/7.3L	948 [[37.3]	948	[37.3]	948 [37.3]	948 [37.3]
W703	FRAME RAIL WIDTH	107	[4.2]	107	[4.2]	108 [4.2]	108 [4.2]
W704	REAR FRAME WIDTH	866 [34.1]	866	34.1]	868 [34.2]	868 [34.2]
W705	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING SHACKLE BRACKET	149	[5.9]	149	[5.9]	151 [5.9]	151 [5.9]
W706	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING HANGER BRACKET	160	[6.3]	160	[6.3]	151 [5.9]	151 [5.9]


[—] AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 186-187.

[—] GROUND CLEARANCE DATA, PAGES 190-192.

DIMENSIONAL DATA SUPER DUTY F-350/450/550 CREW CHASSIS CAB 4X2/4X4





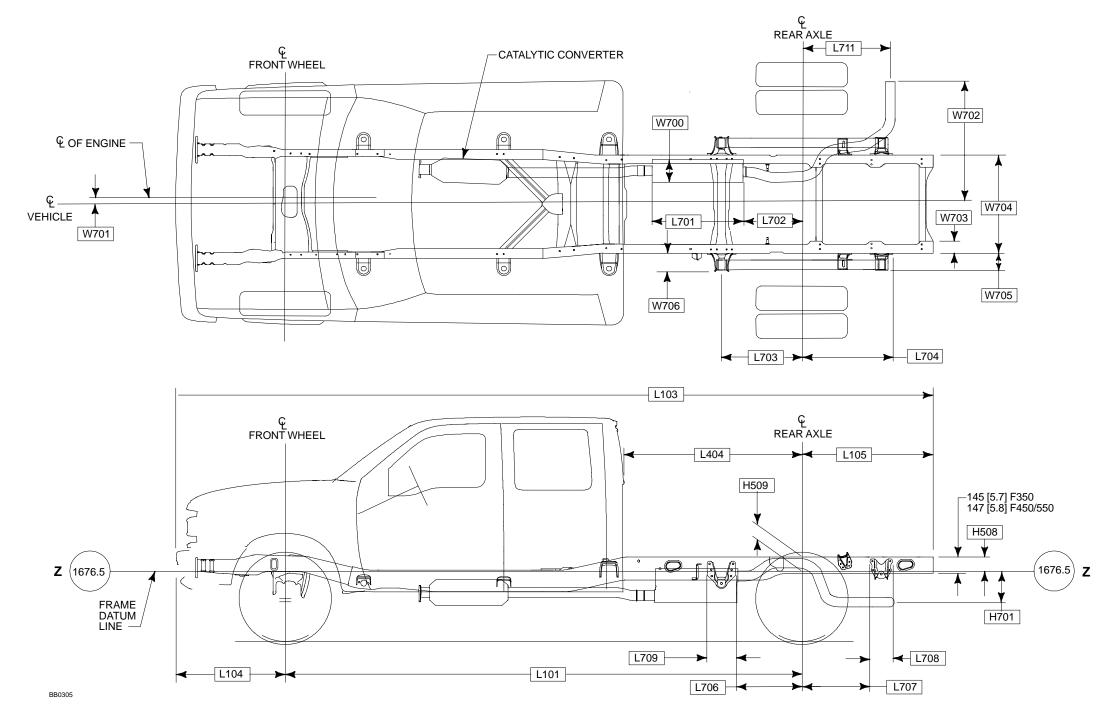

NOTES — [] DIMENSIONS ARE INCHES.

- AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 188-189.
- GROUND CLEARANCE DATA, PAGES 190-192.

DIMENSIONAL DATA SUPER DUTY F-350/450/550 CREW CHASSIS CAB 4X2/4X4



Page 183 SUPER DUTY F-SERIES

			F	-350		F-	450	F-	550
		SF	RW	D	RW	D	RW	D	RW
CODE	DESCRIPTION	4x2	4x4	4x2	4x4	4x2	2/4x4	4x2	2/4x4
H508	FRAME DATUM LINE TO TOP OF FRAME	124	[4.9]	124	[4.9]	125	[4.9]	125	[4.9]
H509	FRAME DATUM LINE TO TOP OF FRAME AT REAR AXLE	124	[4.9]	124	[4.9]	125	[4.9]	125	[4.9]
H701	€OF OUTLET PIPE TO FRAME DATUM LINE — WITH 5.4L/6.8L/7.3L	239	[9.4]	239	[9.4]	239	[9.4]	239	[9.4]
L101	WHEELBASE	4475 [176.2]	4475	[176.2]	4475 [176.2]	5085 [200.2]	4475 [176.2]	5085 [200.2]
L103	OVERALL LENGTH	6632 [261.1]	6632	[261.1]	6632 [261.1]	7241 [285.1]	6632 [261.1]	7241 [285.1]
L104	FRONT OVERHANG	950 [37.4]	950	[37.4]	950	[37.4]	950	37.4]
L105	REAR OVERHANG	1207	[47.5]	1207	[47.5]	1207	[47.5]	1207	[47.5]
L404	BACK OF CAB TO € OF REAR AXLE	1524	[60.0]	1524	[60.0]	1524 [60.0]	2134 [84.0]	1524 [60.0]	2134 [84.0]
L701	MUFFLER LENGTH — WITH 5.4L/6.8L	609.5	[24.0]	609.5	[24.0]	609.5	[24.0]	609.5	[24.0]
L/UI	— WITH 7.3L	508 [20.0]	508	[20.0]	508	[20.0]	508	20.0]
L702	MUFFLER REAR TO € REAR AXLE — WITH 5.4L/6.8L	546.5	[21.5]	546.5	[21.5]	546.5	[21.5]	546.5	[21.5]
L702	— WITH 7.3L	638.3	[25.1]	638.3	[25.1]	638.3	[25.1]	638.3	[25.1]
L703	REAR SPRING FRONT EYE TO € REAR AXLE	663 [26.1]	671 [26.4]	663 [26.1]	671 [26.4]	653	[25.7]	654	25.8]
L704	€ REAR AXLE TO € REAR SPRING SHACKLE BRACKET	748 [29.4]	739 [29.1]	748 [29.4]	739 [29.1]	757	[29.8]	755	29.7]
L706	REAR OF FRONT SPRING BRACKET TO € REAR AXLE	536 [21.1]	544 [21.4]	536 [21.1]	544 [21.4]	525	[20.7]	526	20.7]
L707	€ REAR AXLE TO FRONT OF REAR SPRING SHACKLE BRACKET	648 [25.5]	639 [25.2]	648 [25.5]	639 [25.2]	645	[25.4]	643	25.3]
L708	REAR SPRING SHACKLE BRACKET WIDTH	200	[7.9]	200	[7.9]	225	[8.9]	225	[8.9]
L709	FRONT SPRING HANGER BRACKET WIDTH	253 [10.0]	253	[10.0]	256	[10.1]	256	10.1]
L711	€ OF REAR AXLE TO €OF EXHAUST PIPE — WITH 5.4L/6.8L	664.6	[26.2]	664.6	[26.2]	664.6	[26.2]	664.6	[26.2]
L/ II	— WITH 7.3L	664.2	[26.1]	664.2	[26.1]	664.2	[26.1]	664.2	[26.1]
W700	MUFFLER CROSS SECTION — WITH 5.4L/6.8L	7 x	(9	7:	x 9	7:	x 9	7:	(9
W700	— WITH 7.3L	7.25	x 11	7.25	x 11	7.25	x 11	7.25	x 11
W701	DISTANCE BETWEEN & ENGINE/VEHICLE	45 [1.8]	45	[1.8]	45	[1.8]	45	1.8]
W702	END OF TAILPIPE TO &VEHICLE — WITH 5.4L/6.8L/7.3L	948 [37.3]	948	[37.3]	948	[37.3]	948	37.3]
W703	FRAME RAIL WIDTH	107	[4.2]	107	[4.2]	108	[4.2]	108	[4.2]
W704	REAR FRAME WIDTH	866 [34.1]	866	[34.1]	868	[34.2]	868	34.2]
W705	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING SHACKLE BRACKET	149	[5.9]	149	[5.9]	151	[5.9]	151	[5.9]
W706	DISTANCE FROM FRAME TO OUTSIDE OF REAR SPRING HANGER BRACKET	160	[6.3]	160	[6.3]	151	[5.9]	151	[5.9]


[—] AXLE/TIRE/VEHICLE HEIGHT DATA, PAGES 188-189.

[—] GROUND CLEARANCE DATA, PAGES 190-192.

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-SERIES REGULAR CHASSIS CAB



Page 184 SUPER DUTY F-SERIES

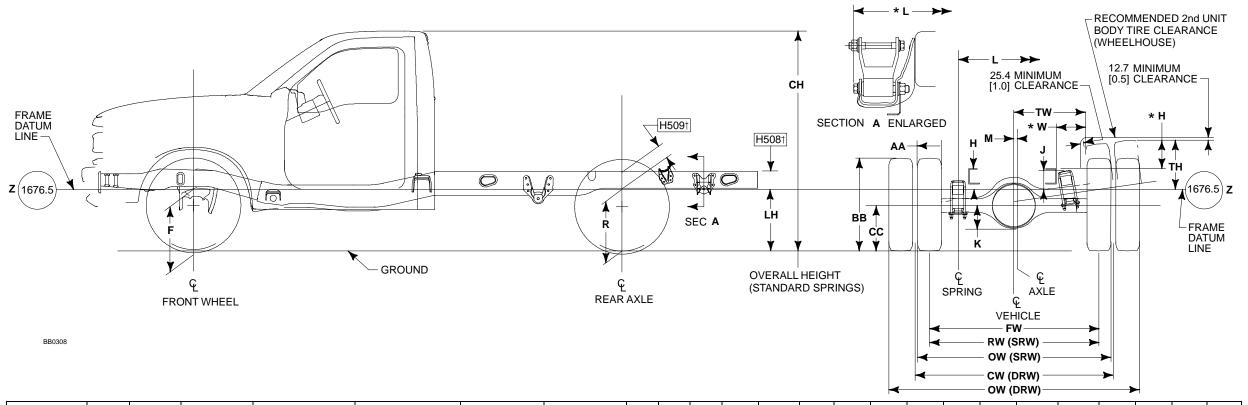

MODEL	WB	GVWR	BASE TIRE		IGHT AT WHEEL ⁽¹⁾		GHT AT AXLE ⁽¹⁾	Lŀ	(1)(5)	CI	H (1)	н	J	K	L	*L	М	AA	ВВ	СС	FW	RW	ow	CW	тн	*Н	TW	*W
				BASE(2)	LOADED(3)	BASE(2)	LOADED(3)	EMPTY	LOADED	EMPTY	LOADED																1 '	
Super Duty	3576	9900(6)	LT265/75R16E	533 [21.0]	515 [20.3]	648 [25.5]	547 [21.6]	673 [26.5]	539 [21.2]	1924 [75.7]	1877 [73.9]	64.8 [2.5]	7 [0.3]	161 [6.3]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	-	394 [15.5]	271 [10.9]	704 [27.7]	271 [10.7]
F-350 Regular Cab 4x2	[140.8]	11200 ⁽⁷⁾⁽⁸⁾ DRW	LT215/85R16E	521 [20.5]	504 [19.9]	644 [25.4]	537 [21.2]	672 [26.5]	529 [20.8]	1897 [74.7]	1861 [73.3]	74.2 [2.9]	14 [0.6]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	2304@ [90.7]	1803@ [71]	376 [14.8]	258 [10.2]	626 [24.6]	193 [7.6]
Super Duty F-350 Regular Cab 4x2	4186 [164.8]	11200 ⁽⁷⁾⁽⁸⁾ DRW	LT215/85R16E	529 [20.8]	504 [19.9]	643 [25.3]	537 [21.2]	663 [26.1]	526 [20.7]	1898 [74.7]	1861 [73.3]	74.2 [2.9]	14 [0.6]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	2304@ [90.7]	1803@ [71]	376 [14.8]	258 [10.2]	626 [24.6]	193 [7.6]
Super Duty	3576	9900(6)	LT265/75R16E	629 [24.8]	604 [23.8]	704 [27.7]	604 [23.8]	715 [28.2]	582 [22.9]	2028 [79.8]	1969 [77.5]	9.2 [0.4]	63 [2.5]	165 [6.5]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	394 [15.5]	276 [10.9]	704 [27.7]	271 [10.7]
F-350 Regular Cab 4x4	[140.8]	11200 ⁽⁷⁾⁽⁸⁾ DRW	LT235/85R16E	614 [24.2]	593 [23.4]	703 [27.7]	594 [23.4]	719 [28.3]	573 [22.6]	2031 [80.0]	1973 [77.7]	24.5 [1.0]	62 [2.5]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2329@ [91.7]	1803@ [71]	342 [13.5]	224 [8.8]	624 [24.6]	191 [7.5]
Super Duty F-350 Regular Cab 4x4	4186 [164.8]	11200 ⁽⁷⁾⁽⁸⁾ DRW	LT235/85R16E	625 [24.6]	593 [23.4]	702 [27.6]	594 [23.4]	711 [28.0]	571 [22.5]	2031 [80.0]	1973 [77.7]	24.5 [1.0]	62 [2.5]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2329@ [91.7]	1803@ [71]	342 [13.5]	224 [8.8]	624 [24.6]	191 [7.5]

- (1) The Height Data shown represents dimensions of a base/standard vehicle with no options Actual height may vary due to production tolerances (completed vehicles only).
- (2) Height at base curb weight with standard springs
- (3) Loaded height at spring rating with standard springs
- (4) Reinforced frame available on 200.8" Wheelbase, Regular Cab, 450/550
- (5) LH + H508 [4.9] = height to top of frame
- (6) 9700 lb California (gas engine)
- (7) 11,000 lb California (gas engine)
- (8) 12,500 lb all states (diesel engine)

- † For dimensions, see Page 179 of this section.
- *H Top of frame at ♀of Rear Axle to top of tire in jounce
- *L From outside edge of shackle eyebolt
- *W From frame to top of tire in jounce

@ — CW=1880 [74] and OW=2380 [93.7] for 4x2, CW=1880 [74] and OW=2405 [94.7] for 4x4 with Ambulance Prep Package (Wide Track Axle). Standard Axle with Ambulance requires ordering "Wide Track Delete" Option.

NOTES — [] DIMENSIONS ARE INCHES.

 F, R, AND LH VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO DATUM LINE.

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-SERIES REGULAR CHASSIS CAB



SUPER DUTY F-SERIES Page 185

MODEL	WB	GVWR	BASE TIRE		GHT AT VHEEL ⁽¹⁾		GHT AT AXLE ⁽¹⁾	LH	 (1)(5)	CI	H (1)	Н	J	K	L	*L	М	AA	ВВ	СС	FW	RW	ow	cw	ТН	*H	TW	*W
			TIKE	BASE(2)	LOADED(3)	BASE(2)	LOADED(3)	EMPTY	LOADED	EMPTY	LOADED																l	1
Super Duty F-450 Regular Cab 4x2	3576 [140.8]	15000 DRW	225/70R19.5F	674 [26.5]	609 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	575 [22.6]	2048 [80.6]	1977 [77.8]	39.5 [2.0]	14 [0.6]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x2	4186 [164.8]	15000 DRW	225/70R19.5F	671 [26.4]	609 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	579 [22.8]	2044 [80.5]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x2	4795 [188.8]	15000 DRW	225/70R19.5F	671 [26.4]	609 [24.0]	701 [27.6]	610 [24.0]	695 [27.3]	581 [22.9]	2044 [80.5]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x2	5100 ⁽⁴⁾ [200.8]	15000 DRW	225/70R19.5F	664 [26.2]	609 [24.0]	700 [27.5]	610 [24.0]	695 [27.3]	583 [23.0]	2038 [80.2]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x4	3576 [140.8]	15000 DRW	225/70R19.5F	667 [26.2]	609 [24.0]	701 [27.6]	610 [24.0]	698 [27.5]	577 [22.7]	2051 [80.7]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x4	4186 [164.8]	15000 DRW	225/70R19.5F	663 [26.1]	609 [24.0]	701 [27.6]	610 [24.0]	698 [27.5]	581 [22.9]	2044 [80.5]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x4	4795 [188.8]	15000 DRW	225/70R19.5F	663 [26.1]	609 [24.0]	701 [27.6]	610 [24.0]	697 [27.4]	583 [23.0]	2033 [80.0]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Regular Cab 4x4	5100 ⁽⁴⁾ [200.8]	15000 DRW	225/70R19.5F	656 [25.8]	609 [24.0]	700 [27.6]	610 [24.0]	696 [27.4]	585 [23.0]	2033 [80.0]	1977 [77.8]	40 [2.0]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular Cab 4x2	3576 [140.8]	17500 DRW	225/70R19.5F	673 [26.5]	609 [24.0]	700 [27.5]	610 [24.0]	695 [27.3]	575 [22.6]	2076 [81.7]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular Cab 4x2	4186 [164.8]	17500 DRW 19000 DRW	225/70R19.5F	670 [26.4]	609 [24.0]	700 [27.5]	610 [24.0]	695 [27.3]	579 [22.8]	2068 [81.4]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular Cab 4x2	4795 [188.8]	17500 DRW	225/70R19.5F	670 [26.4]	609 [24.0]	700 [27.5]	610 [24.0]	694 [27.3]	581 [22.9]	2068 [81.4]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular	5100 ⁽⁴⁾ [200.8]	17500 DRW 19000	225/70R19.5F	664 [24.2] 671	609 [24.0] 609	699 [27.5] 698	610 [24.0] 610	694 [27.3] 691	583 [23.0] 582	2059 [81.1]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Cab 4x2 Super Duty	3576	19000 DRW		[26.4]	[24.0] 609	[27.5] 699	[24.0]	[27.2]	[22.9] 581	2075	1977	73	44	177	1056	1197.60	25	226	792	380	1746		2377	1880	352	234	676	242
F-550 Regular Cab 4x4	[140.8]	DRW	225/70R19.5F	[26.2]	[24.0]	[27.5]	[24.0]	[27.4]	[22.9]	[81.7]	[77.8]	[2.9]	[1.7]	[7.0]	[41.55]	[47.1]	[1.0]	[8.9]	[31.2]	[15.0]	[68.7]	_	[93.6]	[74.0]	[13.9]	[9.2]	[26.6]	[9.5]
Super Duty F-550 Regular Cab 4x4	4186 [164.8]	17500 DRW	225/70R19.5F	661 [26.0]	609 [24.0]	699 [27.5]	610 [24.0]	697 [27.4]	581 [22.9]	2063 [81.2]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular Cab 4x4	4795 [188.8]	17500 DRW	225/70R19.5F	661 [26.0]	609 [24.0]	699 [27.5]	610 [24.0]	695 [27.4]	583 [22.9]	2059 [81.1]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Regular Cab 4x4	5100 ⁽⁴⁾ [200.8]	17500 DRW	225/70R19.5F	655 [25.8]	609 [24.0]	699 [27.5]	610 [24.0]	695 [27.4]	586 [23.1]	2049 [80.7]	1977 [77.8]	73 [2.9]	44 [1.7]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	380 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]

- (1) The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances (completed vehicles only).
- (2) Height at base curb weight with standard springs
- (3) Loaded height at spring rating with standard springs
- (4) Reinforced frame available on 200.8" Wheelbase, Regular Cab, 450/550

- (5) LH + H508 [4.9] = height to top of frame
- (6) 9700 lb California (gas engine)
- (7) 11,000 lb California (gas engine)
- (8) 12,500 lb all states (diesel engine)
- † For dimensions, see page 179 of this section.

 *H Top of frame at ♀of rear axle to top of tire in jounce.

 *L From outside edge of shackle eyebolt
- *W From frame to top of tire in jounce


NOTES — [] DIMENSIONS ARE INCHES.

- F, R, AND LH VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO DATUM LINE.

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-350/450/550 SUPER CHASSIS CAB



Page 186 SUPER DUTY F-SERIES

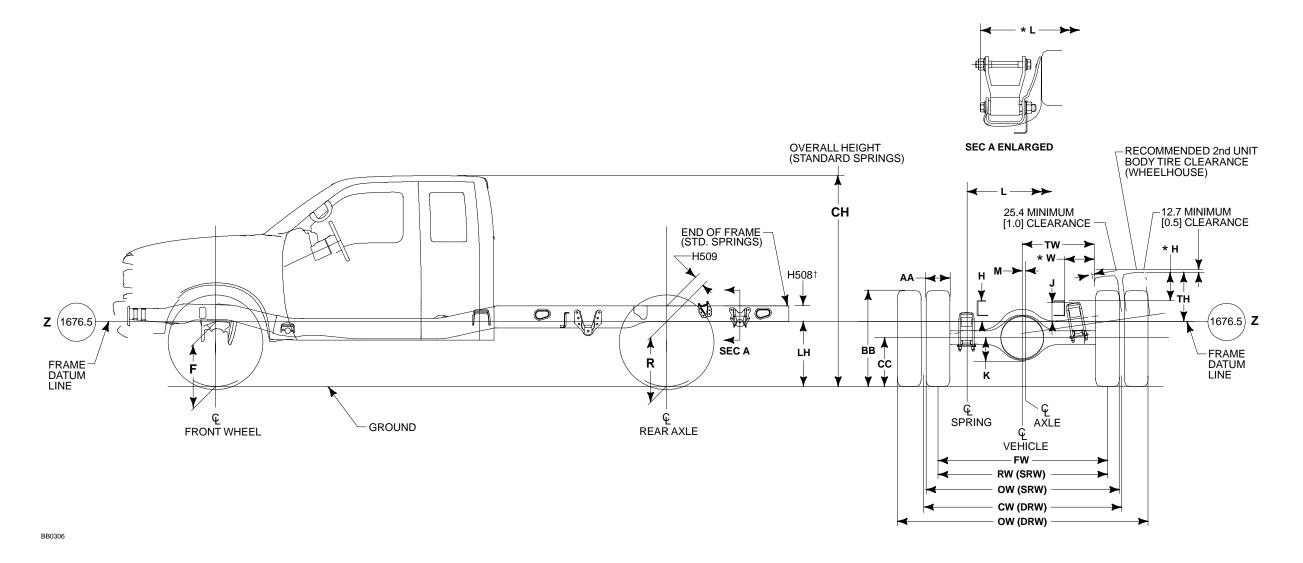

NOTES — [] DIMENSIONS ARE INCHES.

- F AND R VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE; LH IS FROM GROUND TO TOP OF FLOOR RIBS.
- -* H IS TOP OF FRAME AT \P OF REAR AXLE TO TOP OF TIRE IN JOUNCE
- *L IS FROM OUTSIDE EDGE OF SHACKLE EYEBOLT
- *W IS FROM FRAME TO TOP OF TIRE IN JOUNCE
- † FOR DIMENSIONS, SEE PAGE 181 OF THIS SECTION

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-350/450/550 SUPER CHASSIS CAB



Page 187 SUPER DUTY F-SERIES

					GHT AT WHEEL ⁽¹⁾		IGHT AT AXLE ⁽¹⁾	LH((1)(4)	CI	H ⁽¹⁾																	
MODEL	WB	GVWR	BASE TIRE	CURB ⁽²⁾	LOADED ⁽³⁾	CURB ⁽²⁾	LOADED(3)	EMPTY	LOADED	EMPTY	LOADED	н	J	K	L	*L	М	AA	ВВ	СС	FW	RW	ow	CW	тн	*н	TW	*W
Super Duty	4110	9900 ⁽⁵⁾	LT265/75R16E	532 [21.0]	515 [20.3]	646 [25.4]	547 [21.6]	665 [26.2]	538 [21.2]	1928 [75.9]	1877 [73.9]	64.8 [2.5]	6.7 [0.3]	165 [6.5]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	394 [15.5]	276 [10.9]	704 [27.7]	271 [10.7]
F-350 4x2 SuperCab	[161.8]	11200 ⁽⁶⁾⁽⁷⁾ DRW	LT215/85R16E	520 [20.5]	504 [19.9]	642 [25.3]	537 [21.2]	664 [26.2]	529 [20.8]	1916 [75.4]	1861 [73.3]	74.2 [2.9]	13.99 [0.6]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	229 [9.0]	748 [29.4]	355 [14.0]	1746 [68.7]	_	2304@ [90.7]	1803@ [71]	376 [14.8]	258 [10.2]	626 [24.6]	193 [7.6]
Super Duty	4110	9900 ⁽⁵⁾	LT265/75R16E	623 [24.5]	604 [23.8]	702 [27.6]	604 [23.8]	711 [28.0]	585 [23.0]	2029 [79.9]	1969 [77.5]	9.2 [0.4]	62.86 [2.5]	165 [6.5]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	394 [15.5]	276 [10.9]	704 [27.7]	271 [10.7]
F-350 4x4 SuperCab	[161.8]	11200 ⁽⁶⁾⁽⁷⁾ DRW	LT235/85R16E	610 [24.0]	593 [23.4]	701 [27.6]	594 [23.4]	715 [28.1]	576 [22.7]	2019 [79.5]	1953 [76.9]	24.5 [1.0]	62.29 [2.5]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	259 [10.2]	792 [31.1]	375 [14.8]	1746 [68.7]	_	2329@ [91.7]	1803@ [71]	342 [13.5]	224 [8.8]	624 [24.6]	191 [7.5]
Super Duty F-450 4x2 SuperCab	4110 [161.8]	15,000 DRW	225/70R19.5	674 [26.5]	610 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	577 [22.7]	2045 [80.5]	1977 [77.8]	40 [1.5]	47 [1.8]	177 [6.9]	1056 [41.5]	1197.6 [47.1]	28 [1.1]	226 [8.8]	792 [31.1]	381 [15.0]	1746 [68.7]	_	2386 [93.9]	1889 [74.3]	352 [13.8]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 4x4 SuperCab	4110 [161.8]	15,000 DRW	225/70R19.5	674 [26.5]	610 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	577 [22.7]	2045 [80.5]	1977 [77.8]	40 [1.5]	47 [1.8]	177 [6.9]	1056 [41.5]	1197.6 [47.1]	28 [1.1]	226 [8.8]	792 [31.1]	381 [15.0]	1746 [68.7]	_	2386 [93.9]	1889 [74.3]	352 [13.8]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 4x2 SuperCab	4110 [161.8]	17,500 DRW	225/70R19.5	674 [26.5]	610 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	577 [22.7]	2070 [81.5]	1977 [77.8]	73 [2.8]	47 [1.8]	177 [6.9]	1056 [41.5]	1197.6 [47.1]	25 [1.1]	226 [8.8]	792 [31.1]	381 [15.0]	1746 [68.7]	_	2386 [93.9]	1889 [74.3]	352 [13.8]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 4x4 SuperCab	4110 [161.8]	17,500 DRW	225/70R19.5	667 [26.2]	610 [24.0]	701 [27.6]	610 [24.0]	696 [27.4]	580 [22.8]	2066 [81.3]	1977 [77.8]	73 [2.8]	44 [1.7]	177 [6.9]	1056 [41.5]	1197.6 [47.1]	25 [1.1]	226 [8.8]	792 [31.1]	381 [15.0]	1746 [68.7]	_	2386 [93.9]	1889 [74.3]	352 [13.8]	234 [9.2]	676 [26.6]	242 [9.5]

^{(1) —} The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances (completed vehicles only).

^{(2) —} Height at base curb weight with standard spring

^{(3) —} Loaded height at spring rating with standard spring

^{(4) —} LH + H508 [4.9] = height to top of frame

^{(5) — 9700} lb California (gas engine)

^{(6) — 11,000} lb California (gas engine)

^{(7) — 12,500} lb all states (diesel engine)

^{*}H — Top of frame at ⊈ of rear axle to top of tire in jounce

^{*}L — From outside edge of shackle eyebolt


^{*}W — From frame to top of tire in jounce

^{@ —} CW=1880 [74] and OW=2380 [93.7] for 4x2, CW=1880 [74] and OW=2405 [94.7] for 4x4 with Ambulance Prep Package (Wide Track Axle). Standard Axle with Ambulance requires ordering "Wide Track Delete" Option.

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-350/450/550 CREW CHASSIS CAB



Page 188 SUPER DUTY F-SERIES

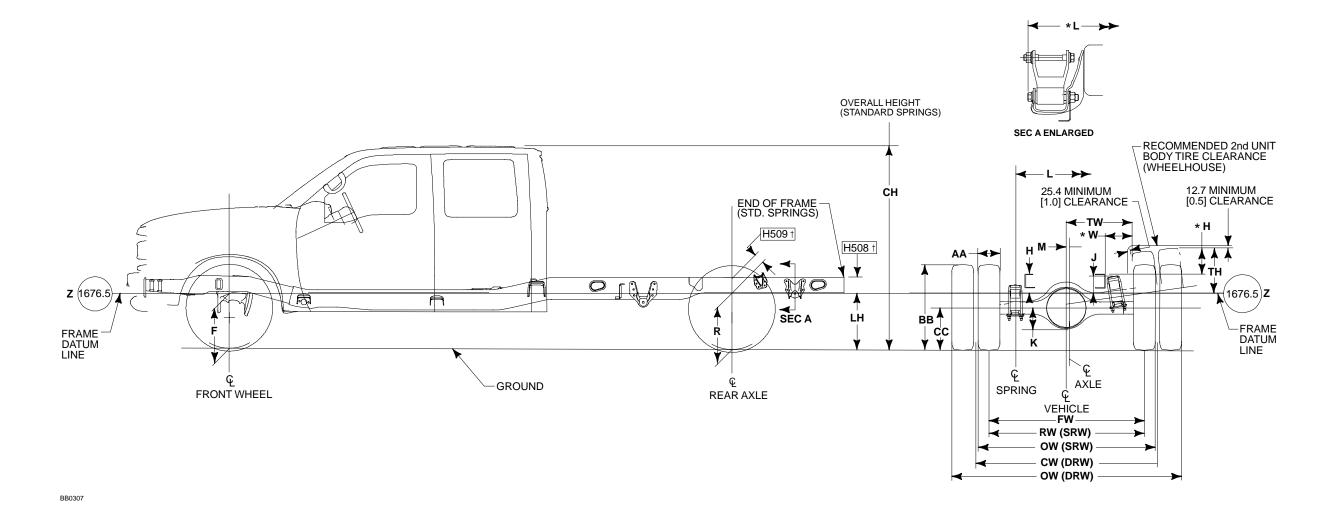

${\bf NOTES} - [\;]$ DIMENSIONS ARE INCHES.

- **F** AND **R** VEHICLE HEIGHT DIMENSIONS ARE FROM GROUND TO FRAME DATUM LINE; **LH** IS FROM GROUND TO TOP OF FLOOR RIBS.
- ***H** IS TOP OF FRAME AT **Q** OF REAR AXLE TO TOP OF TIRE IN JOUNCE
- *L IS FROM OUTSIDE EDGE OF SHACKLE EYEBOLT
- *W IS FROM FRAME TO TOP OF TIRE IN JOUNCE
- † FOR DIMENSIONS, SEE PAGE 183 OF THIS SECTION

AXLE/TIRE/VEHICLE HEIGHT DATA SUPER DUTY F-350/450/550 CREW CHASSIS CAB



Page 189 SUPER DUTY F-SERIES

MODEL	WB	GVWR	BASE TIRE		GHT AT WHEEL ⁽¹⁾		GHT AT AXLE ⁽¹⁾	LH	(1)(4)	CI	- (1)	н	J	K	L	*L	М	AA	ВВ	CC	FW	RW	ow	CW	ТН	*Н	TW	*w
			TIKE	CURB ⁽²⁾	LOADED(3)	CURB ⁽²⁾	LOADED(3)	EMPTY	LOADED	EMPTY	LOADED				_	_												
Super Duty	4475	9900 ⁽⁵⁾	LT265/75R16E	535 [21.1]	515 [20.3]	644 [25.3]	547 [21.6]	659 [26.0]	537 [21.1]	1929 [75.9]	1880 [74.0]	65 [2.5]	7 [0.3]	165 [6.5]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	394 [15.5]	276 [10.9]	704 [27.7]	271 [10.7]
F-350 Crew Cab 4x2	[176.2]	11200 ⁽⁶⁾⁽⁷⁾ DRW	LT215/85R16E	526 [20.7]	504 [19.9]	641 [25.2]	537 [21.2]	658 [25.9]	527 [20.7]	1926 [75.8]	1864 [73.4]	74 [2.9]	14 [0.6]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	229 [9.1]	748 [29.4]	355 [14.0]	1746 [68.7]	_	2304 [90.7]	1803 [71.0]	376 [14.8]	258 [10.2]	626 [24.6]	193 [7.6]
Super Duty	4475	9900 ⁽⁵⁾	LT265/75R16E	630 [24.8]	604 [23.8]	699 [27.5]	604 [23.8]	704 [27.7]	584 [23.0]	2026 [79.8]	1974 [77.7]	9 [0.4]	63 [2.5]	165 [6.5]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	278 [10.9]	781 [30.7]	371 [14.6]	1746 [68.7]	1729 [68.1]	2007 [79.0]	_	394 [15.5]	276 [10.9]	704 [27.7]	271 [10.7]
F-350 Crew Cab 4x4	[176.2]	11200 ⁽⁶⁾⁽⁷⁾ DRW	LT235/85R16E	628 [24.7]	593 [23.4]	699 [27.5]	594 [23.4]	705 [27.8]	571 [22.5]	2038 [80.2]	1978 [77.9]	25 [1.0]	62 [2.5]	177 [7.0]	1056 [41.55]	1184.04 [46.6]	45 [1.8]	259 [10.2]	792 [31.2]	375 [14.8]	1746 [68.7]	_	2329 [91.7]	1803 [71.0]	342 [13.5]	224 [8.8]	624 [24.6]	191 [7.5]
Super Duty F-450 Crew Cab 4x2	4475 [176.2]	15000 DRW	225/70R19.5F	665 [26.2]	609 [24.0]	697 [27.5]	610 [24.0]	692 [27.3]	581 [22.9]	2053 [80.8]	1980 [78.0]	40 [1.6]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Crew Cab 4x2	5085 [200.2]	15000 DRW	225/70R19.5F	665 [26.2]	609 [24.0]	697 [27.5]	610 [24.0]	691 [27.2]	583 [22.9]	2053 [80.8]	1980 [78.0]	40 [1.6]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Crew Cab 4x4	4475 [176.2]	15000 DRW	225/70R19.5F	656 [25.8]	609 [24.0]	697 [27.5]	610 [24.0]	695 [27.4]	584 [23.0]	2056 [80.9]	1980 [78.0]	40 [1.6]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-450 Crew Cab 4x4	5085 [200.2]	15000 DRW	225/70R19.5F	656 [25.8]	609 [24.0]	697 [27.5]	610 [24.0]	693 [27.3]	585 [23.0]	2056 [80.9]	1980 [78.0]	40 [1.6]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	28 [1.1]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Crew Cab 4x2	4475 [176.2]	17500 DRW	225/70R19.5F	663 [26.1]	609 [24.0]	698 [27.5]	610 [24.0]	693 [27.3]	582 [22.9]	2067 [81.4]	1980 [78.0]	73 [2.9]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Crew Cab 4x2	5085 [200.2]	17500 DRW	225/70R19.5F	663 [26.1]	609 [24.0]	698 [27.5]	610 [24.0]	692 [27.2]	584 [23.0]	2067 [81.4]	1980 [78.0]	73 [2.9]	47 [1.9]	177 [7.0]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Crew Cab 4x4	4475 [176.2]	17500 DRW	225/70R19.5F	655 [25.8]	609 [24.0]	697 [27.4]	610 [24.0]	695 [27.3]	584 [23.0]	2066 [81.3]	1980 [78.0]	73 [2.9]	44 [1.7]	44 [1.7]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]
Super Duty F-550 Crew Cab 4x4	5085 [200.2]	17500 DRW	225/70R19.5F	655 [25.8]	609 [24.0]	697 [27.4]	610 [24.0]	693 [27.3]	586 [23.0]	2066 [81.3]	1980 [78.0]	73 [2.9]	44 [1.7]	44 [1.7]	1056 [41.55]	1197.60 [47.1]	25 [1.0]	226 [8.9]	792 [31.2]	381 [15.0]	1746 [68.7]	_	2377 [93.6]	1880 [74.0]	352 [13.9]	234 [9.2]	676 [26.6]	242 [9.5]

^{(1) —} The Height Data shown represents dimensions of a base/standard vehicle with no options. Actual height may vary due to production tolerances (completed vehicles only).

^{(2) —} Height at base curb weight with standard springs

^{(3) —} Loaded height at spring rating with standard springs

^{(4) —} LH + H508 [4.9] = height to top of frame

^{(5) — 9700} lb California (gas engine)

^{(6) — 11,000} lb California (gas engine)

^{(7) — 12,500} lb all states (diesel engine)

 $^{^{}f *}{f H}$ — Top of frame at ${\Bbb Q}$ of rear axle to top of tire in jounce.


^{*}L — From outside edge of shackle eyebolt

^{*}W — From frame to top of tire in jounce

SUPER DUTY F-SERIES GROUND CLEARANCE DATA



Page 190 SUPER DUTY F-SERIES

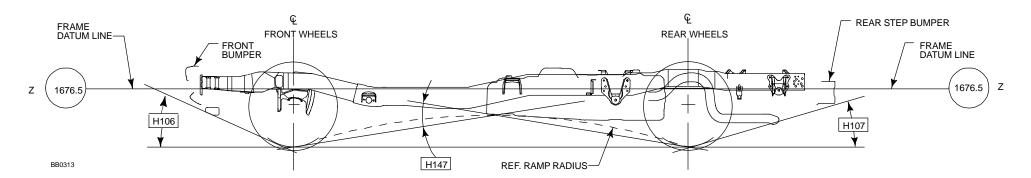

				H106	H147			H107 DEPAR	TURE ANGLE		
TIRE	MODEL	WHEELBASE	GVWR [LB]	APPROACH ANGLE	RAMP BREAKOVER	SPARE TIRE	REAR BUMPER	TRAILER HITCH	EXHAUST TAILPIPE	FRAME RAIL	AFT-AXLE FUEL TANK
	SD F-250 REGULAR CAB 4X2 SRW	3480 [137.0]	8800	20.8°	16.0°	13.3°	16.6°	11.2°	14.7°	_	***
	SD F-250 REGULAR CAB 4X4 SRW	3480 [137.0]	8800	27.7°	22.2°	15.5°	21.6°	15.9°	23.2°	_	***
	SD F-350 REGULAR CAB 4X4 DRW	3480 [137.0]	11,200 ⁽¹⁾	27.7°	22.2°	15.6°	21.6°	15.9°	23.2°	_	***
	SD F-250 SUPERCAB 4X2 SRW	3602 [141.8]	8800	20.8°	15.8°	13.3°	16.6°	11.2°	14.7°	_	***
	SD F-250 SUPERCAB 4X2 SRW	4014 [158.0]	8800	20.8°	11.9°	13.3°	16.6°	11.2°	14.7°	_	***
	SD F-250 SUPERCAB 4X4 SRW	3602 [141.8]	8800	20.8°	21.7°	15.5°	21.6°	15.9°	23.2°	_	***
	SD F-250 SUPERCAB 4X4 SRW	4014 [158.0]	8800	20.8°	19.7°	15.6°	21.6°	15.9°	23.2°	_	***
	SD F-350 SUPERCAB 4X4 DRW	4014 [158.0]	11,200 ⁽¹⁾	20.8°	19.6°	19.9°	21.6°	15.9°	23.2°	_	***
L T005/05D 405	SD F-250 CREW CAB 4X2 SRW	3967 [156.2]	8800	20.8°	14.5°	13.9°	16.6°	11.2°	14.7°	_	***
LT235/85R16E	SD F-250 CREW CAB 4X2 SRW	4379 [172.4]	8800	20.8°	13.4°	13.9°	16.6°	11.2°	14.7°	_	***
	SD F-250 CREW CAB 4X4 SRW	3967 [156.2]	8800	27.6°	19.7°	19.9°	21.6°	15.9°	23.2°	_	***
	SD F-250 CREW CAB 4X4 SRW	4379 [172.4]	8800	27.6°	18.6°	13.3°	21.6°	15.9°	23.2°	_	***
	SD F-350 CREW CAB 4X4 DRW	3967 [156.2]	11,200 ⁽¹⁾	27.6°	19.7°	15.7°	21.6°	15.9°	23.2°	_	***
	SD F-350 CREW CAB 4X4 DRW	4379 [172.4]	11,200 ⁽¹⁾	27.6°	18.5°	15.8°	21.6°	15.9°	23.2°	_	***
	SD F-350 REGULAR CHASSIS CAB 4X4 DRW	3576 [140.8]	11,200 ⁽¹⁾	28.7°	26.2°	*	**	**	31.1°	28.1°	28.8°
	SD F-350 REGULAR CHASSIS CAB 4X4 DRW	4186 [164.8]	11,200 ⁽¹⁾	28.7°	20.6°	*	**	**	31.1°	28.1°	28.8°
	SD F-350 SUPER CHASSIS CAB 4X4 DRW	4110 [161.8]	11,200 ⁽¹⁾	28.7°	23.6°	*	**	**	31.1°	28.1°	28.8°
	SD F-350 CREW CHASSIS CAB 4X4 DRW	4475 [176.2]	11,200 ⁽¹⁾	28.7°	22.9°	*	**	**	31.1°	28.1°	28.8°

(1) — 11,000 lb California

NOTES — [] DIMENSIONS ARE INCHES.

*-SPARE TIRE NOT MOUNTED UNDER THE CHASSIS.

** — NOT AVAILABLE ON CHASSIS CAB

* * * — NOT AVAILABLE ON PICKUPS

SUPER DUTY F-SERIES GROUND CLEARANCE DATA



Page 191 SUPER DUTY F-SERIES

								H107 DEPAR	TURE ANGLE		
TIRE	MODEL	WHEELBASE	GVWR [LB]	H106 APPROACH ANGLE	H147 RAMP BREAKOVER	SPARE TIRE	REAR BUMPER	TRAILER HITCH	EXHAUST TAILPIPE	FRAME RAIL	AFT-AXLE FUEL TANK
	SD F-350 REGULAR CAB 4X2 DRW	3480 [137.0]	11,200 ⁽¹⁾	20.8°	14.7°	13.0°	15.9°	10.5°	13.5°	_	***
	SD F-350 SUPERCAB 4X2 DRW	4014 [158.0]	11,200 ⁽¹⁾	20.8°	13.3°	13.0°	15.9°	10.5°	13.5°	_	***
	SD F-350 CREW CAB 4X2 DRW	3967 [156.2]	11,200 ⁽¹⁾	20.8°	13.4°	13.0°	15.9°	10.5°	13.5°	_	***
	SD F-350 CREW CAB 4X2 DRW	4379 [172.4]	11,200 ⁽¹⁾	20.8°	12.6°	13.0°	15.9°	10.5°	13.5°	_	***
LT215/85R16E	SD F-350 REGULAR CHASSIS CAB 4X2 DRW	3596 [140.8]	11,200 ⁽¹⁾	21.4°	21.0°	*	**	**	24.7°	25.1°	25.1°
	SD F-350 REGULAR CHASSIS CAB 4X2 DRW	4186 [164.8]	11,200 ⁽¹⁾	21.4°	18.7°	*	**	**	24.7°	25.1°	25.1°
	SD F-350 SUPER CHASSIS CAB 4X2 DRW	4110 [161.8]	11,200 ⁽¹⁾	21.4°	20.6°	*	**	**	24.7°	25.1°	25.1°
	SD F-350 CREW CHASSIS CAB 4X2 DRW	4475 [176.2]	11,200 ⁽¹⁾	21.4°	18.0°	*	**	**	24.7°	25.1°	25.1°
	SD F-350 REGULAR CAB 4X2 SRW	3480 [137.0]	9900(2)	20.8°	15.0°	13.6°	16.3°	11.0°	14.3°	_	***
	SD F-350 REGULAR CAB 4X4 SRW	3480 [137.0]	9900 ⁽²⁾	27.7°	21.4°	19.7°	21.3°	15.7°	22.8°	_	***
	SD F-350 SUPERCAB 4X2 SRW	3602 [141.8]	9900(2)	20.8°	15.0°	13.6°	16.3°	11.0°	14.3°	_	***
	SD F-350 SUPERCAB 4X2 SRW	4014 [158.0]	9900(2)	20.8°	13.8°	13.6°	16.3°	11.0°	14.3°	_	***
	SD F-350 SUPERCAB 4X4 SRW	3602 [141.8]	9900 ⁽²⁾	27.7°	20.8°	19.7°	21.3°	15.7°	22.8°	_	***
	SD F-350 SUPERCAB 4X4 SRW	4014 [158.0]	9900 ⁽²⁾	27.7°	19.3°	19.7°	21.3°	15.7°	22.8°	_	***
	SD F-350 CREW CAB 4X2 SRW	3967 [156.2]	9900(2)	20.8°	14.0°	13.6°	16.3°	11.0°	14.3°	_	***
LT005/75D405	SD F-350 CREW CAB 4X2 SRW	4379 [172.4]	9900(2)	20.8°	13.1°	13.6°	16.3°	11.0°	14.3°	_	***
LT265/75R16E	SD F-350 CREW CAB 4X4 SRW	3967 [156.2]	9900 ⁽²⁾	27.6°	12.1°	13.1°	21.3°	15.7°	22.8°	_	***
	SD F-350 CREW CAB 4X4 SRW	4379 [172.4]	9900(2)	27.6°	11.4°	13.1°	21.3°	15.7°	22.8°	_	***
	SD F-350 REGULAR CHASSIS CAB 4X2 SRW	3576 [140.8]	9900(2)	20.8°	21.7°	*	**	**	25.7°	25.6°	20.2°
	SD F-350 REGULAR CHASSIS CAB 4X4 SRW	3576 [140.8]	9900 ⁽²⁾	27.7°	25.9°	*	**	**	30.7°	27.9°	28.5°
	SD F-350 SUPER CHASSIS CAB 4X2 SRW	4110 [161.8]	9900 ⁽²⁾	20.8°	19.5°	*	**	**	25.7°	25.6°	25.8°
	SD F-350 SUPER CHASSIS CAB 4X4 SRW	4110 [161.8]	9900(2)	27.7°	23.3°	*	**	**	30.7°	27.9°	28.5°
	SD F-350 CREW CHASSIS CAB 4X2 SRW	4475 [176.2]	9900(2)	20.8°	18.5°	*	**	**	25.7°	25.6°	25.8°
	SD F-350 CREW CHASSIS CAB 4X4 SRW	4475 [176.2]	9900(2)	27.6°	22.1°	*	**	**	30.7°	27.9°	28.5°

^{(1) — 11,000} lb California

NOTES — [] DIMENSIONS ARE INCHES.

 $\pm-$ Spare tire not mounted under the chassis.

** — NOT AVAILABLE ON CHASSIS CAB

*** — NOT AVAILABLE ON PICKUPS

^{(2) — 9700} lb California

SUPER DUTY F-SERIES GROUND CLEARANCE DATA



Page 192 SUPER DUTY F-SERIES

								H107 DEPA	RTURE ANGLE		
TIRE	MODEL	WHEELBASE	GVWR [LB]	H106 APPROACH ANGLE	H147 RAMP BREAKOVER	SPARE TIRE	REAR BUMPER	TRAILER HITCH	EXHAUST TAILPIPE	FRAME RAIL	AFT-AXLE FUEL TANK
	SD F-450 REGULAR CHASSIS CAB 4X2 DRW	3576 [140.8]	15,000	28.4°	26.5°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X2 DRW	4186 [164.8]	15,000	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X2 DRW	4795 [188.8]	15,000	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X2 DRW	5100 [200.8]	15,000	28.4°	20.8°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X2 DRW	3575 [140.8]	15,000	28.4°	26.5°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X4 DRW	4186 [164.8]	15,000	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X4 DRW	4795 [188.8]	15,000	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 REGULAR CHASSIS CAB 4X4 DRW	5100 [200.8]	15,000	28.4°	20.8°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 SUPER CHASSIS CAB 4X2 DRW	4110 [161.8]	15,000	28.4°	24.1°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 SUPER CHASSIS CAB 4X4 DRW	4110 [161.8]	15,000	28.4°	24.1°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 CREW CHASSIS CAB 4X2	4475 [176.2]	15,000	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 CREW CHASSIS CAB 4X2	5085 [200.2]	15,000	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 CREW CHASSIS CAB 4X4	4475 [176.2]	15,000	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-450 CREW CHASSIS CAB 4X4	5085 [200.2]	15,000	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
225/70R19.5F	SD F-550 REGULAR CHASSIS CAB 4X2 DRW	3576 [140.8]	17,500	28.4°	26.3°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X2 DRW	4186 [164.8]	17,500	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X2 DRW	4795 [188.8]	17,500	28.4°	23.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X2 DRW	5100 [200.8]	17,500	28.4°	20.8°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X2 DRW	5100 [200.8]	19,000	28.4°	20.8°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X4 DRW	3576 [140.8]	17,500	28.4°	26.3°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X4 DRW	4186 [164.8]	17,500	28.4°	23.6°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X4 DRW	4795 [188.8]	17,500	28.4°	23.6°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 REGULAR CHASSIS CAB 4X4 DRW	5100 [200.8]	17,500	28.4°	20.8°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 SUPER CHASSIS CAB 4X2 DRW	4110 [161.8]	17,500	28.4°	24.1°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 SUPER CHASSIS CAB 4X4 DRW	4110 [161.8]	17,500	28.4°	24.1°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 CREW CHASSIS CAB 4X2	4475 [176.2]	17,500	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 CREW CHASSIS CAB 4X2	5085 [200.2]	17,500	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 CREW CHASSIS CAB 4X4	4475 [176.2]	17,500	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°
	SD F-550 CREW CHASSIS CAB 4X4	5085 [200.2]	17,500	28.4°	22.4°	*	**	**	30.0°	27.5°	28.1°

NOTES — [] DIMENSIONS ARE INCHES.


st — SPARE TIRE NOT MOUNTED UNDER THE CHASSIS.

** — NOT AVAILABLE ON CHASSIS CAB

FRAME DATA SUPER DUTY F-250/350 STYLESIDE PICKUP – WIDE FRAME




Page 193 SUPER DUTY F-SERIES

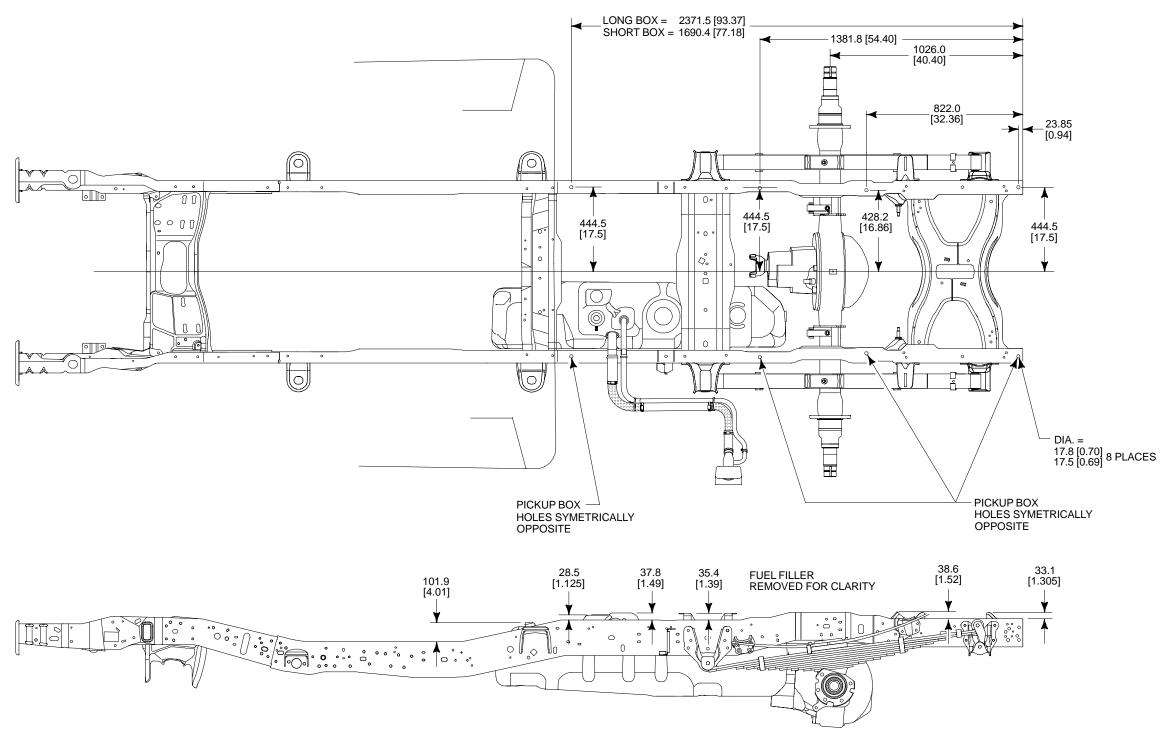

Page 194 SUPER DUTY F-SERIES

EXHAUST/FUEL SYSTEMS SUPER DUTY F-SERIES PICKUP/BOX DELETE – WIDE FRAME




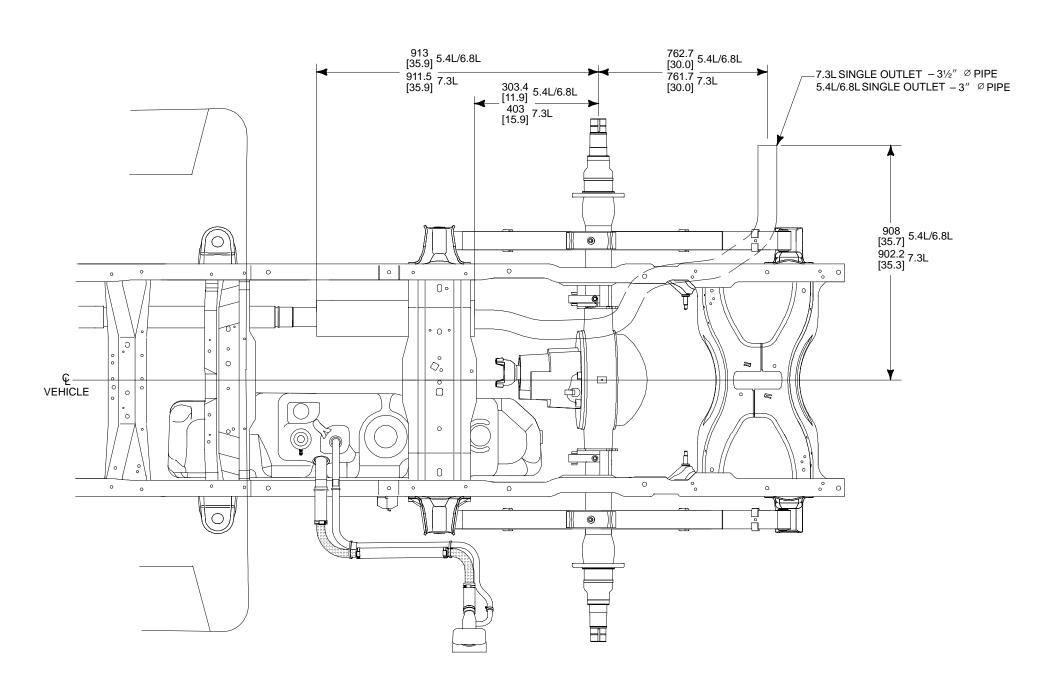

FUEL FILLER PIPE LOCATION AND DIMENSIONS SUPER DUTY F-SERIES PICKUP/BOX DELETE – WIDE FRAME



Page 195 SUPER DUTY F-SERIES

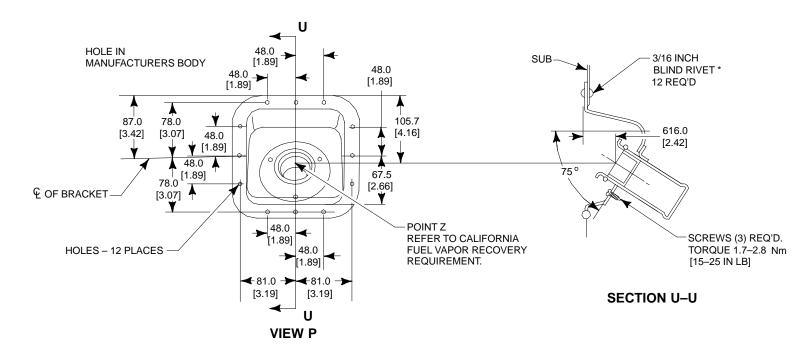

(1	CA) BACK OF CAB TO CE	NTERLINE OF REAR A	XLE
		40 IN. CA	56 IN. CA
		WHEELBASE	WHEELBASE
	Regular Cab	not available	3480mm [137.0]
	SuperCab	3602mm [141.8]	4013mm [158.0]
	Crew Cab	3967mm [156.2]	4380mm [172.4]
∇ A	MIN.	404mm [15.9]	620mm [24.4]
VA	MAX.	716mm [28.2]	932mm [36.7]
7.0	MIN.	540mm [21.25]	540mm [21.25]
∇ C	MAX.	743mm [29.25]	743mm [29.25]
7 D	MIN.	267mm [10.5]	267mm [10.5]
∇ D	MAX.	343mm [13.5]	343mm [13.5]

TO BACK	
OF CAB	FRONT OF
	VEHICLE
€ OF FILL PIPE ASY.	OUTBOARD SURFACE
AND BRACKET	OF FRAME RAIL
AND DRACKET	/— #4 CROSSMEMBER
	C / WASHINGTON
PROTECTIVE SLEEVES ARE	_FILL HOSE STEEL ELBOW
REQUIRED ON BOTH FILL AND	DO NOT TRIM
VENT HOSE WHERE PASSING	
OVER FRAME.	
	TUBE /
56.7	TUBE
(2.222)	
STEEL LEBOW	
DO NOT TRIM	
CAP	TOP OF FRAME RAIL-7
1/8 TURN-GAS	
SCREW IN-DIESEL	
CODEINO (O) DECID	
SCREWS (3) REQ'D.	
TORQUE 1.7 – 2.8 Nm	
[15–25] IN. LB.	
	TOD OF FRAME PAU
P F	TOP OF FRAME RAIL
•	AT & OF FILL PIPE
THIS HOSE IS PREFORMED; INSTALL SHORT END —	
TO THE METAL NECK AND CAP ASSEMBLY;	install ground wire to
TRIM THE LONG END AS REQUIRED.	SOUND METAL ON THE FRAME.

NOTES - [] DIMENSIONS ARE INCHES.

TORQUE ALL WORM GEAR DRIVEN HOSE CLAMPS TO 2.8 - 3.9 NM 25-35 IN-LB

* NOT SUPPLIED BY FORD MOTOR COMPANY

→ CRITICAL CONTROL ITEM

REMOVE AND DISCARD THE FORD INSTALLED FUEL FILL SYSTEM COMPONENTS (PROVIDED FOR SHIPPING PURPOSES ONLY) EXCEPT SAVE AND REUSE THE METAL NECK AND CAP ASSEMBLY.

USE THE NEW HOSES, PIPES, SCUFF GUARDS, TIE WRAPS AND CLAMPS PROVIDED IN THE DUNNAGE KIT.


THE COMPLETED FUEL FILL SYSTEM MUST PROVIDE A 4 DEGREE MINIMUM, CONTINOUS, DOWNWARD SLOPE TO THE FUEL TANK. ADDITIONAL SUPPORT MAY BE REQUIRED TO PREVENT HOSE SAGGING WHICH COULD CAUSE SPRAY OR SPITBACK DURING NORMAL FUELING OPERATIONS.

DO NOT EXTEND THE FUEL FILL SYSTEM OUTBOARD OF THE SECOND UNIT BODY.

FUEL FILLER PIPE LOCATION AND DIMENSIONS SUPER DUTY F-SERIES CHASSIS CAB



Page 196 SUPER DUTY F-SERIES

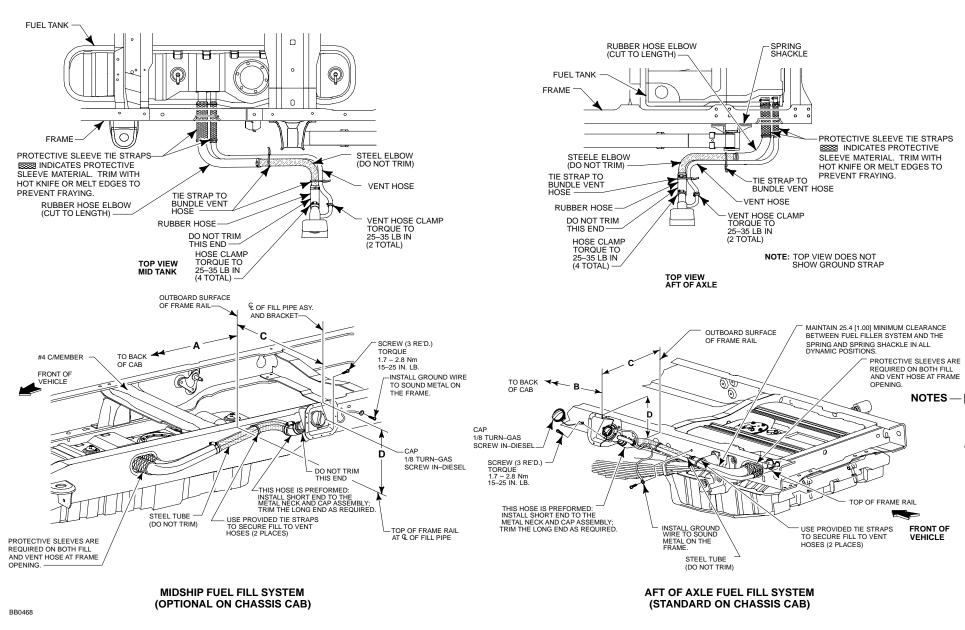

(CA) I	BACK OF CAB	TO CENT	ERLINE	OF REAR	AXLE
		60 IN. CA	84 IN. CA	108 IN. CA	120 IN. CA
			WHEE	LBASE	
	Regular Cab	3576mm [140.8]	4186mm [164.8]		5100mm [200.8]
	SuperCab	4110mm [161.8]			
	Crew Cab	4475mm [176.2]	5085mm [200.2]	4795mm [188.8]	
∇a	MIN.	864mm [34.0]	1473mm [58.0]	2083mm [82.0]	2388mm [94.0]
VA	MAX.	1029mm [40.5]	1638mm [64.5]	2248mm [88.5]	2553mm [100.5]
∇в	MIN.	1981mm [78.0]	2591mm [102.0]	3200mm [126.0]	3505mm [138.0]
۷В	MAX.	2159mm [85.0]	2769mm [109.0]	3378mm [133.0]	3683mm [145.0]
24	MIN.	584mm [23.0]	584mm [23.0]	584mm [23.0]	584mm [23.0]
∇c	MAX.	787mm [31.0]	787mm [31.0]	787mm [31.0]	787mm [31.0]
∇ n	MIN.	267mm [10.5]	267mm [10.5]	267mm [10.5]	267mm [10.5]
ΔD	MAX.	343mm [13.5]	343mm [13.5]	343mm [13.5]	343mm [13.5]

NOTES — [] DIMENSIONS ARE INCHES.

TORQUE ALL WORM GEAR DRIVEN HOSE CLAMPS TO 2.8 - 3.9 Nm 25-35 IN LB

* NOT SUPPLIED BY FORD MOTOR COMPANY

□ CRITICAL CONTROL ITEM

REMOVE AND DISCARD THE FORD INSTALLED FUEL FILL SYSTEM COMPONENTS (PROVIDED FOR SHIPPING PURPOSES ONLY) EXCEPT SAVE AND REUSE THE METAL NECK AND CAP ASSEMBLY.

USE THE NEW HOSES, PIPES, SCUFF GUARDS, TIE WRAPS AND CLAMPS PROVIDED IN THE DUNNAGE KIT.

THE COMPLETED FUEL FILL SYSTEM MUST PROVIDE A 4 DEGREE MINIMUM, CONTINOUS, DOWNWARD SLOPE TO THE FUEL TANK. ADDITIONAL SUPPORT MAY BE REQUIRED TO PREVENT HOSE SAGGING WHICH COULD CAUSE SPRAY OR SPITBACK DURING NORMAL FUELING OPERATIONS.

DO NOT EXTEND THE FUEL FILL SYSTEM OUTBOARD OF THE SECOND UNIT BODY.


THE INSTALLATION OF TUBE EXTENSION F81A-9B149-HA WILL PERMIT THE LOCATION AFT-OF-AXLE FUEL FILL HOUSING TO BE NO FURTHER REARWARD THAN THE Q OF THE FILL HOSE AS IT PASSES THROUGH THE FRAME.

TRIM BOTH ENDS AS DIRECTED.

FRAME DATA – CHASSIS CAB – NARROW FRAME **SUPER DUTY F-350 – 140.8"**, 161.8", 164.8" AND 176.2" WHEELBASES SUPER DUTY F-450/550 - 140.8", 161.8", 164.8", 176.2" AND 188.8" WHEELBASES MODEL YEAR

2002


Page 197 **SUPER DUTY F-SERIES**

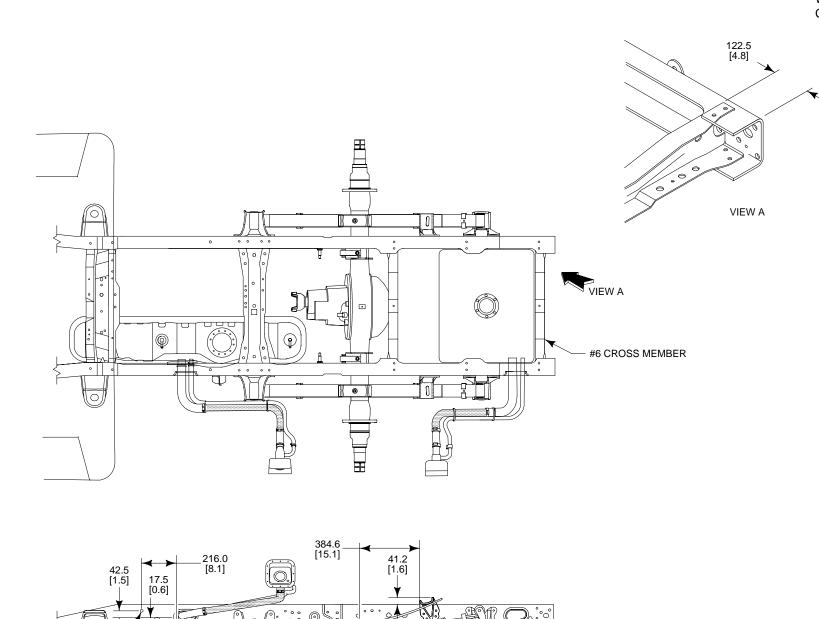

FRAME EXTENSION RECOMMENDATIONS (applicable to all WB models)

When it is necessary to add a frame extension to the Super Duty F-Series Chassis Cab, follow these suggestions:

- · Clean the back portion of the frame of wax using steam, high pressure water
- Protect the fuel system from weld sparks and splatter, being particularly careful with the rubber fuel fill hoses.
- Select a suitable mild steel channel (not iron) with a section modulus the same as the frame to be extended.
- Chamfer both the back of the frame and the end of the extensions to be welded. Remove the lower rivets attaching the rear crossmember to the frame. Weld an overlay plate on to the lower flange of the frame extension that extends approximately $2^{1/2}$ " under the frame end.
- Transfer the rivet hole locations to the lower flange overlay plate and drill through the plate.
- Disconnect the battery (ies), the ABS module, and then the Powertrain Control Module (PCM). Connect the welding ground cable to the frame at the back of the vehicle.
- · Clamp the extension into place and weld all around the top and sides, but not the lower flange, following normal weld practices.
- Grind the outer side of the vertical frame web down smooth, clamp on a re-enforcement section of mild steel approximately 4"x 12" x 1/4" and skip weld to the frame and extension. Do not weld at the corners of the re-enforcement to minimize stress concentrations. Note that this re-enforcement may be combined with a rear shear plate and/or underrun bumper if desired, in which case it would be an "Ell" shape to pick up the added attachment points.
- Bolt through the lower overlay plate and frame section using 5/8" grade 5 flange head, bolts and nuts (1).
- Drill through the frame and re-enforcement and bolt using four ½" grade 5 flange head bolts & nuts (1).
- · Coat the frame extension with a suitable protective paint. Reconnect the PCM module, ABS module and battery (ies).
 - (1) If flange head fasteners are not available, regular hex heads may be substituted with one flat washer under the head of the nut and bolt.

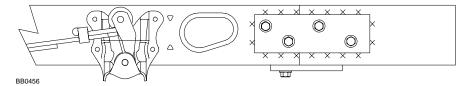


HOLES

FRAME DATA - CHASSIS CAB - NARROW FRAME **SUPER DUTY F-450/550 - 200.8" WHEELBASE**



Page 198 SUPER DUTY F-SERIES

BB0436

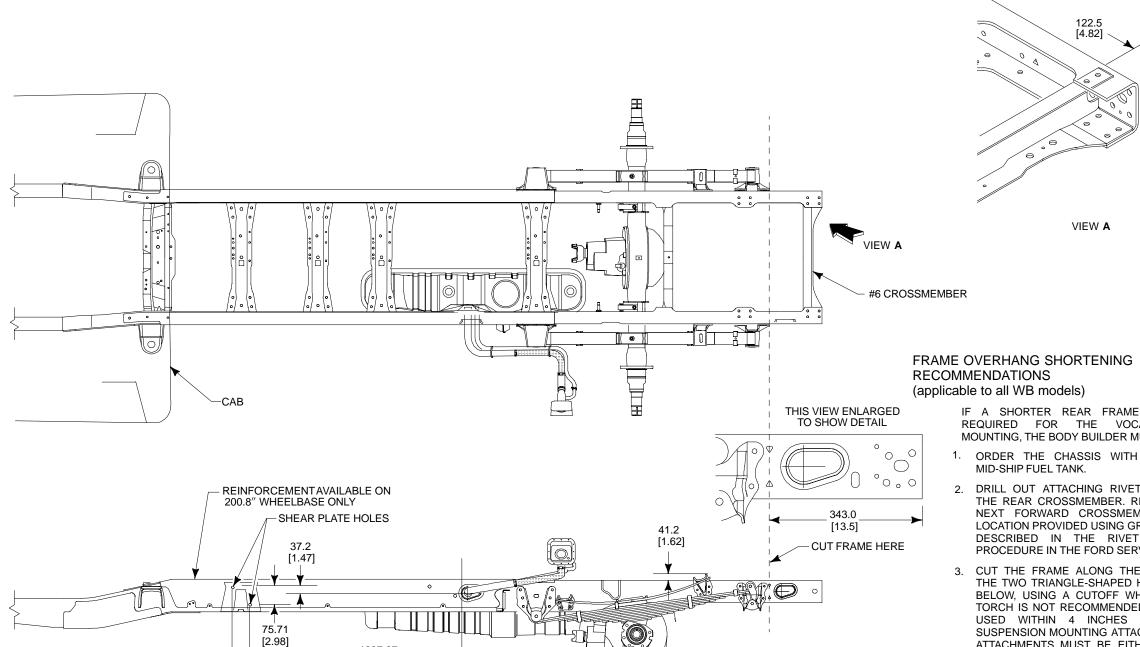

1387.67

[54.63]

1500.57


[59.08]

- IF A SHORTER REAR FRAME OVERHANG IS REQUIRED FOR THE VOCATIONAL BODY MOUNTING, THE BODY BUILDER MUST:
- 1. ORDER THE CHASSIS WITH THE OPTIONAL
- 2. DRILL OUT ATTACHING RIVETS AND REMOVE THE REAR CROSSMEMBER. REINSTALL IN THE NEXT FORWARD CROSSMEMBER MOUNTING LOCATION PROVIDED USING GRADE 8 BOLTS, AS DESCRIBED IN THE RIVET REPLACEMENT PROCEDURE IN THE FORD SERVICE MANUAL.
- 3. CUT THE FRAME ALONG THE LINE THROUGH THE TWO TRIANGLE-SHAPED HOLES DEPICTED BELOW, USING A CUTOFF WHEEL OR SAW. A TORCH IS NOT RECOMMENDED. IF A TORCH IS USED WITHIN 4 INCHES OF THE REAR SUSPENSION MOUNTING ATTACHMENTS, THESE ATTACHMENTS MUST BE EITHER RETORQUED (WHERE BOLTS ARE USED) OR HAVE THE RIVETS REMOVED AND REPLACED WITH GRADE 8 BOLTS PER THE PROCEDURE NOTED ABOVE.
- ON THE F-450/550 CHASSIS, THE FORWARD OUTBOARD REAR SUSPENSION BRACKET BOLT NEEDS TO BE SHARED WITH THE REAR CORSSMEMBER. RETORQUE WITH NEW GRADE 8 M12 BOLT AND NUT.
- [] DIMENSIONS ARE INCHES.

Page 199 SUPER DUTY F-SERIES


EXHAUST/FUEL SYSTEMS CHASSIS CAB — NARROW FRAME



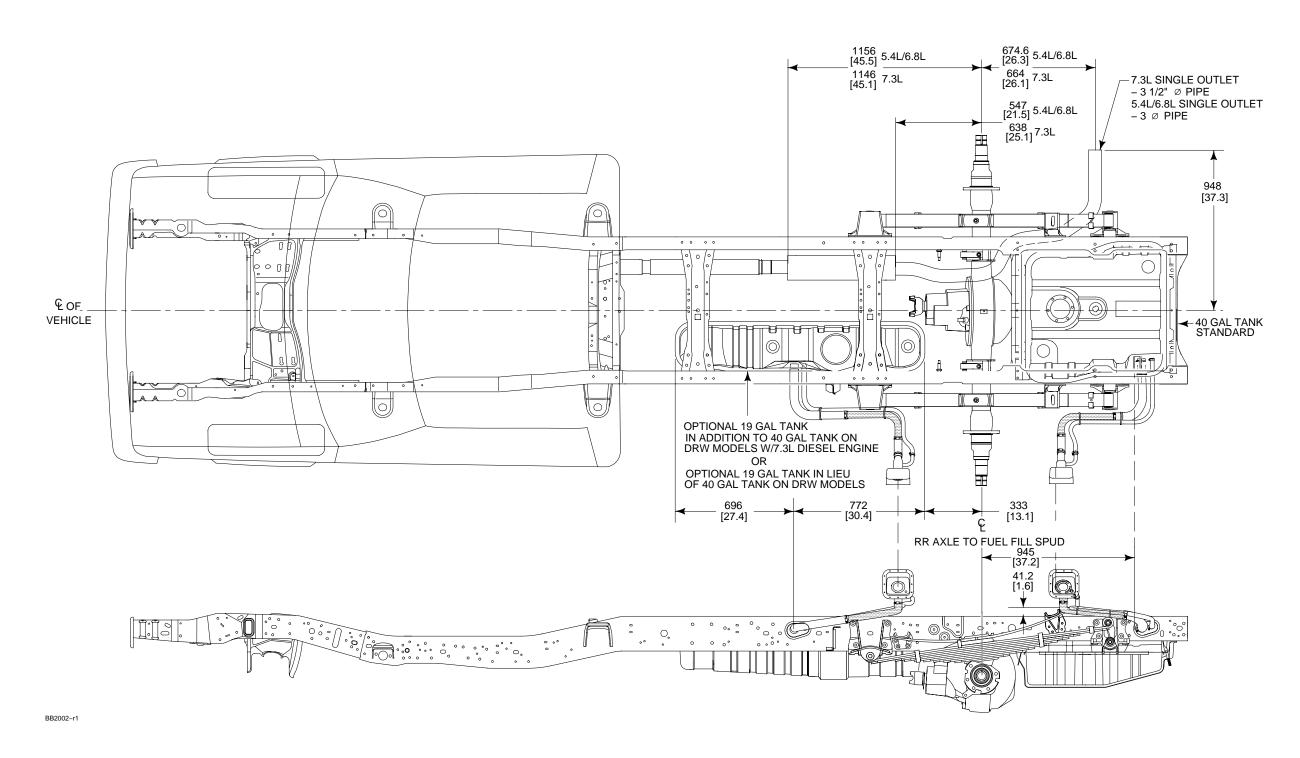

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) CHASSIS DIMENSIONS


Page 200 MOTOR HOME CHASSIS

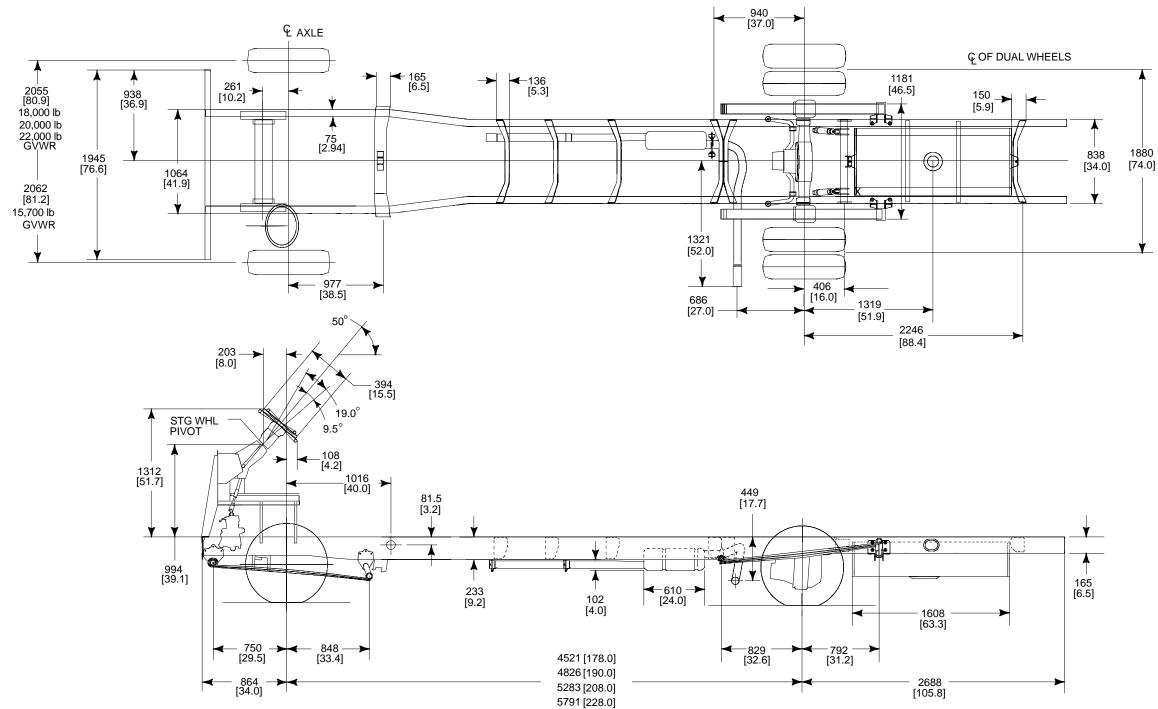

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) FUEL FILLER PIPE INSTALLATION



Page 201 MOTOR HOME CHASSIS

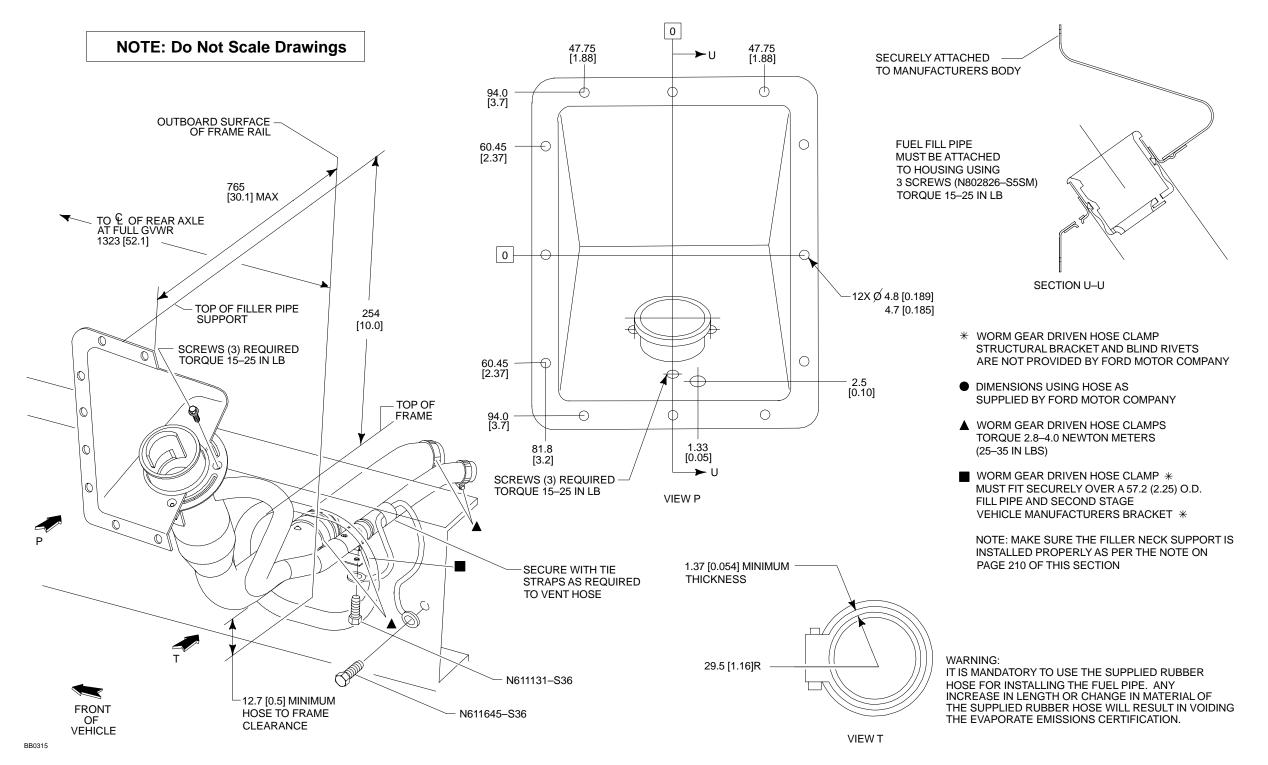


Page 202 **MOTOR HOME CHASSIS**

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) FRONT CROSSMEMBER (CM) LOCATIONS



DIM.	178″ WB	190″ WB	208" WB	228″ WB	
Α	599	599	599	599	
	[23.6]	[23.6]	[23.6]	[23.6]	
В	1808	1808	1808	1808	
	[71.2]	[71.2]	[71.2]	[71.2]	
С	NA	NA	3002 [118.2]	3282 [129.2]	
D	NA	NA	NA	4004 [157.6]	
E	3385	3436	4147	4655	
	[133.3]	[135.3]	[163.3]	[183.3]	
F	4432	4737	5194	5702	
	[174.5]	[186.5]	[204.5]	[224.5]	
G	4656	4960	5418	5926	
	[183.3]	[195.3]	[213.3]	[233.3]	
Н	5778	6083	6540	7048	
	[227.5]	[239.5]	[257.5]	[277.5]	
ı	7618	7923	8380	8888	
	[299.9]	[311.9]	[329.9]	[349.9]	

FLANGE OF RAIL.

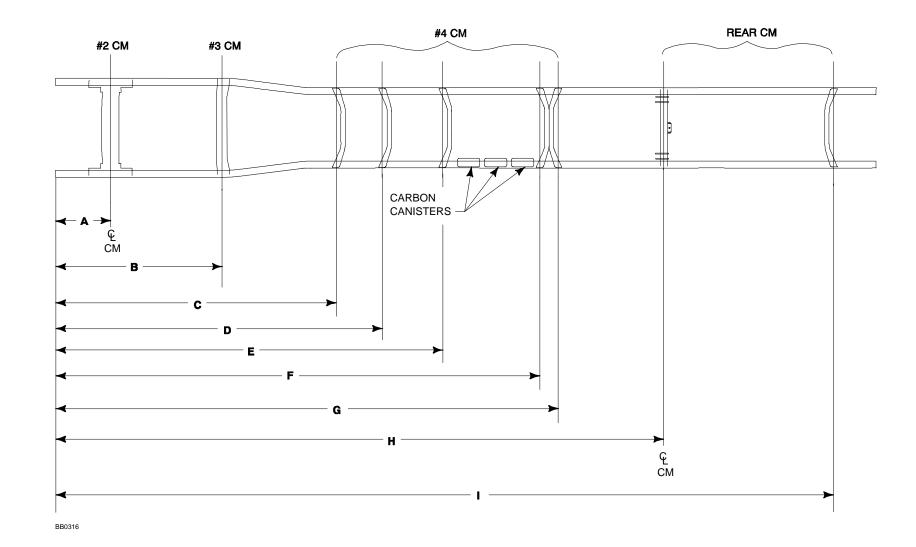

NOTES — UNLESS OTHERWISE NOTED, DIMENSIONS ARE TO THE CENTERLINE OF CROSSMEMBER FASTENERS.


- [] DIMENSIONS ARE INCHES.

[—] MEASUREMENTS FROM FRONT EDGE OF LOWER FRAME. SUBTRACT 9 MM IF MEASURED FROM TOP FRONT EDGE OF FRAME WEB.

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) FRONT STRUCTURE




Page 203 MOTOR HOME CHASSIS

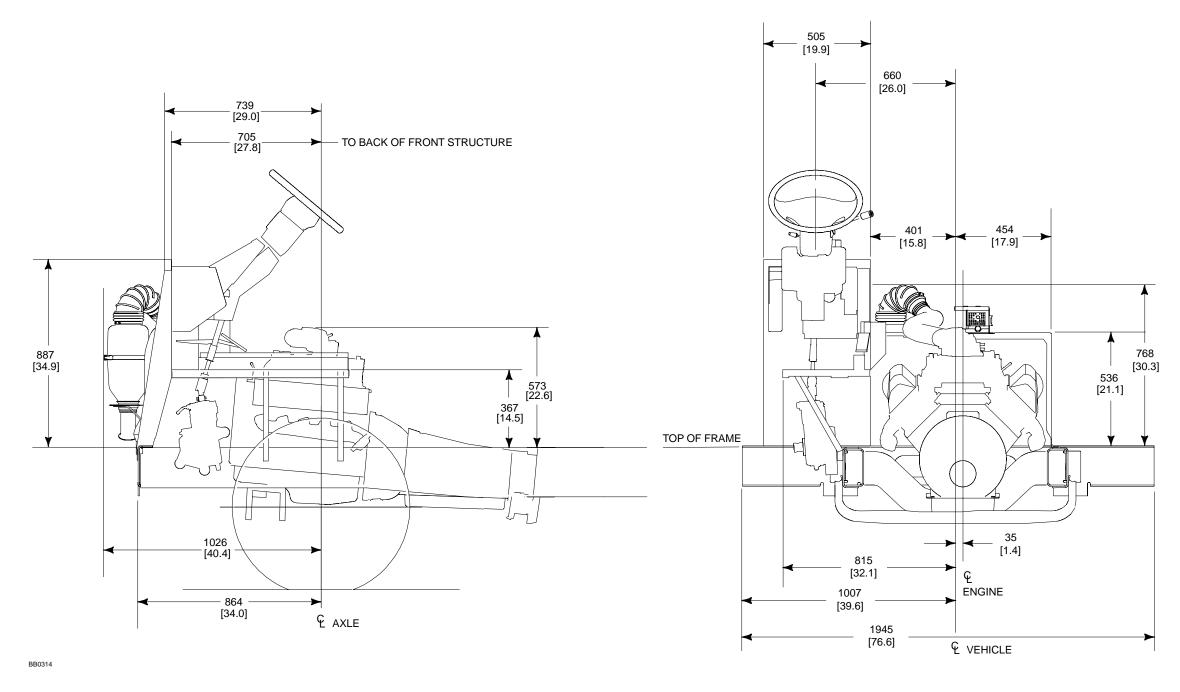

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) AXLE/TIRE/VEHICLE HEIGHT DATA



Page 204 MOTOR HOME CHASSIS

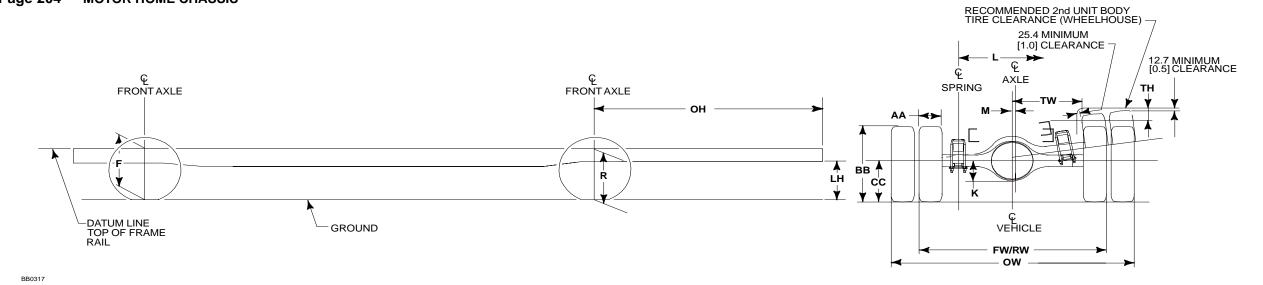

				F HEIGHT AT FRONT WHEEL (1) (2)	AT REAR LH (2)										REAR WHEEL MEASUREMENTS			
MODEL	WB	GVWR	BASE TIRE	AT SPRING RATING	AT SPRING RATING	AT SPRING RATING	ОН	K	L	М	AA	ВВ	СС	FW	RW	ow	тн	TW
	4521 [178.0] 4826 [190.0]	15,700	225/70R19.5	655 [25.8]	684 [26.9]	538 [21.2]	2688 [105.8]	177 [7.0]	1079 [42.5]	24 [1.0]	236 [9.3]	779 [30.7]	373 [14.7]	2291 [90.2]	1857 [73.1]	2310 [90.9]	270 [10.6]	638 [25.1]
F-Super Duty Class A Motor Home Chassis (F53)	4521 [178.0] 4826 [190.0] 5283 [208.0] 5791 [228.0]	- 18,000	245/70R19.5	672 [26.5]	702 [27.6]	552 [21.7]	2688 [105.8]	177 [7.0]	1079 [42.5]	24 [1.0]	254 [10.0]	810 [31.9]	391 [15.4]	2327 [91.6]	1848 [72.8]	2407 [94.8]	283 [11.1]	638 [25.1]
	5283 [208.0] 5791 [228.0]	- 20,500	245/70R19.5	672 [26.5]	715 [28.1]	565 [22.2]	2688 [105.8]	214 [8.4]	1079 [42.5]	24 [1.0]	254 [10.0]	810 [31.9]	391 [15.4]	2327 [91.6]	1848 [72.8]	2407 [94.8]	283 [11.1]	638 [25.1]
	5283 [208.0] 5791 [228.0]	- 22,000	245/70R19.5	672 [26.5]	715 [28.1]	565 [22.2]	2688 [105.8]	214 [8.4]	1079 [42.5]	24 [1.0]	254 [10.0]	810 [31.9]	391 [15.4]	2327 [91.6]	1848 [72.8]	2407 [94.8]	283 [11.1]	638 [25.1]

^{(1) —} The **F** and **R** Height Data represent dimensions from ground to "frame datum line" (top of frame rail) of a base/standard vehicle with no options.

^{(2) —} These dimensions are for reference only. Actual height may vary due to production tolerances.

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) BODY AND SPECIAL EQUIPMENT INSTALLATION PRECAUTIONS

2002 MODEL YEAR

Page 205 MOTOR HOME CHASSIS

GENERAL NOTES

- Adherence to the following suggestions and warnings should not be construed as implying compliance with any particular U.S. or Canadian regulation. See the *Incomplete Vehicle Manual* (IVM) for specific information regarding compliance with U.S. or Canadian regulations.
- 2. The weight of the basic vehicle plus the sum of the weights of:
 - (a) additions to the basic vehicle (body and equipment),
 - (b) other cargo,
 - (c) fuel sufficient to fill all tanks, and
 - (d) the maximum number of occupants, at 150 lb per occupant

must not exceed the GVWR of the vehicle as specified on the incomplete vehicle label attached to the IVM and must be distributed so that neither the front or rear GAWR (as specified on the Incomplete Vehicle label) is exceeded. Also see the IVM for further instructions. All heavy equipment installed by the body builder should be placed as close to the floor as practical to maintain a minimum vertical center of gravity. Side-to-side loading should be as symmetrical as possible about the vehicle longitudinal centerline to prevent vehicle lean and adverse steering and braking characteristics.

- Rear departure angle of 8.8° maximum for the motor home chassis should be maintained to protect the fuel tank at GVWR. Rear bumpers or underbody skids should be considered to minimize interference to ground.
- 4. All subsequent manufacturer-installed items must be at least 3/4 inch away from fuel tank(s), rotating driveline components, and all other moving components. Also, they must be clear of all axle total movements.
- 5. EMISSIONS CONTROLS See the *Incomplete Vehicle Manual*.
- 6. NOISE REGULATIONS See the *Incomplete Vehicle Manual*.
- 7. SAFETY CERTIFICAITON INFORMATION See the *Incomplete Vehicle Manual*.

BODY

- Any structural member removed from the body or cowl assembly areas, except for the dunnage box supports, must be replaced or included in the body structure of any special body installed.
- 2. It is mandatory that the body builder establish a structurally sound combination of body and vehicle structure by securely fastening together the body and the frame. This requires a rigid body design and a thoroughly planned system of bolts, welds and other fastenings between the frame and body. To ensure structural integrity is maintained, the vehicle's front structure must not be modified.
- To avoid interference problems with suspension components, body attachments to frame should not protrude below side member flange.
- An access panel may be provided in the vehicle floor by the body builder to service the in-tank fuel pump.
- The body builder should consider the addition of sound insulation to minimize engine and fan noise in the driver compartment.

FRAME

- 1. **FRAME WEB** holes to mount brackets, outriggers, and supports may be drilled in the vertical side rail web with the following restrictions:
 - Material between edge of hole and inside of upper or lower flange must be at least 1.50 inch.
 - Minimum edge distance between any two holes must be at least twice the diameter of the largest hole.
 - Holes must be no larger than 0.75 inch in diameter. Avoid close vertical succession of fasteners
 - All attaching fasteners, including flat washers, must be of high strength steel (Grade 8 or metric equivalent).
- FRAME FLANGE holes may be drilled in the horizontal frame flanges with the following restrictions:
 - Material between edge of hole and radius/edge of flange must be at least 1.0 inch.
 - Minimum edge distance between any two holes must be at least twice the diameter of the largest hole.
 - Holes must be no larger than 0.5 inch in diameter.

- Welding to the frame flange is not recommended; welding to the vertical side web is preferred.
- 4. The frame for the motor home chassis is designed to permit removal of the engine and transmission out-the-bottom. This is facilitated by bolt-in No. 2 and No.3 crossmembers. Body builders should not add permanent structures which preclude powertrain removal.

ENGINE

- Engine compartments must be designed to eliminate any air circulation restriction that would affect the air induction and cooling systems. Motor home engine compartments must provide adequate flow-through ventilation to prevent local temperatures from exceeding recommended maximums. Limits for critical engine components are shown in the table (see Cooling) on next page.
- No modification of the air cleaner inlet duct is permissible. Removal or modification of this duct will affect function of the mass air meter, possibly causing driveability problems and increased tailpipe emissions.
- The electronic speed control system used on the motor home chassis does not require any vacuum source or reservoir.

SUSPENSION AND STEERING

- No vehicle or component alterations are allowed which restrict or prevent steering wheel, column, intermediate shaft, or coupling assembly collapse/ stroke travel during crash.
- Relocating the power steering fluid reservoir is not recommended. If the reservoir is moved, care must be taken to ensure that the power steering hoses are not kinked; hoses should have generous radii. Keep the reservoir upright in a vertical position while in the process of relocating it to ensure that no air enters the system.
- If the suspension spacers are used between the spring and axle seats to accommodate side-to-side variations, they should not exceed 3/4 inch. Addition of spacers is not covered under warranty.

DRIVELINE

 No drilling or welding to the front axle "I" beam is permissible. Special equipment mounting or attaching brackets, requiring attachment to the front axle, may be clamped to axle "I" beam only.

TRANSMISSION

- Transmission components are sensitive to ambient temperatures. Underbody ventilation is critical and temperatures in specific areas should not exceed those listed in the Table (see Cooling) on the next page.
- 4R100 wire harness routing location, wire harness locating clips, all heat shielding, and minimum clearance to the exhaust must be maintained as installed from the assembly plant. Failure to maintain minimum clearances may result in heat damage to the wiring, assembly and loss of transmission controls.
- For the motor home equipped with automatic transmissions, it is mandatory that the shift linkage be readjusted after linkage repair, engine mount replacement or shimming, steering column replacement or repositioning, transmission replacement, or any repair which could change the linkage adjustment.

WHEELS AND TIRES

 The 245/70Rx19.5F (18,000 lb, 20,500 lb and 22,000 lb GVWR) and the 225/70Rx10.5F (15,700 lb GVWR) are the only tires approved for the F-Super Duty Class A Motor Home Chassis (F53).

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) BODY AND SPECIAL EQUIPMENT INSTALLATION PRECAUTIONS (Continued)

2002 MODEL YEAR

Page 206 MOTOR HOME CHASSIS

COOLING

Refer also to Design Recommendations: Cooling.

- Cooling inlet area revisions (grille, bumper slots, etc.) must not significantly alter air flow and should be free from blockage such as spare tires, added brackets, etc. Restricted air flow can result in possible engine damage for which the installer may be held liable, should any claims arise.
- A minimum frontal grille opening of 370 square inches is required to provide satisfactory engine cooling. The grille opening should be directly in front of the radiator or ducted in such a manner to direct airflow through the radiator core.
- Engine and Automatic Transmission temperatures may be affected by motor home front-end design. Component temperature limitations should not be exceeded (See table below).

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) MAXIMUM ALLOWABLE COMPONENT TEMPERATURE

Components	Temperature
Fuel Rails/Pressure Regulator	200F
Engine Ignition Sensors	250F
EEC Module (mounted behind pedals)	175F
Auto Transmission Sensors	250F
Lower Transmission Area (mounts, gaskets, etc.)	250F

NOTE: Use only Ford Factory Coolers/Heat Exchangers.

EXHAUST

- Any changes to the existing exhaust pipe length should be accomplished by welding or use of 3/8 inch U-bolt. Pipe added to the exhaust outlet must be of 0.053 inch minimum wall thickness. Extending the outlet pipe 10 inches or more requires an additional support bracket of a type similar to those provided with the original chassis.
 - **WARNING**: It is mandatory that the side outlet tailpipe configuration be retained when any modification is made to the exhaust system, to reduce the possibility of exhaust fume entry through rear openings. The pipe outlet should not be located near any vent, window, door or body opening. The tailpipe or attenuator of any modified system should be above the departure angle of the finished vehicle.

2. Do not remove, reposition, or otherwise modify any existing OEM chassis or exhaust mounted heat shielding. These shields are there to ensure heat protection from underbody components as well as occupant comfort. Changes in the exhaust pipe length should be accompanied by a similar lengthening of the heat shielding where it exists. Additional underbody heat shielding is required to be installed by the builder as specified in the QVM Motor Home and Transit Bus Guide.

FUEL SYSTEM

- The fuel tank for the motor home chassis is located between the frame rails aft of the rear axle, and is supported by straps and frame crossmembers. The body builder should consider skid plates or protective bars if the body structure does not adequately protect the lower and rear surfaces of the tank.
 - **WARNING**: The five-gallon throwaway fuel tank used on the motor home chassis is for temporary use only during transit shipping, and is to be discarded by body builder. Minimum 10-gallon fuel fill on initial fill of aft-of-axle fuel tank to dilute anticorrosion solution.
- Avoid relocating fuel tanks. Relocated fuel tanks must meet FMVSS requirements. Use torque specifications and controls for reinstalling tanks (refer to service manual).
 - To avoid electrical sparking at tank, disconnect the battery ground cable(s) from the vehicle battery(ies) before removing tank.
 - Fuel tank clearance to body or frame components is 0.75 inches minimum. The size of any flexible body mounts must not be considered as part of this clearance.
 - Suspension components must clear the fuel tank by 2.00 inches minimum through their functional geometry.
 - Unfriendly surfaces by fuel tanks are unacceptable (i.e., any fastener used to install back-up alarm, seats, etc., to floor or chassis components must not point toward fuel tank).
 - Revisions and welding to fuel filler pipes, filler necks and tanks must be avoided. When welding in the vicinity of the system (especially gasoline) remove the tanks and fuel components to prevent accidents.
 - When removing tanks for processing, tanks should be stored where protected and caps should be installed on all openings. Dirt/dust will plug fuel filters and could result in engine damage.

- Reinstallation of fuel sender units always requires a new gasket (fastener torque of 85-115 in-lb is specified).
- Auxiliary generator systems that are installed with their own fuel supply, or with a fuel supply provided by means other than using the tank auxiliary port, must meet FMVSS requirements.
- Tapping into fuel tanks for an extra fuel source is highly undesirable and FMVSS certification is required. An auxiliary fuel port is available on the motor home chassis in-tank sender unit assembly.

A fuel filler kit is provided with the Class A Motorhome Chassis. This filler kit is installed and tested in a representative motorhome to verify that it is capable of providing acceptable fuel fill function without spray, spitback or premature shutoff. However, Ford has no control over how the filler pipe and vent line are installed or modified by the Vehicle Modifier. Consequently, the Vehicle Modifier must ensure that the fuel filler pipe and any extensions added to the fill or vent lines are adequately supported to prevent sagging that could cause spray, spitback or premature shutoff during normal fueling operations. The Final Stage Manufacturer is responsible for verifying acceptable fuel fill function on the completed vehicle.

The recommended horizontal and vertical location for fuel tank filler pipe is shown on page 201 of this section.

3. Fuel filler and vent hoses must not be exposed to sharp corners and should have a minimum of 1.00 inch clearance to the body and surrounding body and chassis components (except frame). If fuel filler hoses are in the vicinity of edges or corners, then shield/abrasion protection should be used. Sink traps (low spots in fuel filler and/or vent hose) are unacceptable. The recommended horizontal and vertical location for the fuel tank filler pipe is shown on page 201 of this section.

Lengthening/relocating the fuel filler pipe can only be done with the hose supplied in the dunnage box and steel tube provided by the body builder. No substitute hose material is allowed. Total length of the hose used in the system cannot exceed that of the original hose supplied in the dunnage box. Failure to comply may void the evaporative emissions certification.

- If fuel hoses or vent hoses are replaced, the new hoses must meet Ford Engineering specifications. ESL-M2D291-A2 torque specifications should be used for hose clamps (25 to 35 in-lb).
- Extra connections in the fuel filler hose or vent hose, caused by the use of extensions, should be avoided.
- Use only the Ford-specified fuel cap. Caps other than the Ford original (such as aftermarket locking gas caps) are unacceptable.

 Splicing of fuel lines with clamps and rubber hoses is unacceptable.

NOTE: Motor Home Chassis have P.T.F.E. nylon fuel lines.

In-line fuel heaters (used on diesel only) should be compatible with Ford fuel line fittings (including nylon lines).

When drilling or welding in areas where there are fuel or vapor lines, the lines should be removed Bolts installed into the chassis near fuel/vapor lines should have protective caps or other means of protection for the lines.

Kinking or collapsing of fuel or vapor lines, while handling or after installation, is unacceptable. If line has been kinked, it must be replaced.

If carbon canisters are relocated:

- Heat shields should be added if they are located in the vicinity of the catalyst and/or muffler.
- No additional hose can be added to the canister purge lines. Lengthening of the system can only be accomplished by replacing one or more of the steel tubes with a longer tube. The number of joints and length of hose in the system cannot be increased. If any of the hose is damaged, it must be replaced with CADBAR II low permiability hose meeting Ford Engineering Specification ESA-M2D50-B. Failure to comply may void the evaporative emissions certification.
- Fastener torque specs are 14 to 22 ft-lb for remounting of canister brackets to frame.

Avoid routing of fuel or vapor lines near any sharp edges or corners. Protect lines if near any sharp edges or corners.

Do not add auxiliary filters to fuel return lines or auxiliary pumps to fuel supply lines.

ELECTRICAL

All wiring additions and revisions should comply with procedures described in the "Electrical Wiring, General Practices" on Appendix page 281.

NOTE: Refer to the table on page 208 for identification of chassis wiring circuits, and tagged circuit splice locations. After all electrical or vehicle modifications, perform the on-board diagnostics procedures as described in the powertrain control/emissions diagnosis manual to clear all diagnostic trouble codes (DTCs). Road test vehicle and rerun on-board diagnostics to verify that no DTCs are present. If DTCs are generated, perform the appropriate diagnostic procedures and repairs. Vehicle operation (engine/transmission) may be affected if DTCs are not serviced.

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) BODY AND SPECIAL EQUIPMENT INSTALLATION PRECAUTIONS (Continued)

Page 207 MOTOR HOME CHASSIS

1. ADDING LIGHT OR ELECTRICAL DEVICES

Although there are many points in the truck electrical system to connect additional circuits, certain connection points provided are recommended for reliability and convenience. This section defines the recommended connection points for the F-Super Duty Class A Motor Home Chassis (F53) models and the maximum electrical loads allowable.

CAUTION: Improper electrical tie-ins may affect vehicle operation (i.e., engine, transmission).

Alternative connections or wiring practices are not recommended as certain modifications may result in other circuits becoming nonfunctional. Disconnect the battery negative (ground) cable and remove it from the battery carrier prior to any vehicle modification. Upon completion of body or equipment installation, all wiring should be checked fro proper routing, etc., to preclude electrical shorts upon reinstallation of the battery negative cable.

All electrical power for 12 volt equipment installed by the body builder must be taken off at the battery terminal of the auxiliary battery relay, starter relay, or locations provided and identified later in this book, and must be protected by a fuse, circuit breaker, or fusible link.

The vehicle wiring and protection were designed for the following lighting loads - additional loads to any circuit must be installed in accordance with the detailed electrical wiring instructions provided later in this book

Qty	Components	Trade No.
2	Halogen Headlamp Bulbs	9004
10	Combination Rear Lamp (tail, brake, turn signal) Bulbs	1157
2	Back-up Lamps	1156
4	Side Marker Bulbs	194
2	License Plate Illumination Bulbs	194
2	Interior Dome Bulb	561
16 5	Bulbs for Instrument Cluster Illumination Small Bulb Large Bulb	37 194

2. LIGHTS CONTROLLED BY HEADLAMP SWITCH

The headlamp switch on the F-Super Duty Class A Motor Home Chassis (F53) utilizes one 20 amp fuse for the headlamp high beam circuit and two 10 amp fuses for low beam. The vehicle contains a standard daytime running lamp system which operates using low beam/reduced intensity.

NOTE: Do not add marker lamps to the headlamp circuit; a separate circuit is provided for the marker lamps. Adding the marker lamps to the headlamp circuit can result in an overload of the circuit. For full service temperature range, the headlamp switch load should not exceed 15 amp.

Wiring access for lights to be controlled by the headlamp switch are provided at the front of the dash panel and at the rear of the vehicle, and are identified by tags attached to these wires.

Splices and electrical loading (fusing and wire size requirements) of these circuits must be in accordance with general practices previously identified.

3. LIGHTS CONTROLLED BY STOP LAMP SWITCH AND TURN INDICATOR SWITCH

NOTE: Splicing into the stop lamp switch on vehicles with 4R100 transmissions can interfere with the proper functioning of EEC, 4R100, and speed control. This can:

- Affect EFI engine idle speed quality.
- Prevent the 4R100 torque converter clutch from applying at throttle openings less than half throttle.
- Prevent the speed control from disengaging upon braking.

If your application involves splicing into the stop lamp switch of a 4R100-equipped vehicle, please call the Truck Body Builders Advisory Service at 1-877-840-4338.

The F-Super Duty Class A Motor Home Chassis (F53) has a mechanical stop lamp switch mounted on the brake pedal arm. These switches and associated wiring are designed for a maximum load of 10.5 amp, which is less than the fuse in the circuit, but ample for normal stop lamp loads. Under no circumstances are total loads in excess of this value permissible.

If only turn signal function is desired for the added lights, splice into the taillamp loom located at the rear of the vehicle. Splice into wires tagged "RH turn signal only 'or' LH turn signal only."

If both the turn signal and stop lamp function are desired for the added lights, splice into the taillamp loom at the rear of the vehicle into wires tagged, "RH turn w/brake 'and' LH turn w/brake."

NOTE: The turn signal switch used on light trucks has a maximum rated current of 6.5 amps for right and left turning functions and 10 amps for stop lamp function. Do not exceed these values on the turn signals.

The turn signal and emergency flasher system on the F-Super Duty Class A Motor Home Chassis (F53) utilizes an electronic flasher. For the turn signal function, the electronic flasher is designed to accommodate five 2.1 amp lights; and for the emergency flasher function, it is designed to accommodate ten 2.1 amp lights for combination stop/turn and trailer lamps.

NOTE: Adding more lights than what is specified above can result in reduced life and performance of the flasher.

4. ADDED LIGHT OR ACCESSORIES CONTROLLED BY ADDED SWITCHES

The added electrical switches and wiring must have sufficient electrical capacity for the accessory load and must be protected by appropriate fuses or circuit breakers. Also, added current draw must not cause total loads to exceed capabilities of the base vehicle wiring.

State, provincial, local laws may regulate the manner in which the fog and driving lamps are used, or may require additional equipment for the particular use intended for the vehicle. It is the buyer's/owner's responsibility to determine the applicability of such laws to the buyer's/owner's intended use for the vehicle and to arrange for the installation of required equipment.

When horns are installed, the location must be as high as possible with bell mouth of horn pointed downward.

NOTE: For additional information on Electrical/Trailer Tow wiring and devices, please refer to the *Body Builder Wiring Supplement*.



5. BATTERIES AND VOLTAGE REGULATOR

The battery location must be adequately ventilated, accessible for servicing, protected from road splash, and must also incorporate a shockless mounting.

The coach or chassis battery must not be located under the air cleaner inlet to prevent ingesting any gas that may be emitted from the battery.

If the original equipment battery is replace by more than one battery, or a battery of a larger capacity, the battery charging power supply circuit must be checked and revised to carry the additional loads.

F-Super Duty Class A Motor Home Chassis (F53) has a separate wire to the EEC IV module to maintain Keep Alive Power, and is not affected by the addition of a battery cut-off switch.

The electronic voltage regulator base must always be connected to the battery, engine chassis ground when the ignition switch is in either the ON or START position. The voltage regulator will be damaged if the connection does not exist when the ignition switch is energized.

ELECTRONICS

Refer to the Electrical Wiring Section for information on the Electronic Engine Control system.

A/C PREP PACKAGE

- 1. The F-Super Duty Class A Motor Home Chassis (F53) comes with an R134a (non-CFC) air conditioning prep package for use with a TXV controlled a/c system. This package consists of a compressor, condenser, high side lines with high pressure switch air recirculation baffles, and front end accessory drive which are mounted to the chassis, and a receiver/dryer with low pressure cutoff switch that is shipped in the dunnage box and is located by the body builder.
- Information on air conditioning refrigerant and lubricant quantities are shown in the Motor Home and Transit Bus Guide.

2002 MODEL YEAR

F-SUPER DUTY CLASS A MOTOR HOME CHASSIS (F53) BODY AND SPECIAL EQUIPMENT INSTALLATION PRECAUTIONS (Continued)

Page 208 MOTOR HOME CHASSIS

Circuit	Circuit #	Gauge	Color	Location	Fuse Loc	Fuse Size
Accessory Feed (Accy's & Run)	296	18	White-Purple Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	F/P Pos. #5	10A
Accessory Feed (Run Only)	294	18	White-Lt. Blue	Top Side of Dash Panel (Part of 14A318-A w/Assy)	F/P Pos. #38	10A
A/C Switch	441	16	Purple Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	_	_
Backup Lamp	140	18	Black-Pink	Rear of Vehicle (Part of 14408 w/Assy)	F/P #32	10A
Battery Feed	1049	16	Brown-Pink Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	F/P #16	20A
Blower Motor Feed	181	10	Brown-Orange Stripe	Top Side of Dash Panel (Part of 14401-A w/Assy)	PDB Fuse 23	40A
Brake Lamp Feeds	511	16	Lt. Green	Top Side of Dash Panel (Part of 14A318-A w/Assy), Front Side of Dash Panel (Part of 14A348 w/Assy) and Rear of Vehicle (Part of 14408 w/Assy)	F/P Pos. #9	20A
Cigarette Lighter Feed	40	16	Lt. Blue-White Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	PDB Fuse 22	20A
Interior Lamp Feed (Ground)	402	20	Orange-Lt. Green	(Part of 14A318 w/Assy)	_	_
Door Ajar Lamp Ground	433	20	Dark Green-Orange	Top Side of Dash Panel (Part of 14A318-A w/Assy)	_	_
Electric Brake Power	43	12	Dark Blue	Rear of Vehicle (Part of 14408 w/Assy)	PDB Fuse 13	30A
Ground During Start	41	20	Black-Lt. Blue	Top Side of Dash Panel (Part of 14A318-A w/Assy)	_	_
Headlamp High Beam Feed	12	16	Lt. Green-Black Stripe	Front Side of Dash Panel (Part of 14290 w/Assy)	F/P #35	20A
Headlamp Low Beam Feed (Left) (Right)	160 161	18 18	Dark Brown and White Dark Green-Orange	Front Left Side of Dash Panel (Part of 14290 w/Assy) Front Right Side of Dash Panel (Part of 14290 w/Assy)	F/P #31 F/P #25	10A 10A
Horn Feed	6	16	Yellow-Lt. Green	Front Side of Dash Panel (Part of 14290 w/Assy)	PDB Fuse #18	20A
Instrument Panel Lamp Feed	19	20	Lt. Blue-Red Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	F/P Pos. #41	10A
Interior Lamp Feeds	53	18	Black-Lt. Blue	Top Side of Dash Panel (Part of 14A318-A w/Assy) and Rear of Vehicle (Part of 14408 w/Assy)	F/P #4	15A
LH Turn Signal (Only) Feeds	3	16	Lt. Green-White Stripe	Front Side of Dash Panel (Part of 14290 w/Assy) and Rear of Vehicle (Part of 14408 w/Assy)	F/P Pos. #15	15A
LH Turn w/Brake Signal Feeds (Turn)	9	16	Lt. Green-Orange	Rear of Vehicle (Part of 14408 w/Assy)	F/P Pos. #1	20A
Marker Lamp Feeds (Park Lamp)	14 14 14 14 14	16 16 14 16 16	Brown Brown Brown Brown Brown	Front Side of Dash Panel (Part of 14290 w/Assy) Front Side of Dash Panel (Part of 14A38 w/Assy) Top Side of Dash Panel (Part of 14A318-A w/Assy) Middle of Vehicle (Part of 14405 w/Assy) Rear of Vehicle (Part of 14408 w/Assy)	PDB #6	20A
Park Brake Ground	162	20	Lt. Green-Red	Top Side of Dash Panel (Part of 14A318-A w/Assy)		_
Radio Feed	137	18	Yellow-Black Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	F/P Pos. #17	5A
RH Turn Signal (Only) Feeds	2	16	White-Lt. Blue	Front Side of Dash Panel (Part of 14290 w/Assy) and Rear of Vehicle (Part of 14408 w/Assy)	F/P Pos. #21	15A

NOTES — 14A032, 14A318, 17B587, 14408, 13A840, AND 18A586 WIRE ASSYS ARE PROVIDED IN DUNNAGE BOX. FUSE PANEL (F/P) IS LOCATED ON 14A032-A WIRE HARNESS PROVIDED IN DUNNAGE BOX. POWER NETWORK BOX (PNB) IS LOCATED ON 12A581 WIRE HARNESS LOCATED IN ENGINE COMPARTMENT.

F-SUPER DUTY CLASS A MOTOR HOME **CHASSIS (F53) BODY AND SPECIAL EQUIPMENT INSTALLATION PRECAUTIONS (Continued)**

Page 209 MOTOR HOME CHASSIS

Circuit	Circuit #	Gauge	Color	Location	Fuse Loc	Fuse Size
RH Turn w/Brake Signal Feeds (Turn)	5	16	Orange-Lt. Blue	Rear of Vehicle (Part of 14408 w/Assy)	F/P Pos. #1	20A
LH Turn w/Brake Signal Feed (Brake)	9	16	Lt. Green-Orange	Rear of Vehicle (Part of 14408 w/Assy)	F/P #9	20A
RH Turn w/Brake Signal Feed (Brake)	5	16	Orange-Lt. Blue	Rear of Vehicle (Part of 14408 w/Assy)	F/P #9	20A
Electric Brake Controller	50	12	Red	Front Side of Dash Panel (Part of 14A348 w/Assy)	PDB #13	30A
Electric Brake Ground	206	14	White	Front Side of Dash Panel (Part of 14A348 w/Assy)	_	_
Trailer Backup Lamp	963	16	Black-Lt. Green	Top Side of Dash Panel (Part of 14A318 w/Assy) and Rear of Vehicle (Part of 14408 w/Assy)	PDB #12	20A
Trailer Ground	206	10	White	Rear of Vehicle (Part of 14408 w/Assy)	_	_
Trailer LH Turn/Stop Lamp	52	16	Yellow	Rear of Vehicle (Part of 14408 w/Assy)	F/P #6	10A
Trailer RH Turn/Stop Lamp	64	16	Dark Green	Rear of Vehicle (Part of 14408 w/Assy)	F/P #12	10A
Trailer Running Lamps	962	16	Brown-White	Rear of Vehicle (Part of 14408 w/Assy)	PDB #12	20A
Warning Chime — Door Jam	159	20	Red-Pink Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	_	_
Warning Chime — Seat Belt	85	20	Brown-Lt. Blue Stripe	Top Side of Dash Panel (Part of 14A318-A w/Assy)	_	_
Washer Pump Feed	941	14	Black-White Stripe	Front Side of Dash Panel (Part of 17B587 w/Assy)	F/P Pos. #11	30A
 Wiper Motor Feed — Common 	61	14	Yellow-Red Stripe			
 Wiper Motor Feed — High 	58	14	White			
 Wiper Motor Feed — Ignition 	65	14	Drk. Green			
 Wiper Motor Feed — Low 	56	14	Drk. Blue-Orange Stripe			
 Wiper Motor Feed — Switch 	28	14	Black-Pink Stripe			

19	29
18	28
17	27 5
16	26
15	25
14	24 3
13	23
9 10	22
7 8 5 6	21 1
3 4 2	20 H H DIODE2

POWER DISTRIBUTION BOX


BB0543

NOTES: 14A032, 14A318, 17B587, 14408, 13A840, AND 18A586 WIRE ASSY'S ARE PROVIDED IN DUNNAGE BOX. FUSE PANEL (F/P) IS LOCATED ON 14A032-A WIRE HARNESS PROVIDED IN DUNNAGE BOX. POWER NETWORK BOX (PNB) IS LOCATED ON 12A581 WIRE HARNESS LOCATED IN ENGINE COMPARTMENT.

	15,7	700 lb	18,0	00 lb	20,5	00 lb	22,000 lb		
	FRONT	REAR	FRONT	REAR	FRONT	REAR	FRONT	REAR	
GAWR	6000	11,000	7000	11,000	7000	13,500	7500	14,500	
AXLE	7000	11,000	7000	11,000	7000	13,500	7500	14,500	
TIRES, 245/70R19.5 (@ 80 PSI)	*	*	7660	14,620	7660	14,620	8160(1)	15,500(1)	
TIRES, 225/70R19.5 (@ 80 PSI)	6390	12,000	*	*	*	*	*	*	
SPRINGS, COMBINED AT GROUND	7000	11,000	7000	11,000	7000	13,500	7500	14,500	
NUMBER OF LEAVES	2	3	2	3	2	3	2	3	
WHEELS, 19.5 X 6	RATED 3750	RATED 3750 PER WHEEL		*	*	*	*	*	
WHEELS, 19.5 X 6.75	*	*	RATED 4000 PER WHEEL						

^{*} Not Applicable

(1) @ 85 PSI

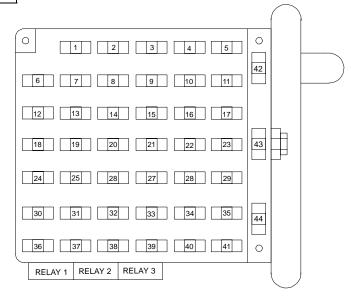

DIMENSIONAL DATA SUPER DUTY F-650/750



Page 210 F-650/750

TABLE A

FRONT RIDE HEIGHTS (FH)										
	GVWR [lb]	FRONT AXLE [lb]	SPRING CAPACITY [lb]	EMPTY mm [in]	LOADED mm [in]					
	26,000	9,000	8,500	963.85 [37.95]	894.18 [35.20]					
	30,000	9,000	9,000	963.85 [37.95]	894.18 [35.20]					
	33,000	12,000	12,000	996.71 [39.24]	903.25 [35.56]					
SUPER CREWZER	23,000	9,000	8,000	842.7 [33.2](1)	773.9 [30.5](1)					
LOBBOELE	22,000	9,000	7,000	825.5 [32.5](2)	773.9 [30.5](2)					
LO PROFILE	26,000	9,000	9,000	842.7 [33.2](1)	773.9 [30.5](1)					

TABLE B

REAR RIDE HEIGHT WITH MULT LEAF SPRING (RH)										
	GVWR [lb]	REAR AXLE [lb]	SPRING CAPACITY [lb]	EMPTY mm [in]	LOADED mm [in]					
	26,000	17,000	17,500	987.30 [38.87]	918.21 [36.15]					
	30,000	21,000	21,000	998.22 [39.30]	932.43 [36.71]					
	33,000	21,000	21,000	1006.35 [39.62]	938.78 [36.96]					
	33,000	23,000	23,000	1014.73 [39.95]	957.58 [37.70]					
SUPER CREWZER	23,000	15,000	15,000	810.1 [31.9](3)	810.1 [31.9](1)					
LO DDOELLE	23,000	17,500	15,000	889.0 [35.0](2)	807.7 [31.8](2)					
LO PROFILE	26,000	17,500	17,500	842.9 [33.2]	806.7 [31.6]					

- (1) = MULTI-LEAF SPRING
- (2) = TAPER-LEAF SPRING
- (3) = AIR-SUSPENSION

ТΛ	DI.	_ (_
IA	ᄋᆫ	⊏ '	•

	W/9,000 & 12,000 F/A & 17,000, 21,000 & 23,000 R/A										
REGUL	REGULAR CAB										
W	/B	BA CF		F	С	Α	Δ	\ F	OAL		
mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]
4013.2	[158.0]	914.4	[36.0]	3378.2	[133.0]	2133.6	[84.0]	1244.6	[49.0]	6172.2	[243.0]
4622.8	[182.0]	914.4	[36.0]	4521.2	[178.0]	2743.2	[108.0]	1778.0	[70.0]	7315.2	[288.0]
4927.6	[194.0]	914.4	[36.0]	4902.2	[193.0]	3048.0	[120.0]	1854.2	[73.0]	7696.2	[303.0]
5842.0	[230.0]	914.4	[36.0]	6502.4	[256.0]	3962.4	[156.0]	2540.0	[100.0]	9296.4	[366.0]
6604.0	[260.0]	914.4	[36.0]	8026.4	[316.0]	4724.4	[186.0]	3302.0	[130.0]	10820.4	[426.0]
SUPER	CAB										
4546.6	[179.0]	914.4	[36.0]	3378.2	[133.0]	2133.6	[84.0]	1244.6	[49.0]	6705.6	[264.0]
5461.0	[215.0]	914.4	[36.0]	4902.2	[193.0]	3048	[120.0]	1854.2	[73.0]	8229.6	[324.0]
6604.0	[260.0]	914.4	[36.0]	7493.0	[295.0]	4191	[165.0]	3302.0	[130.0]	10820.4	[426.0]
CREW C	AB										
4927.6	[194.0]	914.4	[36.0]	3987.8	[157.0]	2133.6	[84.0]	1854.2	[73.0]	7696.2	[303.0]
5842.0	[230.0]	914.4	[36.0]	5588.0	[220.0]	3048.0	[120.0]	2540.0	[100.0]	9296.4	[366.0]
6604.0	[260.0]	914.4	[36.0]	7112.0	[280.0]	3810.0	[150.0]	3302.0	[130.0]	10820.4	[426.0]

SUPER CREWZER CREW CAB											
	WB BA		CF (1)		CA ⁽²⁾		AF (3)		OAL ⁽⁴⁾		
4928	[194.0]	939.8	[37.0]	2641.6	[104.0]	1397	[55.0]	1270	[50.0]	6883	[271.0]

- (1) = FROM BACK OF CAB EXTENDER TO END OF BED.
- (2) = FROM BACK OF CAB EXTENDER TO CENTER LINE REAR AXLE.
- (3) = CENTER LINE REAR AXLE TO END OF TRUCK BED.
- (4) = OVERALL LENGTH INCLUDES TO END OF TRUCK BED.

DIMENSIONAL DATA SUPER DUTY F-650/750

Page 211 F-650/750

FRONT SPRING IDENTIFICATION AND CAPACITY RATINGS

SUPER	DUTY	TOTAL	TOTAL SPRING PACK	ONE SPRING	ONE SPRING	F SUSPENSION CAPACITY AT GROUND		
F650	F750	NO. OF LEAVES	THICKNESS AT PAD - IN	CAPACITY AT PAD - LBS	CAPACITY AT GROUND - LBS	i.e. SPRINGS/BRACKETS		
S	_	7	3.77 ⁽¹⁾	3825	4250	8500		
_	S	9	3.77 ⁽¹⁾	4050	4500	9000		
_	S ⁽²⁾	8	4.04 ⁽¹⁾	5400	6000	12,000		
LO PRO	FILE							
_	S	9	3.77 ⁽¹⁾	4050	4500	9000		
_	S	9	3.61	3150	3500	7000		
SUPER (SUPER CREWZER							
S	_	7	3.77 ⁽¹⁾	3600	4000	8000		

REAR SPRING IDENTIFICATION AND CAPACITY RATINGS

	PER AXLE END										
SUPER DUTY		TOTAL NO. OF LEAVES	TOTAL SPRING PACK	MAIN- SPRING CAPACITY	MAIN SPRING CAPACITY AT	AUXILIARY SPRING CAPACITY	MAIN & AUXILIARY COMBINATION	SUSPENSION CAPACITY AT GROUND - LBS i.e.,			
F650	F750	MAIN SPRING	THICKNESS AT PAD - IN	AT PAD - LBS	GROUND - LBS	AT PAD - LBS	CAPACITY AT PAD - LBS	SPRINGS/ BRACKETS			
S	_	9	5.35	7880	8500	_	_	17,500			
0	_	9	5.66	8500	9500	_	_	19,000			
_	S	9	5.90	9450	10,500	_	_	21,000			
_	0	_		9450	10,500	2250(4)	9450	21,000			
_	0	9	5.36	10,350	11,500	_	_	23,000			
_	0	_		10,350	11,500	2250(4)	10,350	23,000			
LO PR	OFILE										
S	_	8	5.05	7875	8875	2250(4)	10,350	17,500			
S	_	8	4.58	6750	7500	2250	9009	15,000			
SUPE	R CREW	ZER			•	•					
S	_	1	_	6250	7000	_	_	15,000			

⁽⁴⁾ Auxiliary Spring is for Load Stabilization only

FRONT AXLE TRACK

DISC	DISC WHEEL		DISC THICKNESS	WHEEL OFFSET	DUAL SPACE (DS)	FRONT AXLE TRACK				
		TYPE	mm [in]	mm [in]	SPACE (DS) mm [in]	8 HOLE (DISC)	10 HOLE (DISC)	8 H (DRUM)	10 H (DRUM)	
19.5x6.	75 STL	8H	11.2 [0.44]	140 [5.5]	279 [11.0]	2420.9	_	2405.3	_	
19.5x6.	75 ALUM	8H	21 [0.83]	140 [5.5]	279 [11.0]	2440.5	_	2424.0	_	
22.5x7.	5 STL	10H	9.7 [0.38]	163.6 [6.44]	327.2 [12.88]	_	2401.9	_	2402.3	
22.5x8.	25 STL	10H	11.2 [0.44]	168.2 [6.62]	336.3 [13.24]	_	N/A	_	2414.7	

REAR AXLE TRACK

DISC WHEEL	WHEEL	DISC	WHEEL DUAL		REAR AXLE TRACK				
	TYPE	THICKNESS mm [in]	OFFSET mm [in]	SPACE (DS) mm [in]	8 HOLE (DISC)	10 HOLE (DISC)	8 H (DRUM)	10 H (DRUM)	
19.5x6.75 STL	8H	11.2 [0.44]	140 [5.5]	279 [11.0]	2420.9	2404.86			
19.5x6.75 ALUM	8H	21 [0.83]	140 [5.5]	279 [11.0]	2440.5	2424.46			
22.5x7.5 STL	10H ISO	9.7 [0.38]	163.6 [6.44]	327.2 [12.88]	2417.9	2401.86			
22.5x8.25 STL	10H ISO	11.2 [0.44]	168.2 [6.62]	336.3 [13.24]	2420.9	2404.86			

TIRE DIMENSION TABLE

TIRE SIZE	MAX. OUTSIDE DIAMETER mm [in]	LOADED RADIUS mm [in]	MAX. TIRE SECTION mm [in]
245/70 R 19.5 G	838 [33.0]	389 [15.3]	279 [11.0]
10R22.5F	1019 [40.1]	478 [18.8]	279 [11.0]
10R22.5G	1019 [40.1]	478 [18.8]	279 [11.0]
11R22.5G	1054 [41.5]	493 [19.4]	302 [11.9]

TRACK + DS + TIRE SECTION ----- TRACK ----TIRE SECTION LOADED RADIUS CHASSIS

REAR AXLE DUAL TIRE/WHEEL

BB0533

WHEEL & TIRE RATINGS


DESCR	IPTION	FRO	NT	REAR						
WHEEL	TIRE	LOAD/	LOAD/AXLE		AXLE					
		LBS	PSI	LBS	PSI					
19.5x6.75 STEEL	245/70 R 19.5 G	4500	105	17,500	100					
19.5x6.75 ALUM	245/70 R 19.5 G	4500	105	17,500	100					
	9R22.5F	9000	105	17,280	110					
22.5x7.5 STEEL	10R22.5F	10,300	100	19,500	100					
	10R22.5G	10,300	115	21,280	115					
22.5x8.25 STEEL	11R22.5G	12,350	105	23,000	105					

⁽¹⁾ Multi-Leaf Spring (2) Standard with 33,000 LBS. GVWR only

DIMENSIONAL DATA SUPER DUTY F-650/750 REGULAR CAB CHASSIS

2002 MODEL YEAR


Page 212 F-650/750

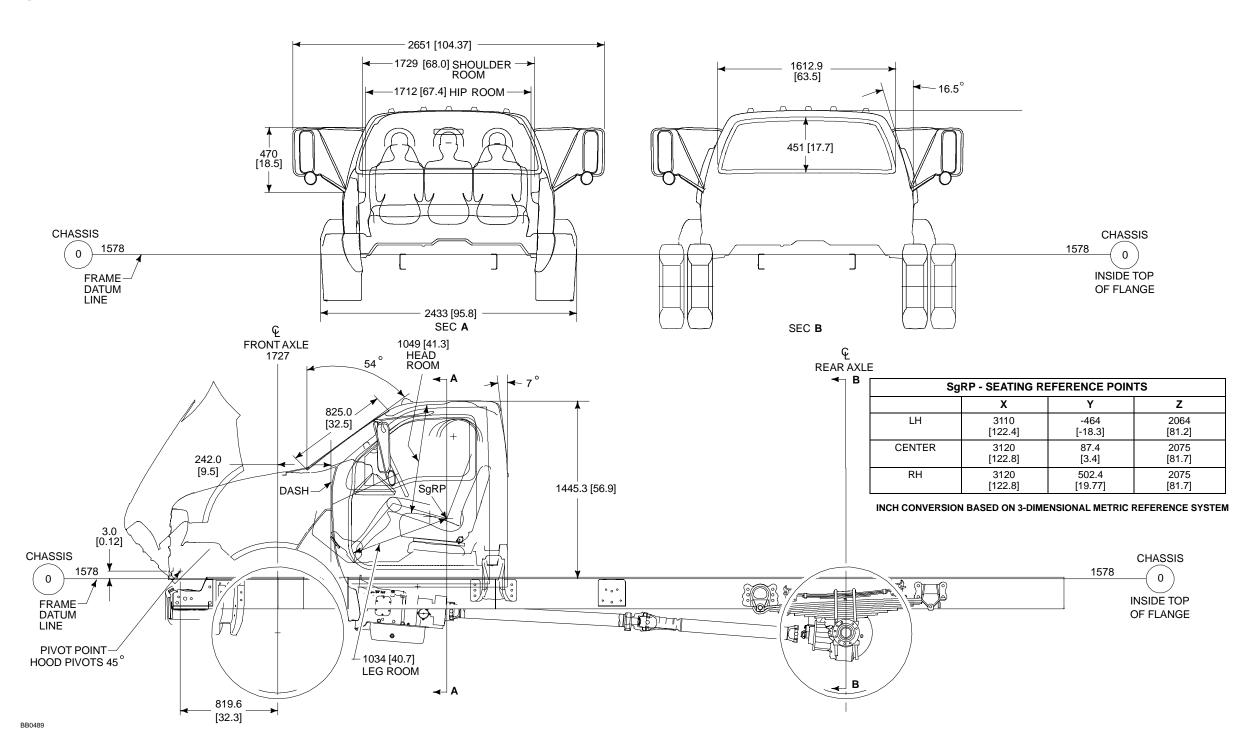

DIMENSIONAL DATA SUPER DUTY F-650/750 REGULAR CAB CHASSIS

2002 MODEL YEAR

Page 213 F-650/750

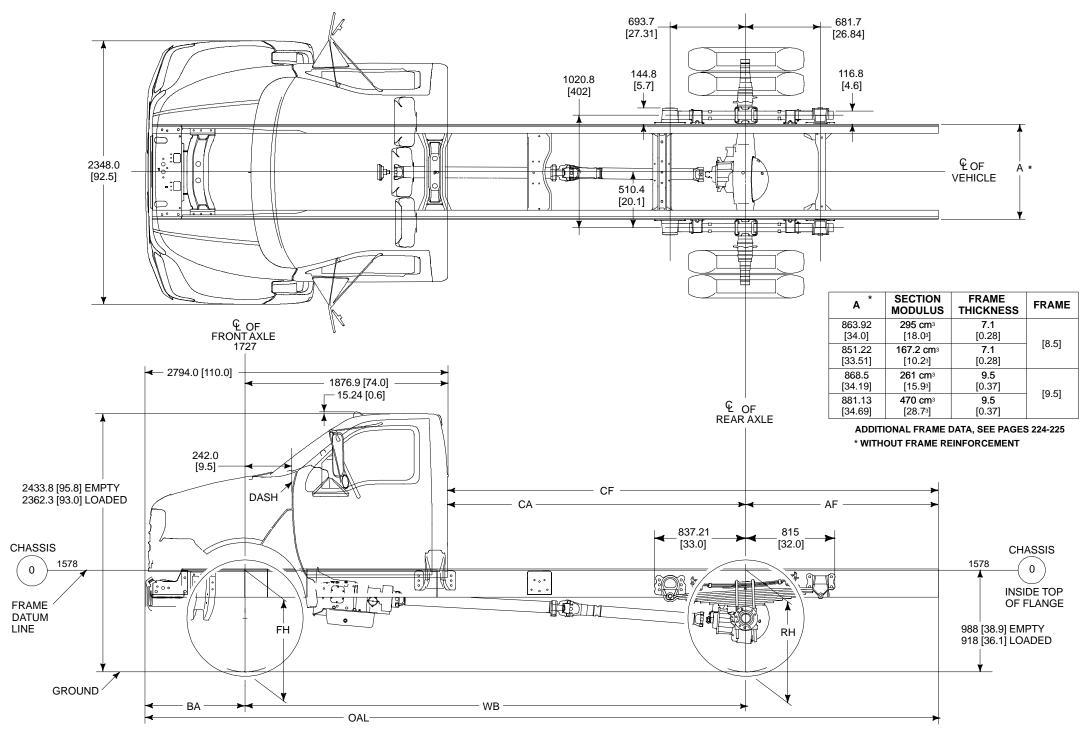

NOTES — [] DIMENSIONS ARE INCHES.


- WB, BA, CA, AF, CF, OAL DIMENSIONS, PAGE 210.

- FH AND RH, PAGE 210, TABLES A AND B.

DIMENSIONAL DATA SUPER DUTY F-650/750 SUPERCAB CHASSIS




Page 214 F-650/750

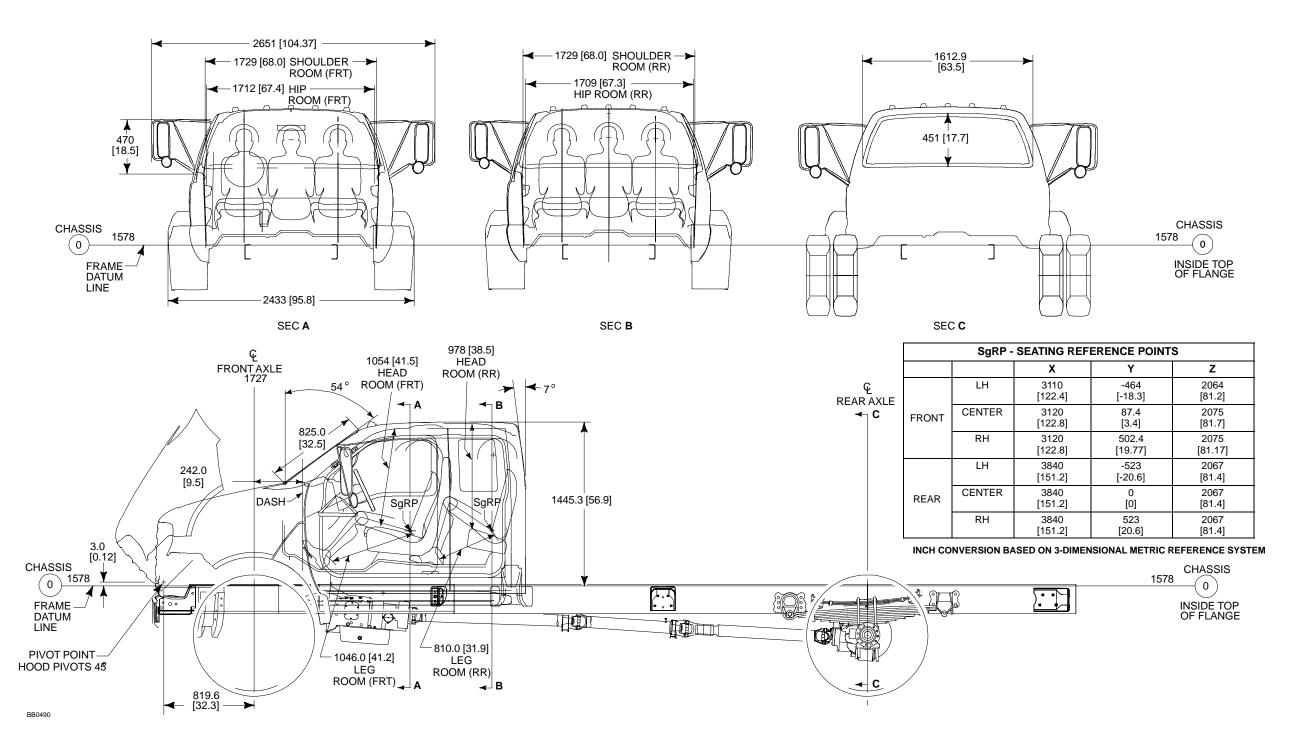

DIMENSIONAL DATA SUPER DUTY F-650/750 SUPERCAB CHASSIS



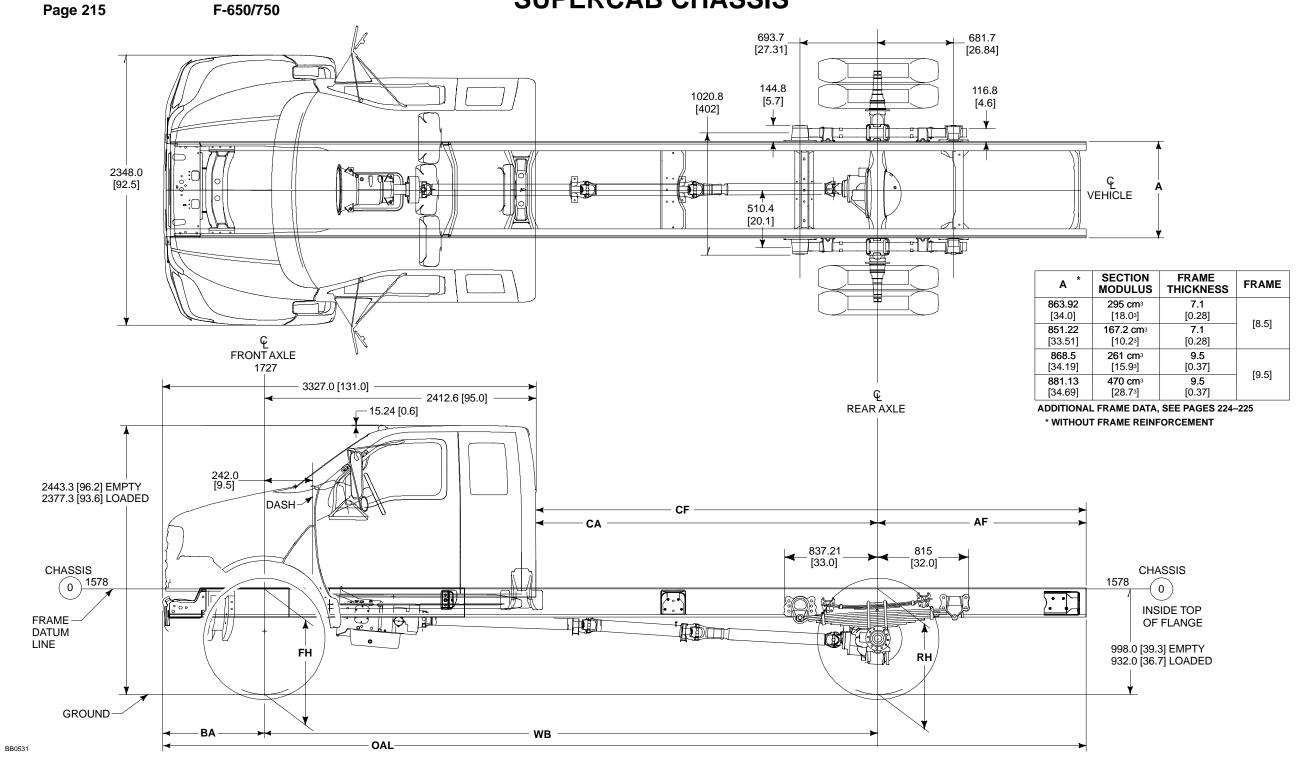


- WB, BA, CA, AF, CF, OAL DIMENSIONS, PAGE 210.
- FH AND RH, PAGE 210, TABLES A AND B.

DIMENSIONAL DATA SUPER DUTY F-650/750 CREW CAB CHASSIS




Page 216 F-650/750

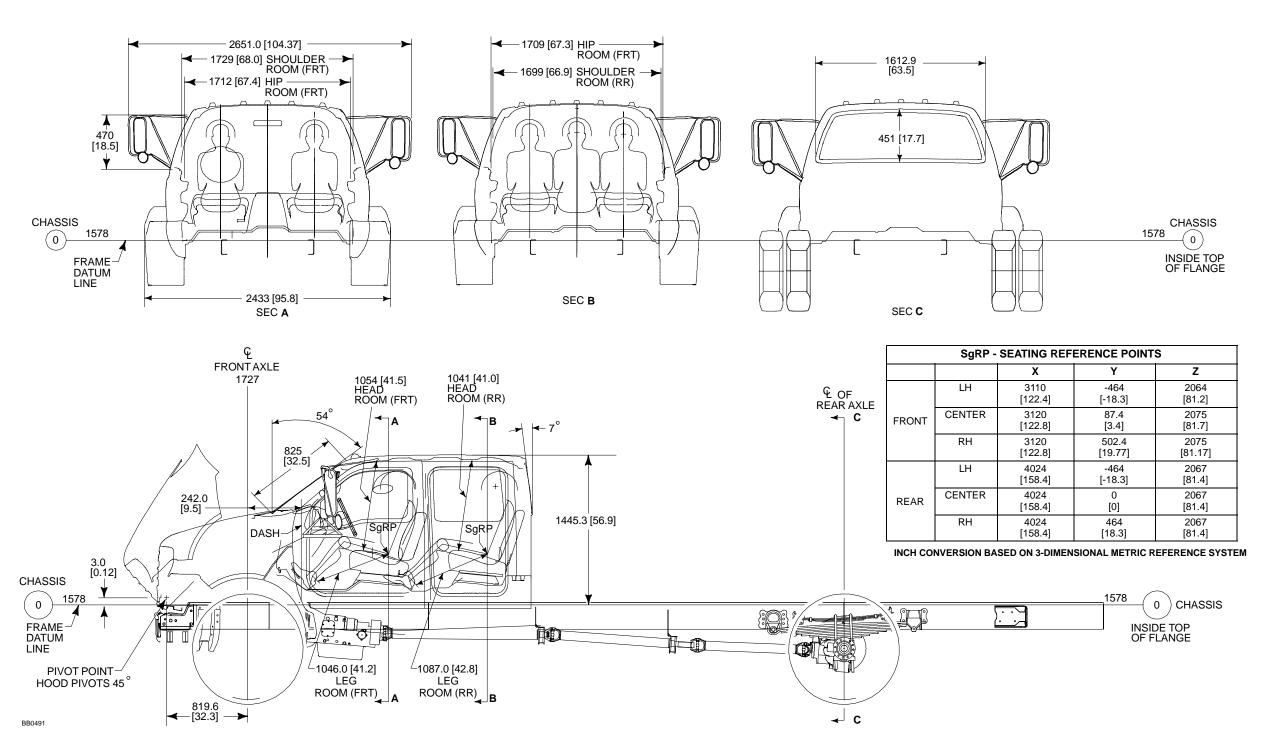

DIMENSIONAL DATA SUPER DUTY F-650/750 CREW CAB CHASSIS



Page 217 F-650/750

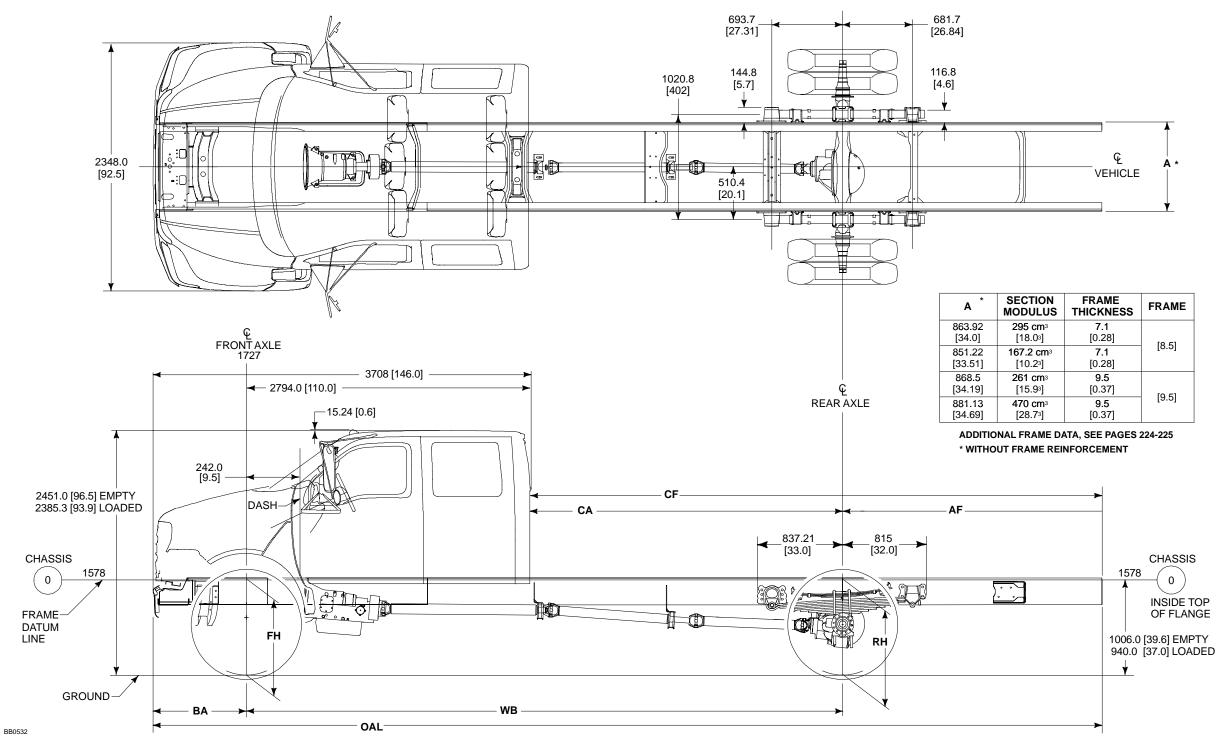

NOTES — [] DIMENSIONS ARE INCHES.

⁻ WB, BA, CA, AF, CF, OAL DIMENSIONS, PAGE 210.


⁻ FH AND RH, PAGE 210, TABLES A AND B.

DIMENSIONAL DATA SUPER DUTY F-650 LO PROFILE REGULAR/SUPERCAB/CREW CAB CHASSIS

2002 MODEL YEAR

Page 218 F-650/750

BB0530

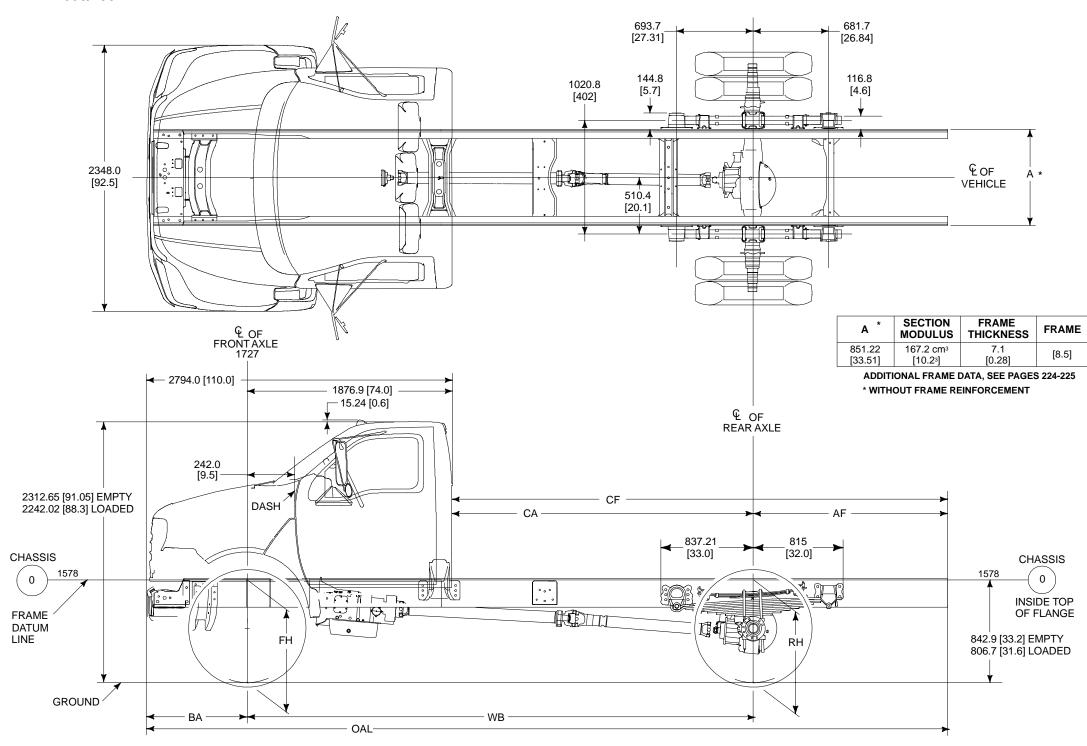

NOTES — [] DIMENSIONS ARE INCHES.

⁻ WB, BA, CA, AF, CF, OAL DIMENSIONS, PAGE 210.


⁻ FH AND RH. PAGE 210. TABLES A AND B.

DIMENSIONAL DATA SUPER DUTY F-650 SUPER CREWZER CREW CAB CHASSIS



— **FH** AND **RH**, PAGE 210, TABLES A AND B 5TH WHEEL HITCH-ADJUSTABLE +-1.5" HEIGHT


GOOSENECK BALL HEIGHT APPROX. 40.

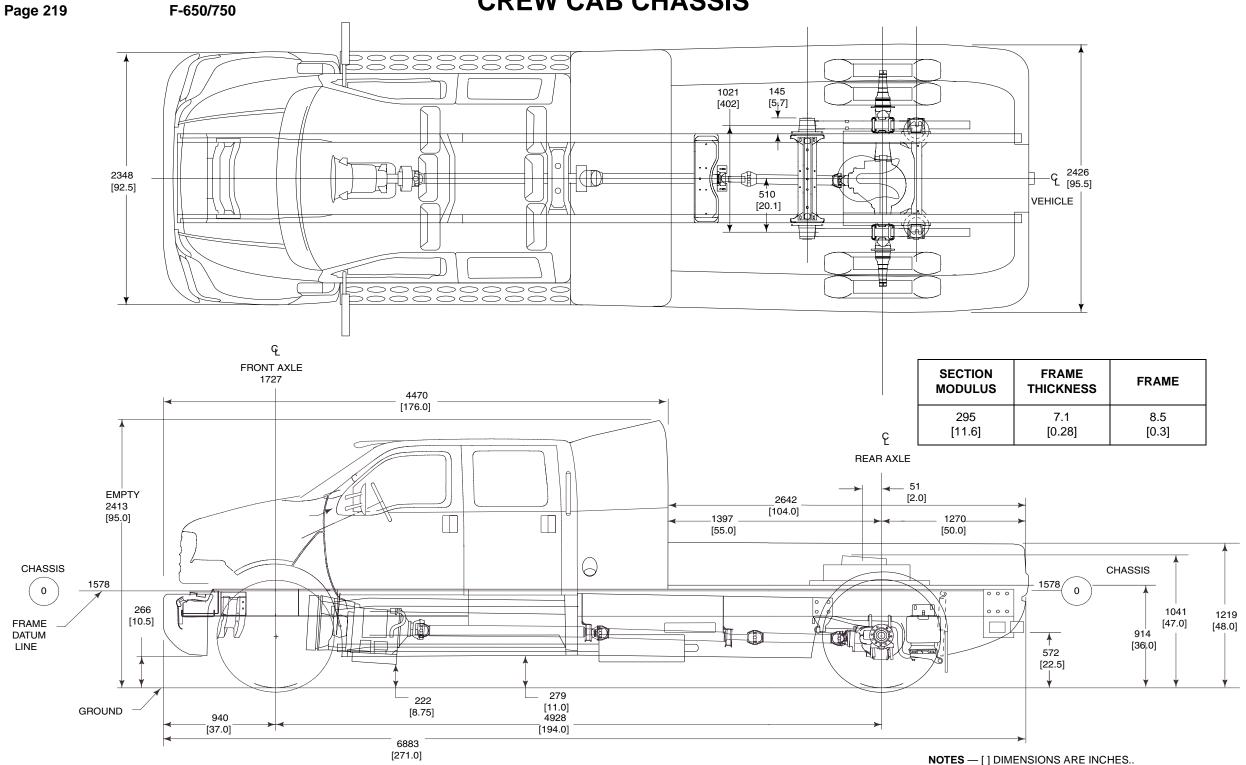



SUPER DUTY F-650/750 AIR TANK LOCATION


Page 220 F-650/750



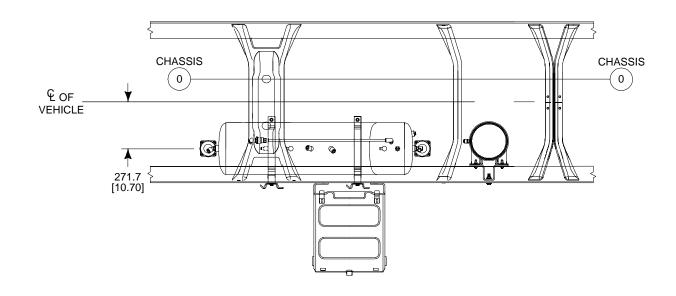

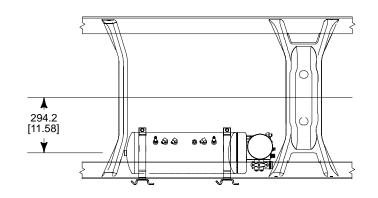

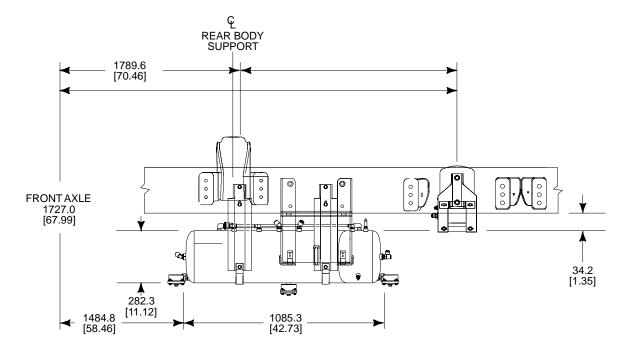

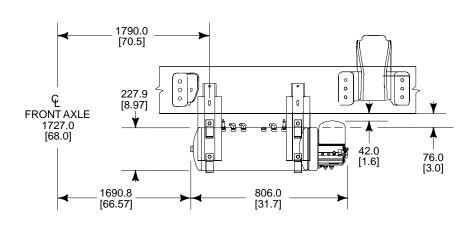


SUPER CREWZER ONLY

BB0505

SUPER DUTY F-650/750 BATTERY BOX LOCATION

2002 MODEL YEAR

Page 221 F-650/750

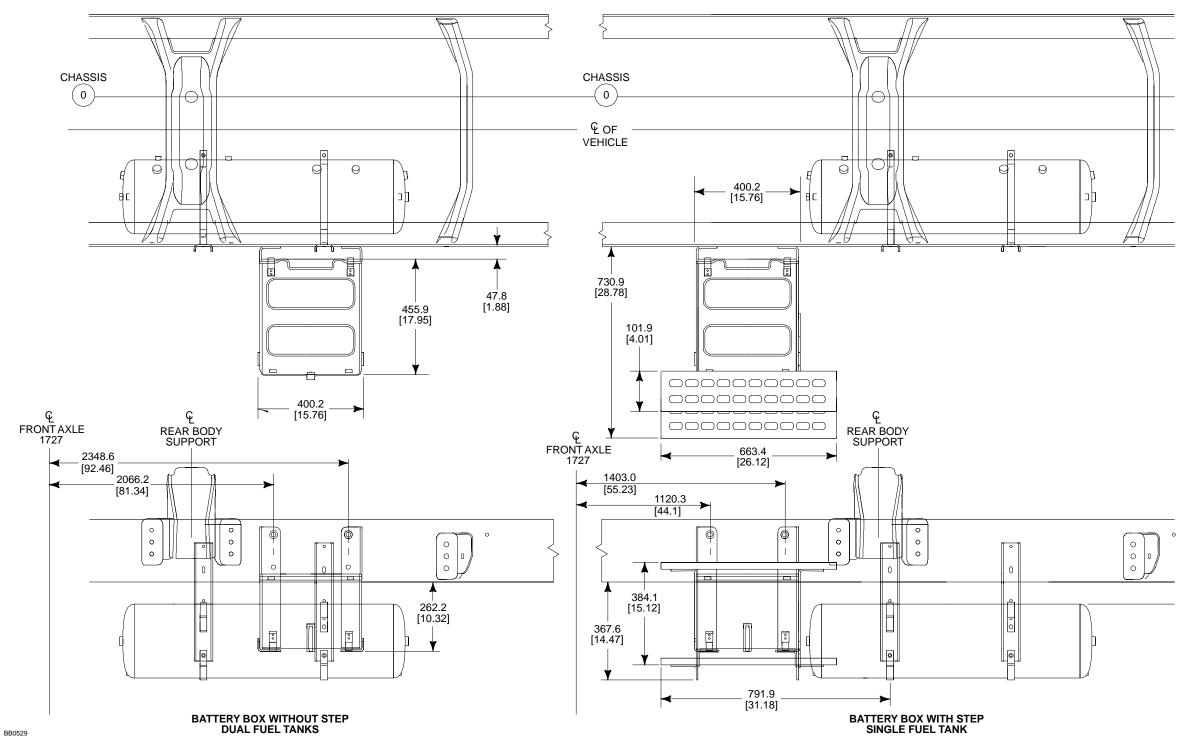



NOTES — FOR SAFETY/EMISSION NOTES AND DECALS, AND NOISE RESTRICTIONS, SEE THE SAFETY AND EMISSIONS SECTION — [] DIMENSIONS ARE INCHES

SUPER DUTY F-650/750 FUEL TANK LOCATION DATA

2002 MODEL YEAR

Page 222 F-650/750

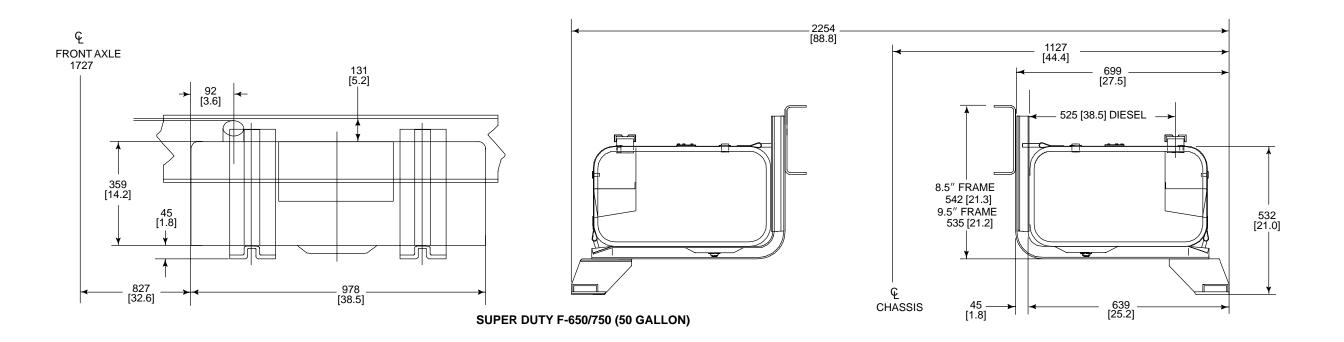

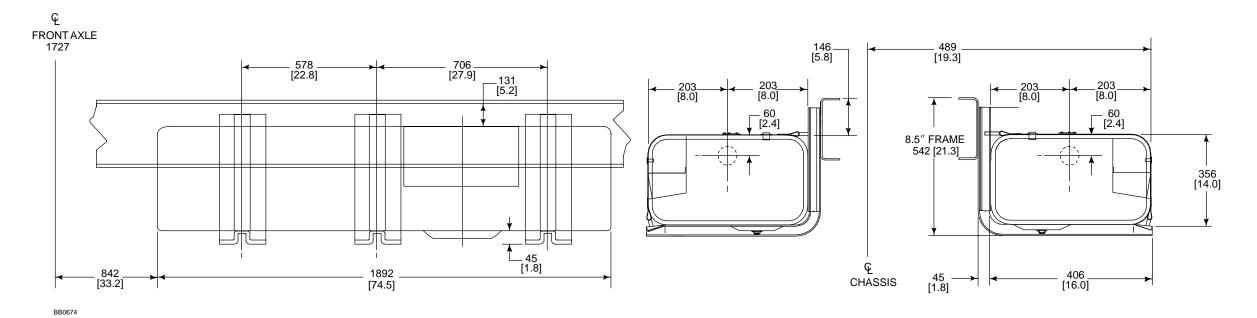


Page 223

F-650/750

SUPER DUTY F-650 SUPER CREWZER FRAME DATA 8K FRONT AXLE



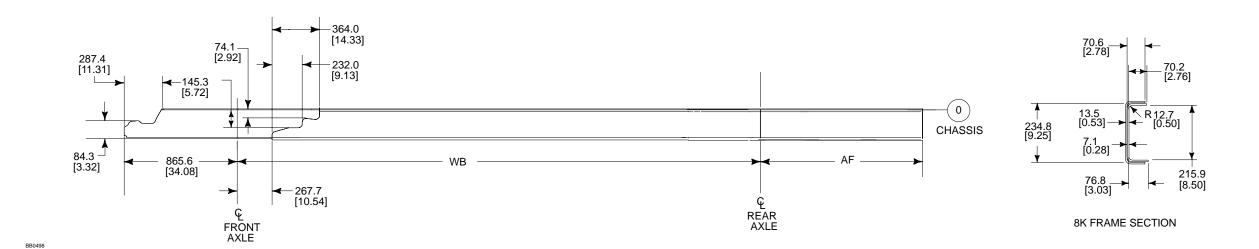

F650							
	w/8K F/A & 16K R/A						
SUPER CREWZER (CREW CAB)							
	WB	AF					
mm	[in]	mm	[in]				
4927.6	[194.0]	1854.2	[73.0]				

F650 SUPER CREWZER (CREW CAB)					
THICKNESS THICKNESS REINFORCEMENT SIDEMEMB			SECTION MODULUS	TYPE FRAME	
6.35	[.25"]	7.11	[.28"]	18.0	8.5"

FRAME MODIFICATION RECOMMENDATIONS

NO HOLES PERMITTED IN SIDE MEMBER FLANGES.

HOLES TO MOUNT BRACKETS, OUTRIGGERS AND SUPPORTS MAY BE DRILLED IN THE VERTICAL SIDE RAIL WEB WITH THE FOLLOWING RESTRICTIONS:

MATERIAL BETWEEN EDGE OF HOLE AND INSIDE OF UPPER OR LOWER FLANGE MUST NOT BE LESS THAN 2.00".

THE MINIMUM EDGE DISTANCE BETWEEN ANY TWO HOLES UP TO 5/8" IN DIAMETER MUST BE 1.00". FOR HOLES LARGER THAN 5/8" IN DIAMETER THE MINIMUM EDGE DISTANCE MUST BE 1.5 TIMES THE DIAMETER OF THE LARGEST HOLE.

NO HOLES TO EXCEED .75" IN DIAMETER.

ADDITION OF HOLES IN CROSSMEMBER IS NOT RECOMMENDED.


WELDING OF CROSSMEMBER IS NOT RECOMMENDED.

NO WELDING PERMITTED ON FRAME SIDE MEMBERS.

F-650/750

SUPER DUTY F-650/750 FRAME DATA 9K FRONT AXLE



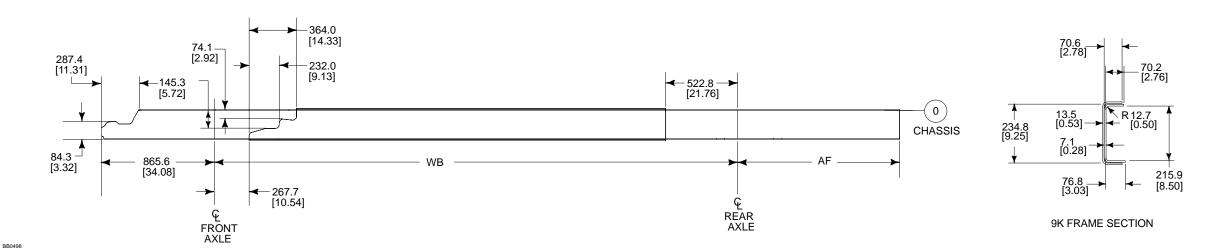

	F650/750										
	w/9K F/A & 17,500 & 21,000 R/A										
	REGULAR CAB SUPER CAB CREW CAB										
W	WB AF		AF		В	Α	F	WE	3	Α	\F
mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]
4013.2	[158.0]	1244.6	[49.0]	4546.6	[179.0]	1244.6	[49.0]	4927.6	[194.0]	1854.2	[73.0]
4622.8	[182.0]	1778.0	[70.0]	5461.0	[215.0]	1854.2	[73.0]	5842.0	[230.0]	2540.0	[100.0]
4927.6	[194.0]	1854.2	[73.0]	6604.0	[260.0]	3302.0	[130.0]	6604.0	[260.0]	3302.0	[130.0]
5842.0	[230.0]	2540.0	[100.0]	_	_	_	_	_	_	_	_
6604.0	[260.0]	3302.0	[130.0]	_	_	_	_	_	_	_	_

		F650					
	THICKNESS REINFORCEMENT		THICKNESS SIDEMEMBER		SECTION MODULUS	TYPE FRAME	
F650 REINFORCED	6.35 mm	[.25"]	7.11 mm	[.28"]	18.0	8.5"	
F650 NON-REINFORCED*	N/A	N/A	7.11 mm	[.28"]	10.2	8.5"	

^{*}REINFORCEMENT IS DELETED FOR 24.5K GVW FRAMES.

FRAME MODIFICATION RECOMMENDATIONS

NO HOLES PERMITTED IN SIDE MEMBER FLANGES.

HOLES TO MOUNT BRACKETS, OUTRIGGERS AND SUPPORTS MAY BE DRILLED IN THE VERTICAL SIDE RAIL WEB WITH THE FOLLOWING RESTRICTIONS:

MATERIAL BETWEEN EDGE OF HOLE AND INSIDE OF UPPER OR LOWER FLANGE MUST NOT BE LESS THAN 2.00".

THE MINIMUM EDGE DISTANCE BETWEEN ANY TWO HOLES UP TO 5/8" IN DIAMETER MUST BE 1.00". FOR HOLES LARGER THAN 5/8" IN DIAMETER THE MINIMUM EDGE DISTANCE MUST BE 1.5 TIMES THE DIAMETER OF THE LARGEST HOLE.

NO HOLES TO EXCEED .75" IN DIAMETER.

ADDITION OF HOLES IN CROSSMEMBER IS NOT RECOMMENDED.


WELDING OF CROSSMEMBER IS NOT RECOMMENDED.


NO WELDING PERMITTED ON FRAME SIDE MEMBERS.

F-650/750

SUPER DUTY F-650/750 FRAME DATA 12K FRONT AXLE



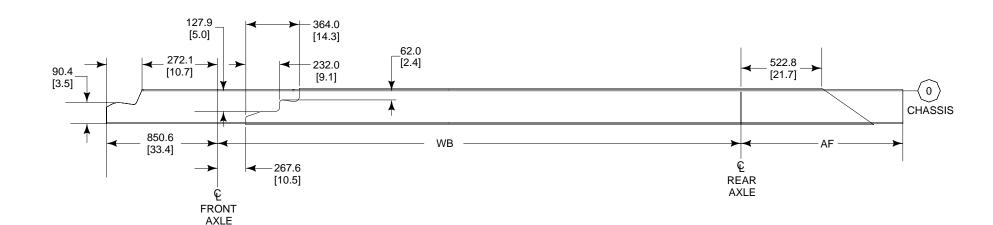

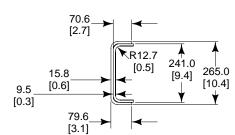

	F750										
	w/12K F/A & 21,000 & 23,000 R/A										
	REGUL	AR CAB			SUPE	R CAB			CREW	/ CAB	
W	В	А	F	WB AF		\F	W	/B	Α	\F	
mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]	mm	[in]
4013.2	[158.0]	1244.6	[49.0]	4546.6	[179.0]	1244.6	[49.0]	4927.6	[194.0]	1854.2	[73.0]
4622.8	[182.0]	1778.0	[70.0]	5461.0	[215.0]	1854.2	[73.0]	5842.0	[230.0]	2540.0	[100.0]
4927.6	[194.0]	1854.2	[73.0]	6604.0	[260.0]	3302.0	[130.0]	6604.0	[260.0]	3302.0	[130.0]
5842.0	[230.0]	2540.0	[100.0]	_	_	-	_	_	_	_	_
6604.0	[260.0]	3302.0	[130.0]	_	_	-	_	_	_	_	_

F-750						
THICKNESS REINFORCEMENT		THICKNESS SIDEMEMBER		SECTION MODULUS	TYPE FRAME	
		9.52	[.375"]	15.9	9.5"	
6.35	[.375"]	9.52	[.375"]	28.7	9.5"	

NOTE: Reinforcement available with all WB's 158" - 260"

FRAME MODIFICATION RECOMMENDATIONS

NO HOLES PERMITTED IN SIDE MEMBER FLANGES.

HOLES TO MOUNT BRACKETS, OUTRIGGERS AND SUPPORTS MAY BE DRILLED IN THE VERTICAL SIDE RAIL WEB WITH THE FOLLOWING RESTRICTIONS:

MATERIAL BETWEEN EDGE OF HOLE AND INSIDE OF UPPER OR LOWER FLANGE MUST NOT BE LESS THAN 2.00".

THE MINIMUM EDGE DISTANCE BETWEEN ANY TWO HOLES UP TO 5/8" IN DIAMETER MUST BE 1.00". FOR HOLES LARGER THAN 5/8" IN DIAMETER THE MINIMUM EDGE DISTANCE MUST BE 1.5 TIMES THE DIAMETER OF THELARGEST HOLE.

NO HOLES TO EXCEED .75" IN DIAMETER.

ADDITION OF HOLES IN CROSSMEMBER IS NOT RECOMMENDED.


WELDING OF CROSSMEMBER IS NOT RECOMMENDED.

NO WELDING PERMITTED ON FRAME SIDE MEMBERS.

SUPER DUTY F-650 SUPER CREWZER FRONT & REAR SUSPENSION CROSSMEMBER DATA 8K FRONT AXLE




Page 226 F-650/750

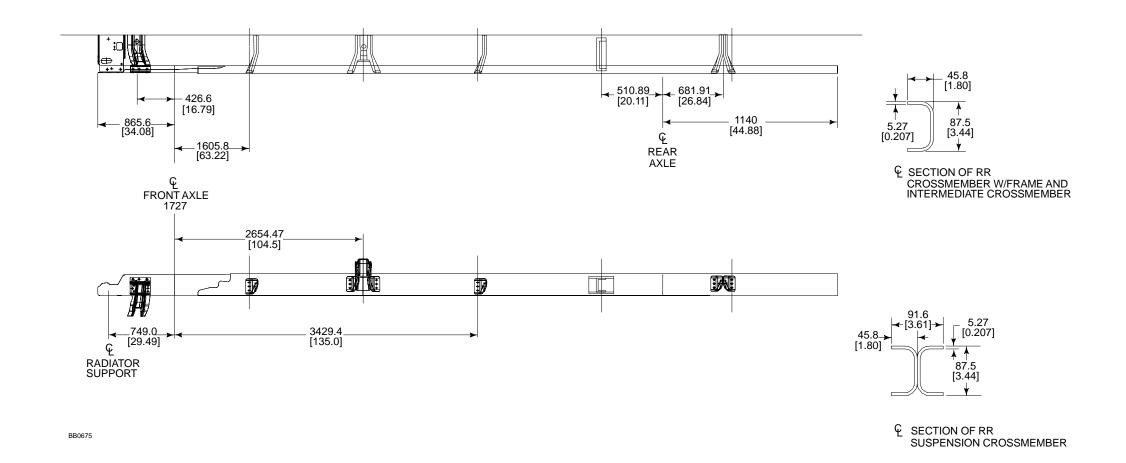

SUPER DUTY F-650/750 FRONT & REAR SUSPENSION CROSSMEMBER DATA 9K FRONT AXLE

2002 MODEL YEAR


Page 227 F-650/750

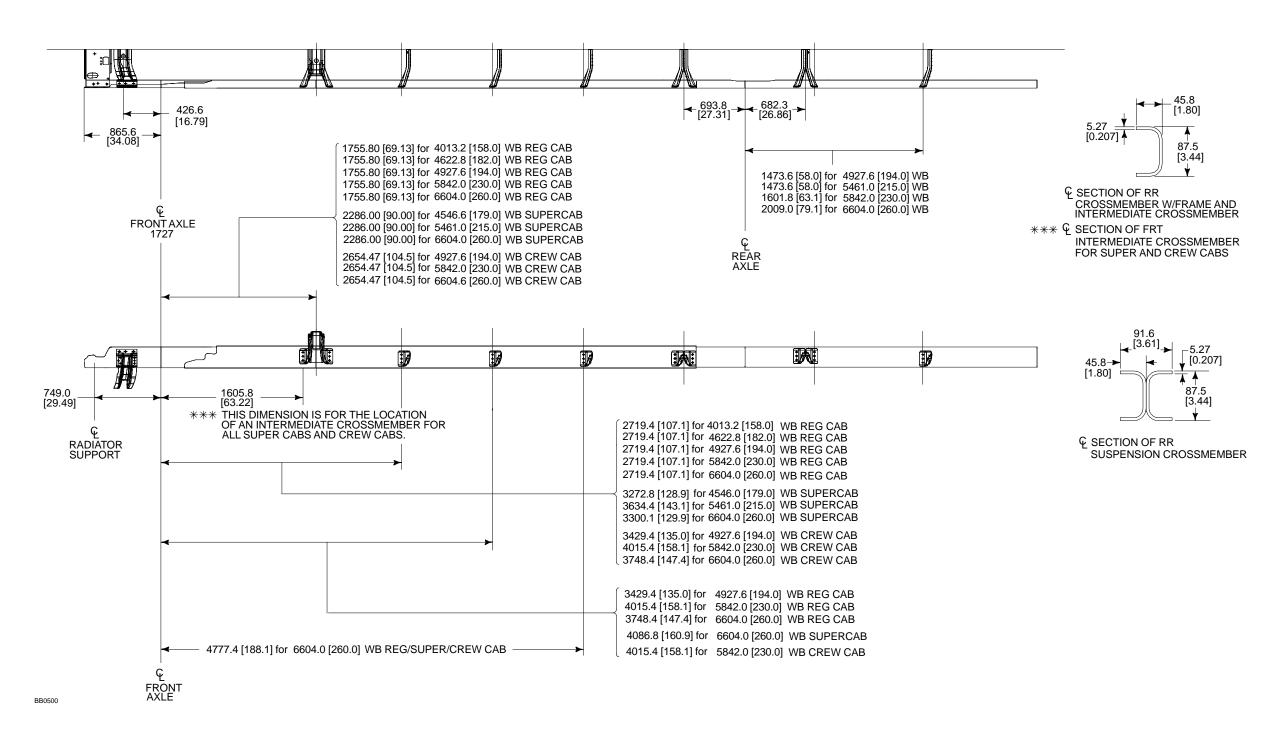

SUPER DUTY F-650/750 FRONT & REAR SUSPENSION CROSSMEMBER DATA 12K FRONT AXLE

2002 MODEL YEAR


Page 228 F-650/750

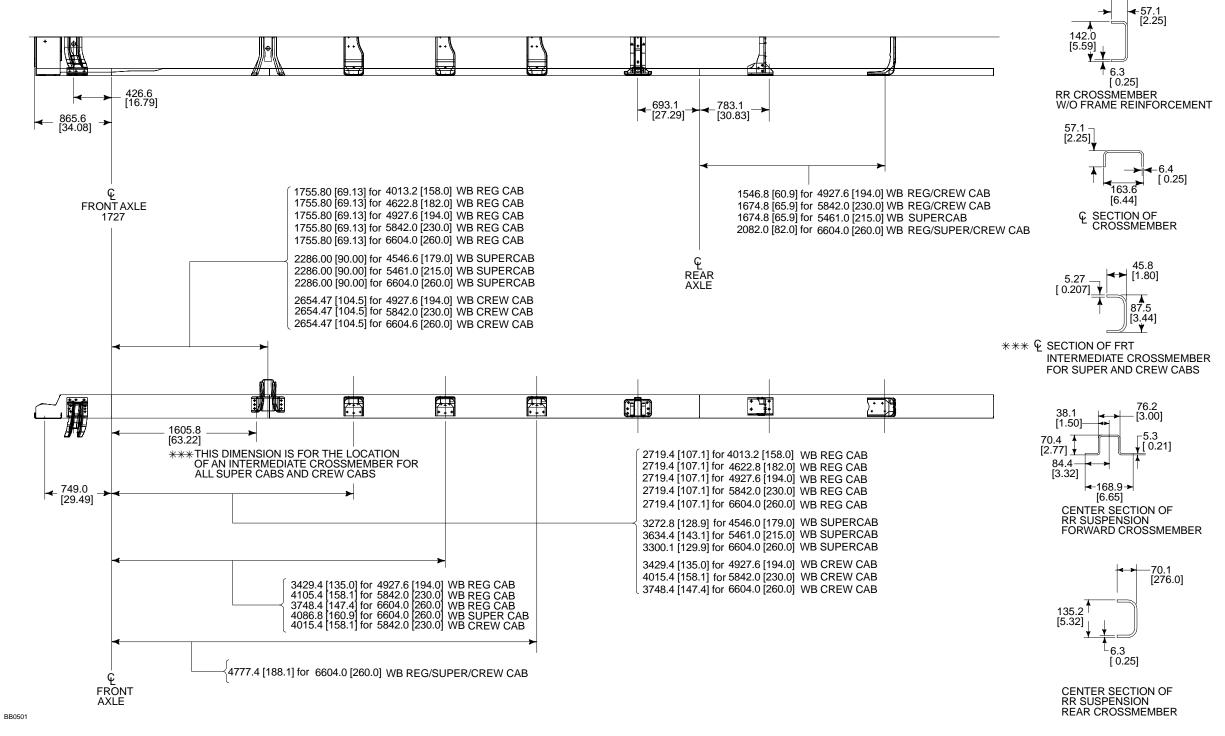

SUPER DUTY F-650/750 EXHAUST SYSTEM DATA CAT 3126B – DIESEL



Page 229 F-650/750

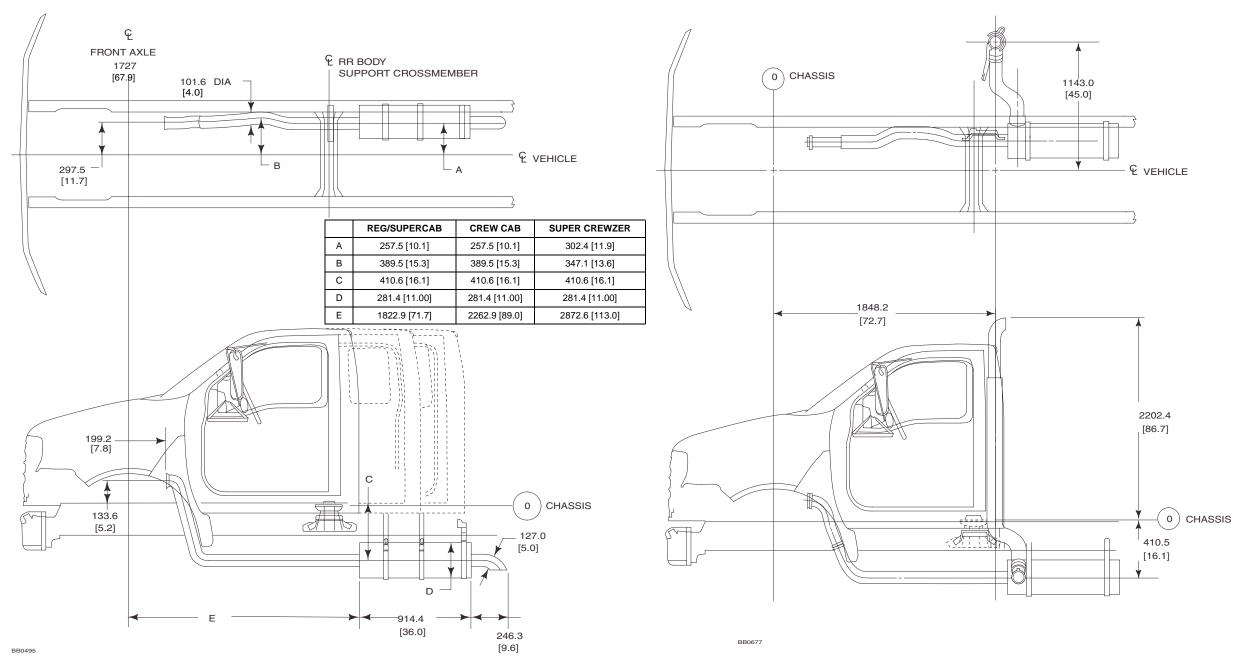


- NOTES OPTIONAL RIGHT HAND VERTICAL EXHAUST FOR REG. CAB ONLY WITH ALL ENGINE OPTIONS.
 - ALTERATIONS OF EXHAUST SYSTEM MAY REQUIRE EMISSIONS RECERTIFICATION AND NOISE TESTING TO DETERMINE COMPLIANCE TO FEDERAL AND/OR LOCAL EMISSIONS AND NOISE STANDARDS.
 - FOR SAFETY/EMISSION NOTES AND DECALS, AND NOISE RESTRICTIONS, SEE THE SAFETY AND EMISSIONS SECTION.
 - [] DIMENSIONS ARE INCHES

SUPER DUTY F-650/750 EXHAUST SYSTEM DATA CUMMINS 5.9L ISB – DIESEL

2002 MODEL YEAR

Page 230 F-650/750

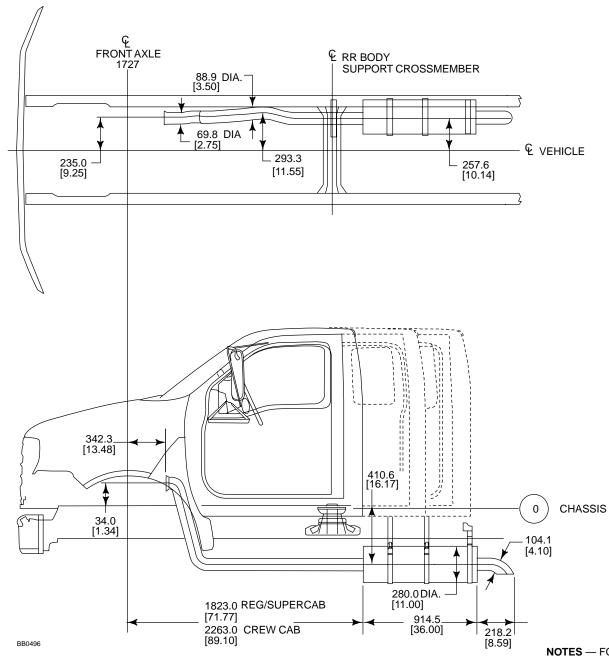


NOTES — FOR VERTICAL EXHAUST INFORMATION, SEE PAGE 229.

- ALTERATIONS OF EXHAUST SYSTEM MAY REQUIRE EMISSIONS RECERTIFICATION AND NOISE TESTING TO DETERMINE COMPLIANCE TO FEDERAL AND/OR LOCAL EMISSIONS AND NOISE STANDARDS.
- FOR SAFETY/EMISSION NOTES AND DECALS, AND NOISE RESTRICTIONS, SEE THE SAFETY AND EMISSIONS SECTION.
- [] DIMENSIONS ARE INCHES

SUPER DUTY F-650/750 EXHAUST SYSTEM DATA POWERSTROKE 7.3L ISB – DIESEL

2002 MODEL YEAR

Page 231 F-650/750

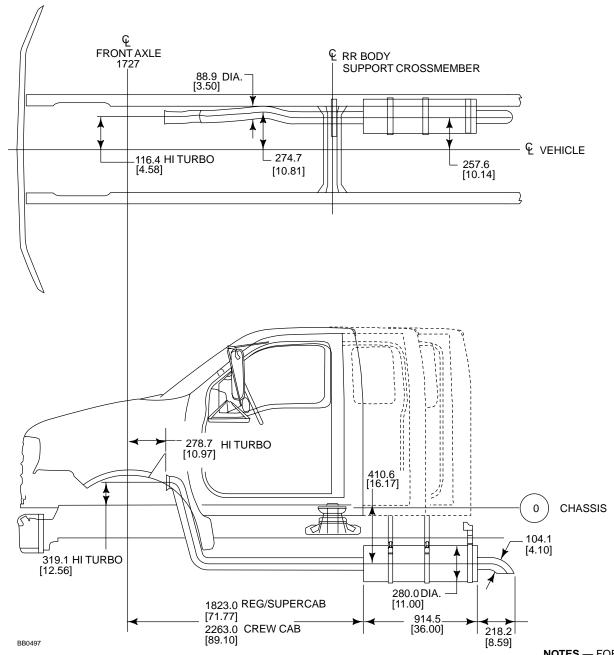

NOTES — FOR VERTICAL EXHAUST INFORMATION, SEE PAGE 229.


- ALTERATIONS OF EXHAUST SYSTEM MAY REQUIRE EMISSIONS RECERTIFICATION AND NOISE TESTING TO DETERMINE COMPLIANCE TO FEDERAL AND/OR LOCAL EMISSIONS AND NOISE STANDARDS.
- FOR SAFETY/EMISSION NOTES AND DECALS, AND NOISE RESTRICTIONS, SEE THE SAFETY AND EMISSIONS SECTION.
- [] DIMENSIONS ARE INCHES


SUPER DUTY F-650/750 FIXED GRILLE (FRONT PTO) INSTALLATION



Page 232

F-650/750

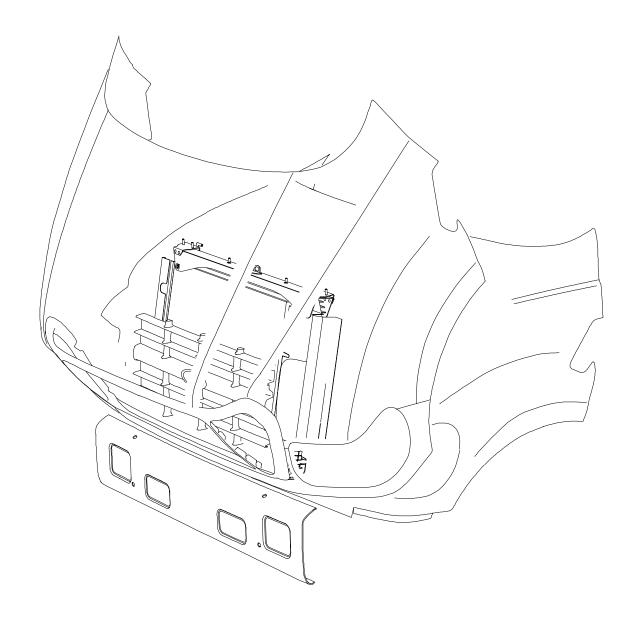

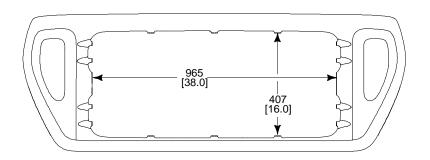


GRILLE OPENING DIMENSIONS FOR FRONT PTO INSTALLATIONS SEE PAGE 239

BB0556

Page 233

F-650/750

MAIN TRANSMISSION PTO							
		CENTERLINE OF U-JOINT					
ENGINE	MAIN TRANSMISSIONS	with air	· brakes	with hydraulic brakes			
		AA	ВА	AA	ВА		
	AT-545	269 [10.59]	1331 [52.39]	270 [10.62]	1341 [52.80]		
	A2000/2400	272 [10.70]	1336 [53.76]	272 [10.72]	1375 [54.12]		
	MD3000	281 [11.06]	1476 [58.13]	_	_		
CUMMINS ISB	FS-4205A	-	_	266 [10.46]	1290 [50.81]		
	FS-5406A	269 [10.59]	1330 [52.37]	276 [10.88]	1423 [56.01]		
	FS-6406A	271 [10.68]	1362 [53.62]	_	_		
	ES52-7B	286 [11.26]	1546 [60.86]	_	_		
	ES066-7B	286 [11.26]	1546 [60.86]	291 [11.46]	1608 [63.31]		
	AT-545	271 [10.66]	1355 [53.37]	272 [10.70]	1366 [53.77]		
	A2000/2400	274 [10.78]	1380 [54.34]	274 [10.81]	1389 [54.69]		
	MD3000	282 [11.10]	1492 [58.75]	_	_		
CAT 3126B	FS-5406A	270 [10.64]	1346 [52.99]	278 [10.93]	1438 [56.63]		
	FS-6406A	273 [10.74]	1377 [54.23]	-	_		
	ES52-7B	288 [11.33]	1561 [61.47]	_	_		
	ES066-7B	288 [11.33]	1561 [61.47]	293 [11.53]	1625 [63.97]		
	AT-545	233 [9.17]	1179 [46.44]	234 [9.20]	1190 [46.85]		
DOWED CTDOKE 7 C	FS-5202A	230 [9.05]	1142 [44.95]	235 [9.25]	1206 [47.50]		
POWERSTROKE 7.3L	FS-5406A	233 [9.17]	1180 [46.45]	240 [9.47]	1272 [50.08]		
	ES52-7B	250 [9.86]	1395 [54.93]	_	_		

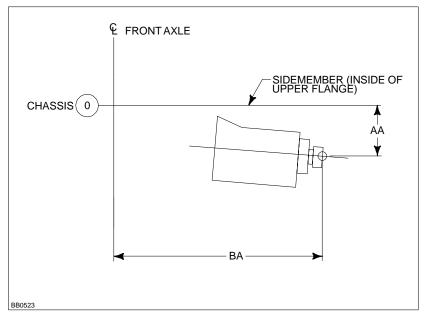

TYPICAL TRANSMISSION

Trans	U-Joint	Brakes	Cummins 5.9L	Navistar 7.3L	CAT 3126
AT-545	1550	Air	210 HP	210 HP	210 HP
		Hydraulic	210 HP	210 HP	210 HP
AT-2000/2400	1590	Air	225 HP		210 HP
		Hydraulic	225 HP		210 HP
	1610	Air	225 HP		210 HP
		Hydraulic	225 HP		210 HP
MD3060	1710	Air	225, 240, 245 HP		210, 230, 250 HP
MD3560	1710	Air	225, 240, 245 HP		210, 230, 250 HP
MD3066	1710	Hydraulic			300 HP
FS-4205	1550	Hydraulic	185 HP		
FS-5205	1590	Air		210 HP	
		Hydraulic		210 HP	
	1610	Air		210 HP	
		Hydraulic		210 HP	
FS-5406	1610	Air	185, 205, 225 HP	210 HP	190 HP
		Hydraulic	185, 205, 225 HP	210 HP	190 HP
FS-6406	1710	Air	225, 240, 245, 260 HP		210, 230, 250 HP
ES52-7B	1710	Air	205, 225 HP	210 HP	190 HP
ES066-7B	1710	Air	225, 240, 245, 260 HP		210, 230, 250 HP
	1610	Hydraulic	225, 240 HP		

SUPER DUTY F-650/750 TRANSMISSION PTO INFORMATION CUMMINS 5.9L, CAT 3126 AND POWERSTROKE 7.3L

2002 MODEL YEAR

Page 234

F-650/750

	OR RECOMMENDED OPENING	MAIN TRANS	MISSION PTO
LH	RH	ENGINE	MAIN TRANSMISSION
N/A	YES*		AT-545
YES	YES*		MD-3000
YES	YES	1	FS-4205A
YES	NO	CUMMINS 5.9L	FS-5306A
YES	YES		ES52-7B
YES	YES	1	ES066-7B
YES	YES*	1	ALLISON 2000/2400
N/A	YES*		AT-545
YES	NO		MD-3000
YES	YES		FS-5306A
YES	YES	CAT 3126B	FS-6306A
YES	YES		ES52-7B
YES	YES		ES066-7B
YES	YES*		ALLISON 2000/2400
N/A	YES**		AT-545
YES	YES	POWERSTROKE	FS-5205A
YES	YES	7.3L	FS-5306A
YES	YES		ES52-7B

NOTE

- CAT 3126 ENGINE € IS OFFSET 38.1 [1.5] FROM VEHICLE €
- FOR SPECIFIC RECOMMENDATIONS ON PTO TYPES SEE MUNCIE POWER PRODUCTS OR CHELSEA POWER PRODUCTS TO DETERMINE AVAILABILITY.

NOTE

- CERTAIN PTO'S DO NOT CONFORM TO RECOMMENDED S.A.E. ENVELOPES; THEREFORE, A "NO CLEARANCE" STATEMENT DOES NOT NECESSARILY PRECLUDE INSTALLATION OF ALL PTO'S.
- * ADAPTER MAY BE REQUIRED TO AVOID FRAME INTERFERENCE (PARTICULARLY WITH CAT ENGINE). TRANSMISSION OIL DIPSTICK MAY ALSO REQUIRE MODIFICATION.
- ** EXHAUST INTERFERENCE


N/A: PTO OPENING NOT AVAILABLE ON AT-545 TRANSMISSION.

SUPER DUTY F-650/750 POWER TAKE-OFF DATA




Page 235 F-650/750

BB0507

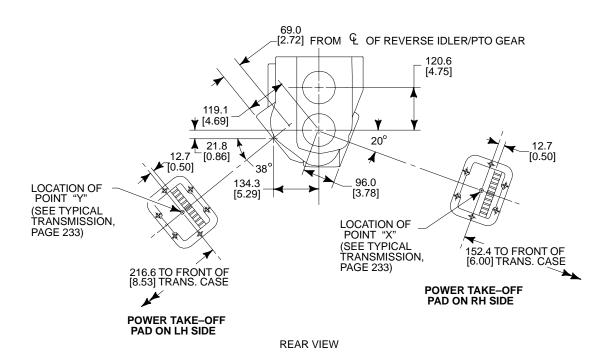

0545 5474	RIGHT SIDE	LEFT SIDE
GEAR DATA	FS-5205A	FS-5205A
Diametral Pitch	7.0	6.1
Pitch Diameter	5.4884	3.2880
Pressure Angle	25°	25°
Helix Angle R.H.	31°	19°
Number of Teeth	33	19
RPM @ 1000 RPM of Engine	460	435
Pitch Line Velocity @ 1000 R.P.M. Engine (ft/min)	674	371

5 SPEED EATON FS-5205 A

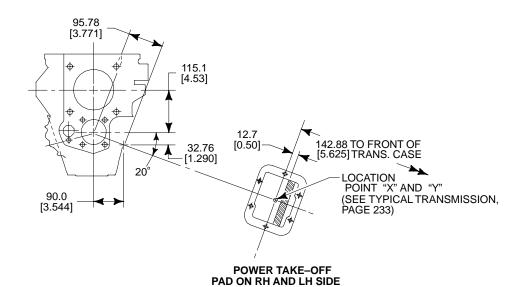

REAR VIEW	

5 SPEED EATON FS-4205 A


GEAR DATA	FS-4205A
Number of Teeth	28
Diametral Pitch	6.1
Pitch Diameter	5.248
Pressure Angle	20° 30′
Helix Angle R.H.	29°
RPM @ 1000 Engine RPM	459
Pitch Line Velocity @ 1000 R.P.M. Engine (ft/min)	650

SUPER DUTY F-650/750 POWER TAKE-OFF DATA




Page 236



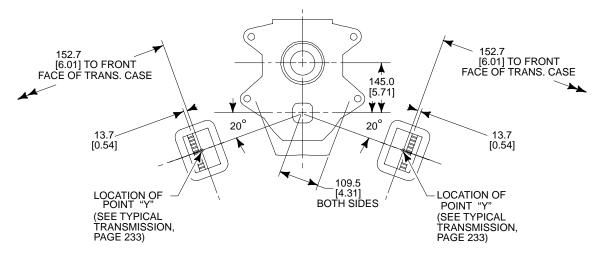

POWER TAKE-OFF PAD ON LH SIDE REAR VIEW POWER TAKE-OFF PAD ON RH SIDE

EATON TRANSMISSIONS 6 SPEED FS-5306A FS-6306A

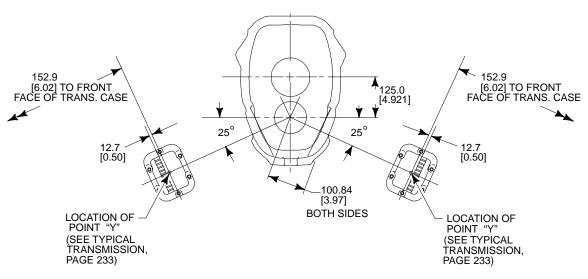

POWER TAKE-OFF PAD ON LH SIDE

BB0508

POWER TAKE-OFF PAD ON RH SIDE

REAR VIEW

SPICER TRANSMISSIONS 7 SPEED ES52-7B ESO66-7B

GEAR DATA	FS-5406A/FS-6406A
Number of Teeth	38
Diametral Pitch	6.35
Pitch Diameter	6.454
Pressure Angle	20°
Helix Angle R.H.	22° R.H.
RPM @ 1000 RPM of Engine	523
Pitch Line Velocity @ 1000 R.P.M. Engine (ft/min)	914


GEAR DATA	ES52-7B	ESO66-7B				
Number of Teeth	34					
Diametral Pitch	5.486	5.476				
Pitch Diameter	5.1071					
Pressure Angle	18°					
Helix Angle R.H.	18° R.H.					
RPM @ 1000 RPM of Engine	488	658				
Pitch Line Velocity @ 1000 R.P.M. Engine (ft/min)	652	880				

NOTE: THE INSTALLATION OF A TRANSMISSION SUPPORT IS REQUIRED WHEN A PTO IS INSTALLED ON A SPICER TRANSMISSION ES52–7B OR ES066–7B.

SUPER DUTY F-650/750 ALLISON TRANSMISSION 2000/2400

2002 MODEL YEAR


Page 237 F-650/750

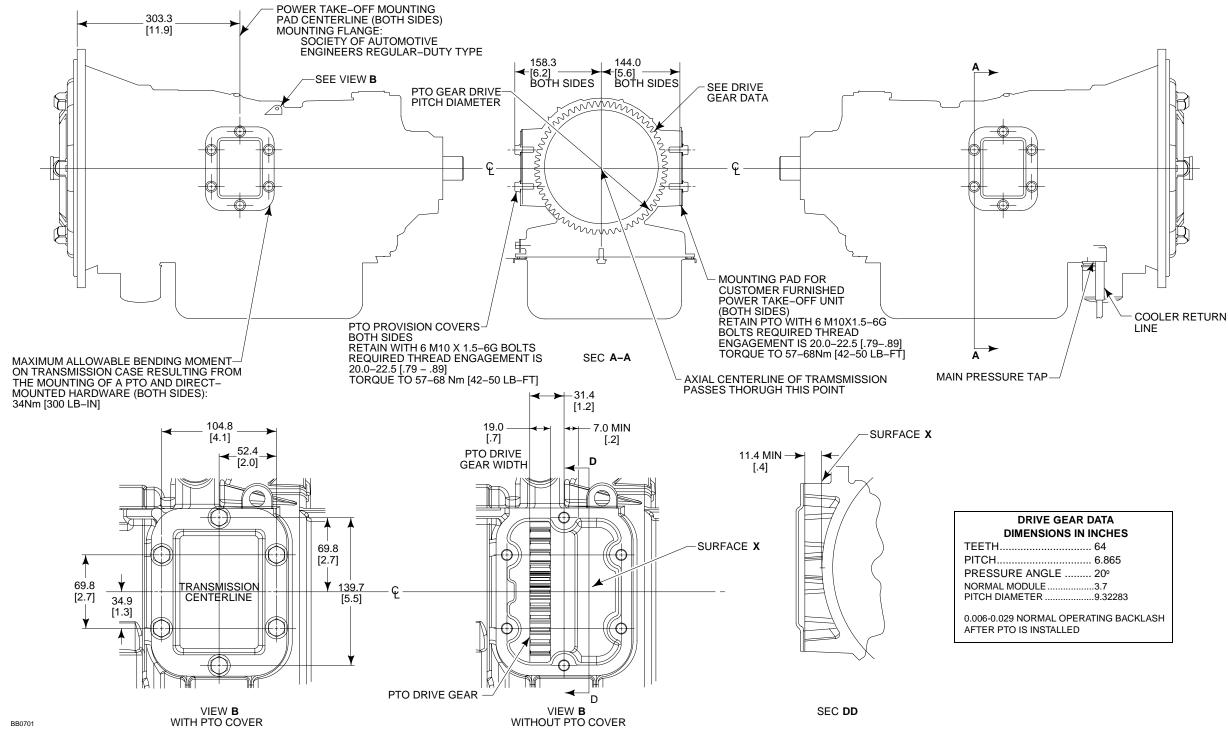

SUPER DUTY F-650/750 POWER TAKE-OFF DATA

Page 238 F-650/750




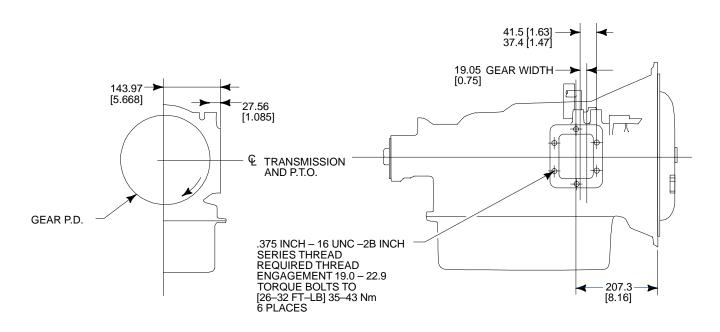

ALLISON AUTOMATIC TRANSMISSION 4 SPEED — AT-545

GEAR DATA	TOP-LEFT SIDE
Number of Teeth	55
Diametral Pitch	6
Pitch Diameter (P.D.)	9.1667
Pressure Angle	20°

BB0528

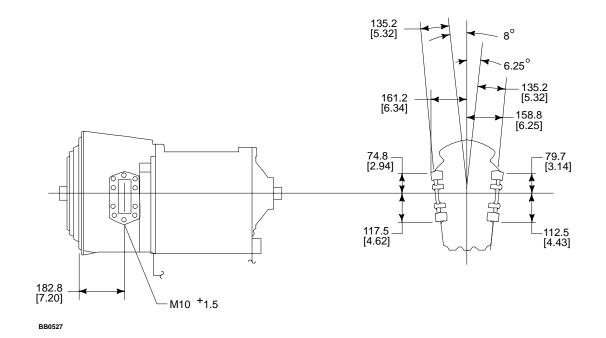

ALLISON AUTOMATIC TRANSMISSION

6 SPEED — MD-3060P MD-3560P MD-3066P

PTO'S AVAILABLE FOR HD AND MD TRANSMISSIONS										
PTO/TYPE	DUTY/TORQUE	MUNCIE NO.	CHELSEA NO.							
Medium Duty/Constant Drive	Intermittent Duty up to 335 lb-ft	CD-10	266							
Medium Duty/Clutch Drive	Intermittent Duty up to 335 lb-ft	CS-20	276							
Heavy Duty/Clutch Drive Intermittent Duty up to 575 lb-ft CS-10 856										

NOTE: MUNCIE POWER PRODUCTS ALSO SUPPLY A CONSTANT DRIVE P.T.O. MODEL CS10, CS20 & CD10 WITH DIRECT AND REMOTE PUMP OPTION FOR THE MD TRANSMISSION.


GEAR DATA IS NOT AVAILABLE PTO IS ENGINE DRIVEN CONTACT PTO MANUFACTURER FOR APPLICATION OF PTO UNITS

SUPER DUTY F-650/750 ENGINE POWER TAKE-OFF CRANKSHAFT DAMPER

Page 239


BB0558


F-650/750

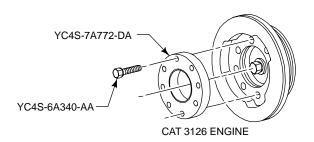


MAX. TORQUE REQUIREMENTS FOR PTO COMPONENTS DEPENDENT ON RATING OF SPECIFIC COMNPONENTS (FULL RATED ENGINE TORQUE AVAILABLE)

KIT - YC4S-7K793-DA (Caterpillar 3126)									
Part Number	Description	Quantity							
YC4S-7A772-DA	Adapter Plate	1							
YC4S-6A340-AA	M10-1.5x40 bolt	8							
SK YC4S-5N025-AA	Instruction Sheet	1							

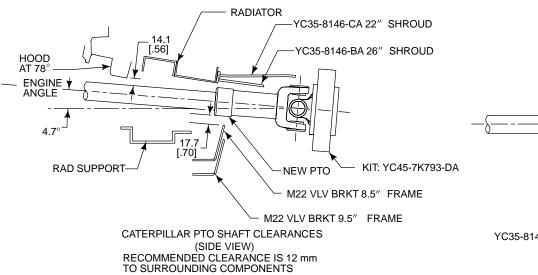


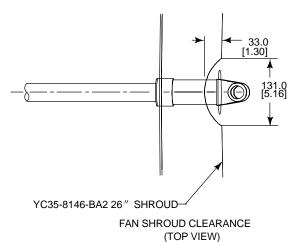

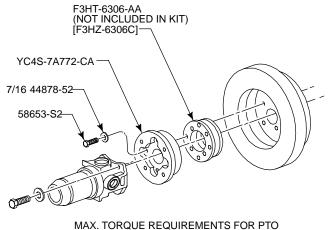


NOT TO EXCEED 210 FT LBS

KIT - YC4S-7K793-CA (Cummins ISB)								
Part Number	Description	Quantity						
YC4S-7A772-CA	Adapter Plate	1°						
58653-S2	7/16-14x1.00 bolt	4						
44878-S2	Washer	4						
SK YC4S-5N025-AA	Instruction Sheet	1						

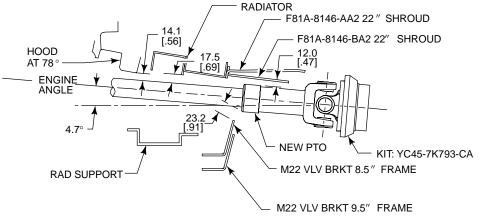

CATERPILLAR PTO SHAFT CLEARANCES (SIDE VIEW) RECOMMENDED CLEARANCE IS 12 mm TO SURROUNDING COMPONENTS

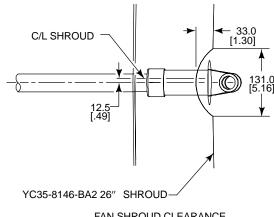

FAN SHROUD CLEARANCE

NOTES —

FRONT PTO IS NOT AVAILABLE ON NAVISTAR ENGINES. PTO SHAFT INSTALLTION NOTE: PTO SHAFT ANGLE IS TO BE A MINIMUM OF 2 DEGREES RELATIVE TO ENGINE ANGLE IN EITHER SIDE OR PLAN VIEWS.

[] DIMENSIONS ARE INCHES.

SUPER DUTY F-650/750 ELECTRICAL WIRING CUSTOMER ACCESS CIRCUIT INSTALLATION

2002 MODEL YEAR

Page 240 F-650/750

WIRING INSTALLATION GUIDELINES

Although there are many points in the truck electrical system to connect additional circuits, certain connection points are recommended for reliability and convenience. This section defines the recommended connection points for each Ford Truck model and the maximum electrical loads allowable. CAUTION: Improper electrical tie-ins may affect vehicle operation (i.e., engine transmission).

After all electrical or vehicle modifications, perform the on-board diagnostics procedures as described in the powertrain control/emissions diagnosis manual to clear all diagnostic trouble codes (DTC's). Road test vehicle and rerun the on-board diagnostics to verify that no DTC's are present. If DTC's are generated perform the appropriate diagnostic procedures and repairs. Vehicle operation (engine/transmission) may be affected if DTC's are not serviced.

Alternative connections or wiring practices are not recommended as certain modifications may result in other circuits becoming non-functional. Disconnect the battery negative (ground) cable and remove it from the battery carrier prior to any vehicle modification. Upon completion of body or equipment installation, all wiring should be checked for proper routing, etc. to preclude electrical shorts upon reinstallation of the battery negative cable.

Do not splice into the Powertrain System (EEC-V). Connecting to any component or wires or this system may adversely affect Engine/Transmission operation.

Listed below are recommended wiring installation guidelines.

- Most taps are fused, having locations under the instrument panel, in the engine compartment, and on the frame.
- The Ford starting and the charging system should not be altered.
- The completed vehicle total electrical load must not exceed the maximum output of the alternator.
- 4. Do not route or attach electrical wires to fuel lines.
- 5. Engine compartment wiring must not be rerouted in any manner.

- The electronic Powertrain Control Module (PCM)
 requires battery power to be supplied at all times so
 as to maintain the keep alive memory. Keep this in
 mind when installing load disconnect switches or
 solenoids.
- 7. The 7.3L diesel engine requires two batteries wired in parallel for proper starting operation and must not be isolated. Do not modify the Glow Plugs Power Circuit.
- Ford recommends that all additional under hood and underbody wiring:
- be cross-linked polyethylene, or equivalent, high temperature insulation wire 125°C [257°F] minimum rating.
- meet SAE specifications J1128 type SXL, GXL or TXI
- meet SAE J1127 type SGX or STX for battery cables.
- be protected with nylon convoluted tubing.
- be located so as to avoid or minimize restriction of airflow through the engine compartment, underbody and fuel system.
- be of sufficient length to be properly routed, so as not to interfere with operating zones of such components as throttle or transmission linkage.
- not be routed near the exhaust system or any other source of high heat; melted insulation can result in electrical shorts and system failure.
- be routed away from hostile surfaces and sharp edges and be secured in its intended location.
- be protected by rubber grommets when it passes through body or frame openings. Use customer access pass-thru circuits provided between cab and engine compartment and cab and frame (to avoid additional openings between passenger and engine compartments). Refer to page 243 Figure B and page 247 Figures A and B for additional information.
- be protected from electrical shorts by fuses or circuit breakers.
- use load distribution chart for air/hydraulic brake vehicles when determining wire length and gauge; charts shown on pages 241-242.

- Interior wiring not exposed to high temperatures may be SAE approved, general purpose wire.
- 10. Ground the second unit body to the frame in at least two locations, and if required, add an additional frame to engine ground cable to improve the ground path to the battery.
- 11. Splicing into circuitry relating to the powertrain control systems is not acceptable because of the adverse effect on the electronic system operation.
- 12. Before welding to the body or chassis, disconnect the batteries, ABS models, and PCM. Note that disconnecting the batteries will result in a memory loss on electronic engine/ transmission controlled vehicles. The vehicle will require several miles of driving in various driving modes to restore its memory and regain optimum operating conditions. This includes knowledge of PTO capability on the automatic transmissions with PTO opening.
- 13. Electrical connections exposed to the elements should be appropriately protected.
- 14. Do not ground the body to the transmission or transmission crossmember.
- 15. Ignition circuit of any engine should not be altered.
- Alternator circuit wiring must not be altered by cutting, soldering, or splicing.
- 17. Aero type headlamps are plastic and have protective coatings which can be damaged by solvents or tape. Refer to the *Owner Guide* for proper cleaning procedures.
- 18. Added wiring must have sufficient electrical capacity for the accessory load and must be protected by appropriate fuse or circuit breaker. The current draw must not cause the total loads to exceed capabilities of the base vehicle wiring.

RADIO FREQUENCY INTERFERENCE (RFI)

During modifications to the vehicle, manufacturers, service technicians, owners and users should take the necessary precautions to maintain the RFI integrity of components. (Both the United States and Canada have RFI regulation in effect). Precautionary procedures and components listed below are examples and do not necessarily represent a complete list.

- All components required to suppress RFI emissions, which are removed during service, repair, or completion of the vehicle, must be reinstalled in the manner in which they were installed by Ford.
- Do not modify or change any RF device in a manner not expressly approved by Ford Motor Company.
- Shields on distributor and ignition coil must remain installed.
- Replacement spark plugs, ignition wires, ignition coils, distributor caps and distributor rotor must be equivalent in their RFI suppression properties to original equipment.
- 5. Electrical grounds on all components must be retained.
- 6. Metallic components installed on the body or chassis must be grounded to the chassis.
- 7. Electrical circuits added to the vehicle should not be installed near the high tension ignition components.
- Only "static conductive" accessory drive belts should be used.
- Fan, water pump, power steering and other belts should be of the OEM type or equivalent that will not build up a static electrical charge.
- 10. For any completed vehicle, additional measures may be needed to adequately suppress RFI emissions.

Page 241 F-650/750

SUPER DUTY F-650/750 BODY BUILDER LOAD DISTRIBUTION



AIR BRAKE VEHICLES

			Max							Recommended Maximum Wire Length											
Circuit Description	Location	Fuse Size (Amps)	Fuse Load by	Туре	Harness	Circuit #	Circuit Color	Circuit Gauge	Recommended Insulation	10 G (Me	auge ters)	12 Ga (Met	auge ters)	14 G (Me	•	16 Ga (Met	_	18 Ga (Met	_	20 Ga (Mete	_
			Body Builder							XLPE	PVC	XLPE	PVE	XLPE	PVC	XLPE	PVC	XLPE	PVC	XLPE	PVC
Park Lamps	PDB #111	30	21	Maxifuse	14A341	962	BR-W	14	XLPE	9.588	9.588	5.995	5.995	3.804	3.804	NR	NR	NR	NR	NR	NR
Backup Lamps	PDB #116	30	10*	Maxifuse	14A341	963	BK-LG	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
Stop Lamps	PDB #116	30	10*	Maxifuse	14A341	123	R	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
LH Stop/Turn	PDB #116	30	10*	Maxifuse	14A341	52	Υ	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
RH Stop/Turn	PDB #116	30	10*	Maxifuse	14A341	64	DG	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
Accessory Feed #1 (Run Only)	PDB #102	20	13	Maxifuse	14401	730	GY-LB	14	PVC	29.766	29.766	18.610	18.610	11.810	11.810	7.283	7.283	4.834	4.834	3.009	NR

^{*} Sum of loads for Backup, Stop, LH Stop/Turn, RH Stop/Turn lamps not to exceed 21 amps.

NR (Not Recommended) - Do not use, wire gauge is not intended for this application.

Page 242 F-650/750

SUPER DUTY F-650/750 BODY BUILDER LOAD DISTRIBUTION



HYDRAULIC BRAKE VEHICLES

			Max										R	ecommend	ded Maxim	num Wire	Length				
Circuit Description	Location	Fuse Size (Amps)	Fuse Load by	Туре	Harness	Circuit #	Circuit Color	Circuit Gauge	Recommended Insulation	10 Ga (Me	auge ters)	12 Ga (Met		14 Ga (Met	auge ers)	16 Ga (Met	•	18 Ga (Met	_	20 Ga (Me	auge ters)
		(, ,	Body Builder							XLPE	PVC	XLPE	PVE	XLPE	PVC	XLPE	PVC	XLPE	PVC	XLPE	PVC
Park Lamps	PDB #111	30	21	Maxifuse	14A341	962	BR-W	14	XLPE	9.588	9.588	5.995	5.995	3.804	3.804	NR	NR	NR	NR	NR	NR
Backup Lamps	PDB #116	30	10*	Maxifuse	14A341	963	BK-LG	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
Stop Lamps	PDB #15	7.5	5.5*	Maxifuse	14A341	123	R	16	XLPE	274.278	274.278	171.482	171.482	108.822	108.822	67.107	67.107	44.540	44.540	27.730	27.730
LH Stop/Turn	PDB #116	30	10*	Maxifuse	14A341	52	Υ	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
RH Stop/Turn	PDB #116	30	10*	Maxifuse	14A341	64	DG	16	XLPE	9.084	9.084	5.680	5.680	3.604	3.604	NR	NR	NR	NR	NR	NR
Accessory Feed #1 (Run Only)	PDB #102	20	13	Maxifuse	14401	730	GY-LB	14	PVC	29.766	29.766	18.610	18.610	11.810	11.810	7.283	7.283	4.834	4.834	3.009	NR

^{*} Sum of loads for Backup, Stop, LH Stop/Turn, RH Stop/Turn lamps not to exceed 21 amps.

NR (Not Recommended) - Do not use, wire gauge is not intended for this application.

SUPER DUTY F-650/750 ELECTRICAL WIRING CUSTOMER ACCESS CIRCUIT INSTALLATION



Page 243 F-650/750

PTO/Dash Panel Pass Thru/Vehicle Speed/Run

There are three customer access locations under the IP. The customer access circuits are blunt cut and the ends are protected with heat shrink tubing. The circuits are secured together with white tape.

The first customer access circuit location is in the right hand kick panel (Cat 3126 and Cummins ISB engines only). The circuits interface with the engine electronic control module. The circuit bundle is labeled "Diagnostic Access".

Figure A shows the location of the takeout and a table which defines each circuits function, wire gage and color.

The second customer access circuit location is adjacent to the OBDII diagnostic connector in the center of the instrument panel; the circuit bundle is labeled "Customer Access".

The bundle contains:

- six dash panel pass-thru circuits
- vehicle speed
- a dedicated run feed

Figure B shows the location of the takeout and a table which defines each circuits function, wire gage and color.

Of the six dash panel pass-thru circuits, four are located in the engine compartment and two are located on the left hand frame rail.

The vehicle speed output is configured to 30,000 pulses/mile.

The dedicated run only feed is fused in the Power Distribution Box (PDB) #102 by 20A. Figure C is a schematic of the circuit.


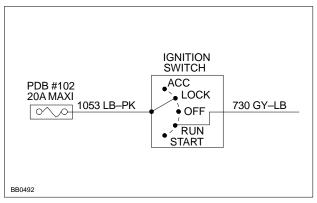


FIGURE C

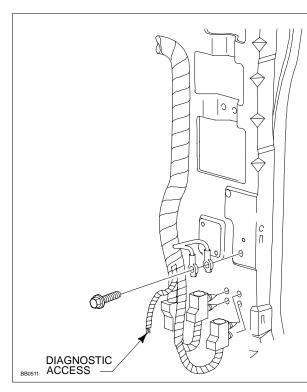


POWERTRAIN CUSTOMER ACCESS

ENGINE	PIN# AT ENGINE ECU	CIRCUIT NUMBER	COLOR CODE	WIRE GAGE	FUNCTIONAL DESCRIPTION
CAT 3126	56	900	BK	18	PTO on/off switch
	58	921	GY-O	18	PTO set/resume
	60	922	W-R	18	PTO set/resume
	3	766	BK-LG	18	PTO sensor common
	30	80	BK-O	18	PTO mode lamp
	68	1283	T-Y	18	PTO remote accelerator position input
	40	312	O-W	18	Fast idle enable switch
CUMMINS ISB	7	848	DG-O	18	Cruise and PTO resume/accel switch
	13	154	P-LG	18	Cruise and PTO set/coast switch
	14	151	LB-BK	18	Cruise and PTO on/off switch

DASH PANEL PASS-THRU CIRCUITS

	· .	
CIRCUIT NUMBER	COLOR CODE	WIRE GAGE
838	LG-P	14
839	LG-W	14
845	T-BK	14
870	PK-Y	14

FIGURE A

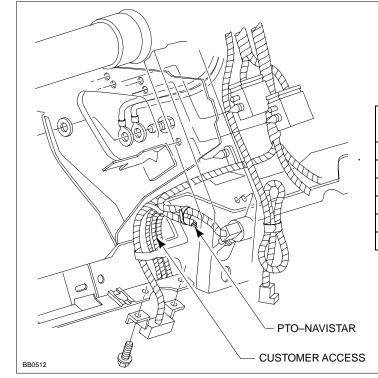

CIRCUIT NUMBER	COLOR CODE	WIRE GAGE	FUNCTIONAL DESCRIPTION
43	DB	14	Dash panel pass thru- LH frame
49	0	14	Dash panel pass thru - LH frame
838	LG-P	14	Dash panel pass thru - engine compartment
839	LG-W	14	Dash panel pass thru - engine compartment
845	T-BK	14	Dash panel pass thru - engine compartment
870	P-Y	14	Dash panel pass thru - engine compartment

FIGURE B

SUPER DUTY F-650/750 ELECTRICAL WIRING CUSTOMER ACCESS CIRCUIT INSTALLATION

2002 MODEL YEAR

Page 244 F-650/750

PTO/Dash Panel Pass Thru/Vehicle Speed/Run (Continued)


The third customer access circuit location is for the Navistar 7.3L engine. A single circuit is secured to the APCM connector takeout. Figure B on page 243 shows the location of the circuit. The circuit function supports integration of a power-take-off (PTO) on/off switch. The PTO supplier must complete a PTO circuit as shown in Figure A. Failure to complete this circuit may result in erroneous emission codes and inadvertent illumination of the "Service Engine Soon" light during PTO operation. In electrically actuated PTO systems, circuit 322 must be isolated from the solenoid or PCM damage may result.

Allison WTEC III Transmission

The customer access circuits for the Allison WTEC III transmission are located within the floor mounted shift selector pedestal. The circuits are housed in a standard 16-way connector. Figure B shows the pinout configuration of the 16-way connector.

Figure C shows the location of the takeout and a table which defines each circuits function, wire gage and color.

Refer to the Allison WTEC III Controls Trouble Shooting Guide, Appendix P for system wiring configuration.

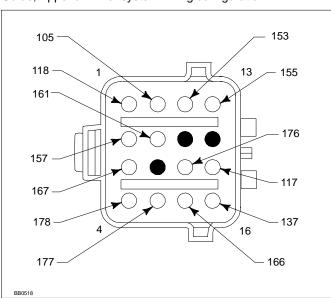


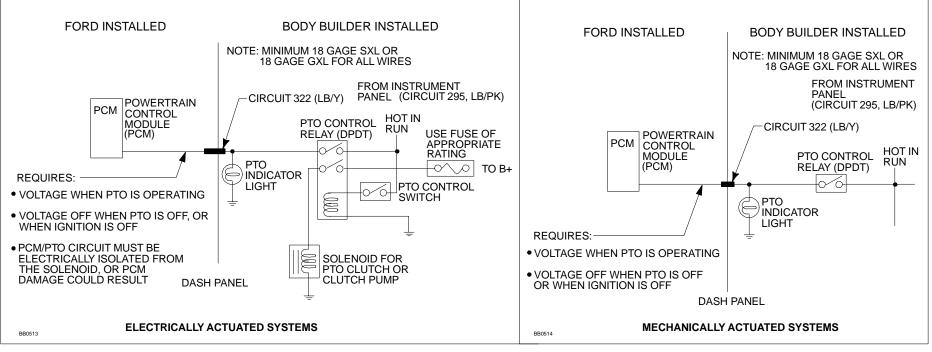


FIGURE A

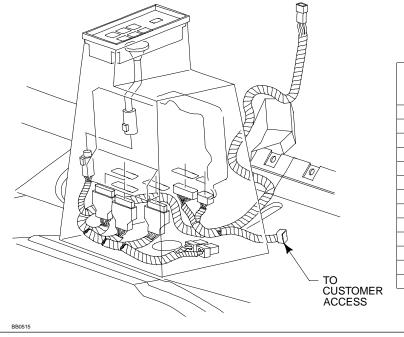

GROUP 70 PACKAGE 113 - MD TRANSMISSIONS - WORLDWIDE

CIRCUIT NUMBER	COLOR CODE	WIRE GAUGE	FUNCTIONAL DESCRIPTION
155	GY-R	18	Aux. function range inhibit
153	P–Y	18	Secondary shift schedule
118	PK-O	18	PTO enable
105	R-W	18	Sump/retarder temp indicator
161	DG-O	18	Digital ground
117	PK-BK	18	Automatic neutral for PTO
178	DG-O	18	Not applicable
177	W	18	Not applicable
137	Y-BK	18	Not applicable
167	BR-O	18	Output speed indicator A
176	PK-LG	18	Not applicable
166	W-O	18	Not applicable
157	PK-LB	18	Vehicle speed
	NUMBER 155 153 118 105 161 117 178 177 137 167 176 166	NUMBER CODE 155 GY-R 153 P-Y 118 PK-O 105 R-W 161 DG-O 117 PK-BK 178 DG-O 177 W 137 Y-BK 167 BR-O 176 PK-LG 166 W-O	NUMBER CODE GAUGE 155 GY-R 18 153 P-Y 18 118 PK-O 18 105 R-W 18 161 DG-O 18 117 PK-BK 18 178 DG-O 18 177 W 18 137 Y-BK 18 167 BR-O 18 176 PK-LG 18 166 W-O 18

FIGURE B FIGURE C

SUPER DUTY F-650/750 POWER TAKE-OFF HIGH IDLE CONTROL



Page 245 F-650/750

AUXILIARY POWERTRAIN CONTROL MODULE (APCM)

Application

Navistar 7.3L Diesel Engine Power Stroke

Installation

- Reference Figure A for installation. Detailed instructions (12B639) included with kit (12B641).
- The APCM connector (Connector C249) is located under center instrument panel. Figure B shows pin-out.

Basic Operation

- The APCM provides a method of elevating engine idle speed in stationary applications.
- Charge Protection mode maintains battery voltage under high electrical loads.
- RPM Control mode includes four (4) programmable presets and the ability to manually adjust the idle speed.
- Reference Figure C for APCM key pad function.
- The tables shown below describe the inputs required to enable or disable the APCM.

APCM Enabling Inputs

(all are required)

	Condition	Circuit Index	Circuit #	Voltage	Comments
1	Parking brake set	PBA	162	Ground	Parking Brake Applied Switch
2	Service brake off	ВОО	810	Open (Air Brake) Ground (Hydraulic Brake)	Brake On/Off Switch
3	Foot off clutch (manual trans.)	CPP	306	12v	Clutch Pedal Position Switch
4	Foot off accelerator pedal	AP	355	0.5v	Accelerator Pedal Sensor
5	Vehicle speed is 0 mph	VSS +	679	freq. signal	Vehicle Speed Signal
6	Brake lights are functional				

APCM Disabling Inputs

(any one is required)

	Condition	Circuit Index	Circuit #	Voltage	Comments
1	Disengage parking brake	PBA	162	Open	Parking Brake Applied Switch
2	Depress service brake	воо	810	12v	Brake On/Off Switch
3	Depress clutch (manual trans.)	CPP	306	Open	Clutch Pedal Position Switch
4	Disconnect brake lights				
5	Vehicle speed > 0	VSST	679	freq. signal	Vehicle Speed Signal

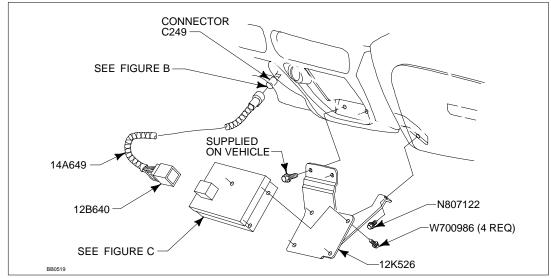


FIGURE A


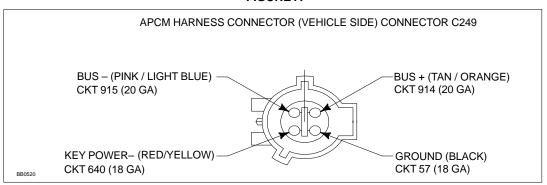


FIGURE B

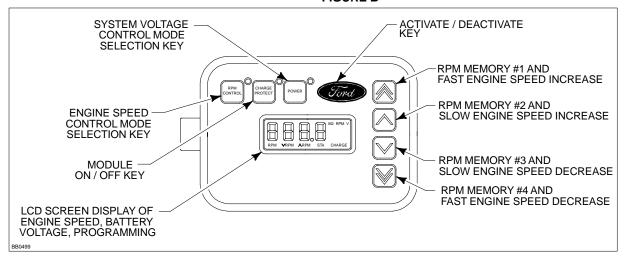


Page 246

F-650/750

SUPER DUTY F-650/750 ELECTRICAL WIRING ALLISON 2000/2400 TRANSMISSION



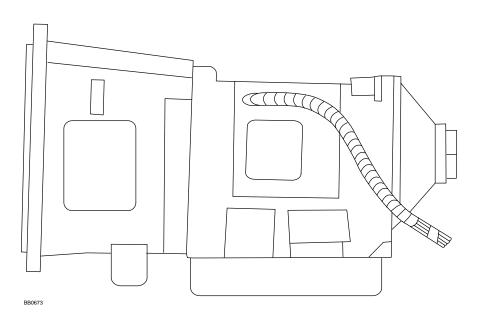

ALLISON 2000/2400 TRANSMISSION

PIN # AT TRANSMISSION ECU	CIRCUIT NUMBER	COLOR CODE	WIRE GAUGE	FUNCTIONAL DESCRIPTION
J1-6	106	LB	18	PTO Enable Input
J1-7	107	Р	18	Exhaust Engine Brake Input
J1-8	108	BR-LB	18	Automatic Neutral for PTO
J1-10	110	W-LG	18	Secondary Shift Schedule
J1-11	111	BK-O	18	Aux. Function Range Inhibit
J1-19	119	PK-Y	18	PTO Enable Output
J1-20	120	PK-LG	18	Exhaust Engine Brake Output
J1-21	121	Y-BK	18	Range Indicator
J1-22	122	Y	18	Output Speed Indicator
J1-28	128	P-Y	18	Signal Return

SUPER DUTY F-650/750 ELECTRICAL WIRING CUSTOMER ACCESS CIRCUIT INSTALLATION

2002 MODEL YEAR

Page 247 F-650/750


POWERTRAIN/DASH PANEL PASS-THRU

The Engine Compartment has two takeouts for customer access which are near the power distribution box. Figure A shows the location of each takeout and a table which defines each circuits function, wire gage and color.

All Customer Access Circuits are blunt cut and the ends are protected with heat shrink tubing.

One Customer Access Takeout supports the dash panel pass-thru circuits. The other takeout supports engine electronic control module features (CAT 3126 and Cummins ISB engines only).

Refer to the Cummins ISB or Cat 3126 Applications and Installation Guide for wiring schematic configuration.

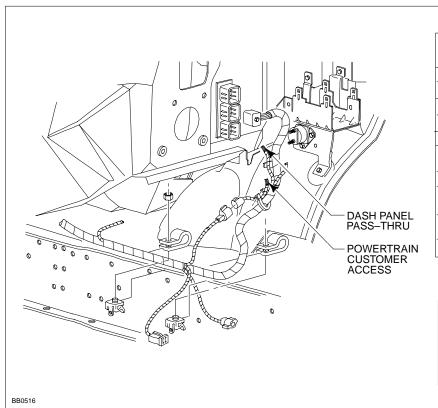


POWERTRAIN CUSTOMER ACCESS												
ENGINE	PIN# AT ENGINE ECU	CIRCUIT NUMBER	COLOR CODE	WIRE GAGE	FUNCTIONAL DESCRIPTION							
CAT 3126	56	900	BK	18	PTO on/off switch							
	58	921	GY-O	18	PTO set/off switch							
	60	922	W-R	18	PTO resume/off switch							
	3	766	BK-LG	18	PTO sensor common							
	30	80	BK-O	18	PTO mode lamp							
	68	1283	T-Y	18	PTO remote accelerator position input							
	40	312	O-W	18	Fast idle enable switch							
CUMMINS ISB	7	848	DG-O	18	Cruise and PTO resume/accel switch							
	13	154	P-LG	18	Cruise and PTO set/coast switch							
	14	151	LB-BK	18	Cruise and PTO on/off switch							

DASH PANEL PASS-THRU CIRCUITS

CIRCUIT NUMBER	COLOR CODE	WIRE GAGE
838	LG-P	14
839	LG-W	14
845	T-BK	14
870	PK-Y	14

FIGURE A

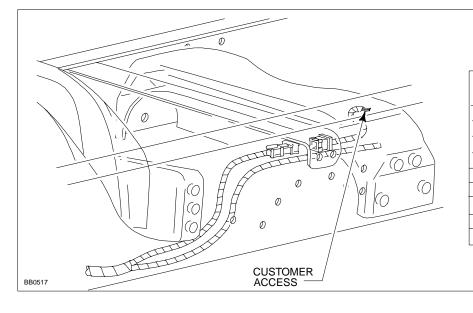

CIRCUIT NUMBER	COLOR CODE	WIRE GAGE	FUNCTIONAL DESCRIPTION
123	R	14	Relay feed - stop lamps
52	Υ	14	Relay feed - LH turn/stop hazard
64	DG	14	Relay feed - RH turn/stop hazard
57	BK	14	Ground
57	BK	14	Ground
962	BR-W	14	Relay feed - park lamps
963	BK-LG	14	Relay feed - backup lamp
43	DB	14	Dash panel pass thru circuits
49	0	14	Dash panel pass thru circuits

TRAILER TOW

Customer Access Circuits which support exterior illumination, two dash panel pass thru circuits, and two ground circuits are secured to the left hand frame rail, rear of cab. Figure B shows the location of the takeout and a table which defines each circuits function, wire gage and color.


All Customer Access Circuits are blunt cut and the ends are protected with heat shrink tubing.

A system schematic of the Trailer Tow Circuits is shown on page 248-249.

SUPER DUTY F-650/750 ELECTRICAL WIRING TRAILER TOW SCHEMATIC

2002 MODEL YEAR


Page 248 F-650/750

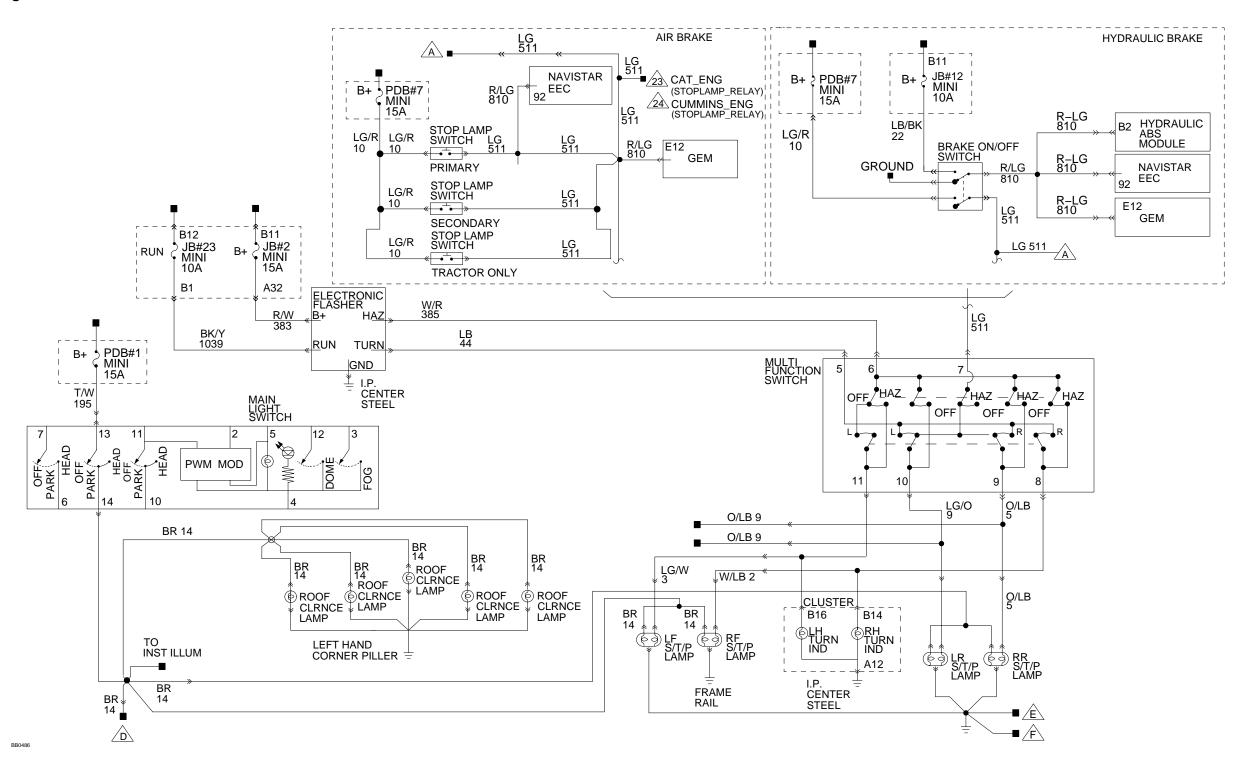

SUPER DUTY F-650/750 ELECTRICAL WIRING TRAILER TOW SCHEMATIC (Continued)

2002 MODEL YEAR

Page 249 F-650/750

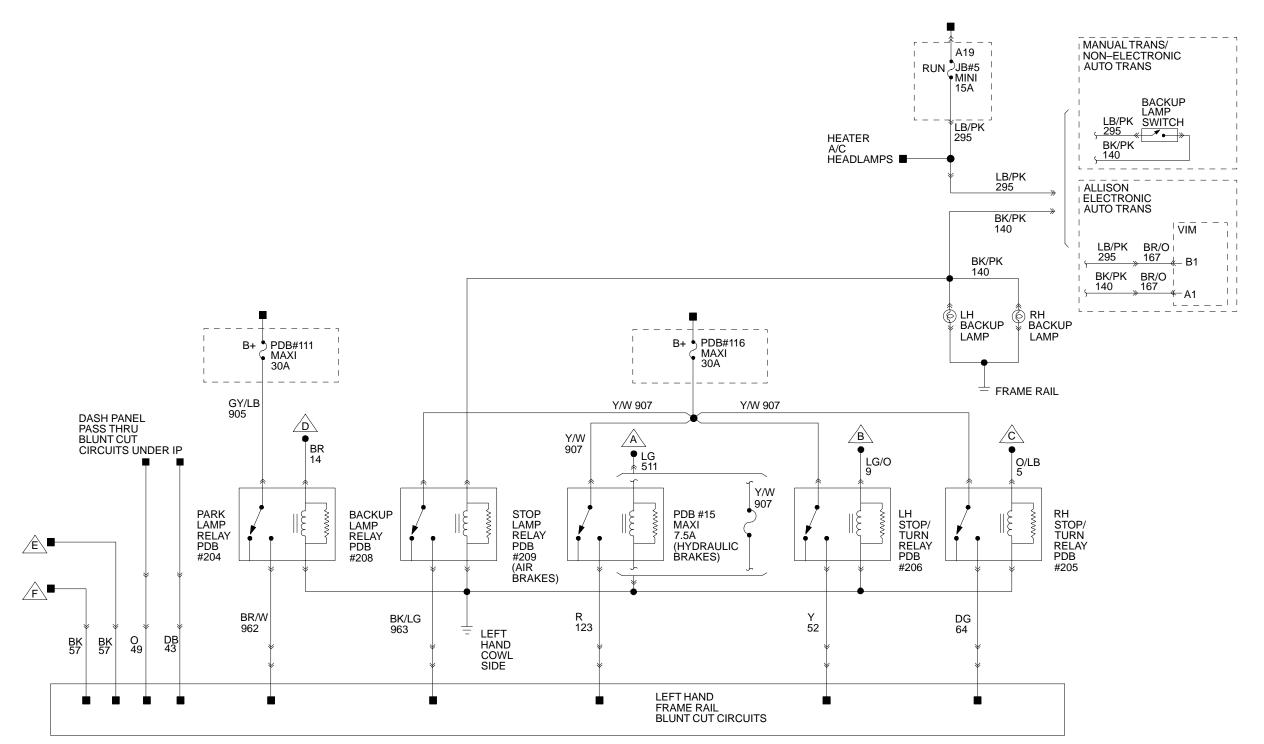

SUPER DUTY F-650/750 AIR BRAKE FOR TRAILER TOW CABLE




Page 250 F-650/750

				J 1 -		Circuit #	Circuit Color		Recommended Insulation	Maximum Wire Length											
Circuit Description	Location	Fuse Size (Amps)	Max Fuse Load		Harness					10 Gauge (Meters)		12 Gauge (Meters)		14 Gauge (Meters)		16 Gauge (Meters)		18 Gauge (Meters)		20 Gauge (Meters)	
										XLPE	PVC	XLPE	PVC	XLPE	PVC	XLPE	PVC	XLPE	PVC	XLPE	PVC
Ground	_	_	_	_	13A576	206	W	10	XLPE	_	_	_	_	_	_	NR	NR	NR	NR	NR	NR
Side Marker	Fuse #2	30 ⁽³⁾	10(1)	Maxifuse	13A576	464	BK-PK	12	XLPE	9.820	9.820	6.140	6.140	3.896	3.896	NR	NR	NR	NR	NR	NR
LH Stop/Turn	Fuse #4	30 ⁽³⁾	10(2)	Maxifuse	13A576	52	Υ	14	XLPE	6.065	6.065	3.792	3.792	2.406	2.406	NR	NR	NR	NR	NR	NR
Stop/ABS	Fuse #3	30 ⁽³⁾	21	Maxifuse	13A576	123	R	12	XLPE	7.890	7.890	4.933	4.933	3.130	3.130	NR	NR	NR	NR	NR	NR
RH Stop/Turn	Fuse #4	30 ⁽³⁾	10(2)	Maxifuse	13A576	64	DG	14	XLPE	6.065	6.065	3.792	3.792	2.406	2.406	NR	NR	NR	NR	NR	NR
Tail Lamps	Fuse #2	30(3)	10(1)	Maxifuse	13A576	962	BR-W	12	XLPE	11.673	11.673	7.298	7.298	4.631	4.631	NR	NR	NR	NR	NR	NR
Accessory Feed (Run Only)	Fuse #1	30 ⁽³⁾	21	Maxifuse	13A576	212	DBL	12	XLPE	11.228	11.228	7.020	7.020	4.455	4.455	NR	NR	NR	NR	NR	NR

⁽¹⁾ Sum of loads for Side Marker, Tail Lamps not to exceed 21 amps.


⁽³⁾ Trailer Tow Fuse Relay Block located on LH Frame Rail; part of 13A576.

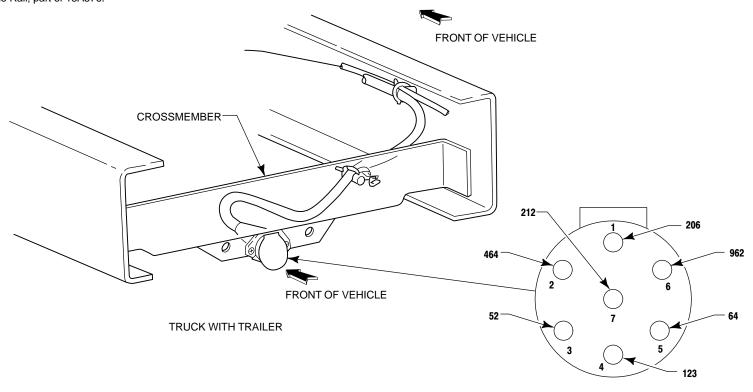

 $[\]ensuremath{^{(2)}}$ Sum of loads for LH Stop/Turn, RH Stop/Turn not to exceed 21 amps.

SUPER DUTY F-650/750 AIR BRAKE FOR TRAILER TOW CABLE



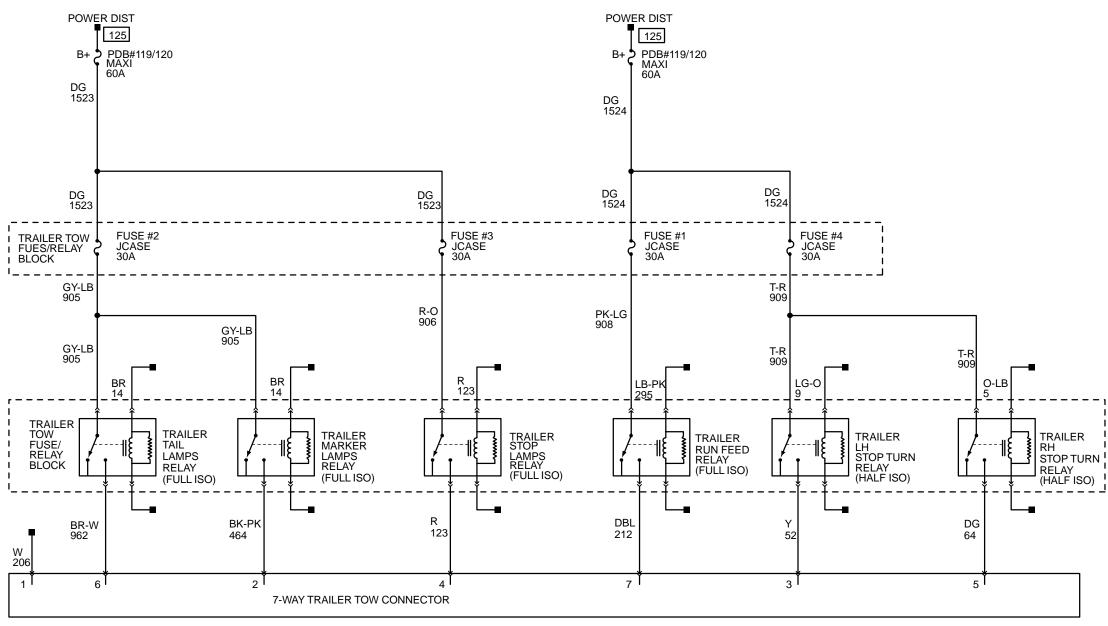

BB0509

SUPER DUTY F-650/750 ELECTRICAL WIRING/GENERAL PRACTICES



Page 252 F-650/750

This section provides instructions for the addition of electrical devices to the vehicle electrical system by body builders.

(Vehicles stored on site should have the negative battery cable disconnected to minimize "Dead battery" situation. This applies to both "incomplete" and "complete" vehicles in storage.)

After all electrical or vehicle modifications, perform the on-board diagnostics procedures as described in the powertrain control/emissions diagnosis manual to clear all diagnostic trouble codes (DTC's). Road test vehicle and rerun the on-board diagnostics to verify that no DTC's are present. If DTCs are generated perform the appropriate diagnostic procedures and repairs. Vehicle operation (engine/transmission) may be affected if DTC's are not serviced.

F/CMVSS, U.S. and Canadian RFI Requirements:

- 1. All Ford vehicles built and fully completed by Ford, comply with F/CMVSS No. 108, "Lamps, Reflective Devices and Associated Equipment" and other applicable F/CMVSS that affect electrical components.
- 2. Incomplete vehicles (i.e., Chassis Cab. Stripped Chassis, etc.) will conform to the F/CMVSS according to the provisions and conditions stated in the Incomplete Vehicle Manual (IVM) attached to each incomplete vehicle. Care must be taken that modifications do not conceal, alter or change components installed or provided by Ford Motor Company to achieve this conformance.
- 3. Devices that emit radio frequency (RF) energy, such as AM/FM radios and radio-controlled security systems, marketed for sale or use in the United States are subject to the rules and regulations of the Federal Communications Commission (FCC) 47 CFR Parts 2 and 15.

These rules specify the following conditions of operation:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In addition, the FCC's Rules may require the device to 2. Wire routings of newly installed components or wire be tested and found to comply with various RF interference emission limits before it may be marketed. The FCC establishes different limits according to the particular use and installation of RF devices. In some cases, a grant of equipment authorization from the FCC also must be obtained before any RF device may be marketed. Labelling with certain FCC information may also be required.

To insure continued compliance with the FCC's requirements, the owner, user, custom manufacturer, or service technician must not modify or change the RF device in a manner not expressly approved by Ford Motor Company. Such modifications could void the authority to operate the device.

4. All vehicles powered by spark ignition internal combustion engines (e.g., gasoline or liquid petroleum gas engines) and manufactured in Canada or for sale or use in Canada are subject to the Canadian "Regulations for the Control of Interference to Radio Reception," SOR/75-629, Canada Gazette Part II, Vol. 109, No. 21, November 12, 1975, as amended by SOR/77-860, Canada Gazette Part II. Vol. 111. No. 21. November 9. 1977, by SOR/78-727, Canada Gazette Part II, Vol. 112, No. 18, September 27, 1978, and by SOR/80-915, Canada Gazette Part II. Vol. 114, No. 23, December 10, 1980. Violation of these regulations is punishable by fine or imprisonment. Ford-built incomplete vehicles other than stripped chassis are designed and manufactured to be capable of meeting the regulatory requirements or such modifications thereof as may be authorized by the Canadian Department of Communications.

However, because Ford has no control over how an incomplete vehicle is completed by subsequent stage manufacturers, Ford does not represent that the completed vehicle incorporating the Ford-built components will comply with applicable requirements.

Routing & Clipping:

1. It is strongly recommended that wiring in areas of heavy rework, or in areas where welding operations are to be performed, be removed prior to the rework operations and reinstalled after the rework is completed. If vehicle is equipped with an Electronic Engine Control System (EEC V), the EEC V Module must be disconnected before any electrical welding is performed, otherwise module damage may result. If wire removal is not practical, the wires must be shielded from damage due to the rework and welding heat. All components and wiring should be reinstalled as closely as possible to the way it was installed before removal.

- routing revisions of the Ford harnesses necessitated by reworks must conform to the following:
- Wires routed through holes in sheet metal or castings must have the hole edges protected by a grommet.
- Wires should be routed to avoid metal edges, screws, trim fasteners and abrasive surfaces. When such routings are not possible, protective devices (shields, caps, etc.) must be used to protect the wires and when wires must cross a metal edge the edge should be covered with a protective shield and the wiring fastened within 3 inches on each side of the edge.
- Wires must be routed to provide at least 3 inches clearance to moving parts, unless positively fastened or protected by a conduit.
- Existing heat shields, insulation, and wire shielding/ twisting must be maintained.
- Wire routings should avoid areas where temperatures exceed 180°F and a minimum clearance of 6 inches should be maintained from exhaust system components. Where compliance with this requirement is not possible, high temperature insulation and heat shields are required.
- When wiring is routed between two members where relative motion can occur, the wiring should be secured to each member, with enough wire slack to allow flexing without damage to the wire.
- Wiring to all circuit components (switches, relays, etc.) in exposed locations must provide a drip loop to prevent moisture from being conducted into the device via the wire connection.
- Routing wires into areas exposed to wheel wash should be avoided. When such routings cannot be avoided, adequate clipping or protective shields are required to 3. protect the wires from stone and ice damage.
- The wire retainers and grommets installed by the assembly plant are usually designed to accommodate only the Ford-installed wires. Additional wiring or tubing should be retained by additional clips. When added wires or tubes are routed through sheet metal panels, new holes, with proper wire protection and sealing, must be used.
- All wiring connections to components of the factory-installed system must be accomplished by using the proper mating wire termination. (Connections on studs and ground connections must use eyelet terminations, connections to female bullets must terminate in male bullets, etc.)

Splice/Repair:

When necessary to splice wire for repair or circuit length revisions, the following guide should be followed:

- Wire ends should be stripped making sure that individual conductor strands are not damaged.
- When soldering, make sure an adequate mechanical joint exists **before** applying solder. Use only rosin core solder — never acid core.
- For crimp joints, use butt-type metal barrel fasteners and a proper tool (such as Motorcraft crimp tool S-9796) specifically designed for this type of work.
- Splice joints must be adequately sealed and insulated. Adhesive lined heat shrink tubing is highly recommended to cover soldered and bare, metal barrel, crimp joints. Quality electrical tape can be used inside the vehicle but is not recommended for an outside environment.
- Seal the ends of insulated barrel crimp devices with a silicone grease when in an outside environment.
- The most durable splice joint will be bare metal barrel crimped, flow-soldered and covered with adhesive lined heat shrink tubing. Use this type of joint as often as possible.

Circuit Protection:

- 1. Modification to existing vehicle wiring should be done only with extreme caution and consideration of effects on the completed vehicle electrical system. Anticipated circuitry should be studied to ensure that adequate circuit protection will exist and that feedback loops are not created.
- 2. Any added circuitry must be protected either by a base vehicle fuse or breaker, or by a similar device installed by the body builder.
- When adding loads to a base vehicle protected circuit, make sure that the total electrical load thru the base vehicle fuse or breaker is less than 80% for fuses in the passenger compartment and 60% for fuses underhood or under body of the device rating to prevent nuisance fuse blows.
- Total current draw is the sum of the base vehicle circuit current requirement (measured with an ammeter) and the anticipated add-on components current requirements.
- Never increase the rating of a factory installed fuse or circuit breaker.
- For added lamp loads, the "Bulb Chart" on the next page will aid in determination of common lamp current draws.

SUPER DUTY F-650/750 ELECTRICAL WIRING/BULB CHART

Page 253 F-650/750

2002 MODEL YEAR

If the **total** electrical load on a factory circuit, after the addition of electrical equipment, is less than 88 % of the fuse or circuit breaker protection rating in that circuit or less than the capacity of some limiting component (Switch, Relay, etc.), the items to be added can be connected directly to that circuit.

If the total electrical load to be added on a factory circuit exceed the value of the circuit protection, or the value of some limiting component, the items to be added **cannot** be added directly to the circuit.

- Added electrical devices exceeding the current capabilities of the factory wiring system must be controlled through the use of a relay or switch. The coil of the relay can be fed from the factory wiring (now acting as a signal circuit) with the added wiring providing the power feed to the added electrical device through the relay power contacts. (The relay selection is important and depends on current requirements, number of cycles expected in the relay lifetime, whether the relay is to be operated intermittently or for long periods of time, and whether the relay is exposed to weather conditions or is installed in a protected area. When the current requirements of a circuit exceed the capacity of an available relay, more than one relay can be used if the circuit is wired to split the load).
- The factory wiring should not be used as a power feed to the relay power contacts or switches. Battery power is to be supplied from the starter motor solenoid positive terminal for added circuits requiring a maximum of 30 Amps or directly from the battery positive terminal for added circuits requiring greater than 30 Amps of current.

Caution — Never use the stud on the underhood fuse panel as a junction point.

Circuit protection (fuses or circuit breakers) must be provided for all added wiring. The protection device rating should not exceed the current requirements for the add-on components and should be installed as close to the point as possible.

WIRE GAGE:

- When adding wiring, the wire gage size should be determined as follows:
- Where wire is spliced to extend a circuit, the added wire should have a gauge at least that of the circuit being lengthened.
- Where wire is being added to feed add-on devices, the Wire Gage Table on this page should be used. (note: Current capacity of a given wire varies with temperature and type of insulation. The table, however, represents generally accepted values as a guide).
- All added underhood or underbody wiring should have a thermoset insulation (such as Hypalon or Cross-linked polyethylene).

SAE specifications J1128 type SXL, GXL or TXL. SAE specifications J1127 type SGX or STX for battery cables

WIRE GAGE TABLE

 VIRE SAGE	MAXIMUM CURRENT CAPACITY (PLASTIC INSULATED COPPER WIRE)
20	10 Amps
18	15 Amps
16	20 Amps
14	25 Amps
12	30 Amps
10	40 Amps

BULB CHART						
BULB TRADE NUMBER	CANDLE POWER	CURRENT @ RATED VOLTAGE	BULB TRADE NUMBER	CANDLE POWER	CURRENT @ RATED VOLTAGE	
90	6	0.58 Amps @ 13.0V	1196	50	3.00 Amps @ 12.5V	
94	15	1.04 Amps @ 12 .8V	1445	0.7	0.14 Amps @ 14.4V	
97	4	0.69 Amps @ 13.5V	1815	1.4	0.20 Amps @ 14.4V	
97A	3	0.69 Amps @ 13.5V	1816	3	0.33 Amps @ 13.0V	
105	12	1.00 Amps @	1891	2	0.24 Amps @ 14.0V	
161	1	0.19 Amps @14.0	1892	0.75	0.12 Amps @ 14.0V	
168	3	0.35 Amps @ 14.0V	1893	2	0.33 Amps @ 14.0V	
194	2	0.72 amps @ 14.0V	1895	2	0.27 Amps @ 14.0V	
211-2	12	0.97 amps @ 12.8	4000	37.5, 60 Watts	3.14. 5.04 Amps @ 12.8V	
212-2	6	0.74 Amps @ 13.5V	4001	26,000	3.14 Amps @ 12.8V	
214-2	4	0.50 Amps @ 13.5V	4405	50,000	2.58 Amps @ 12.8V	
561	12	0.97 Amps @ 12.8V	4412	35 Watts	2.74 Amps @ 12.8V	
582	6	0.74 Amps @ 13.5V	4414	18 Watts	1.41 Amps @ 12.8V	
631	6	0.63 Amps @ 12.8V	H6054	35, 65 Watts	2.94, 5.46 Amps @ 14.0V	
1076	32	1.80 Amps @ 12.8V	4415	35 Watts	2.73 Amps @ 12.8V	
1156	32	2.10 Amps @ 12.8V			<u>'</u>	
1157	32	2.10 Amps @ 12.8V	4416	30 Watts	2.34 Amps @ 12.8V	
1157	3	0.59 Amps @ 14.0V	4435	75,000	2.34 Amps @ 12.8V	
1157 NA	24	2.10 Amps @ 12.8V	6015	27,500 Low	4.10, 4.97 Amps @ 12.8V	
1157 NA	2.2	0.59 Amps @ 14.0V		30,000 Hi		
1178	4	0.69 Amps @ 13.5V	6014	27,500 Low 30,000 Hi	4.20, 4.97 Amps @ 12.8V	
1195	50	3.00 Amps @ 12.5V	6112	40. 50 Watts	3.10. 3.91 Amps @ 12.8V	
904	4	0.69 Amps @ 13.5	1295	50	3.0 @ 12.5	
906	6	0.69 Amps @ 13.0				
912	12	1.0 Amps @ 12.8	563	4	0.50	
89	6	0.58 Amps @ 13.0	37	0.5	0.09 @ 14.0	
1095	4	0.51 Amps @ 14.0	2162	0.5	0.1 @ 14.0	

SUPER DUTY F-650/750 ELECTRICAL WIRING POWERTRAIN CONTROL SYSTEM APPLICATION

Page 254

ELECTRICAL:

Guidelines for Powertrain Control System Application

SYSTEM:

All EEC wiring, in particular the 12A581 and 14401, must **TP** be a minimum of 2 inches from secondary ignition coil wires and at least 4 inches from the ignition coil tower, and starter motor (and its wiring) as well as 4 inches from the alternator output wiring.

F-650/750

These clearances apply in particular to all EEC sensor and actuator pigtail wiring.

EEC wires shall not be in the same bundle as other vss high-current non-EEC circuits (e.g., tachometer wire from coil to TFI, power seat/door lock/window, horn, alternator reg.) for a distance of more than 20 inches.

COMPONENTS:

BOO Brake on/off Switch: Supplies the processor a signal for converter clutch operation. A connection here may have an adverse effect on transmission operation. Refer to the Trailer Tow Section on page 247.

CAUTION: Any connection to the EEC-V system (i.e., wiring, components) or alterations to the system may adversely affect vehicle operation (transmission and/or engine).

BARO/ Barometer/Map Sensor: Must be physically in a MAP higher location than the intake manifold and angled with the vacuum nipple at least 4 degrees downwards. MAP vacuum line must have a downward slope to the manifold without TONE RING SIZE any potential kinking or twisting. BARO has no vacuum line.

Electronic Engine Control Module: Location must be completely shielded from weather and case grounded to sheet metal. It should be oriented such that no moisture can accumulate in the 104-way connector. The ambient temperature at the EEC module shall not exceed 80 degrees centigrade (176° Fahrenheit). Exterior surface shall not exceed 140°F.

CONSTANT = AXLE RA6. **NOTE**: The electronic engine and transmission control modules require battery power to be supplied at all times to maintain the keep-alive memory. Keep this in mind when installing load disconnect switches or solenoids.

Throttle Position Sensor: Supplies a throttle position signal to the EEC-V processor. Do not tap into or splice any wire to the TP sensor.

Heated Oxygen Sensor: Pigtail wire must be at least 4 inches from the exhaust pipe and exhaust manifold. If necessary, a clip should be used to secure its location.

Vehicle Speed Sensor: Similar to the engine speed signal, must not be altered. Do not tap into or splice any wire to the VSS. If an additional vehicle speed signal is required.

SPEEDOMETER

The vehicle speedometer receives the calibrated speed signal (square wave) from the GEM through Circuit 679 (GY/BK). The speed input to the GEM is provided by the (Speed Sensor) in the transmission through Circuit 353 (LB) and Circuit 676 (PK/O).

The square tooth tone wheel in the transmission is attached to the ring gear. A variable reluctance sensor is mounted to the rear transmission housing with a precise air gap with respect to the tone wheel. These two components make up the VSS (Speed Sensor). The trans case has a fixed mounting boss for the variable reluctance sensor and therefore the air gap is non-adjustable.

All factory tone wheels have 16 teeth for every rear axle ratio offered. If the rear axle is changed, the GEM must be reconfigured to reflect the correct vehicle speed. Figure A shows the rear axle ratio and tone ring size. The tone ring size parameter is a required input when reconfiguring the GEM. Once the tone ring size is known, proceed to GEM configuration.

Tone Ring Size

Rear Axle Ratio

FIGURE A

If the rear axle ratio on the vehicle is not listed in Figure A, then use the procedure below to determine tone ring

IF THE AXLE RATIO MULTIPLIED BY 16 (CONSTANT) IS A TWO DIGIT NUMBER, THEN THE TONE RING SIZE IS PREFACED BY 000 PLUS CONSTANT.

EXAMPLE: If axle ratio = 4 Then constant = $64 = 4 \times 16$ Tone Ring Size = 00064

IF THE AXLE RATIO MULTIPLIED BY 16 (CONSTANT) IS A THREE DIGIT NUMBER. THEN THE TONE RING SIZE IS PREFACED BY 00 PLUS CONSTANT.

EXAMPLE: If axle ratio = 7 Then constant = $112 = 7 \times 16$ Tone Ring Size = 00112

SUPER DUTY F-650/750 ELECTRICAL WIRING POWERTRAIN CONTROL SYSTEM APPLICATION

Page 255 F-650/750



TIRE SIZE

If the tires are changed, it is necessary to configure the GEM to reflect the correct vehicle speed.

Figure B shows the tire size and revolutions per mile.

TIRE SIZE	MAKE/ APPLICATION	REVOLUTIONS/ MILE
	711 1 210/111014	IVIILL
10RX22.5F G124	GOODYEAR UNISTEEL	514
10RX22.5G G124	GOODYEAR UNISTEEL	514
11RX22.5G G124	GOODYEAR UNISTEEL	498
245/70RX 19.5	GOODYEAR UNISTEEL	625

FIGURE B

If the tire make and size are not listed in Figure B, the tire revolutions per mile must be calculated as outlined below. The tire manufacturer may be able to provide the revolutions per mile value. Once the tire revolutions per mile value is known, proceed to the GEM Configuration.

Position the vehicle on level ground, load with the standard weight for the specific application, and inflate the tires to the recommended pressure (ensure that the tires are cold).

Measure the rear tire height from the ground to the top of the tire in inches. Ensure an accurate reading to the nearest 1/8 inch.

Divide 20,168 by the tire height in inches to get the tire revolutions per mile.

EXAMPLE: Measured tire height = 33 inches 20168/33 = 611 Revolutions/Mile

REQUIRED TOOLS - GEM CONFIGURATION

Rotunda New Generation Star (NGS) Tester.

Ford Service Function (FSF) Program Card Version 3.2 or newer.

The Rotunda New Generation Star (NGS) Tester and the Ford Service Function (FSF) Program Card can be obtained from Hickok Electrical Instrument Company by contacting (216) 541-8060 Extension 225. If your company has an account with Rotunda, contact Rotunda - OTC Division at 1-800-533-5338.


GEM CONFIGURATION

- Ensure that all harness connectors are connected to the module that requires configuration.
- 2. Plug the NGS tester into the data link connector located below and to the right of the steering column.
- Actuate the ignition switch to the RUN position (engine off).
- Insert the Ford Service Function (FSF) Program Card into the Rotunda New Generation Star (NGS) Tester.
- 5. Highlight **LANGUAGE** and press trigger to select.
- Highlight SERVICE BAY FUNCTIONS and press trigger to select.
- 7. Highlight module **GEM** and press trigger to select.
- 8. Highlight **TIRE SIZE/AXLE RATIO CONFIG** and press trigger to select.
- Select TIRE SIZE by pressing the trigger button. Use the dial to select the custom revolutions/mile entry and press the trigger button. Enter two zero's using the number buttons and enter the 3-digit revolutions/mile value for the desired tire using the number buttons. See Tire Size Section for input parameter.
- 10. Using the dial, select TONE RING SIZE and press the trigger button. Use the dial to select the rear axle ratio and press the trigger button If the rear axle ratio is not present, use the dial to select #of teeth and press the trigger button. Enter the TONE RING SIZE of the desired axle ratio using the number buttons. See Tone Ring Size Section for input papameter.
- 11. Using the dial, select **OPTION** and press the trigger button. Use the dial to select N/A and press the trigger button.
- 12. Using the dial, select **VEHICLE** and press the trigger button. Use the dial to select F650/750 and press the trigger button. If option is not present, select F250/350.
- 13. Press done (numeric 8 button) and the module will be programmed with the above data entered. To reprogram, repeat the above procedure.

Page 256 F-650/750

SUPER DUTY F-650/750 AIR BRAKE SYSTEM SCHEMATIC WITH ABS




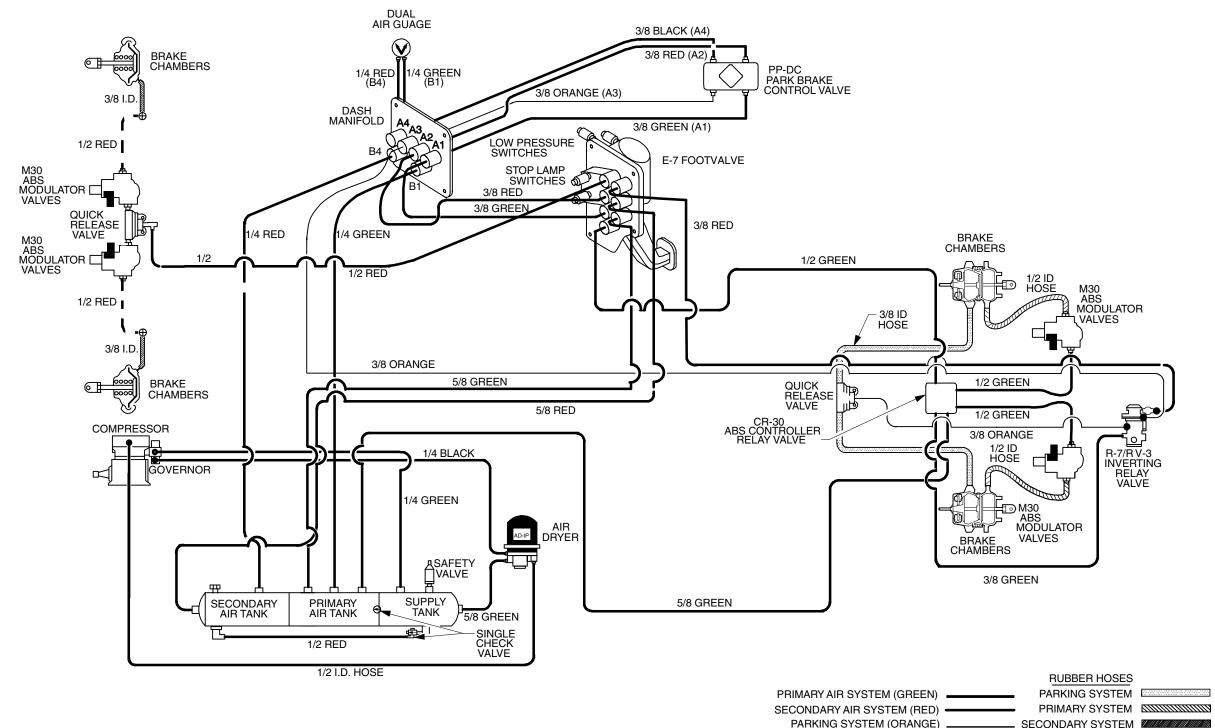

SUPER DUTY F-650/750 POWERSTROKE AIR BRAKE SYSTEM SCHEMATIC WITH ABS AND CRUISE CONTROL

2002 MODEL YEAR


Page 257 F-650/750

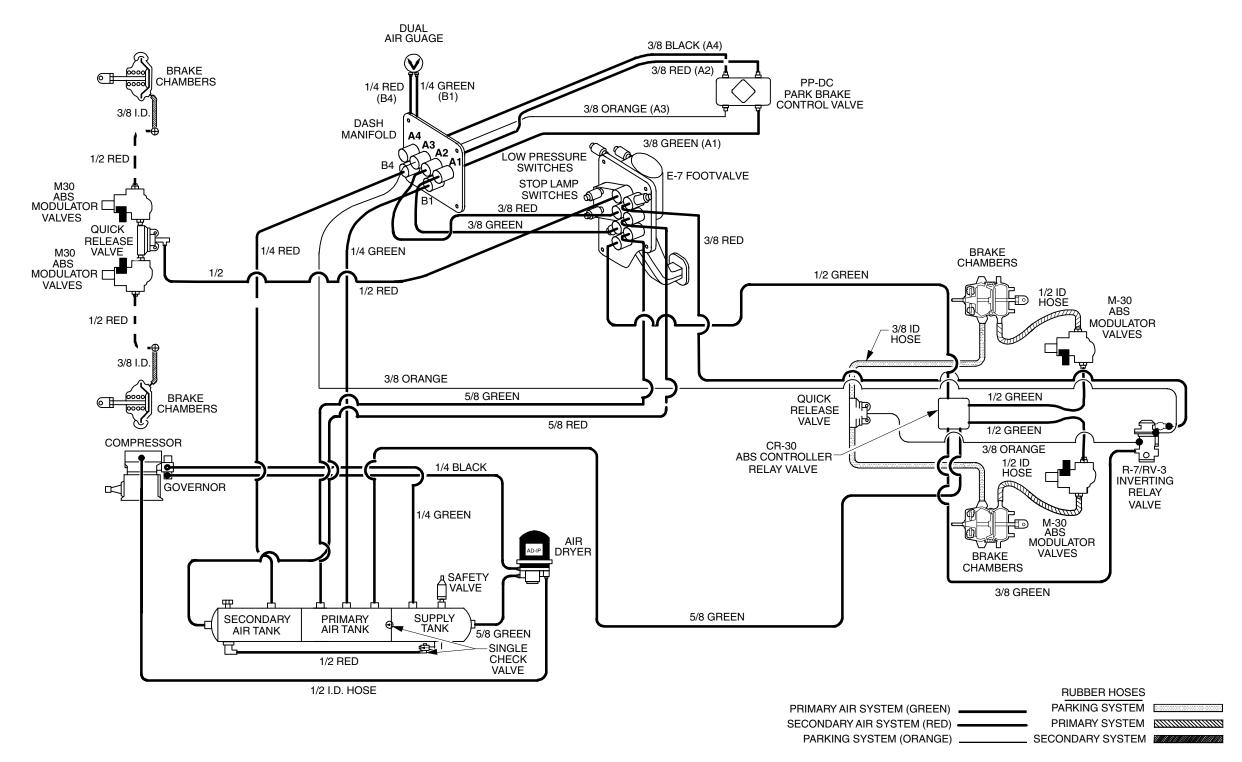

SUPER DUTY F-650/750 AIR BRAKE SYSTEM SCHEMATIC WITH ABS AND TRAILER PACKAGE

2002 MODEL YEAR

Page 258 F-650/750

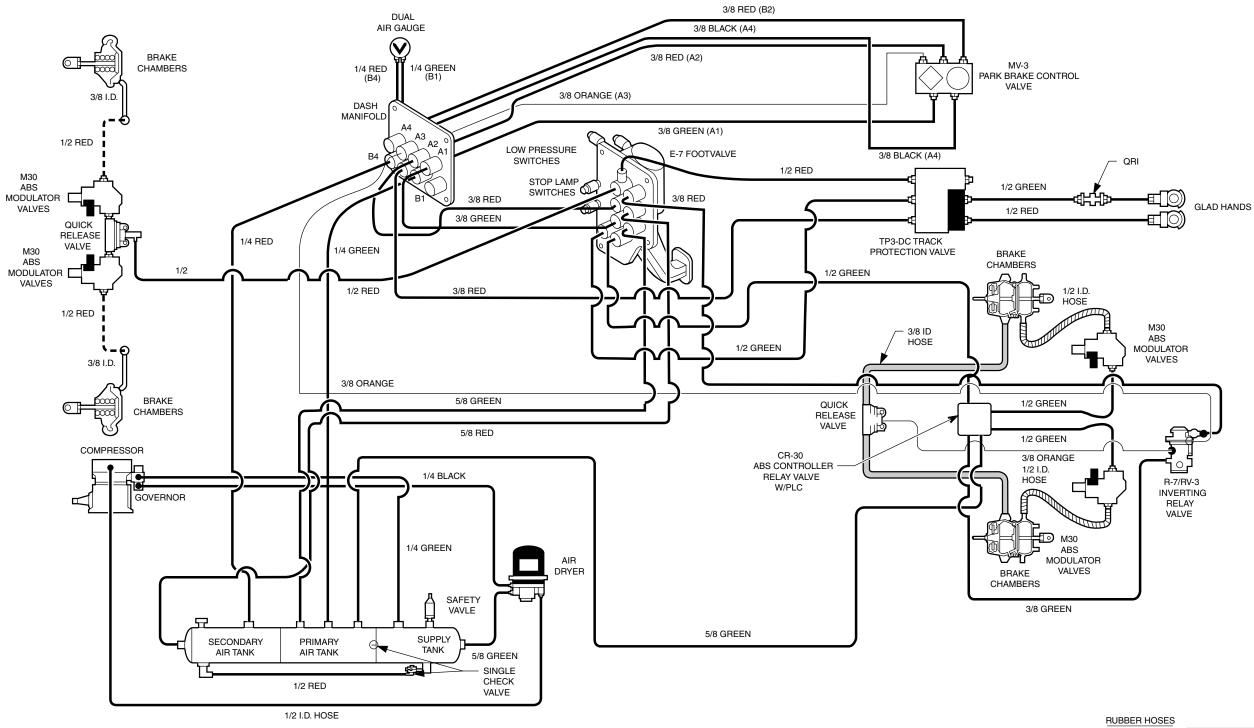

PRIMARY AIR SYSTEM (GREEN)


SECONDARY AIR SYSTEM (RED)

PARKING SYSTEM (ORANGE)

SUPER DUTY F-650/750 AIR BRAKE SYSTEM SCHEMATIC WITH ABS AND TRACTOR PACKAGE

2002 MODEL YEAR


Page 259 F-650/750

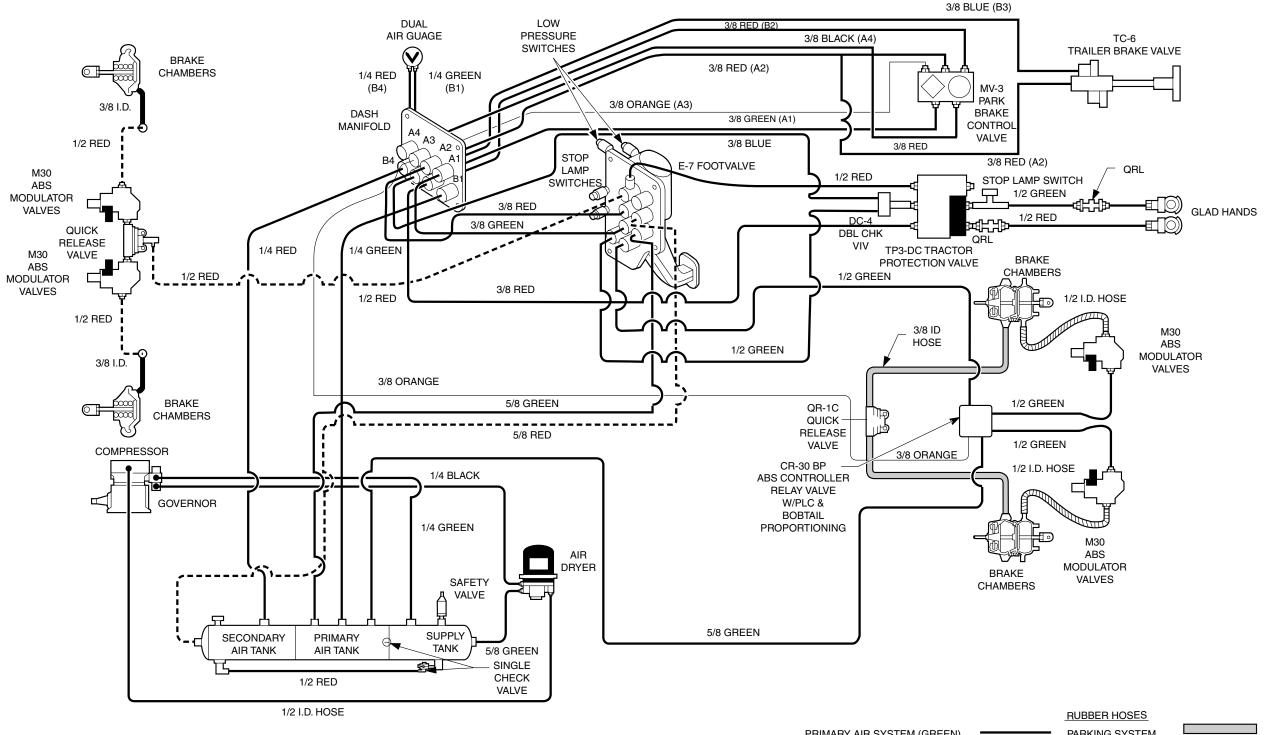

SUPER DUTY F-650 SUPER CREWZER AIR SYSTEM SCHEMATIC

2002 MODEL YEAR


Page 260 F-650/750

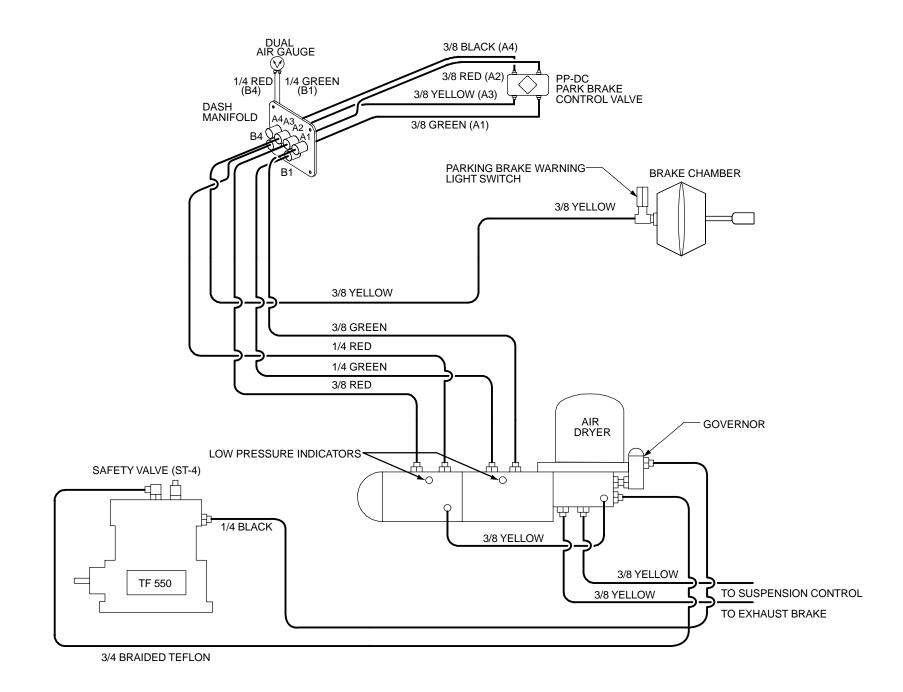

BB0488

SUPER DUTY F-650/750 AIR BRAKE SYSTEM SCHEMATIC WITHOUT ABS (NON-U.S.)




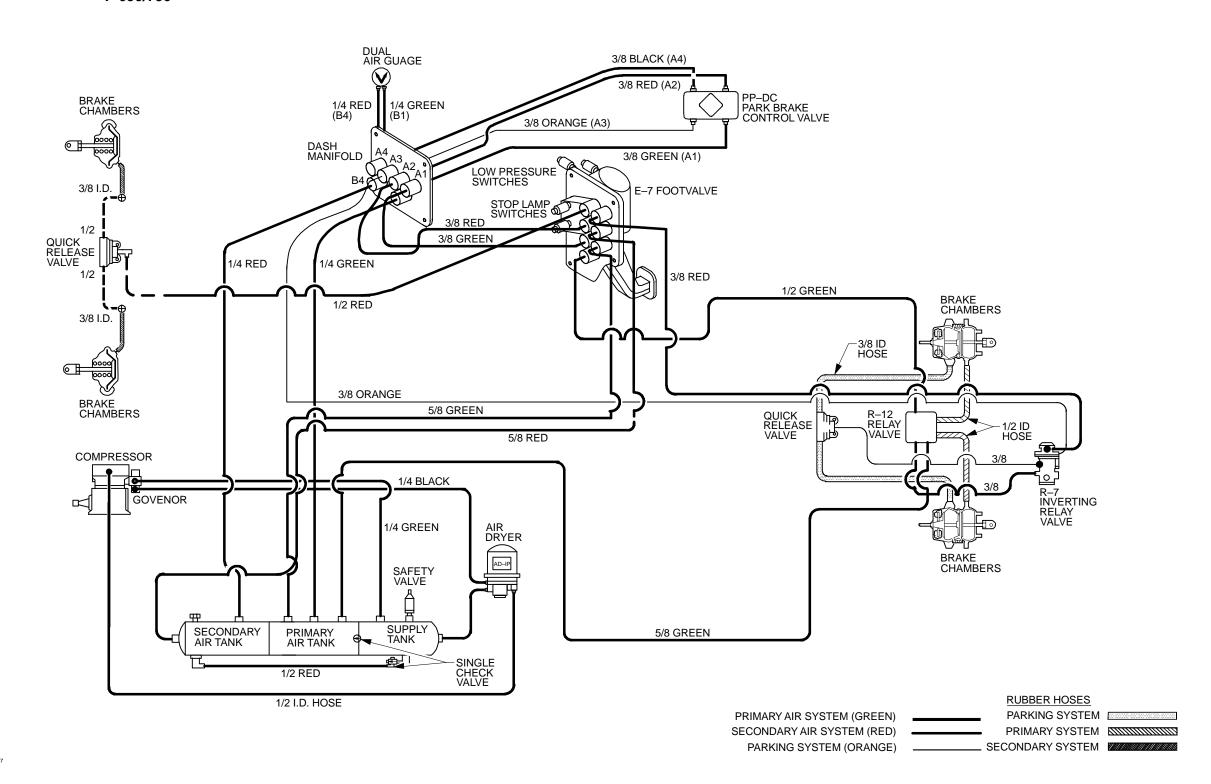

F-650/750


SUPER DUTY F-650/750 TYPICAL HYDRAULIC BRAKE SYSTEM SCHEMATIC



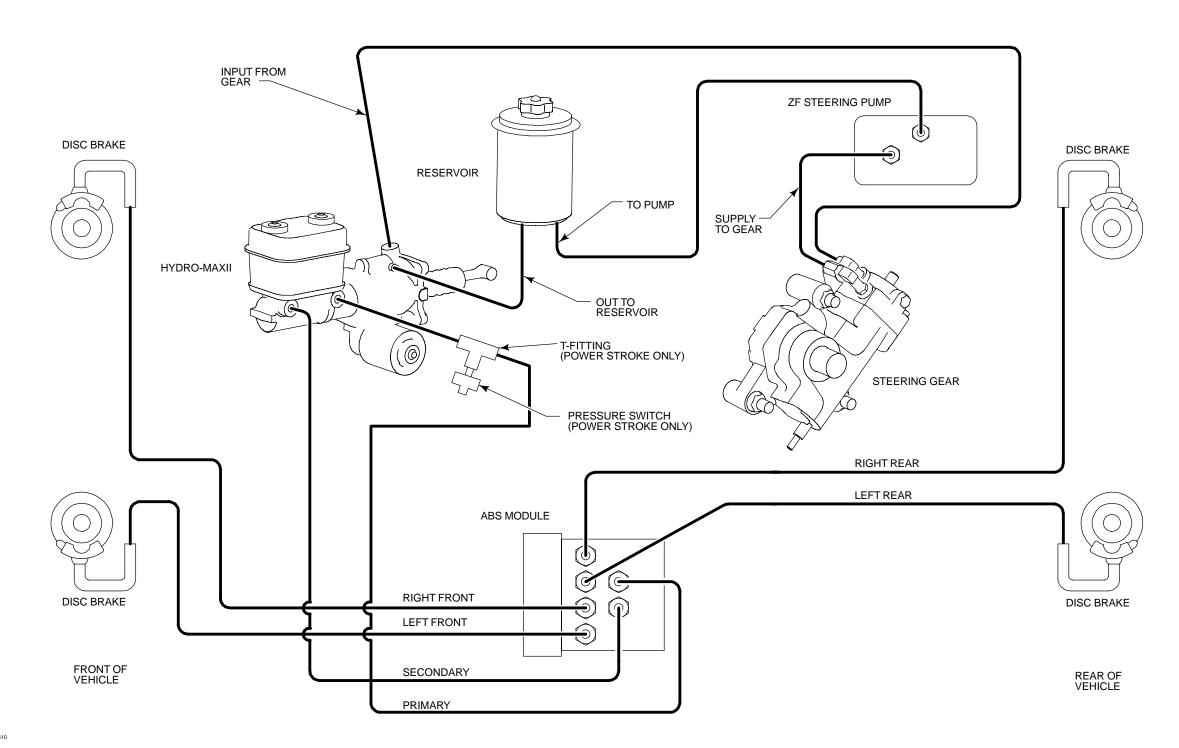

SUPER DUTY F-650/750 TYPICAL HYDRAULIC ABS MODULE LOCATION



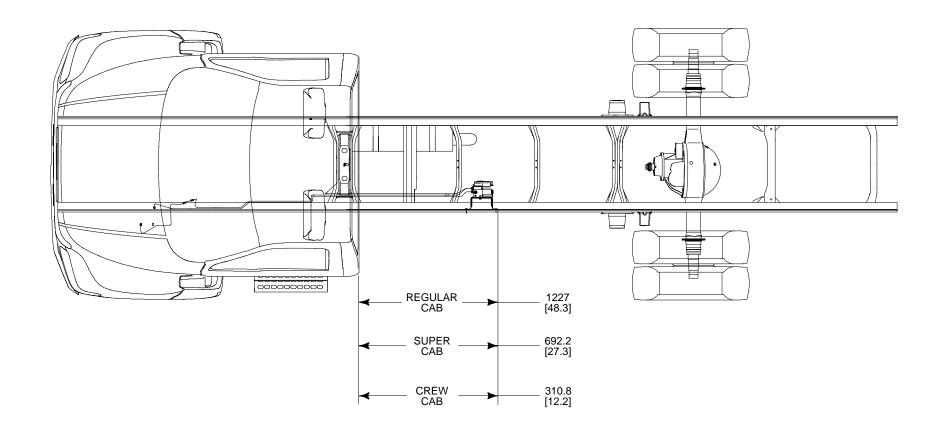

BB0557

F-150 4X4 SNOWPLOW INSTALLATION MINIMUM REQUIRED AND RECOMMENDED EQUIPMENT

2002 MODEL YEAR

Page 264

APPENDIX

NOTE: Ranger, Escape, Explorer (Mountaineer), and Expedition (Navigator), are not recommended for snowplow usage. The following F-150 models are available for snowplow usage.

F-150 4x4 REGULAR CAB & SUPERCAB 138.8" WB Model

- 7700 Payload Group (V8) (Option Code 627) Includes:
- GVWR 7700 lb
- Powertrain 5.4L engine with 4-speed automatic overdrive transmission and 3.73 axle ratio (when snowplowing, operate automatic transmission in overdrive)
- GAWR/torsion bars, front 4150 lb
- Upgraded radiator (1.42 inch core thickness)
- Battery, 72 amp hr
- Auxiliary transmission oil cooler
- LT245/75RX16D OWL all-terrain tires with BSW spare
- 16" x 7" J Argent styled steel wheels (7-hole disc) (chrome styled steel with XLT and Lariat)
- Other heavy duty components frame (4.00 cu. in. section modulus), shock absorbers (1.38" diameter), jack (2-ton), rear axle (5300 lb capacity), rear springs/GAWR (4800 lb)
- Permanently attached hardware (illustrated on page 265) must not exceed 50 lb and the removable snowplow hardware (not shown) must not exceed 650 lb with consideration for the driver and one front seat passenger.
- These weight limits are based upon a vehicle with maximum buildable Ford option content and 150 lb each for the driver and one front seat passenger.

Completed Vehicle Weight

The weight of the completed vehicle with equipment installed (and second unit body, if applicable) must not exceed the Front GAWR, Rear GAWR, or GVWR established by Ford. If sufficient weight is added such that the completed vehicle with a driver and more than one passenger would exceed Front GAWR, Rear GAWR, or GVWR, it is the responsibility of the equipment installer to notify the customer of the appropriate use restrictions. (i.e., That the user should limit occupancy of the vehicle to the driver and one passenger while the equipment is installed.)

The addition of ballast weight, placed rearward of the rear axle, may be required to prevent front end overloading or exceeding Front GAWR. If required, the ballast weight must be securely attached to the vehicle.

For Ford completed vehicles of 10,000 lb GVWR or less, the weight of permanently attached equipment must not exceed the Total Accessory Reserve Capacity (T.A.R.C.) as specified on the Safety Compliance Certification Label. Permanently attached equipment includes the snowplow frame-mounting hardware, and does not include the removable snowplow blade assembly. Exceeding T.A.R.C. will require recertification.

Front End Wheel Alignment and Headlight Aim

Front end wheel alignment (toe) and headlight aim may require readjustment after installation of equipment, and is the responsibility of the equipment installer. Failure to reset front wheel alignment may cause premature uneven tire wear. If required, reset to chassis manufacturer's specifications found in the Ford Shop Manual.

Electrical Connections

Installation of any inductive load devices (i.e., electric motors, electric clutches for clutch pumps, etc.) <u>must not</u> be connected to OEM wiring or fuse panels. Power for such devices should be taken directly from the battery or starter motor relay power terminal. Control of these devices should be achieved via relays. No direct current path should exist between OEM wiring and the installed load that is not filtered by the battery. These recommendations are intended to reduce or eliminate any induced reverse voltage into the OEM circuitry.

Warranty

The Normal Ford New Vehicle Limited Warranty applies to vehicles with snowplows installed in accordance with these guidelines. Consult your Ford dealer or the Owner's Guide for any further questions.


F-150 4X4 SNOWPLOW INSTALLATION ATTACHMENT GUIDELINES

2002 MODEL YEAR

Page 265 APPENDIX

Compliance

A vehicle that is fully represented by the guidelines in this section will meet all applicable F/CMVSS requirements. Any deviation from this design or manner of installation must be assessed independently from Ford by the snow control equipment manufacturer, or installer, to determine possible F/CMVSS compliance implications.

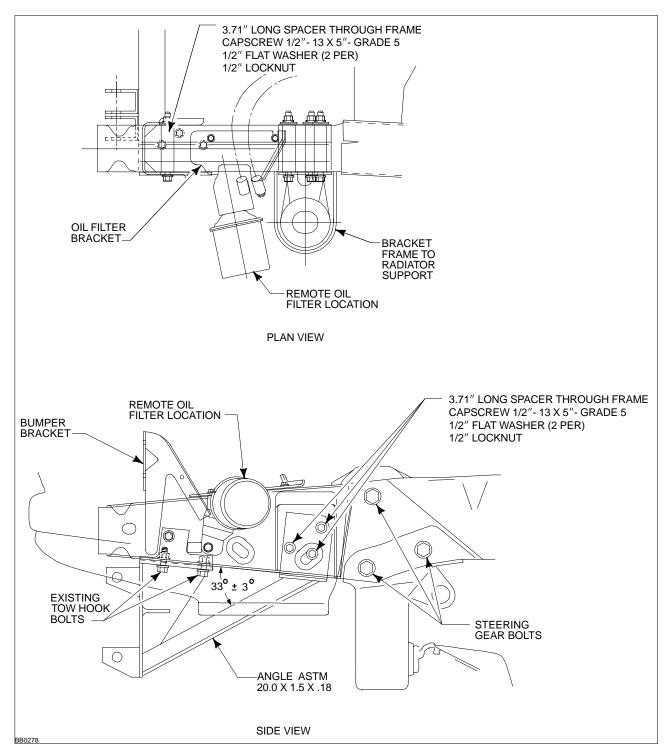

F-150 4x4 REPRESENTATIVE SNOWPLOW MOUNTING HARDWARE

SUPER DUTY F-250-550 4X4 SNOWPLOW INSTALLATION MINIMUM REQUIRED AND RECOMMENDED EQUIPMENT

2002 MODEL YEAR

Page 266

APPENDIX

NOTE: Excursion is not recommended for snowplow usage.

The Super Duty F-Series vehicles tabled below are available for snowplow usage.

Minimum Required Equipment

- Snowplow Package (Option Code 86M), includes:
 - Highest Front ĞAWR's (5200 lb for F250/350; 6000 lb for F450/550)
 - Auxiliary Rear Springs (F-250-350 pickup; F-350 SRW Chassis Cab)
 - Steering damper (F-250-F-350)
 - HD Alternator (Chassis Cab gas engines only)
- Plow and attaching hardware weight limits as tabled below, and permanently-attached undercarriage hardware similar to figure on next page.

Recommended Equipment (not required)

- All terrain tires
- Optional roof clearance lights with SRW Pickup models.

Standard Equipment

- Front stabilizer bar.
- Rear stabilizer bar. (Standard Chassis Cab and DRW Pickup models).
- Roof clearance lights (Standard Chassis Cab and DRW Pickup models).
- Engine oil cooler, transmission oil cooler, and maximum capacity engine coolant radiator are Standard on all Super Duty F-Series.
- All available axle ratios are acceptable.
- Available with manual and automatic transmission.
 Operate automatic transmission in overdrive when snowplowing.

Completed Vehicle Weight

The weight of the completed vehicle with equipment installed (and second unit body, if applicable) must not exceed the Front GAWR, Rear GAWR, or GVWR established by Ford, with consideration for the driver and one front seat passenger. If sufficient weight is added such that the completed vehicle with a driver and more than one passenger would exceed Front GAWR, Rear GAWR, or GVWR, it is the responsibility of the equipment installer to notify the customer of the appropriate use restrictions. (i.e., That the user should limit occupancy of the vehicle to the driver and one passenger while the equipment is installed.

Completed Vehicle Weight (Continued)

The addition of ballast weight, placed rearward of the rear axle, may be required to prevent front end overloading or exceeding Front GAWR. If required, the ballast weight must be securely attached to the vehicle.

For Ford completed vehicles of 10,000 lb GVWR or less, the weight of permanently attached equipment must not exceed the Total Accessory Reserve Capacity (T.A.R.C.) as specified on the Safety Compliance Certification Label. Permanently attached equipment includes the snowplow frame-mounting hardware, and does not include the removable snowplow blade assembly. Exceeding T.A.R.C. will require recertification.

Front End Wheel Alignment and Headlight Aim

Front end wheel alignment (toe) and headlight aim may require readjustment after installation of equipment, and is the responsibility of the equipment installer. Failure to reset front wheel alignment may cause premature uneven tire wear. If required, reset to chassis manufacturer's specifications found in the *Ford Shop Manual*.

Electrical Connections

Installation of any inductive load devices (i.e., electric motors, electric clutches for clutch pumps, etc.) <u>must not</u> be connected to OEM wiring or fuse panels. Power for such devices should be taken directly from the battery or starter motor relay power terminal. Control of these devices should be achieved via relays. No direct current path should exist between OEM wiring and the installed load that is not filtered by the battery. These recommendations are intended to reduce or eliminate any induced reverse voltage into the OEM circuitry.

Warranty

The Normal Ford New Vehicle Limited Warranty applies to vehicles with snowplows installed in accordance with these guidelines. Consult your Ford dealer or the Owner's Guide for any further guestions.

4X4 P	Models						
	w/Driver and One Passenger						
		5.4L V8	100 / 750	100 / 750			
Regular Cab	137.0"	6.8L V10	100 / 750	100 / 750			
		7.3L V8 Diesel	100 / 680	100 / 680			
		5.4L V8	100 / 750	100 / 750			
	141.8"	6.8L V10	100 / 750	100 / 750			
Super Cab		7.3L V8 Diesel	N/R(3)	100 / 680			
Ouper Cab	158.0″	5.4L V8	100 / 750	100 / 750			
		6.8L V10	100 / 750	100 / 750			
		7.3L V8 Diesel	N/R(3)	N/R ⁽³⁾			
	156.2"	5.4L V8	100 / 750	100 / 750			
		6.8L V10	100 / 750	100 / 750			
		7.3L V8 Diesel	N/R(3)	N/R(3)			
Crew Cab		5.4L V8	100 / 750	100 / 750			
	172.4"	6.8L V10	100 / 750	100 / 750			
		7.3L V8 Diesel	N/R(3)	N/R(3)			

- (1) = Includes Pickups ordered with Pickup Box Delete option.
- (2) = 100 / 750 = Maximum 100 lb of permanently-attached hardware / Maximum 750 lb of removable plow blade and hardware. The plow and hardware weight limits shown are based upon a vehicle with maximum buildable Ford option content and 150 lb each for the driver and one front seat passenger.
- (3) = Not recommended for snowplow application; Snowplow Package (option code 86M) not available.

	4x4 Chassis Cab	Models			
Driver and One Passenger				F450 ⁽²⁾	F550 ⁽²⁾
Regular Cab		5.4L V8	100/750		
	140.8" WB 60" CA	6.8L V10	100/750	125/900	125/900
	00 OA	7.3L V8 Diesel	100/750	125/900	125/900
		5.4L V8	100/750		
	164.8" WB 84" CA	6.8L V10	100/750	125/900	125/900
	04 CA	7.3L V8 Diesel	100/750	125/900	125/900
	188.8" WB 108" CA 200.8" WB 120" CA	6.8L V10		125/900	125/900
		7.3L V8 Diesel		125/900	125/900
		6.8L V10		125/900	125/900
		7.3L V8 Diesel		125/900	125/900
		5.4L V8	100/750		
Super Cab	161.8" WB 60" CA	6.8L V10	100/750	125/900	125/900
	00 CA	7.3L V8 Diesel	100/750	125/900	125/900
		5.4L V8	100/750		
Crew Cab	176.2" WB 60" CA			125/900	125/900
	00 OA	7.3L V8 Diesel	N/R (3)	125/900	125/900
	200.2" WB	6.8L V10		125/900	125/900
	84" CA	7.3L V8 Diesel		100/750	100/750

A model designated "N/R" is limited in the amount of load capacity available to support a typical "commercial-weight" snowplow, or would require excessive rear ballast weight.

SUPER DUTY F-SERIES SNOWPLOW INSTALLATION ATTACHMENT GUIDELINES



Page 267


APPENDIX

Compliance

A vehicle that is fully represented by the guidelines in this section will meet all applicable F/CMVSS requirements. Any deviation from this design or manner of installation must be assessed independently from Ford by the snow control equipment manufacturer, or installer, to determine possible F/CMVSS compliance implications.

A metal crossmember is included below the front bumper on 2002 Super Duty F250/350/450/550 vehicles called a "BlockerBeam".

Warning: Removing the BlockerBeam without installing snowplow attachment hardware may effect air bag deployment in a crash. Do not operate the truck unless either the BlockerBeam or snowplow attachment hardware is installed on the vehicle.

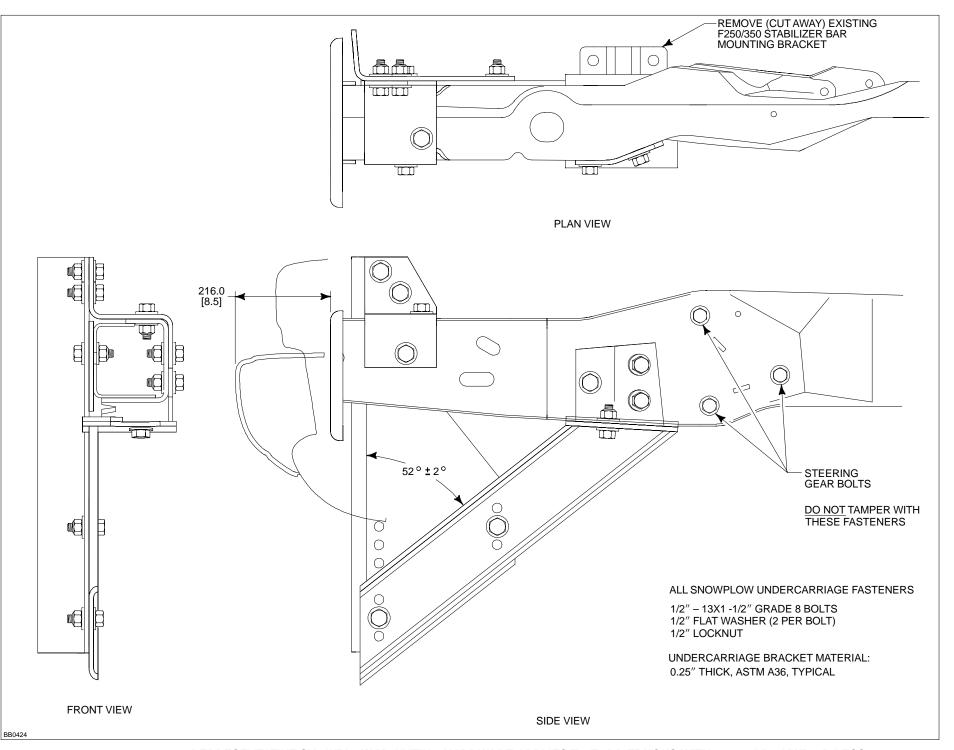

REPRESENTATIVE SNOWPLOW MOUNTING HARDWARE APPLIES TO FORD TRUCKS WITH 10,000 LB GVWR OR LESS


SUPER DUTY F-SERIES TRACTOR FIFTH WHEEL

2002 MODEL YEAR


Page 268

APPENDIX

RECOMMENDED MOUNTING PROCEDURE

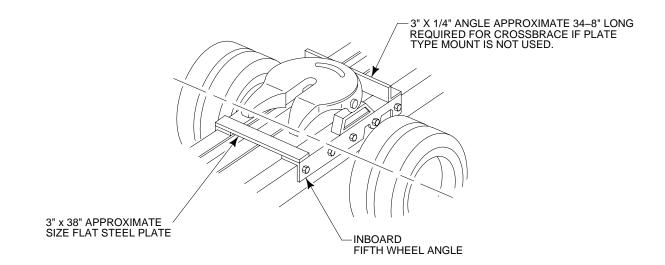



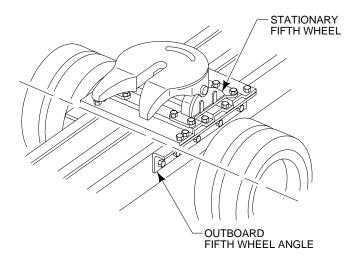

BB0800

ATTACHMENT

Following are recommendations for mounting typical fifth wheels to Ford trucks:

Fifth Wheel Mounting Angles

- Inboard angles must have a minimum horizontal leg of 4 inches and a minimum vertical leg of 3-1/2 inches.
- Outboard angles must have a minimum horizontal leg of 3 inches and a minimum vertical leg of 3-1/2 inches.
- Mounting angles should extend a minimum of 18 inches forward and not less than 12 inches rearward of the fifth wheel's pivot point.
- Fixed fifth wheels: Angles should have a minimum length of 36 inches.
- Sliding fifth wheels: Angles should be at least 1 inch longer in front of and behind the fifth wheel's slide plate and have a minimum length of 36 inches.
- Minimum thickness of 5/16.
- Steel specification ASTM A-36.
- Cutouts to facilitate suspension components require a one inch minimum radius and fastener placement of 1-1/2 inches from edge of cut, fore and aft.
- Primed and painted before installation on aluminum side rails.

Mounting Bolts / Holes

- Grade 8, 5/8 inch minimum fasteners or equivalent substitute with prevailing torque nuts.
- Bolt holes can be 1/32 inch larger in diameter than bolt fastener and must be a minimum of 2 inches from inside of upper flange to centerline of hole and a minimum of 1 inch up from the bottom of the angle to centerline of hole.
- Hardened steel washers are to be employed under both the bolt and locknut unless flanged head bolts, flanged head locknuts or Huck fasteners are used.
- A minimum of five bolts per mounted angle spaced a minimum of 4 inches apart and a maximum of 8 inches apart (except at spring hanger bracket, attaching components or frame assembly attaching parts).

Mounting Considerations / Precautions

- Any gap between the top flange of the frame and mounting angle must be filled with a spacer of a suitable durable material (such as steel or aluminum).
- Fifth wheel kingpin offset forward of the centerline of axle or bogie should be 24 inches or less. Warning, no kingpin offset rearward of the centerline of axle is acceptable. Locating the kingpin rearward of the axle centerline may cause improper load distribution and loss of steering control.
- Care must be taken to avoid interference or contact between fifth wheel and air brake components when rear of fifth wheel is depressed. In order to prevent this, it is recommended that a stop be attached to the underside of the rear extension of the fifth wheel mounting plate.
- To prevent fretting the ends of the mounting angles that contact the top frame, flange should be radiused.

Prohibited Procedures

- Welding mounting angles to side rails or welding any structure or component to angles after the angles are positioned on frame side rails.
- Mounting fifth wheels directly to frame sidemembers.
- Mutilating sidemembers and crossmembers.
- Attaching stop blocks directly to frame sidemembers.
- The use of U-bolts for attaching mounting angles.

POWER TAKE-OFF INSTALLATIONS



Page 269 APPENDIX

Ford Super Duty F-Series Truck Powertrains are designed principally to provide vehicle motivation and short term auxiliary power needs. Power activation of hydraulic or mechanically driven devices such as wrecker lift, snowplow blade lift and movement, power tailgate lift, or dump body lift, are a few examples. The variety of available air circulation, temperature environment, vehicle maintenance level, and other conditions existing with the range of auxiliary horsepower and torque demands that may be placed upon a vehicle in PTO usage, make it difficult to assess the ultimate performance of a vehicle subjected to extended duration usage as an auxiliary power source. The guidelines in this book are intended to assist the PTO equipment installer in avoiding inadvertent vehicle performance and safety concerns. These guidelines should not be considered all inclusive, and it is the responsibility of the PTO equipment installer, to choose and install a PTO system that the vehicle operators will be able to use in a safe manner with the necessary precautions to ensure safe operation and customer satisfaction.

WARNING:

Do not subject the Excursion to any auxiliary power take-off application as this could overheat the fuel tank and increase the risk of personal injury.

AUXILIARY IDLE CONTROL

For Ford 7.3L diesel engine two Auxiliary Idle Control kits are available to elevate the engine idle speed. The kit offered as Regular Production Option Code 96P for F-Series (option Code 961 for E-Series) contains a "full function" Auxiliary Powertrain Control Module or APCM. A "limited function" APCM is included in the kit that is part of the Ambulance Prep Option. See Page 273 for more complete description. For gas engines, the PTO installer will need to obtain high idle throttle control from an aftermarket source.

ELEVATED IDLE FEATURE

For 7.3L diesel engine and 4R100 with PTO provision only. Activating the "PTO Circuit" as shown on page 277 will automatically elevate the engine idle to 1200 rpm in "PARK" or "NEUTRAL" regardless of the parking brake being set. This feature does not require use of the Auxiliary Idle Control option or the APCM.

GENERAL GUIDELINES / WARNINGS


- Additional transmission lubricant may be required with addition of the PTO.
- 2. Follow severe-duty vehicle maintenance schedules, including transmission fluid changes.
- 3. Route PTO hydraulic lines away from the vehicle exhaust system.
- Diesel engines are recommended for stationary PTO operation of extended duration.
- 5. Do not block air flow circulation to the engine coolant radiator, engine and transmission.
- Monitoring the following powertrain fluid temperatures to avoid excessive heat build up. Request a PTO temperature monitor from the PTO supplier where available.

Maximum Engine Top Water: 230° F

Maximum Engine Oil Sump: 284° F

Maximum Transmission Oil Sump: 250° F

- NOTE If any of the above temperatures are exceeded, disengage the PTO operation and return vehicle engine speed to normal idle. Allow the temperature to stabilize at a lower level before re-engaging the PTO.
- 7. The M60D manual transmission case will require a slight modification to package PTO pumps that are mounted directly to the PTO and facing rearward. Refer to Figure 1 for instructions on removing a small tab on the case to obtain clearance for the pump.

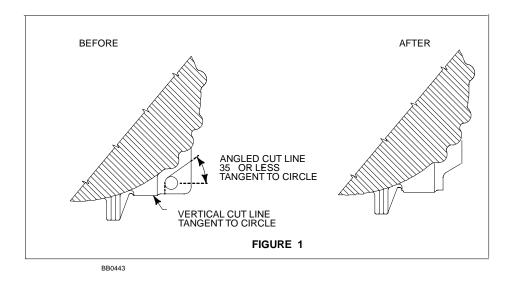

Instructions for removing M60D case tab

A section of the aluminum tab may be removed as indicated above. Use a mechanical tol only, such as a die grinder. DO NOT use a flame torch of ny kind ot remove aluminum transmission case material.

POWER TAKE-OFF INSTALLATIONS



Page 270 APPENDIX

4R100 AUTOMATIC TRANSMISSION

Description:

The 4R100 with PTO port must be ordered as a separate option, Option Code 62R, available for SD F-Series only. It includes a PTO drive gear and in the case of gas engines, has a unique electronic engine control module (EEC) that the non-PTO 4R100 does not have. The PTO port is a non-standard, 6-bolt hole pattern, threaded for M10 metric fasteners, and comes with a reusable controlled compression gasket to control gear mesh installation. The PTO drive gear is functional in all gear ranges: D1, D2, Drive, Reverse, Park, Neutral (except Overdrive). This accommodates both stationary and mobile PTO operation. However, the PTO drive gear is NOT functional in any drive gear when vehicle speed = 0. The Overdrive-Cancel light is designed to illuminate when operating in PTO mode.

- The PTO drive gear is rated at 170 lb-ft torque peak, 120 lb-ft torque continuous use.
- 2. Automatic transmission PTO applications intended for stationary operation must comply with the following engine rpm limitations:


	6.8L Gas Engine	7.3L Diesel Engine
Minimum Engine RPM:	1300 (1)	1200 (2)
Maximum Engine RPM:	2500	2500

- Reference PTO manufacturer's owners manual for recommended PTO pump operating speeds.
- (1) High idle throttle control required. (Electronic Throttle Kicker) and not provided by Ford.
- (2) Automatically controlled by the PCM.
- The 4R100 line pressure tap thread is 1/8-27
 Dryseal N.P.S.F. normal line pressure is
 approximately 50 to 60 psi at normal engine idle;
 and approximately 180 psi at 1200 rpm with torque
 converter clutch applied and PTO circuit activated.
- 4. If the vehicle battery has been disconnected, the powertrain control strategy may "forget" PTP logic and may not respond to commands for elevated idle. To remedy this, a sensor in the transmission needs to count the teeth on the PTO gear.


- 5. Simply drive the vehicle a short distance. Typically, less than a mile will be sufficient to prepare the strategy to respond properly. Driving the automatic transmission in 1st gear may also speed up this memory. Do not rush to drive, but also avoid excessive delay. Once the ignition goes through the <u>ON</u>, <u>CRANK</u> and <u>START</u> cycle the strategy cycle that looks for "PTO" only lasts a relatively short time. Repeat the cycle if the first drive attempt is ineffective.
- 6. A temperature monitor internal to the 4R100 is designed to disengage the PTO drive gear clutch in an over-temperature condition. High torque demand at low vehicle speed can trigger this safeguard. Spreading fertilizer in farming or snowplowing are typical examples. If this occurs, disengage the PTO operation and rest the vehicle in Park or Neutral at normal engine idle to cool the powertrain.
- 7. New for 2002 model year Super Duty F-Series, and placed in the instrument cluster, is a Transmission Fluid Temperature Gauge for automatic transmission only. A complete description is located in the Owner Guide. Here in brief explains what the needle readings mean.

Cold Range: 50° F or colder.

White Area ["Normal"]: Normal operating range, 51 to 248° F.

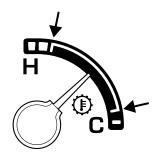


Yellow Area ["Warning"]: Stop driving the vehicle or remove auxiliary loads at the earliest convenience. Typically, leave the engine running at normal idle will aid cooldown. Allow to cool into the normal range before starting to drive again or operate the PTO. The transmission fluid is not overheating, but operating in the Yellow Range for extended periods of time may cause internal transmission damage.

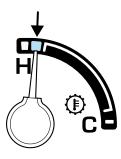

Red Area ["Over-Temperature"]: The transmission fluid is over-heating. Stop the vehicle, do not drive, and allow to cool into normal range.

NOTE: If the gauge continues to show high temperatures, see your Ford or Lincoln Mercury dealer.

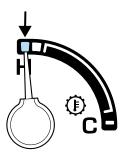

PTO PORT AVAILABILITY

Vehicle	Engine	Transmission	PTO Port Location
F250/350/450/550	5.4L Gas / 6.8L Gas	M60D-HD Manual	LH only
F250/350/450/550	7.3L Diesel	M60D-HD Manual	LH only
F250/350/450/550	6.8L Gas / 7.3L Gas	4R100 Automatic	LH only

For readings in the Red and Yellow areas make sure that snow or debris is not blocking airflow to the radiator and transmission fluid cooler, that cooler lines are not kinked or restricted, and that vehicle load capacities or duty cycles are not excessive.

FRONT END ACCESSORY DRIVE (FEAD) - MOUNTED PTO ("CLUTCH PUMPS")

 An auxiliary crankshaft bearing support is required on all modular gas engine applications where the clutch pump is drawing power from the engine crank pulley. This further applies to all tangentiallymounted auxiliary equipment in general.

A "Spider" Bracket kit can be obtained for this purpose by contacting DewEze Manufacturing, 151 E. Hwy. 160, Harper, Kansas, 67058. Toll free: (800) 835-1042. Fax: (316) 896-7129. It provides up to 70 ft-lb of torque at the "clutch pump". P/N's: (6.8L) XC2E-7275-BB

(5.4L) XC2E-7275-AB

Log on to www.fleet.ford.com/truckbbas/ and select QVM Bulletin List, to obtain bulletin Nos. Q-62 and Q-74 for a complete description.

- Always maintain the clearance relationship between the Ford OEM fan, radiator and shroud to help maintain optimum engine cooling performance.
- 3. Always consider engine roll and body/frame torsion when packaging clearances.
- 4. Restrict application to 5.4L/6.8L gas and 7.3L diesel engines.
- Temperature monitoring of powertrain fluids as noted in the General Guidelines Warnings on page 269 is required.

SPLIT-SHAFT PTO

4R100 automatic transmission is not recommended. Restrict application to manual transmission only. QVM Bulletin No. Q-14, "Guidelines for Modifying Light Truck Drivelines" is available by calling (877) 840-4338.


NOTE: The 4x4 transfer case does not have a PTO port. The F-Super Duty Motorhome Stripped Chassis does not accommodate a PTO.

Temperature monitoring of powertrain fluids as noted in the General Guidelines Warning on page 269 is required.

POWER TAKE-OFF MANUAL TRANSMISSION



Page 271 APPENDIX

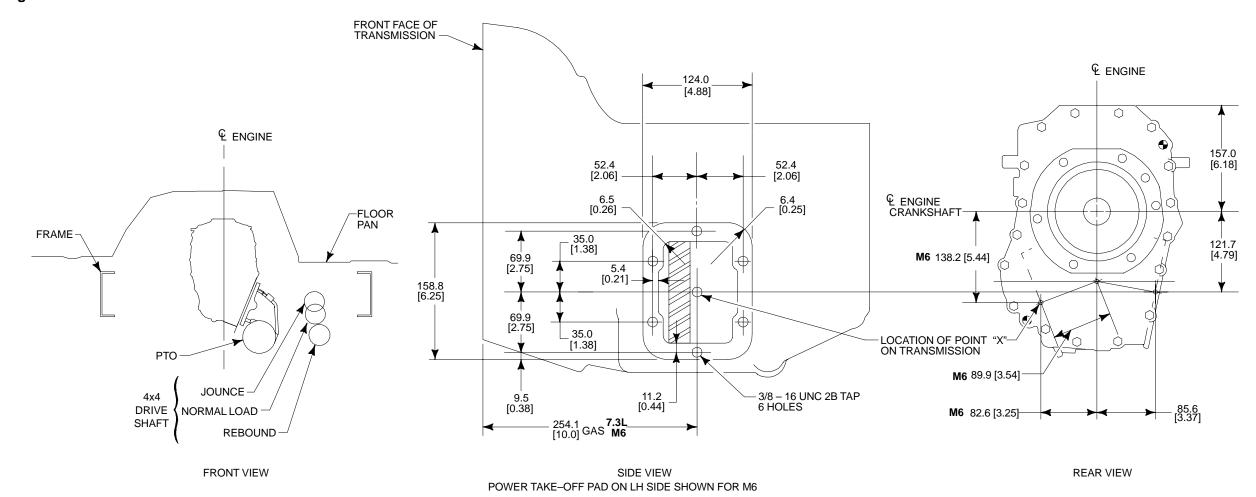

В	BΩ	051

POWERTRAIN COMPATIBILITY								
FORD POWERTRAIN PTO MODEL SERIES (1))		
	Manual	No. of Teeth	PTO Port Location				ti-Gear e Speed	
Engine	Transmission	in PTO Drive	(vehicle side)	Chelsea Muncie		Chelsea	Muncie	
All	M60D	39	LH	N/A	N.A	440	TG	

⁽¹⁾ Consult PTO manufacturer for complete detail on gear set, usage and exceptions.

SG / TG = Single Gear / Two Gear.

N/A = Not available.

GEAR DATA					
TRANSMISSION	M60D				
GEAR RATIO	5.79 (LOW)				
NUMBER OF TEETH	39				
DIAMETRAL PITCH	9.2364				
PITCH DIAMETER	132.568 MM				
NORMAL PRESSURE ANGLE	20°				
ANGLE AND HAND OF HELIX	36° RH				
RPM @ 1000 RPM OF ENGINE	590				
PITCH LINE VELOCITY @ 1000 RPM OF ENGINE	806				


NOTES — [] DIMENSIONS ARE INCHES.

- M60D USES ALL METRIC FASTENERS EXCEPT FOR COOLER LINES.
- DO NOT SCALE DRAWINGS.
- PTO OPENING IS A STANDARD 6 BOLT SAE #J704B.

POWER TAKE-OFF 4R100 AUTOMATIC TRANSMISSION

2002 MODEL YEAR

Page 272 APPENDIX

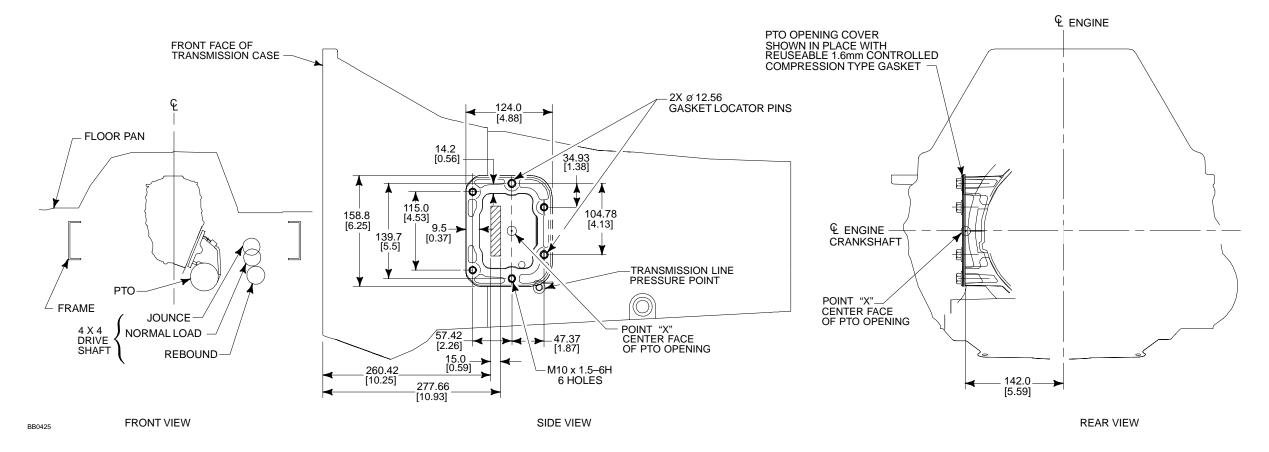

POWERTRAIN COMPATIBILITY								
FORD POWERTRAIN PTO MODEL SERIES (1))	
	Single Gear		Multi-Gear Single Speed					
Engine	Automatic Transmission	No. of Teeth in PTO Drive	Location (vehicle side)	Chelsea	Muncie	Chelsea	Muncie	
6.8L 4X2	4R100	115	LH	N/A N.A	NI A	242	FA-62	
6.8L 4X4		115			N.A	244	FA-64	
7.3L DieseL 4X2	4R100	115	LH	N/A	N/A	242	F4-62	
7.3L DieseL 4X4	41/100	113	LΠ	IN/A	IN/A	244	FA-64	

(1) Consult PTO manufacturer for ocmplete detail on gear set, usage and exdeptions.	
N/A = Not available.	

4R100 TRANSMISSION DRIVE GEAR FRO PTO				
TRANSMISSION 4R100				
GEAR RATIO	2.71 (1 ST)			
NUMBER OF TEETH	115			
DIAMETRAL PITCH				
PITCH DIAMETER	216.33 MM			
NORMAL PRESSURE ANGLE	15.907°			
ANGLE AND HAND OF HELIX	18° Left			
RPM @ 1000 RPM OF ENGINE	1000			
PITCH LINE VELOCITY @ 1000 RPM OF ENGINE FT/MIN	2230 ft/min			

NOTES — [] DIMENSIONS ARE INCHES.

[—] DO NOT SCALE DRAWINGS.

[—] PTO OPENING IS A STANDARD 6 BOLT SAE #J704B.

2002 MODEL YEAR

Page 273 APPENDIX

AUXILIARY IDLE CONTROL KITS

The Auxiliary Powertrain Control Module (APCM), available since 1995-½ to elevate 7.3L diesel engine idle, is replaced by two separate idle control kits described below. The carryover APCM is no longer produced, but all three modules will operate with 7.3L turbo diesel engines from 1995-½ through 2002 model years. Each kit includes an Auxiliary Powertrain Control Module (APCM), wiring harness, mounting bracket with hardwear, operator's card and instruction book. Kits are shipped with the vehicle for customer installation. The APCM wire harness that connects under the instrument panel is not intended to be lengthened. The modules are splash-resistant but not water-proof.

Auxiliary Idle Control Kit Part Numbers

	With "Full Function" APCM	With "Limited Function" APCM	Carryover APCM
	LPO Option Codes: 96P Super Duty F–Series 961 E–Series	Included with Ambulance PP Unavailable separately.	Prior model year Option Code 961 and included with Ambulance PP
E-Series:(1/)	YC2Z-12B641-AA	YC2Z-12B641-BA	F7UZ-12B641-AB
F-250/350/SD (1007):			F5TZ-12B641-AD
F-250/350/450/550:	450/550: XC3Z-12B641-AA XC3Z-12B641-BA		F5TZ-12B641-AD
F-650/750:	XC3Z-12B641-AB	(not available)	

^(1/) APCM mounting bracket, new for for 2000 MY engine cover - Service Part #YC2F-12K526-BA

Vehicle Enabling Conditions (all are required)

Vehicle Disabling Conditions (any one required)

Parking brake applied	Parking brake disengaged
Foot off of service brake	Depressing service brake
Vehicle in PARK (auto. trans.) Foot off of clutch (manual trans.)	Vehicle taken out of PARK Clutch depressed
Foot off of accelerator pedal	
Vehicle speed is 0 mph (stationary)	
Brake lights functional	Brake light circuit disconnected
Engine at stable normal idle speed	

Pigtail Wires "Full Function" APCM Only

Pin Number	Wire Color	Description
1	Red	Source for remote control switch. A 5-volt DC signal reference output.
2	Orange	On/Off input for Charge-Protect. Use a normally–open momentary contact switch, UL-recognized, suitable for the required operating environment.
3	Pink	Input for variable or "customized" RPM. Use a potentiometer or similar device to obtain the variable resistance. Example: Duncan-style POT, 10K $\mbox{Ohm} \pm 20\%.$
5	Black	Signal return for variable RPM input.
7	Gray	On/Off input for RPM control. Use a normally–open momentary contact switch, UL-recognized, suitable for the required operating environment.
11	Yellow	12-volt DC power take-off output. VBAT source (1A) for PTO circuit solenoi

Features


FF: Full Function APCM LF: Limited Function APCM				
	FF	LF	Carryover	
LCD Readout (RPM and Voltage)	Х	No (<u>1</u> /)	Х	
RPM Control (1200-2500 RPM range)	Х	Х	Х	
RPM Control - Automatically activated at engine start	Х		Х	
Battery Charge Protection (2/) 1100-2500 RPM range for Econoline	Х	Х	Х	
Battery Charge Protection - Automatically activated at engine start (3/)	Х	Х	Х	
PTO Activation	Х			
Link elevated idle with PTO to activate together	Х			
Program upper and lower RPM speeds to protect PTO	Х			
Remote control (RPM Control, PTO and Charge Protection)	Х			
Programmable to prevent inadvertent activation of Charge Protection or Manual RPM adjustment features.			Х	

- (1/) Separate aftermarket RPM and voltage meters are required to obtain a readout. However, if the APCM is programmed while engine RPM is at or outside its range of 1200 (or 1100) min. to 2500 max. RPM then the APCM will default to one of its limits. Example: Programming while engine is at W.O.T. of near 3400 rpm will result in the APCM recording a 2500 rpm setting.
- (2/) Works with automatic or manual transmission.
- (3/) Works with automatic transmission only.

2002 MODEL YEAR

Page 274

APPENDIX

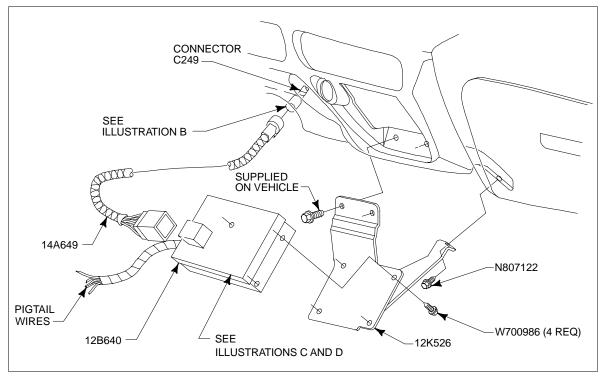

CUSTOMER INSTALLED SWITCHES


TO VEHICLE CONNECTOR

CUSTOMER INSTALLED SWITCHES

TO VEHICLE CONNECTOR

FIGURE A - SUPER DUTY (F-SERIES SHOWN)

FIGURE C - "FULL FUNCTION" APC MODULE

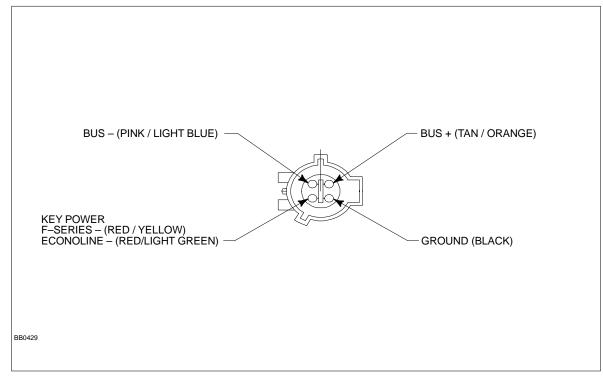

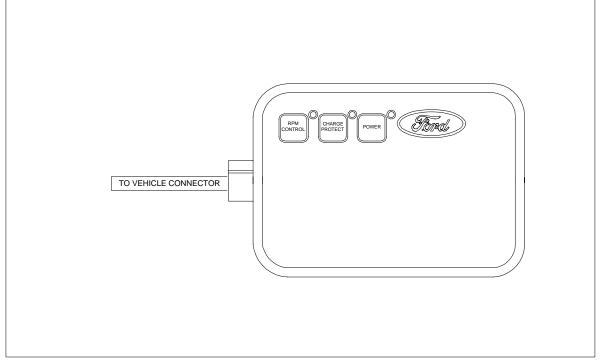


FIGURE B - APC MODULE HARNESS CONNECTOR (VEHICLE SIDE)

FIGURE D - "LIMITED FUNCTION" APC MODULE



Page 275 APPENDIX

"Limited Function" APCM

This module is pre-programmed for Automatic Charge Protection. This means that on engine start-up, the Charge Protect light will flash. If all vehicle enabling conditions* are met, Charge Protection mode will be entered automatically.

- 1. To maintain battery voltage: (This is Charge Protection mode)
 - Press [CHARGE PROTECT] key
 - Charge Protect light flashes
 - Engine speed increases based on voltage requirement
 - Battery voltage is displayed on the screen
- 2. To get a high idle speed: (This is RPM Control mode)
 - Press [RPM CONTROL] key
 - RPM Control light flashes
 - Engine idle speed is elevated to the preset value
 - Current engine speed (RPM) is displayed on the screen


To go back to normal idle:

You can do ANY ONE of the following:

- Press [CHARGE PROTECT] key when in Charge Protection mode
- Press [FORD] key
- Press brake or clutch pedal, take out of park, or release parking brake
- Press [POWER] key (module is turned off)

Vehicle Enabling Conditions* - All must be met for any high idle mode.

- 1. Set parking brake
- 2. Gear selector in PARK for automatic transmissions
- 3. Foot off clutch pedal for manual transmissions
- 4. Foot off service brake
- 5. Foot off accelerator pedal
- 6. Brake lights are connected and functional

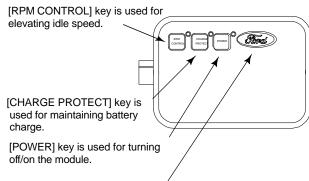

[FORD] key is used for programming and deactivation.

Programming the Module

- 1. Reset Default Programming
- a. Press the [CHARGE PROTECT], [RPM CONTROL], and [FORD] keys simultaneously for 5 seconds.
- b. The default values are restored: Automatic Charge Protection is ON and RPM preset is 1300 RPM.
- 2. Program new RPM Preset Value
- a. With the vehicle stationary (parking brake on and vehicle in park), increase the idle with the accelerator pedal to the desired speed.
- b. Press [RPM CONTROL] and [FORD] keys for 3 seconds to save. RPM Control light turns off when it is programmed successfully.
- c. The preset speed can range from 1100 RPM to 2500 To turn on a Power Take-Off: (This is PTO Control)
- 3. Program Automatic Charge Protection
- a. Press [CHARGE PROTECT] and [FORD] keys for 3 seconds to program off Automatic Charge Protection.
- b. Repeat this step to turn back on.

To maintain battery voltage: (This is Charge Protection)

Press [CHARGE PROTECT] key or Remote Charge Protect button.

To get a high idle speed: (This is RPM Control)

- Press [RPM CONTROL] key.
 - Use [Arrow] keys to select other RPM memory presets.
- Press [FORD] key or Remote Ford button.
 - Use [Arrow] keys to adjust engine speed manually (up/down fast/slow).

Note: If the PTO Control output turns on when RPM Control mode is activated, then PTO Control and RPM Control are programmed to be linked.

To adjust engine idle remotely: (This is Custom RPM Control)

- If Custom RPM is programmed, the [RPM] Control] light will be on, also the display will show the speed associated with the input voltage. If "OFF" is displayed, the input boltage is out of
- Adjust input voltage to the desired engine speed.
- Press [FORD] key or Remote Ford button to activate Custom RPM Control. Use remote pot to adjust engine speed manually.

Press [PTO CONTROL] key to turn on PTO output, press again to turn off.

If programmed for Automatic RPM Control or Automatic Charge Protection, the function will be active whenever the vehicle enabling conditions* are met.


To Go Back to Nomal Idle (and exit RPM Control or Charge Protection mode)

You can do ANY ONE of the following:

- Press key for the function in use (key will be lighted and blinking)
- Press brake or clutch pedal, take out of PARK, or releasing parking brake
- Press [FORD] key or Remote Ford button
- Press [POWER] key

Vehicle Enabling Conditions* - All must be met for any high idle mode.

- 1. Set parking brake
- 2. Foot off clutch pedal for manual transmissions
- 3. Gear in PARK for automatic transmissions
- 4. Foot off service brake
- 5. Foot off accelerator pedal
- 6. Brake lights are connected and functional

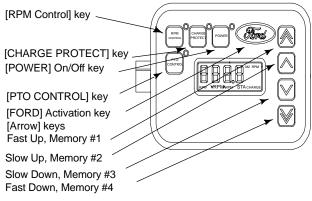

Main Programming Mode

Press and hold [RPM Control], [CHARGE PROTECT], and [FORD] keys for 3 seconds.

- [FORD] key saves entry and moves to the next
- Any [Arrow] key will toggle between options in each menu.
- To Exit, move through all 5 menus or repeat entry process.move through all 5 menus or repeat entry process.

Menu 1 Automatic modes (Base, Auto CP, or Auto RPM)

PTO/RPM link (Linked? No or Yes)

lower PTO limit (Variable, set to <1000 RPM)

upper PTO limit (Variable, set to >2000 RPM) Menu 4

Menu 5 Custom RPM (Base RPM Control or Custom RPM)

RPM Preset Programming Mode

Press and hold [RPM Control] and [FORD] keys for 3 seconds.

- [Arrow] keys adjust Memory Preset #1
- Press [FORD] key to save and go to next menu.
- For another memory preset, press [FORD] and [Arrow] key simultaneously
- To Exit, press [RPM Control] and [FORD] keys simultaneously for 3 seconds





Page 276


APPENDIX

Remote Switch Installation

For Remote RPM Control & Remote Charge Protection, use Momentary Contact (push button) switches with Normally Open contacts. The switches selected should be able to handle a 5VDC, 20mA nominal signal. Quality industrial switches with gold contacts are recommended for contact durability due to the low current.


For Remote Charge Protection:

Connect switch to red VREF output wire and orange CHG input wire. The Remote Charge Protection switch will function the same as the [CHARGE PROTECT] key on the module.

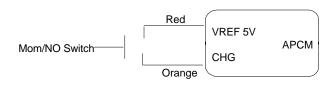

For Remote RPM Control:

Connect switch to red VREF output and gray RPM MC input. The Remote Ford switch will function the same as the [FORD] key on the module for RPM Control activation.

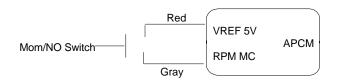

Custom Switch Installation

Custom Remote RPM Control requires a potentiometer type input. The potentiometer or other type of resistor network, is used to adjust the engine speed by providing a voltage between 0.5V and 4.5V to the module. For remote activation, it is recommended that a Remote FORD switch is installed as described above to activate and deactivate Custom RPM Control.


Quality UL recognized industrial switches with gold contacts are recommended for contact durability due to the low current.

Programming is required to use the custom switch.

For information on what engine speed (RPM) value corresponds to what custom input voltage (V), refer to Section 9.

For Remote Custom RPM Control:

Connect potentiometer to red VREF output, black SIG RTN, pink CUSTOM input. The Custom Input Voltage should sweep between 0 and 5V. A $5-10k\Omega$ potentiometer is recommended.

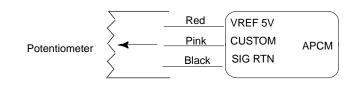

Custom Voltage to RPM Function		
Input Voltage (V)	Engine Speed (RPM)	
<0.5V	(normal idle)	
0.5V	1200	
1.0V	1360	
1.5V	1525	
2.0V	1685	
3.0V	2010	
4.5V	2500	
>4.5V	(normal idle)	
V=(RPM - 1037.5) / 325	RPM = 325 x V + 1037.5	

PTO Control Installation

For 4R100 PTO usage:

Manual Transmission


The APCM can be programmed to link elevated idle to PTO activation with 4R100 PTO automatic transmission only. The feature requires a sensor in the transmission that counts the teeth on the PTO gear, which the manual transmission does not have.


Connect the yellow PTO output to the 12V PTO solenoid AND PTO input circuit to the PCM. Refer to Ford Body Builders Manual for latest Power Take-Off installation information.


For other electrical loads:

Connect the yellow PTO output to an external 12V electrical load.

Refer to Section 9 for specifications for the PTO driver output source.

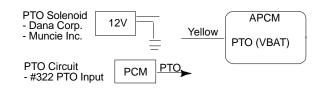

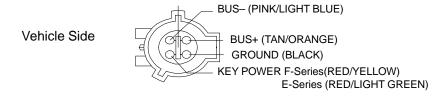

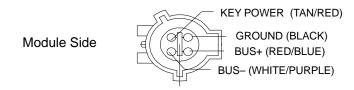

ELECTRICAL WIRING POWER TAKE-OFF CIRCUIT INSTALLATION

Page 277 APPENDIX

The Body Builder must provide a PTO Circuit to alert the PCM to PTO operation. Failure to provide this circuit may result in erroneous emission codes, and inadvertent illumination of the "Service Engine Soon" light during PTO operation.


Circuits 294 (W-LB) is located in the center of the instrument panel, labeled "Power Take-Off Circuit" and


circuit 322 (LB-Y) is located to the right of the parking brake labeled "Customer Pass-Thru/PTO and CTO Circuits" (See Figure A). They are near the customer pass-thru circuits, and are blunt-cut with shrink wrap tubing over the cut ends. They are easier to access from the front of the instrument panel (IP) by removing the

access panel below the steering column (4 quarter turn fasteners).

Splice circuit 294 (W-LB) to the body builder provided wire that connects to the positive side of the PTO indicator switch or PTO control relay. Splice circuit 322 (LB-Y) to the body builder provided wire that connects to the positive (switched) side of the PTO indicator light.

(See Figure C1). In electrically-actuated PTO systems, circuits 294 (W-LB) and 322 (LB-Y) must be relay isolated from the circuit containing the solenoid or PCM DAMAGE COULD RESULT (See Figure C2).

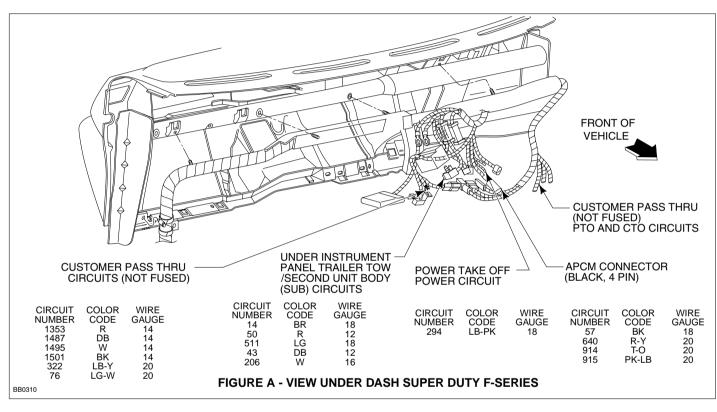

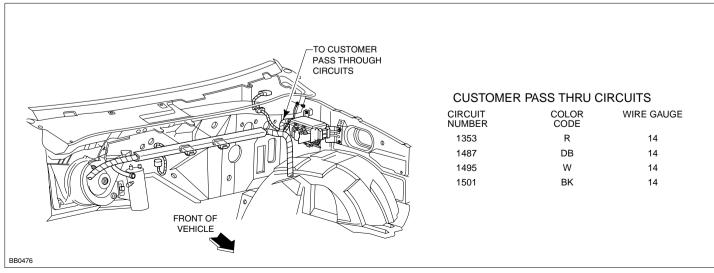

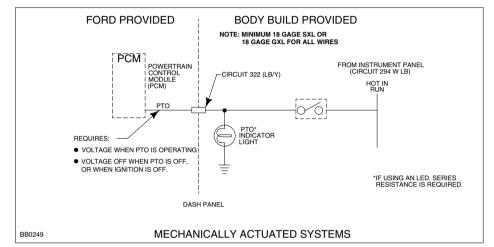


FIGURE C1 - SUPER DUTY F-SERIES

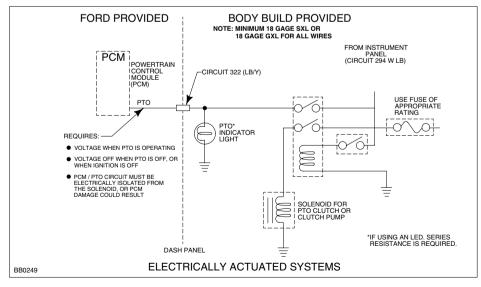


FIGURE C2 - SUPER DUTY F-SERIES

ELECTRICAL WIRING CUSTOMER ACCESS CIRCUITS

2002 MODEL YEAR Revised 10-09-01

Page 278

APPENDIX

- 1. Super Duty F-Series and selected E-Series Super Duty vehicles are equipped with a number of conveniently located electrical wiring taps. Most taps are fused, having locations under the instrument panel, in the engine compartment, and at the rear of the frame. Illustrations, schematics and a wiring harness for Trailer Tow is provided in a cardboard box shipped with each vehicle. The circuits at the rear of the frame are provided to support trailer wiring requirements or the Second Unit Body (SUB) additions. The Super Duty F-Series Circuit chart on the next page is a brief description of each circuit function, wire gauge, color code and electrical schematic.
- The Ford starting and the charging system should not be altered.
- 3. The completed vehicle total electrical load must not exceed the maximum output of the alternator.
- 4. Do not route or attach electrical wires to fuel lines.
- 5. Engine compartment wiring must not be rerouted in any manner.
- 6. The Super Duty F-Series electronic Powertrain Control Module (PCM) circuit 729 (R/W), PIN 55 requires battery power to be supplied at all times so as to maintain the keep alive memory. Keep this in mind when installing load disconnect switches or solenoids. Loss of power to PCM Pin 55 will also cause the automatic PTO RPM control function to be disabled. To restore the PCM/PTO function, drive the vehicle for approximately one mile.
- The 7.3L diesel engine requires two batteries wired in parallel for proper starting operation and must not be isolated. Do not modify the Glow Plugs Power Circuit.

- 8. Ford recommends that all additional underhood and underbody wiring:
 - be cross-linked polyethylene, or equivalent, high temperature insulation wire 125° C {257° F} minimum rating.
 - meet SAE specifications J1128 type SXL, GXL or TXI.
 - meet SAE J1127 type SGX or STX for battery cables.
 - be protected with nylon convoluted tubing.
 - be located so as to avoid or minimize restriction of airflow through the engine compartment, underbody and fuel system.
 - be of sufficient length to be properly routed, so as not to interfere with operating zones of such components as throttle or transmission linkage.
 - not be routed near the exhaust system or nay other source of high heat; melted insulation can result in electrical shorts and system failure.
 - be routed away from hostile surfaces and sharp edges and be secured in its intended location.
 - be protected by rubber grommets when it passes through body or frame openings. Use customer access pass-thru circuits provided on Super Duty F-Series as shown in Figure B on page 277, to avoid additional openings between passenger and engine compartments.
 - be protected from electrical shorts by fuses or circuit breakers.
 - be routed 38mm [1.5in] away from engine.

- 9. Interior wiring not exposed to high temperatures may be SAE approved, general purpose wire.
- Ground the second unit body to the frame in at least two locations, and if required, add an additional frame to engine ground cable to improve the ground path to the battery.
- Splicing into circuitry relating to the powertrain control systems is not acceptable because of the adverse effect on the electrical system operation.
- 12. Batteries must be disconnected before welding to body and chassis components. Note that disconnecting the batteries will result in a memory loss on electronic engine/ transmission controlled vehicles. The vehicle will require several miles of driving in various driving modes to restore its memory and regain optimum operating conditions.
- Electrical connections exposed to the elements should be appropriately protected.
- 14. Do not ground the body to the transmission or transmission crossmember.
- 15. Ignition circuit of any engine should not be altered.
- Alternator circuit wiring must not be altered by cutting, soldering or splicing.
- 17. Aero type head lamps are plastic and have protective coatings which can be damaged by solvents or tape. Refer to the Owner's Guide for proper cleaning procedures.

- 18. For convenience (4) 14 ga. pass thru circuits are located under the center of the I/P and the LH fender apron. These circuits provide an unfused means to interface with the engine compartment and frame wiring without drilling through the dash panel and installing a wire harness grommet to prevent water leaks. See Figure B, page 277 and Figure B on the following page.
- Center High Mounted Stop Lamp (CHMSL) wiring taps are provided on E-Series Super Duty Cutaway Stripped Chassis and Super Duty F-Series Chassis Cab vehicles. See Figure B on page 279.
- 20. Electrical bulbs are listed in the Owner's Manual Bulb Chart. Check for the "DOT" marking on the bulb base which means the bulb meets U.S. quality standards. Bulbs without the "DOT" marking or that produce different colors other than the original bulbs as listed in the bulb chart, may affect the lamps light output, aim, glare nd your safety; in addition, such bulbs may burn out early or damage the lamp.
- 21. Super Duty F-Series vehicles are equipped with a clean tachometer output (CTO) wiring tap. The tap is designated circuit 76 (LG/W) and is located under dash near the parking brake pedal. See Figure A, page 277. This tap should be used if a tachometer signal is required.

2002 MODEL YEAR

ELECTRICAL WIRING CUSTOMER ACCESS CIRCUITS

Page 279 APPENDIX

CIRCUIT CHART

CINCOTT CHART				
Circuit Number	Color Code	Wire Gauge	Functional Description	
14	BR	18	Marker lamp feed to electric brake controller	
43	DB	12	Electric trailer brake controller to trailer	
49	0	12	Relay feed ignition run	
50	R	12	Trailer brake controller or B + feed	
52	Υ	16	Fused left hand stop/turn	
64	DG	16	Fused right hand stop/turn	
206	W	16	Ground	
295	LB-PK	18	Fused hot in run	
322	LB-Y	20	Power takeoff relay or switch to powertrain control module (PCM)	
511	LG	18	Center high mount or lamp feed stop	
962	BR-W	16	Relay feed marker lamps	
963	BK-LG	16	Relay feed backup lamp	
1353	R	14	Customer pass thru circuits	
1487	DB	14	Customer pass thru circuits	
1495	W	14	Customer pass thru circuits	
1501	BK	14	Customer pass thru circuits	

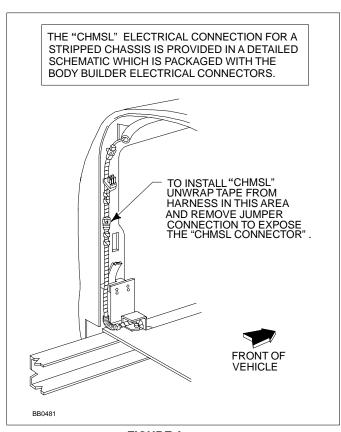


FIGURE A E-SERIES SUPER DUTY CUTAWAY


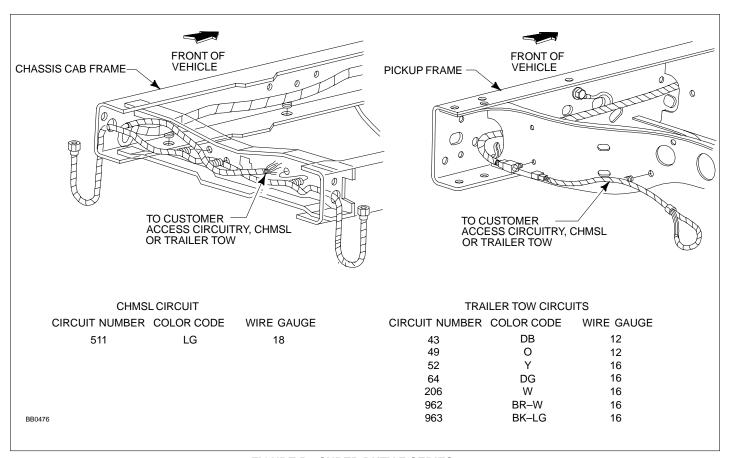


FIGURE B - SUPER DUTY F-SERIES

ELECTRICAL WIRING SUPER DUTY F-SERIES — TRAILER TOW SECOND UNIT BODY WIRING TAP SCHEMATIC



Page 280 APPENDIX

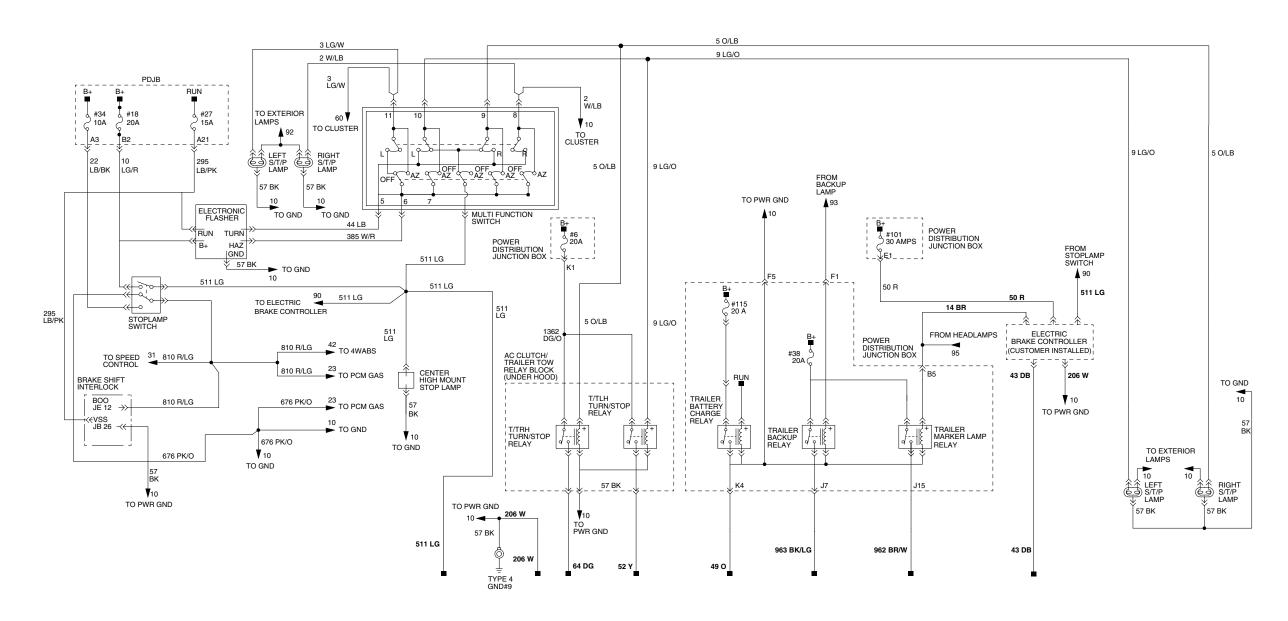

BB0320

ELECTRICAL WIRING GENERAL PRACTICES

Page 281 APPENDIX

This section provides instructions for the addition of electrical devices to the vehicle electrical system by body builders.

(Vehicles stored on site should have the negative battery cable disconnected to minimize "Dead Battery" situation. This applies to both "incomplete" and "complete" vehicles in storage.)

After all electrical or vehicle modifications, perform the on-board diagnostics as described in the powertrain control/emissions diagnosis manual to clear all diagnostic trouble codes (DTCs). Road test vehicle and rerun the on-board diagnostics to verify that no DTCs are present. If DTCs are generated perform the appropriate diagnostic procedures and repairs. Vehicle operation (engine/transmission) may be affected if DTCs are not serviced.

F/CMVSS, U.S. and Canadian RFI Requirements:

- All Ford vehicles built and fully completed by Ford, comply with F/CMVSS No. 108, "Lamps, Reflective Devices and Associated Equipment" and other applicable F/CMVSS that affect electrical components.
- Incomplete vehicles (i.e., Chassis Cab, Stripped Chassis, etc.) will conform to the F/CMVSS according to the provisions and conditions stated in the *Incomplete Vehicle Manual* (IVM) attached to each incomplete vehicle. Care must be taken that modifications do not conceal, alter or change components installed or provided by Ford Motor Company to achieve this conformance.
- Devices that emit radio frequency (RF) energy, such as AM/FM radios and radio-controlled security systems, marketed for sale or use in the United States are subject to the rules and regulations of the Federal Communications Commission (FCC) 47 CFR Parts 2 and 15.

These rules specify the following conditions of operation:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In addition, the FCC's Rules may require the device to be tested and found to comply with various RF interference emission limits before it may be marketed. The FCC establishes different limits according to the particular use and installation of RF devices. In some cases, a grant of equipment authorization from the FCC also must be obtained before any RF device may be marketed. Labeling with certain FCC information may also be required.

To ensure continued compliance with the FCC's requirements, the owner, user, custom manufacturer, or service technician must not modify or change the RF device in a manner not expressly approved by Ford Motor Company. Such modifications could void the authority to operate the device.

4. All vehicles powered by spark ignition internal combustion engines (e.g., gasoline or liquid petroleum gas engines) and manufactured in Canada or for sale or use in Canada are subject to the Canadian "Regulations for the Control of Interference to Radio Reception," SOR/75-629, Canada GAzette Part II. Vol. 109. No. 21. November 12, 1975, as amended by SOR/77-860, Canada Gazette Part II. Vol.111. No. 21. November 9, 1977, by SOR/78-727, Canada Gazette Part II, Vol. 112, No. 18, September 27, 1978, and by SOR/80-915, Canada Gazette Part II, Vol. 114, No. 23, December 10, 1980. Violation of these regulations is punishable by fine or imprisonment. Ford-built incomplete vehicles other than stripped chassis are designed and manufactured to be capable of meeting the regulatory requirements or such modifications thereof as may be authorized by the Canadian Department of Communications.

However, because Ford has no control over how an incomplete vehicle is completed by subsequent stage manufacturers, Ford does not represent that the completed vehicle incorporating the Ford-built components will comply with applicable requirements.

Routing & Clipping:

- 1. It is strongly recommended that wiring in areas of heavy rework, or in areas where welding operations are to be performed, be removed prior to the rework operations and reinstalled after the rework is completed. If vehicle is equipped with an Electronic Engine Control System (EEC V), the EEC V Module must be disconnected before any electrical welding is performed, otherwise module damage may result. If wire removal is not practical, the wires must be shielded from damage due to the rework and welding heat. All components and wiring should be reinstalled as closely as possible to the way it was installed before removal.
- Wire routings of newly installed components or wire routing revisions of the Ford harnesses necessitated by reworks must conform to the following:
- Wires routed through holes in sheet metal or castings must have the hole edges protected by a grommet.

- Wires should be routed to avoid metal edges, screws, trim fasteners and abrasive surfaces. When such routings are not possible, protective devices (shields, caps, etc.) must be used to protect the wires and when wires must cross a metal edge the edge should be covered with a protective shield and the wiring fastened within 3 inches of the edge.
- Wires must be routed to provide at least 3 inches clearance to moving parts, unless positively fastened or protected by a conduit.
- Existing heat shields, insulation, and wire shielding/twisting must be maintained.
- Wire routings should avoid areas where temperatures exceed 180° F and a minimum clearance of 6 inches should be maintained from exhaust system components. Where compliance with this requirement is not possible, high temperature insulation and heat shields are required.
- When wiring is routed between two members where relative motion can occur the wiring should be secured to each member, with enough wire slack to allow flexing without damage to the wire.
- Wiring to all circuit components (switches, relays, etc.) in exposed locations must provide a drip loop to prevent moisture from being conducted into the device via the wire connection.
- Routing wires into areas exposed to wheel wash should be avoided. When such routings cannot be avoided, adequate clipping or protective shields are required to protect the wires from stone and ice damage.
- The wire retainers and grommets installed by the assembly plant are usually designed to accommodate only the Ford-installed wires. Additional wiring or tubing should be retained by additional clips. When added wires or tubes are routed through sheet metal panels, new holes, with proper wire protection and sealing, must be used.
- All wiring connections to components of the factory-installed system must be accomplished by using the proper mating wire termination. (Connections on studs and ground connections must use eyelet terminations, connections to female bullets must terminate in male bullets, etc.)

Splice/Repair:

When necessary to splice wire for repair or circuit length revisions, the following guide should be followed:

 Wire ends should be stripped making sure that individual conductor strands are not damaged.

- When soldering, make sure an adequate mechanical joint exists before applying solder. Use only rosin core solder — never acid core.
- For crimp joints, use butt-type metal barrel fasteners and a proper tool (such as Motorcraft crimp tool S-9796) specifically designated for this type of work.
- Splice joints must be adequately sealed and insulated. Adhesive lined heat shrink tubing is highly recommended to cover soldered and bare, metal barrel, crimp joints. Quality electrical tape can be used inside the vehicle but is not recommended for an outside environment.
- Seal the ends of insulated barrel crimp devices with a silicone grease when in an outside environment.
- The most durable splice joint will be bare metal barrel crimped, flow-soldered and covered with adhesive lined heat shrink tubing. Use this type of joint as often as possible.

Circuit Protection:

- Modification to existing vehicle wiring should be done only with extreme caution and consideration of effects on the completed vehicle electrical system. Anticipated circuitry should be studied to ensure that adequate circuit protection will exist and that feedback loops are not created.
- Any added circuitry must be protected either by a base vehicle fuse or breaker, or by a similar device installed by the body builder.
- 3. When adding loads to a base vehicle protected circuit, make sure that the total electrical load thru the base vehicle fuse or breaker is less than 80% for fuses in the passenger compartment and 60% for fuses under hood or under body of the device rating to prevent nuisance fuse blows.
- Total current draw is the sum of the base vehicle circuit current requirement (measured with an ammeter) and the anticipated add-on components current requirements.
- Never increase the rating of a factory installed fuse or circuit breaker.
- For added lamp loads, the "Bulb Chart" on page 282 will aid in determination of common lamp current draws.

ELECTRICAL WIRING BULB CHART



Page 282 APPENDIX

If the **total** electrical load on a factory circuit, after the addition of electrical equipment, is less than 80% of the fuse or circuit breaker protection rating in that circuit or less than the capacity of some limiting component (Switch, Relay, etc.), the items to be added can be connected directly to that circuit. For fuses located in the engine compartment, the electrical load should not exceed 60% of the fuse or circuit braker protection rating.

If the total electrical load to be added on a factory circuit exceeds the value of the circuit protection, or the value of some limiting component, the items to be added **cannot** be added directly to the circuit.

- Added electrical devices exceeding the current capabilities of the factory wiring system must be controlled through the use of a relay. The coil of the relay can be fed from the factory wiring (now acting as a signal circuit) with the added wiring providing the power feed to the added electrical device through the relay power contacts. (The relay selection is important and depends on current requirements, number of cycles expected in the relay lifetime, whether the relay is to be operated intermittently or for long periods of time, and whether the relay is exposed to weather conditions or is installed in a protected area. When the current requirements of a circuit exceed the capacity of an available relay, more than one relay can be used if the circuit is wired to split the load).
- The factory wiring should not be used as a power feed to the relay power contacts or switches. Battery power is to be supplied from the starter motor solenoid positive terminal for added circuits requiring a maximum of 30 Amps or directly from the battery positive terminal for added circuits requiring greater than 30 Amps of current.

Caution — Never use the stud on the underhood fuse panel as a junction point.

Circuit protection (fuses or circuit breakers) must be provided for all added wiring. The protection device rating should not exceed the current requirements for the add-on components and should be installed as close to the point of tapped power as possible.

Wire Gage:

- 1. When adding wiring, the wire gage size should be determined as follows:
- Where wire is spliced to extend a circuit, the added wire should have a gauge at least that of the circuit being lengthened.
- Where wire is being added to feed add-on devices, the Wire Gage Table on this page should be used. (Note: Current capacity of a given wire varies with temperature and type of insulation. The table, however, represents generally accepted values as a guide).

All added underhood or underbody wiring should have a thermoset insulation (such as Hypalon or Cross-linked polyethylene).

SAE specifications J1128 type SXL, GXL or TXL.

SAE specifications J1127 type SGX or STX for battery cables.

WIRE GAGE TABLE

Wire Gage	Maximum Current Capacity (Plastic Insulated Copper Wire)
20	10 Amps
18	15 Amps
16	20 Amps
14	25 Amps
12	30 Amps
10	40 Amps
10	40 / linps

BULB CHART

	ANDLE POWER	CURRENT @ RATED VOLTAGE
90	6	0.58 Amps @ 13.0V
94	15	1.04 Amps @ 12 .8V
97	4	0.69 Amps @ 13.5V
97A	3	0.69 Amps @ 13.5V
105	12	1.00 Amps @
161	1	0.19 Amps @14.0
168	3	0.35 Amps @ 14.0V
194	2	0.27 amps @ 14.0V
211-2	12	0.97 amps @ 12.8
212-2	6	0.74 Amps @ 13.5V
214-2	4	0.50 Amps @ 13.5V
561	12	0.97 Amps @ 12.8V
582	6	0.74 Amps @ 13.5V
631	6	0.63 Amps @ 12.8V
1076	32	1.80 Amps @ 12.8V
1156	32	2.10 Amps @ 12.8V
1157	32	2.10 Amps @ 12.8V
1157	3	0.59 Amps @ 14.0V
1157 NA	24	2.10 Amps @ 12.8V
1157 NA	2.2	0.59 Amps @ 14.0V
1178	4	0.69 Amps @ 13.5V
1195	50	3.00 Amps @ 12.5V
904	4	0.69 Amps @ 13.5
906	6	0.69 Amps @ 13.0
912	12	1.0 Amps @ 12.8
89	6	0.58 Amps @ 13.0
1095	4	0.51 Amps @ 14.0
1196	50	3.00 Amps @ 12.5V

BULB TRADE NUMBER	CANDLE POWER	CURRENT @ RATED VOLTAGE
1445	0.7	0.14 Amps @ 14.4V
1815	1.4	0.20 Amps @ 14.4V
1816	3	0.33 Amps @ 13.0V
1891	2	0.24 Amps @ 14.0V
1892	0.75	0.12 Amps @ 14.0V
1893	2	0.33 Amps @ 14.0V
1895	2	0.27 Amps @ 14.0V
4000	37.5, 60 Watts	3.14. 5.04 Amps @ 12.8V
4001	26,000	3.14 Amps @ 12.8V
4405	50,000	2.58 Amps @ 12.8V
4412	35 Watts	2.74 Amps @ 12.8V
4414	18 Watts	1.41 Amps @ 12.8V
H6054	35, 65 Watts	2.94, 5.46 Amps @ 14.0V
4415	35 Watts	2.73 Amps @ 12.8V
4416	30 Watts	2.34 Amps @ 12.8V
4435	75,000	2.34 Amps @ 12.8V
6015	27,500 Low 30,000 Hi	4.10, 4.97 Amps @ 12.8V
6014	27,500 Low 30,000 Hi	4.20, 4.97 Amps @ 12.8V
6112	40, 50 Watts	3.10. 3.91 Amps @ 12.8V
1295	50	3.0 @ 12.5
563	4	0.50
37	0.5	0.09 @ 14.0
2162	0.5	0.1 @ 14.0

ELECTRICAL WIRING POWERTRAIN CONTROL SYSTEM APPLICATION

2002 MODEL YEAR

Page 283 APPENDIX

ELECTRICAL:

Guidelines for Powertrain Control System Application

SYSTEM:

All Powertrain Control Module wiring, in particular the 12A581 and 14401, must be a minimum of 2 inches from secondary ignition coil wires and at least 4 inches from the distributor, ignition coil tower, and starter motor (and its wiring) as well as 4 inches from the alternator output wiring.

These clearances apply in particular to all PCM sensor and actuator pigtail wiring.

PCM wires shall not be in the same bundle as other high-current non-PCM circuits (e.g., tachometer wire from coil to Thick Film Ignition Module (TFI), power seat/door lock/window, horn, alternator reg.) for a distance of more than 20 inches. Please refer to Electrical on page 281.

COMPONENTS:

BPP Brake Pedal Position Switch: Supplies the processor a signal for converter clutch operation. A connection here may have an adverse effect on transmission operation. Refer to the ELECTRICAL WIRING SECTION "ADDING LIGHTS OR ELECTRICAL DEVICES" (page 245) for guidelines.

CAUTION: Any connection to the PCM-V system (i.e., wiring, components) or alterations to the system may adversely affect vehicle operation (transmission and/or engine).

BARO/ Barometer Pressure Sensor/Manifold Absolute
MAP Pressure Sensor: Must be physically in a higher location than the intake manifold and angled with the vacuum nipple at least 4 degrees downwards. MAP vacuum line must have a downward slope to the manifold without any potential kinking or twisting. BARO has no vacuum line.

DTR Digital Transmission Range Sensor: Located on the outside of the transmission at the manual lever. The DTR sensor completes the Start circuit in Park and Neutral, the Back-Up Lamp circuit in Reverse and the Neutral Sense circuit (4x4 ONLY) in Neutral. The DTR Sensor also opens/closes a set of four switches that are monitored by the Powertrain Control Module (PCM) to determine the position of the manual lever (P,R,N,D,2,1). Do not tap into or splice any wire to the DTR circuits or engine and transmission damage may occur and affect its operation.

HO₂ Heated Oxygen Sensor: Pigtail wire must be at least 4 inches from the exhaust pipe and exhaust manifold. If necessary, a clip should be used to secure its location. PCM Powertrain Control Module: Location must be completely shielded from weather and case

grounded to sheet metal. It should be oriented such that no moisture can accumulate in the 104-way connector. The ambient temperature at the PCM module shall not exceed 80° Centigrade (176° Fahrenheit). Exterior surface shall not exceed 140°F.

NOTE:

The powertrain control module requires battery power to be supplied at all times to maintain the keep-alive memory. Keep this in mind when installing load disconnect switches or solenoids.

TP Throttle Position Sensor: Supplies a throttle position signal to the PCM-V processor. Do not tap into or splice any wire to the TP sensor.

VSS

Vehicle Speed Sensor for Trucks: The source of vehicle speed is model dependent. Possible sources are the Anti-Lock Brake System (ABS), a gear driven Vehicle Speed Sensor or the transmission Output Shaft Speed (OSS) Sensor. On 4x4 applications with a manual shifted transfer case, the Transfer Case Speed (TCSS) Sensor is the source of vehicle speed. The vehicle speed signal is either an A/C signal whose frequency changes with speed, or a SCP Data message depending on the source. Some applications have both. The vehicle speed signal is an input to the various sub-systems such as the PCM. instrument cluster (speedometer and odometer), speed control system, etc. The vehicle speed source must be operational to enter certain vehicle diagnostics. Do not tap into or splice any wire to the VSS input or sensors or engine and transmission damage may occur. If an additional vehicle speed signal is required, an additional sensor must be installed.

SPEEDOMETER CALIBRATION

The vehicle speedometer receives the calibrated speed signal (sine wave) from the ABS Module or the Rear only ABS (ZWAL) Module through Circuit 679 (GY/BK) [except Mexico where the signal is received from the Central Timing Module (CTM) Module]. The input to the ABS, ZWAL, or CTM Module is provided by the DSS (Differential Speed Sensor) in the rear axle through Circuits 523 (R/PK) and 519 (LG/BK). If a tire change is performed, it is necessary to configure the ABS, ZWAL, or CTM Module so that the correct vehicle speed is indicated on the speedometer.

The square tooth tone wheel in the rear axle is attached to the ring gear. A variable reluctance sensor is mounted to the front section of the rear axle housing with a precise air gap with respect to the tone wheel. These two components make up the DSS (Differential Speed Sensor). The rear axle case has a fixed mounting boss for the variable reluctance sensor and therefore the air

gap is non-adjustable. All factory tone wheels have 120 teeth for every rear axle ratio offered. If the rear axle is changed, provisions for a tone wheel and the variable reluctance sensor have to be made. Calculations involving the circumference and output frequency would have to be made and are beyond the scope of this manual. It is necessary to configure the ABS, ZWAL, or CTM Module so that the correct number of tone wheel teeth are recorded in the module.

The following table gives tire sizes and revolutions per mile values. If the tire make and size is not found in the table, the tire revolutions per mile must be calculated as outlined below. The tire manufacturer may be able to provide the revolutions per mile value. Once the tire revolutions per mile value is known, proceed to the Module Configuration section.

TIRE SIZE AND REVOLUTIONS PER MILE

TIRE SIZE	MAKE/ APPLICATION	REVOLUTIONS/ MILE
LT215/85R16	FIRESTONE/ ALL SEASON	682
LT235/85R16	GOODYEAR/ ALL SEASON	655
LT235/85R16	GENERAL/ ALL SEASON	657
LT235/85R16	GOODYEAR/ ALL TERRAIN	653
LT235/85R16	GENERAL/ ALL TERRAIN	654
LT265/75R16	FIRESTONE/ ALL SEASON	655
LT265/75R16	FIRESTONE/ ALL TERRAIN	649
225/70R19.5	GENERAL/ ALL SEASON	653
225/70R19.5	GENERAL/ ALL TERRAIN	654
7.50X17	FIRESTONE	605
7.50X17	GOODYEAR	620

CALCULATING TIRE REVOLUTIONS PER MILE

Position the vehicle on level ground, load with the standard weight for the specific application, and inflate the tires to the recommended pressure (ensure that the tires are cold).

Measure the tire height from the ground to the top of the tire in inches. Ensure an accurate reading to the nearest 1/8 inch

Divide 20,168 by the tire height in inches to get the tire revolutions per mile.

EXAMPLE: Measured tire height - 33 inches

REVOLUTIONS/MILE = 20168/33 = 611 Revolutions/Mile

REQUIRED TOOLS

Rotunda New Generation Star (NGS) Tester.

Ford Service Function (FSF) Program Card Version 1.1 or newer.

The Rotunda New Generation Star (NGS) Tester and the Ford Service Function (FSF) Program Card can be obtained from Hickok Electrical Instrument Company by contacting (216) 541-8060 Extension 225. If your company has an account with Rotunda, contact Rotunda - OTC Division at 1-800-533-5338.

MODULE CONFIGURATION

Ensure that all harness connectors are connected to the module that requires configuration.

Plug the NGS tester into the data link connector located below and to the right of the steering column.

Actuate the ignition switch to the RUN position (engine off).

Insert the Ford Service Function (FSF) Program Card into the Rotunda New Generation Star (NGS) Tester.

Select SERVICE BAY FUNCTIONS using the trigger button.

Scroll the highlight bar down to the module requiring configuration (see the Speedometer Calibration section). For the ZWAL Module, use the ABS option.

Press the trigger button to select the module and select the TIRE SIZE/AXLE RATIO CONFIGURE using the trigger button.

The current configuration cannot be read on this vehicle line. Press the trigger button to continue.

Select TIRE SIZE by pressing the trigger button. Use the dial to select the custom revolutions/mile entry and press the trigger button. Enter two zero's using the number buttons and enter the 3-digit revolutions/mile value for the desired tire using the number buttons.

Using the dial, select TONE RING SIZE and press the trigger button. Use the dial to select the rear axle ring gear size (10.25 in, 10.5 in or 11.25 in) and press the trigger button. If the preceding options are not present, use the dial to select the custom number of teeth and press the trigger button. Enter two zero's using the number buttons and enter the 3-digit tone wheel teeth value using the number buttons. Unless the axle has been changed, enter 120 as the number of tone wheel teeth.

Using the dial, select OPTION and press the trigger button. Use the dial to select N/A and press the trigger button.

Using the dial, select VEHICLE and press the trigger button. Use the dial to select F250/350 and press the trigger button.

Press done (numeric 8 button) and the module will be programmed with the above data entered. To reprogram, repeat the above procedure.

ELECTRICAL WIRING ADDING LIGHTS OR ELECTRICAL DEVICES

2002

APPENDIX Page 284

Although there are many points in the truck electrical system to connect additional circuits certain connection points are recommended for reliability and convenience. This section defines the recommended connection points for each Ford Truck model and the maximum electrical loads allowable. CAUTION: Improper electrical tie-ins may affect vehicle operation (i.e., engine transmission).

After all electrical or vehicle modifications. perform the on-board diagnostics procedures as described in the powertrain control/ emissions diagnosis manual to clear all diagnostic trouble codes (DTCs). Road test vehicle and rerun the on-board diagnostics to verify that no DTCs are present. If DTCs are generated, perform the appropriate diagnostic procedures and repairs. Vehicle operation (engine/transmission) may be affected if DTCs are not serviced.

Alternative connections or wiring practices are not recommended as certain modifications may result in other circuits becoming nonfunctional. Disconnect the battery negative (ground) cable and remove it from the battery carrier prior to any vehicle modification. Upon completion of body or equipment installation, all wiring should be checked for proper routing, etc. to preclude electrical shorts upon reinstallation of the battery negative cable.

Do not splice into the Powertrain System (PCM-V). Connecting to any component or wires to this system may adversely affect Engine/ Transmission operation.

LIGHTS CONTROLLED BY HEADLAMP SWITCH

The head lamp switch used on the F-150. Super Duty F-Series and E-Series vehicles employs one main 30A maxi fuse for the head lamp system. The left- and righthand low beam lamps are then fused individually using a 10A fuse located in the instrument panel fuse box (see schematic on page 285) the exterior lamps are fused using a 15A fuse while the interior lamps are fused using a 10A fuse located in the instrument panel fuse box (see schematic on page 285). A connection to any circuit in the system controlled by the head lamp switch must be done using an auxiliary relay. A marker lamp relay circuit 962 for SUB additions is provided for convenience as standard equipment on chassis cabs, optional on pickups. Do not connect to other OEM wires.

E-SERIES

Rear Lights — Splice into circuit #14 (Brown) in crossover harness ar rear of vehicle.

Front Lights — Splice into circuit #14 (Brown) in engine compartment 12A581 wire assembly along right or left fender

LIGHTS CONTROLLED BY STOP LAMP SWITCH AND TURN INDICATOR SWITCH

NOTE: Splicing into the stop lamp switch on vehicles with Electronically Controlled Transmissions can interfere with the proper functioning of PCM, Powertrain Control Module, speed control, and anti-lock brake electronic modules. This can:

- Affect EFI engine idle speed quality.
- · Do not delete or deactivate the Center High Mount Stop Lamp unless it will be blocked by second unit body.
- Prevent the Powertrain Control Module torque converter clutch from applying at throttle openings less than half throttle.
- Deactivate anti-lock brake system operation
- Prevent the speed control from disengaging upon

If your application involves splicing into the stop lamp switch of a Powertrain Control Module equipped vehicle. please consult the Truck Body Builders Advisory Service website at www.fleet.ford,com/truckbbas/ to obtain a copy of QVM Bulletin #10.

The stop lamp switch that is in use on Ford trucks is a mechanical switch operated by brake pedal. It is designed for maximum loads usually less than the fuse or circuit breaker in the circuit but ample for normal stop lamp loads. The maximum load is 15 amps. Under no circumstances are total loads in excess of this value permissible. (See schematic on page 280).

F-150. SUPER DUTY F-SERIES AND E-SERIES **MODELS**

Ford trucks are released with a mechanical stop lamp switch mounted on the brake pedal arm for E-Series (mounted on the pedal pin and master cylinder push rod for F-150 and Super Duty F-Series). This switch has a maximum allowable electrical load of 15 amps. If only stop lamp function is desired for the added lights, splice into the circuit #511 light green wire for E-Series. F-150 and Super Duty F-Series between the stop lamp switch and the turn indicator switch. This circuit is provided as standard equipment and is located at the rear of the vehicle. (See Figure B, page 277 and page 279 and schematic on page 280).

If both turn signal and stop lamp function are desired for the added lights, splice into the tail lamp loom (circuit #64 dark green for F-150. Super Duty F-Series and E-Series right-hand lights and circuit #52 vellow for F-150. Super (See note below). These circuits are provided as standard equipment and are located at the rear of the vehicle. (See Figure B. Page 277 and page 279 and schematic on page 280).

NOTE:

- 1. The turn signal switch used on some light trucks has a maximum rated current of 6.5 amps for right and left turning functions and 10.4 amps for stop lamp function. Do not exceed these values on the turn
- 2. The Super Duty F-Series utilizes an electronic flasher (F65B-13550-AA) for the turn signal and emergency flasher system.

ADDED LIGHTS OR **ACCESSORIES CONTROLLED BY ADDED SWITCHES**

This section describes the connection points for added electrical accessories when these accessories are to be controlled by added switches not a part of the Fordreleased vehicle. The added switches and wiring must have sufficient electrical capacity for the accessory load and must be protected by appropriate fuses or circuit breakers. Also, added current draw must not cause total loads to exceed capabilities of the base vehicle wiring.

RADIO FREQUENCY INTERFERENCE (RFI)

During modifications to the vehicle, manufacturers, service technicians, owners and users should take the necessary precautions to maintain the RFI integrity of components. (Both the United States and Canada have RFI regulation in effect). Precautionary procedures and components listed below are examples and do not necessarily represent a complete list.

- 1. All components required to suppress RFI emissions, which are removed during service, repair, or completion of the vehicle, must be reinstalled in the manner in which they were installed by Ford.
- 2. Do not modify or change any RF device in a manner not expressly approved by Ford Motor Company.
- 3. Shields on distributor and ignition coil must remain
- Replacement spark plugs, ignition wires, ignition coils, distributor caps and distributor rotor must be equivalent in their RFI suppression properties to original equipment.
- Electrical grounds on all components must be retained.
- Metallic components installed on the body or chassis must be grounded to the chassis.

- 7. Electrical circuits added to the vehicle should not be installed near the high tension ignition components.
- 8. Only "static conductive" accessory drive belts should be used.
- 9. Fan, water pump, power steering and other belts should be of the OEM type or equivalent that will not build up a static electrical charge.
- 10. For any completed vehicle, additional measures may be needed to adequately suppress RFI emissions.

CHECK ENGINE WARNING LIGHT

The check engine warning light is a device required on certain vehicles to indicate malfunctions of the Powertrain Control Module. For all vehicles except E-Series Super Duty Stripped Chassis (which is not equipped with a dashboard), if a warning light is required, it is Ford installed and operational. The light is also required for all gasoline powered E-Series Super Duty Stripped Chassis vehicles. The warning lamp is included in the supplied instrument cluster, located in the dunnage box. It should be recognized that this light is a requirement of Emission Certification.

If an alternate instrument cluster is utilized, the final

stage manufacturer must install an operational light in the dashboard. This light must glow amber and display the acronym message, "SERVICE ENGINE SOON." Once the light has been completed by the final stage manufacturer, proper function can be determined by turning the key to the on position. The light should come on prior to engine cranking and go out when the engine starts. If the light does not come on as above, refer to Section 14 (Quick test step 7 — Diagnostics by Symptom) of Volume H (Engine and Emission


Diagnostic Manual) of the Car and Truck Service Manual

for diagnostic procedure.

ELECTRICAL WIRING ADDING LIGHTS OR ELECTRICAL DEVICES

2002 MODEL YEAR Revised 10-24-01

Page 285 APPENDIX

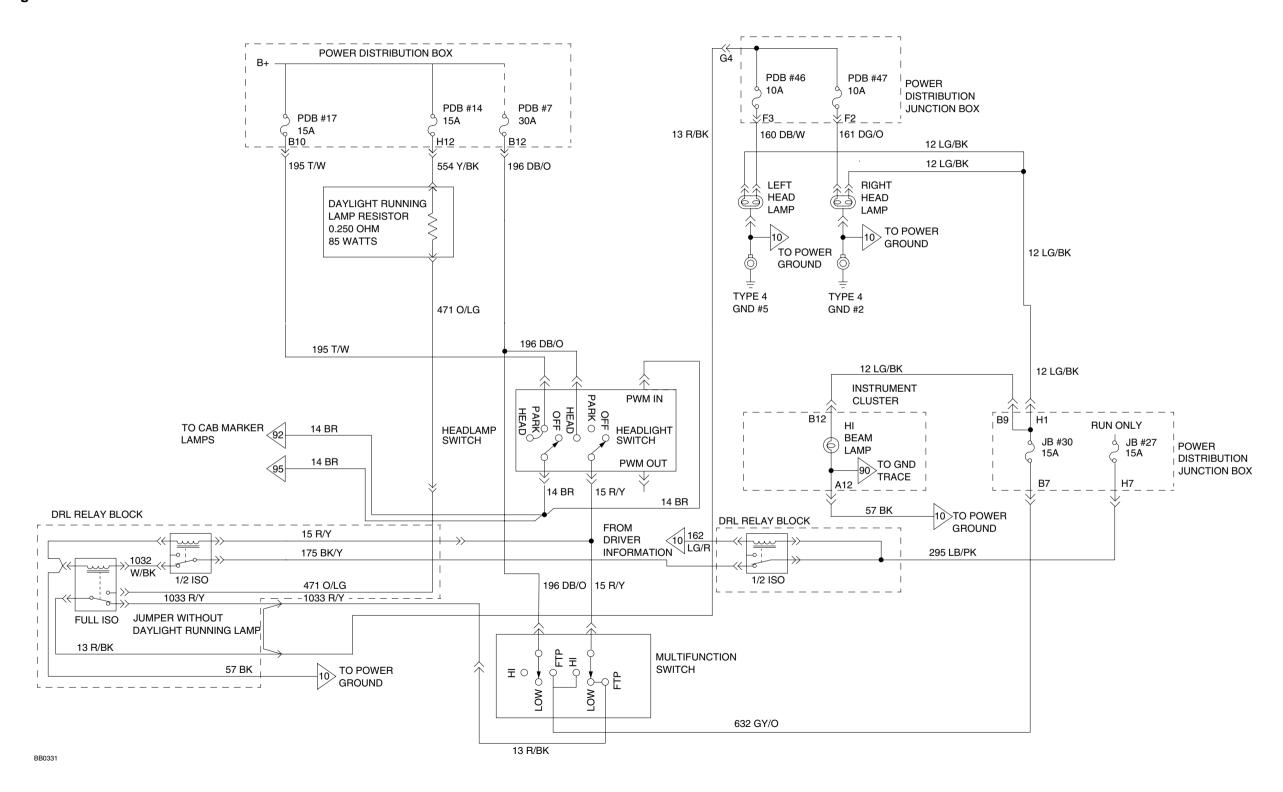

DESIGN RECOMMENDATIONS PICKUP BOX REMOVAL/ALTERATIONS

2002 MODEL YEAR

Page 286

PART I

Introduction

The following information is presented in three parts for vehicle alterers who intend to remove pickup boxes from certain Ranger and Super Duty F-Series pickup trucks, and install aftermarket second unit bodies on these vehicles. For vehicles alterers in California, see Important Information on Page 290 concerning alteration of vehicles with a GVWR of 8500 lb or less for sale, registration, or use in California.

APPENDIX

Part I details those Ranger and Super Duty F-Series pickup models that may be altered by removal of the pickup box and installation of aftermarket second unit bodies and indicates where specific questions should be directed. Part II provides information concerning the obligations and responsibilities of vehicle alterers with respect to United States and Canada Motor Vehicle Safety Standards (F/CMVSS). Part III provides information for vehicle alterers with respect to United States, California, and Canada exhaust emissions, evaporative emissions and RFI requirements, and California requirements with regard to fuel vapor recovery.

RANGER REGULAR CAB PICKUP BOX REMOVAL WILL AFFECT COMPLIANCE WITH THE DYNAMIC PERFORMANCE REQUIREMENTS OF FMVSS NO. 214 SIDE IMPACT PROTECTION FOR VEHICLES WITH A GVWR OF 2722 KG (6000 LB) OR LESS.

Vehicle alterers who intend to modify vehicles, as described above, may use the information and conditions provided herein to assist them in determining whether modified vehicles comply with applicable regulatory requirements. Alternatively, the vehicle alterer may desire to employ other limits or conditions than those provided herein. In any case, it is the responsibility of the vehicle alterer to assure compliance and certification of the altered vehicle to the applicable safety and/or emissions (including noise and RFI) requirements. Specific questions concerning compliance and/or certification to safety standards and emissions and fuel economy regulations should be directed to the vehicle alterer's legal counsel or the United States National Highway Traffic Safety Administration (FMVSS and Federal Fuel Economy Standards and requirements), the Canada Ministry of Transport (CMVSS, emissions, and noise regulations), the Canada Department of Communications (Canadian RFI regulations), the United States Environmental Protection Agency (EPA) (United States emissions requirements) or the California Air Resources Board (California emissions and fuel vapor recovery requirements), and the vehicle noise emission control authorities, if any, in the state and locality in which the vehicle is sold.

If you have technical, product-related questions concerning some aspect of the vehicle alteration, a representative of Ford Motor Company will be happy to talk with you. Please contact your regional sales office or phone the Ford Truck Body Builder Advisory Service directly at 1-877- 840-4338.

Models Available for Pickup Box Removal

The models listed in Table A, page 291 (Super Duty F-Series) and Table A, page 292 (Ranger SuperCab), may be altered by removing the pickup boxes and installing aftermarket second unit bodies. For Ranger SuperCab vehicles available for pickup box removal, Ford Motor Company specifies that they shall be equipped with front and rear stabilizer bars. Limitations on the second unit bodies that may be installed, as well as other vehicle conditions, are also specified in Table A, pages 291-292 and in the Safety/Emissions section beginning on page 47.

PART II

Information Concerning United States and Canada Safety Standards

The vehicle alterer is responsible for certifying the altered vehicle pursuant to Title 49 of the Code of Federal Regulations Sections 567.7 and 568.8 in the United States, or pursuant to Section 9 of the Canadian Motor Vehicle Safety Regulations in Canada. As outlined in these requirements, the vehicle alterer must ascertain which F/CMVSS are affected by the alteration, and subsequently provide certification that the altered vehicle conforms to all affected safety standards. In the information that follows, Ford has endeavored to provide sufficient instructions and guidelines to the vehicle alterer for certifying that the vehicle conforms to all F/CMVSS affected by the vehicle alteration. Information pertaining to Certification Labeling Requirements for the altered vehicle is outlined on page 288.

Federal and Canadian Motor Vehicle Safety Standards Compliance

Conformity to the following FMVSS (FMVSS) and Canadian Motor Vehicle Safety Standards (CMVSS) are affected by the removal of the pickup box and rear bumper and installation of an aftermarket second unit body:

FMVSS and CMVSS No. 105 FMVSS and CMVSS No. 108 Hydraulic Brakes

No. 108 — Lighting

FMVSS and CMVSS No. 111

Equipment

— Rearview Mirrors

FMVSS and CMVSS No. 204⁽¹⁾

FMVSS and CMVSS No. 208⁽²⁾ –

FMVSS and CMVSS No. 212⁽³⁾

FMVSS and CMVSS No. 214⁽³⁾⁽⁴⁾ — Side Impact

FMVSS and CMVSS No. 219⁽³⁾

FMVSS and CMVSS No. 301⁽³⁾

 Steering Control Rearward
 Displacement

 Occupant Crash Protection

Windshield Mounting

Protection

— Windshield Zone

— Windshield Zone Intrusion

Fuel System Integrity

Ford Motor Company represents that, in the case of a Ranger SuperCab or Super Duty F-Series pickup truck listed in Table A, page 291 (Super Duty F-Series) and Table A, page 292 (Ranger SuperCab), this vehicle, as altered, will conform to the requirements of the previously listed safety standards, provided the vehicle is altered only by the removal of the pickup box (including optional equipment attached to the pickup box) and rear bumper (if so equipped), and the installation of an aftermarket Second Unit Body (SUB) in accordance with the following conditions:

 The following lighting components must be designed and installed on the altered vehicle in accordance with the requirements of F/CMVSS No. 108, Lamps, Reflective Devices, and Associated Equipment:

Taillamps*
Stop Lamps*
License Plate Lamps*
Back-Up Lamps*
Rear Turn Signal Lamps*
Rear Side Marker Lamps*
Rear Side Reflex Reflectors*
Reflector*

Front and Rear Identification Lamps (for vehicles over 80 inches in width). Front and Rear Clearance Lamps (for vehicles over 80 inches in width), Center High Mounted Stop Lamp (if second unit body blocks view of the CHMSL on the back of the cab another CHMSL must be added).

Rear Side Marker

Lamps

The items of lighting equipment (including wiring and power supply) on the cab of the pickup truck must not be removed, modified, replaced, or altered. Further, the second unit body installed by the vehicle alterer must not impair the visibility and conformity to the photometric requirements of the lamps and reflective devices installed on the cab of the pickup truck.

2. The weight (in pounds) of the Second Unit Body (SUB) installed must not be greater than the lower of those values specified in Tables A, pages 291 and 292 corresponding to the particular pickup truck model or the weight (in pounds) calculated using the following formula:

SUB WEIGHT LIMIT = Unloaded Vehicle Weight (UVW) - Original Equipment Manufacturer (OEM) Curb Weight + Pickup Box + Options Removed.

Super Duty F-Series

- Step Bumper 74 lb
- Pickup Box see Table A, page 291
- Spare Wheel and Tire see Table B, page 291

Ranger SuperCab

- Step Bumper 37 lb
- Pickup Box see Table A, page 292
- Spare Wheel and Tire see Table B, page 292

IOTES -

- (1) For vehicles with a GVWR of 10,000 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (2) Injury criteria is applicable to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (3) Applicable to vehicles with a GVWR of 10,000 lb or less.
- (4) Dynamic Performance Requirements apply to MPV, Truck, or a Bus with a GVWR of 2722 Kg (6000 lb) or less for FMVSS only.
- * These lamps and reflectors are available from Ford in the form of rear lamp assemblies and are the same as those installed on Ford chassis cab models.

DESIGN RECOMMENDATIONS PICKUP BOX REMOVAL/ALTERATIONS

Page 287

APPENDIX

PART II (Cont'd)

Example

A vehicle alterer wants to remove the pickup box and rear step bumper from a Super Duty F-250 Regular Cab (4x4), 137-inch WB model with a 5.4L engine, 4R100 transmission, and air conditioning having a curb weight of 6200 lb and install a 600-pound Second Unit Body (SUB).

First, Table A (on page 291) specifies that the maximum SUB weight is 1800 lb. Since the SUB weight is 600 lb, this condition is satisfied.

Second, the SUB weight must not exceed the SUB WEIGHT LIMIT calculated below:

- SUB WEIGHT LIMIT = Maximum Complete Unloaded Vehicle Weight (UVW) minus the unloaded vehicle weight as delivered (OEM curb weight) plus pickup box weight removed plus weight of removed options.
 - 6900 6200 + 380 + 74
 - 1154 lb

The 600 lb SUB is less than 1154 lb and, accordingly, may appropriately be installed as planned.

The vehicle alterer must either select a lighter weight SUB, reduce the OEM accessory weights for the vehicle, or both if the SUB is heavier than the maximum limit.

- 1. OEM Curb Weight includes Base Vehicle Weight (with full fuel), engine and transmission weight, and all OEM accessory weights ordered or installed (Refer to the appropriate Truck Source Book for weight data).
- 2. Options Removed include step bumpers or similar OEM options permanently removed from the vehicle.
- 3. The center of gravity height and overall height of the second unit body installed by the alterer must not exceed the values specified in Table A. page 291-292 corresponding to the particular pickup model. Center of gravity height and overall height of the second unit body are measured from the top surface of the frame at the rear of the cab.
- 4. The altered vehicle's unloaded vehicle weight (see Definitions in Safety/Emission Section) must not exceed the values designated in Table A pages 291-292 corresponding to the pickup truck's model and non-California engine-transmission combination.

- 5. These instructions must be followed in the vehicle alteration:
- The following components, as installed by Ford Motor Company, are not to be removed, relocated, altered, or modified in any way:
 - Steering column, steering shaft, steering wheel, and related structural components and attachment hardware.
 - Windshield and windshield mounting system,
 - Cab and front end structural components, including the roof, pillars, cowl, cowl reinforcements, hood, doors, fenders, hood restrictors and apron reinforcements, and frame and frame reinforcements,
 - Radio antenna.
 - Doors and hood mounting, hinging, and latching systems,
 - Hood and fender ornamentation.
 - Fuel tank and attachment hardware, including sending unit and vapor valve, fuel tank shield, and in-tank electric fuel pump (for gasoline engine only),
 - Fuel lines, routing, and attachments, excluding fuel filler cap, filler pipe, filler hose(s), and filler system attachment hardware, which must be removed and replaced.
 - Vapor line(s) and carbon canister(s),
 - Fuel pump,
 - Fuel filter and attachment,
 - Air cleaner assembly,
 - Safety belts,
 - Front seat head restraints.
 - Electrical grounds on all components (must be retained),
 - The Powertrain Control Module (PCM), and
 - Catalyst and Exhaust System

• Any alteration or modification made to the vehicle, as manufactured by Ford Motor Company, and any components or structure installed by the vehicle alterer must not result in steering column rearward displacement of more than 5 inches (as defined in F/CMVSS No. 204)(1); no modification to the Hydraulic Brake System that would affect compliance to F/CMVSS No. 105; an increase in injury potential for front outboard seating positions (as defined in F/CMVSS No. 208)(2); any additional loss of windshield retention (as defined in F/CMVSS No. 212)(3); any change in the performance requirements of F/CMVSS 214(3)(4); any penetration of the inner surface of the windshield or intrusion into the protected zone (as defined in F/CMVSS No. 219)(3): or loss of fuel system integrity (as defined in F/CMVSS No. 301)⁽³⁾, when the vehicle is tested in any manner specified by applicable provisions of F/CMVSS Nos. 105, 204⁽¹⁾, 208⁽²⁾, 212⁽³⁾, 214⁽³⁾⁽⁴⁾, 219⁽³⁾, and 301⁽³⁾, respectively.

NOTE: Federal Motor Vehicle Safety Standard (FMVSS) and Canadian Motor Vehicle Safety Standard (CMVSS) No. 204 are not applicable to a vehicle with an unloaded vehicle weight greater than 5500 lb. FMVSS No. 208 injury criteria are applicable only to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less. Conformity to Federal Motor Vehicle Safety Standard (FMVSS) and Canadian Motor Vehicle Safety Standard (CMVSS) No. 212 and 219 for vehicles having a gross vehicle weight rating (as defined in 49 CFR, Part 571.3) no greater than 10,000 lb, is established for representative vehicles at a vehicle weight provided by Sections S6.1(b) and S7.7(b) of FMVSS No. 212 and 219, respectively, and provided by Sections 5.1 and 8 of CMVSS No. 212 and 219. respectively.

- The second unit body installed shall be mounted securely and so designed that when the altered vehicle is impacted in any manner specified by applicable provisions of F/CMVSS No. 212(3) and 219(3), second unit body deformation or movement relative to the frame does not result in any separation or loss of body attachment to the frame.
- The second unit body installed and the required fuel system components (identified below) shall be located and mounted as follows:
 - The second unit body shall be mounted securely and is so designed that when the altered vehicle is tested in any manner specified by applicable provisions of F/CMVSS No. 301⁽³⁾:

- (a) Second unit body components shall not contact any fuel system component (other than at the points where the fuel system is permanently attached to the second unit body), and
- (b) Second unit body deformation or movement relative to the frame shall not cause any fuel system component to be penetrated. disconnected, or otherwise damaged.
- The rear end of the second unit body (excluding the rear bumper) installed shall not extend beyond (overhang) the rear edge of the vehicle frame or frame extension. Any extension of the vehicle frame must be constructed and attached so as to perform as a continuation of the vehicle frame when the altered vehicle is tested in any manner specified by applicable provisions of F/CMVSS No. 301(3).
- See the Design Recommendations, Second Unit Body (SUB) attachment section of this book beginning on page 295 for additional information.
- The fuel filler cap, filler pipe, filler hose(s), and filler system attachment hardware for vehicles w/diesel engines and for vehicles with gas engines shall be installed, as shown on Super Duty F-Series, page 195, and shall be securely retained to remain intact when the vehicle is tested in any manner specified by applicable provisions of F/CMVSS No. 301⁽³⁾.

NOTES -

- (1) For vehicles with a GVWR of 10,000 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (2) Injury criteria is applicable to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (3) Applicable to vehicles with a GVWR of 10,000
- (4) Dynamic Performance Requirements apply to MPV, Truck, or a Bus with a GVWR of 2722 Kg (6000 lb) or less for FMVSS only.

DESIGN RECOMMENDATIONS PICKUP BOX REMOVAL/ALTERATIONS

Page 288

APPENDIX

PART II (Cont'd)

- The front end of the second unit body installed shall be located at least three inches rearward of the rearmost point of the cab on Super Duty F-Series, and at least 1.4 inches rearward of the rear- most point of the cab on Ranger SuperCab models.
- The vehicle, as produced by Ford, meets the Center High Mounted Stop Lamp (CHMSL) requirements of Standard 108, Lighting. Compliance to these criteria may be affected by the installation of a Second Unit Body (SUB), if that SUB blocks the view of the CHMSL mounted on the back of the cab. When this happens. the subsequent manufacturer must install a CHMSL on the SUB that meets FMVSS 108. An electrical feed for installation of a CHMSL on the SUB is provided and is located inside the rearmost crossmember near the end of the left frame rail on the Super Duty F-Series models. For the Ranger, directions are given in Ford Bulletin Q-28, CHMSL - Precautions and Guidelines for Adding or Locating.
- The vehicle, as produced by Ford, meets FMVSS No. 111. Compliance to FMVSS No. 111 may be affected. however, by removal of the pickup box and installation of a Second Unit Body (SUB), even though the mirror system has not been altered. A discussion of compliance, with respect to each mirror type, follows:
 - Sail-Mounted Type Outside Mirror on Super Duty F-Series or Ranger Pickup. Provided the mirrors, driver's seat and cab are not altered, the mirror system will continue to meet FMVSS No. 111 if the overall width of the Second Unit Body (SUB) is no wider than the pickup box, and if the view of the roadway behind the vehicle through the inside mirror is not totally blocked off. If the SUB blocks the view through the inside mirror, a flat glass mirror is required on the passenger's side in place of the convex mirror on vehicles to be sold in the United States. Vehicles for sale in Canada may be equipped with the convex mirror on the passenger's side when the SUB blocks the view through the inside mirror. If the SUB is wider than the pickup box, both the driver's side and passenger's side mirrors may have to be replaced with mirrors providing a wider view to the rear.
 - Trailer Tow Mirrors on Super Duty F-Series. These mirrors will continue to meet FMVSS No. III, provided the mirrors, the dirver's seat and the cab are not altered.

• If the front bumper and bumper mounting system are removed temporarily, the front bumper and bumper mounting system must be reinstalled in accordance with the instructions provided in the Ford Truck Service Manual. If the front bumper and bumper mounting system are replaced, the replacement front bumper and bumper mounting system must not result in: steering column rearward displacement of more than 5 inches (as defined in F/CMVSS No. 204)(1); any increases in injury criteria (as defined in F/CMVSS No. 208)⁽²⁾; any additional loss of windshield retention (as defined in F/CMVSS No. 212)(3); any penetration of the inner surface of the windshield or intrusion into the protected zone (as defined in F/CMVSS No. 219)(3); or, loss of fuel system integrity (as defined in F/CMVSS No. 301)(3), when the vehicle is impacted in any manner specified by applicable provisions of those standards.

NOTE: The second unit body added by the vehicle alterer may have to conform to other safety standards as well. For example, any glazing used in the second unit body must conform to F/CMVSS No. 205, Glazing Materials. Additionally, if the second unit body is equipped with any passenger seating positions, the following safety standards may be applicable as well:

F/CMVSS No. 206 Door Locks and Retention F/CMVSS No. 207 Seating Systems F/CMVSS No. 208⁽²⁾ Occupant Crash Protection F/CMVSS No. 209 Seat Belt Assemblies F/CMVSS No. 210 Seat Belt Anchorages F/CMVSS No. 214⁽³⁾⁽⁴⁾ — Side Impact Protection

F/CMVSS No. 302 - Flammability of Interior Materials

With respect to the second unit body installed and the above-mentioned safety standards, it is the responsibility of the vehicle alterer to assure conformity with all applicable requirements.

It is the responsibility of the vehicle alterer to determine which other safety standards, if any, their vehicles must comply with.

NOTE: See statements for F/CMVSS No. 105. Hydraulic Brake implications of modifications/alterations to completed vehicles, including pickup box removal vehicles on pages 62-69 of the Safety/Emission section.

Certification Labeling Requirements

For altered vehicles in the United States, the vehicle alterer is required to affix an additional label containing the information shown on page 70 of the Safety/Emission

NOTE: The safety standard certification label, which is affixed to the driver's door latch pillar of the pickup truck, by Ford Motor Company must not be removed.

For altered vehicles in Canada, the vehicle alterer is required to affix a label containing the information shown on page 71 of the Safety/Emission section.

NOTE: A vehicle alterer may be a manufacturer according to the definition of manufacturer contained in the Canadian Motor Vehicle Safety Act.

PART III

Information Concerning United States and Canada Exhaust Emissions. Evaporative Emissions, RFI and Noise, and California Fuel Vapor Recovery Requirements. Refer also to pages 49-57 of the Safety/Emission section.

A. Exhaust and **Evaporative Emission** Requirements

Ranger SuperCab completed trucks have been certified to the applicable U.S. Federal, California, or Canadian exhaust and evaporative emissions requirements. See page 51 for important information concerning alteration of vehicles with a GVWR of 8500 lb or less that is for sale, registration, or use in California, Federal law specifies that a light-duty truck is any vehicle with a GVWR of 8500 lb or less that has a vehicle curb weight of 6000 lb or less, and a basic vehicle frontal area of 45 square feet or less, which is designed primarily for transporting property (or is a derivative of such a vehicle), or is designed primarily for transporting persons and has a capacity of more than 12 persons, or is available with special features enabling off-street or off-highway operation and use.

All heavy-duty engines (in vehicles having a GVWR of more than 8500 lb for the United States and Canada) have been certified to the applicable U.S. Federal or Canadian exhaust or California exhaust and evaporative emissions requirements for heavy-duty engines. It is the responsibility of the vehicle alterer to assure compliance of the altered vehicle with the applicable emission requirements.

Ranger SuperCab and Super Duty F-Series pickup truck models listed in Tables A on pages 291 and 292, if altered by removal of the pickup box (including items attached to the pickup box), rear bumper (if so equipped), and installation of a second unit body, may not require recertification to applicable Federal, California, or Canadian emissions requirements if the following conditions are satisfied:

1. None of the engine emission control hardware furnished with the pickup truck is deleted, modified, or rendered inoperable. A listing of such hardware is provided in the Emission Control Modifications Section on page 51 of the Safety/Emission Section of this book.

NOTES -

- (1) For vehicles with a GVWR of 10,000 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (2) Injury criteria is applicable to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (3) Applicable to vehicles with a GVWR of 10,000 lb or less.
- (4) Dynamic Performance Requirements apply to MPV, Truck or a Bus with a GVWR of 2722 Kg (6000 lb) or less for FMVSS only.

DESIGN RECOMMENDATIONS PICKUP BOX REMOVAL/ALTERATIONS



Page 289

PART III (Cont'd)

Further, vehicles sold for principal use in high altitude areas must comply with the High Altitude Regulations.

APPENDIX

- 2. A copy of the appropriate Ford Truck Owner's Guide and Warranty Facts Booklet is installed in the altered pickup truck prior to sale to the ultimate purchaser in order to provide emission systems warranty information and maintenance schedules. Note: Whether Ford Motor Company or the alterer is responsible for emission warranty claims depends on, among other things, whether the vehicle failed to comply with applicable warranty provisions because of modifications made by the alterer or because of the original design and manufacture of the vehicle.
- 3. The Super Duty F-Series fuel filler kit that is supplied with the vehicles ordered with pickup box delete option number 66D or available through Ford Dealers, P/N F81Z-9B149-FA (gasoline) or -GA (diesel), must be installed as shown on pages 195,196. Filler system attachment hardware for Ranger SuperCab in kit #F87Z-9B149-A is installed as shown on page 293.
- The alterer does not exceed the limitations listed on Safety and Emissions page 51 under "Curb Weight and Frontal Area Restrictions".

Questions concerning requirements and policies, with respect to alterers of completed vehicles, should be directed to legal counsel, the Environmental Protection Agency, or the California Air Resources Board.

NOTE: If the weight of the altered vehicle exceeds the maximum unloaded vehicle weight specified in Table A pages 291-292, corresponding to the particular pickup truck model and engine combination, the vehicle alterer is required to certify the vehicle to: F/CMVSS No. 105, Hydraulic Brakes; F/CMVSS No. 204⁽¹⁾, Steering Control Rearward Displacement; F/CMVSS No. 212⁽³⁾, Windshield Mounting; F/CMVSS No. 214⁽³⁾⁽⁴⁾, Side Impact Protection; F/CMVSS No. 219⁽³⁾, Windshield Zone Intrusion; and F/CMVSS No. 301⁽³⁾, Fuel System Integrity, in addition to compliance with any other F/CMVSS affected by the vehicle's alteration.

5. For a pickup truck having a GVWR of 10,000 lb or less and catalyst equipped. For vehicles other than those for sale, registration or use in California, the alterer does not add more than 500 lb to the maximum unloaded vehicle weight specified in Table A (pages 291-292)

corresponding to the particular pickup model.

(a) IMPORTANT: Some of the preceding conditions are based, in part, on statements made by C. N. Freed of the Environmental Protection Agency (EPA) in a letter of July 13, 1979 to M. H. McBride, legal counsel of the Recreation Vehicle Industry Association. That letter explained EPA's policy concerning alterers of complete 1980 and later model year light-duty trucks in the context of EPA's Advisory Circular No. 64 — a March 7, 1977 publication that provides guidance on the need for separate certification of vehicles modified after original manufacture, but prior to sale and delivery to the ultimate purchaser. The maximum second unit body weights provided in Tables on pages 291-292 are calculated in accordance with the definition of "maximum vehicle weight" provided in the July 13, 1979 letter.

The referenced letter provides that alterers of complete light-duty trucks need not recertify such vehicles for emission control purposes if:

- the altered vehicles conform, in all material respects, to the design specifications in the original manufacturer's application for certification, and
- the weight of the altered vehicle, including the weight of fuel at nominal tank capacity, is no more than 500 lb above the "maximum vehicle weight."

The letter further states that no frontal area restrictions will apply to alterers who comply with conditions (a) and (b) above. Alterers who do not comply with these conditions will be considered manufacturers under the Clean Air Act and will be required to assure that the altered vehicles are certified.

Questions concerning EPA's policies, with respect to alterers of completed vehicles, should be directed to legal counsel or the Environmental Protection Agency.

(b) **NOTE:** If the weight of the altered vehicle exceeds the maximum unloaded vehicle weight specified in Table A, corresponding to the particular pickup truck model and non-California engine-transmission combination, the vehicle alterer is required to certify the vehicle to: F/CMVSS No. 105. Hydraulic Brakes: F/CMVSS No. 204, Steering Control Rearward Displacement (if the unloaded vehicle weight is 5500 lb or less); F/CMVSS No. 208, Occupant Crash Protection (if the GVWR is 8500 lb or less and the unloaded vehicle weight is 5500 lb or less); F/CMVSS No. 212, Windshield Mounting; F/CMVSS No. 214(3)(4), Side Impact Protection; F/CMVSS No. 219, Windshield Zone Intrusion; and F/CMVSS No. 301, Fuel System Integrity, in addition to compliance with any other F/CMVSS affected by the vehicle's alteration.

See page 290 for important information concerning alteration of vehicles rated at 8500 lb GVWR, or less for sale, registration or use in California.

B. High Altitude Emissions

United States Environmental Protection Agency regulations contain unique emission certification requirements for trucks that will be sold or delivered to customers for principal use above 4,000 feet (1219 meters). Certain new vehicles cannot be sold to customers who intend to use them principally at high altitudes. TO AVOID ANY QUESTION OF CERTIFICATION COVERAGE, ORDERS SHOULD SPECIFY WHETHER A HIGH ALTITUDE EMISSION SYSTEM OR A NON-HIGH ALTITUDE EMISSION SYSTEM IS REQUIRED.

C. California Fuel Vapor Recovery

California regulations require that vehicle fuel systems be designed to accommodate a new vapor-recovery fueling nozzle, including unobstructed access to the fill pipe. Fuel filler pipes, installed per Super Duty F-Series, pages 195-196, will comply with the "Specifications for Fill Pipes and Openings of Motor Vehicle Fuel Tanks." referenced in Title 13 California Administrative Code, providing no part of the second unit body, as installed, intrudes within a 10-inch radius cylinder which has its axis parallel to the ground, passing through point "Z" and extends outward from the Ford fuel pipe housing component shown in the figure on Super Duty F-Series, pages 195-196. Fuel filler pipes, installed using the alternate bracket shown on the figures on Super Duty F-Series, pages 195-196, will comply with the above California vapor recovery regulations, provided the second unit body installed does not interfere with the access zone.

D. Radio Frequency Interference (RFI)

1. UNITED STATES RADIO FREQUENCY INTERFERENCE (RFI) INFORMATION

Devices that emit radio frequency (RF) energy, such as AM/FM radios and radio-controlled theft alarms, marketed for sale or use in the United States, are subject to the rules and regulations of the Federal Communications Commission (FCC). 47 C.F.R. Parts 2 and 15 (1992).

These rules specify the following conditions of operation:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) The device must accept any interference received, including interference that may cause undesired operation.

In addition, the FCC's rules may require the device to be tested and found to comply with various RF interference emissions limits before it may be marketed. The FCC establishes different limits, according to the particular use and installation of RF devices. In some cases, a grant of equipment authorization from the FCC also must be obtained before an RF device may be marketed.

To ensure continued compliance with the FCC's requirements, the owner, user, custom manufacturer, or service technician must not modify or change the RF device in a manner not expressly approved by Ford Motor Company. Such modifications could void the authority to operate the device.

NOTES -

- (1) For vehicles with a GVWR of 10,000 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (2) Injury criteria is applicable to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (3) Applicable to vehicles with a GVWR of 10,000 lb or less.
- (4) Dynamic Performance Requirements apply to MPV, Truck, or a Bus with a GVWR of 2722 Kg (6000 lb) or less for FMVSS only.

Page 290

APPENDIX

DESIGN RECOMMENDATIONS PICKUP BOX REMOVAL/ALTERATIONS

2002 MODEL YEAR

PART III (Cont'd)

2. CANADIAN RADIO FREQUENCY INTERFERENCE (RFI) INFORMATION

All vehicles powered by spark ignition engines (e.g., gasoline, natural gas, or propane engines) and manufactured in Canada or for sale or use in Canada, are subject to the Canadian "Regulations for the Control of Interference to Radio Reception" per Interference-Causing Equipment Standard (ICES-002) and applicable test method according to "CAN/CSA-C108, 4-M92". Violation of these regulations is punishable by fine or imprisonment. Ford-built vehicles were designed and manufactured to be capable of meeting the regulatory requirements or such modifications, thereof, as may have been authorized by the Department of Communications. However, because Ford has no control over how an altered vehicle is completed by subsequent stage manufacturers. Ford does not represent that the completed vehicle, incorporating the Ford-built components, will comply with applicable requirements.

The following information is supplied to subsequent stage manufacturers to help them avoid increasing the RFI emissions of this vehicle in the course of completing it.

For any altered vehicle, additional measures may be needed to adequately suppress RFI emissions. Affected components could include spark plugs, electronic engine control module, ground straps, ignition component shields, accessory drive belts, and instrument voltage regulator suppressor assembly.

More specifically:

- All components required to suppress RFI emissions, which are removed during service, repair, or completion of the vehicle, must be reinstalled in the manner in which they were installed by Ford.
- Shields on ignition coil must remain installed.
- Replacement of spark plugs, ignition wires, and ignition coil must be equivalent in their RFI suppression properties to original equipment.
- Electrical grounds on all components must be retained.
- Metallic components installed on the body or chassis must be grounded to the chassis.
- Electrical circuits added to the vehicle must not be installed near the high voltage ignition components.

 Only "static conductive" accessory drive belts should be used. Fan, water pump, power steering, and other belts should be of the OEM type or equivalent that will not build up a static electrical charge.

- Engine compartment wiring must not be rerouted in any manner.
- The Powertrain Control Module (PCM) must not be relocated from the position as installed by Ford Motor Company.

E. Noise

Canadian Motor Vehicle Safety Standard (CMVSS) No. 1106 prescribes maximum permissible noise levels of 83 dB (A) for "heavy-duty vehicles," with a GVWR between 6001 and 10,000 lb, where such levels are measured in accordance with SAE Standard J986a, "Sound Level for Passenger Cars and Light Trucks" (July, 1972). Under the Canada Motor Vehicle Safety Standards, a "heavy-duty vehicle" is a bus, a Chassis Cab, a multipurpose passenger vehicle, or a truck having a gross vehicle weight rating of more than 6000 lb, but not a passenger car. However, Transport Canada's tabulation of CMVSS indicates that CMVSS No. 1106 does not apply to Chassis Cabs as such.

A pickup truck listed in Tables on pages 291-292, if altered only by the removal of the pickup box (including optional equipment attached to the pickup box) and rear bumper (if so equipped), is designed and built to conform to the applicable exterior noise emission limits of CMVSS No. 1106 (1)(b). The alterer is, of course, responsible for determining that the vehicle, as altered, complies with CMVSS No. 1106.

WARNING — VEHICLE OPERATING TEMPERATURES

Some trucks of Ford Motor Company may exhibit high engine compartment and exhaust system temperatures in some operating modes. Components, including exhaust heat shielding systems, have been installed on some vehicles in our assembly plants in an effort to provide protection against such temperatures. Subsequent aftermarket installers/manufacturers are responsible for providing thermal protection (e.g., underbody heat shields) for any structure/equipment added to the vehicle, and should not remove any components/exhaust heat shielding installed on the vehicles by Ford. Also, the added structure/equipment should not restrict air circulation in the engine compartment or underbody. See applicable sections under "Ambulance Builders Guidelines" on page 311.

Any interior floor underlayment or insulation in the near vicinity of the exhaust system, without benefit of the Ford-provided heat shields, must be capable of withstanding 371°C [700°F] and 482°C [900°F] in close proximity to the catalyst during normal operating conditions. Additionally, any under chassis-mounted component, within 4 inches of the exhaust system, must be compatible with these temperatures.

IMPORTANT INFORMATION CONCERNING ALTERATION OF VEHICLES WITH A GVWR OF 8500 LB OR LESS FOR SALE, REGISTRATION OR USE IN CALIFORNIA

Ranger SuperCab pickup trucks, listed in Table A on page 292 and manufactured by Ford Motor Company for sale, registration, or use in California, can be altered by removal of the pickup box (including items attached to the pickup box) and rear bumper (if so equipped) and installation of a second unit body, if all of the following conditions are satisfied.

For additional information concerning noise control laws and regulations issued by the Federal (U.S.) Government, as well as some states and municipalities, see Vehicle Noise Regulations on pages 49-50 of the Safety/Emission Section.

- Conditions numbered 1, 2, 3, and 4 under Section A, entitled "Exhaust and Evaporative Emission Requirements" (pages 289-290), and those under Section C, entitled "California Fuel Vapor Recovery" (page 289), as they apply to vehicles with a GVWR of 8500 lb or less.
- The vehicle alterer does not increase the vehicle's unloaded vehicle weight by more than 10% over the maximum curb weight (unloaded vehicle weight specified in Tables on pages 291-292 corresponding to the particular pickup model), does not increase the frontal area by more than 10%, or does not provide a combination increase of weight plus frontal area of more than 14%.

NOTE: The maximum unloaded vehicle weight, specified in Tables on pages 291-292 for California, is the curb weight – the basic curb weight plus the weight of options of greater than 33% installation rate.

NOTE: If the weight (in pounds) of the altered vehicle exceeds the maximum unloaded vehicle weight specified in Tables on pages 291-292, corresponding to the particular pickup truck model, the vehicle alterer is required to certify the vehicle to: F/CMVSS No 105, Hydraulic Brakes; F/CMVSS No. 204, Steering Control Rearward Displacement (if the unloaded vehicle weight is 5500 lb or less); F/CMVSS No. 208 (if the unloaded vehicle weight is 5500 lb or less); F/CMVSS No. 212, Windshield Mounting; F/CMVSS No. 219, Windshield Zone Intrusion; and F/CMVSS No. 301, Fuel System Integrity, in addition to any other F/CMVSS to which conformity is affected by the vehicle's alteration.

No axle ratio, tire size or tire type changes are made that would increase the drivetrain ratio by more than five percent.

Altered vehicles which do not satisfy these conditions may not be sold, offered or delivered for sale, or registered in California, unless the altered vehicle is certified by the California Air Resources Board, pursuant to all applicable emissions requirements. The vehicle alterer is responsible for obtaining such certification. Questions regarding these requirements should be directed to your legal counsel or the California Air Resources Board.

DESIGN RECOMMENDATIONS SUPER DUTY F-SERIES PICKUP BOX REMOVAL/ALTERATIONS

Page 291 APPENDIX

2002 MODEL YEAR

TABLE A — SUPER DUTY F-SERIES MODELS AVAILABLE FOR PICKUP BOX REMOVAL

					Seco	nd Unit Boo	ly Limits		
					Weight		Max. Height a/	Maximum Complete Vehicle UVW [lb]f/	
	Model	Drive	WB [in]	GVWR [lb]	Min. [lb]	Max. ^{b/c/} [lb]	Cg ^{c/} [in]	5.4L/6.8L Gasoline ^{g/h/}	7.3L Diesel ^{i/}
Regular Cab	F-250	4x2	137.0	8800	380	1800	17.6	6400	7050
	F-250	4x4	137.0	8800	380	1800	17.6	6900	7350
	F-350	4x2	137.0	9900 ^{d/}	380	1800	17.6	6400	7050
	F-350	4x4	137.0	9900 ^{d/}	380	1800	17.6	6900	7400
	F-350 DRW	4x2	137.0	11,200 ^{e/}	420	3450	24.0	9750/9550	11,500/9550
	F-350 DRW	4x4	137.0	11,200 ^{e/}	420	3450	24.0	9750/9550	11,500/9550
SuperCab	F-250	4x2	141.8	8800	340	1800	24.0	6750	7250
	F-250	4x4	141.8	8800	340	1800	24.0	7150	7550
	F-250	4x2	158.0	8800	380	1800	24.0	6850	7250
	F-250	4x4	158.0	8800	380	1800	24.0	7250	7700
	F-350	4x2	141.8	9900 ^{d/}	340	1800	24.0	6750	7250
	F-350	4x4	141.8	9900 ^{d/}	340	1800	24.0	7200	7600
	F-350	4x2	158.0	9900 ^{d/}	380	1800	24.0	6850	7450
	F-350	4x4	158.0	9900 ^{d/}	380	1800	24.0	7250	7750
	F-350 DRW	4x2	158.0	11,200 ^{e/}	420	3450	24.0	9300/9100	11,600/9100
	F-350 DRW	4x4	158.0	11,200 ^{e/}	420	3450	24.0	9300/9100	11,600/9100
Crew Cab	F-250	4x2	156.2	8800	340	1800	24.0	7000	7450
	F-250	4x4	156.2	8800	340	1800	24.0	7400	7750
	F-250	4x2	172.4	8800	380	1800	24.0	7050	7650
	F-250	4x4	172.4	8800	380	1800	24.0	7475	7900
	F-350	4x2	156.2	9900 ^{d/}	340	1800	24.0	7000	7500
	F-350	4x4	156.2	9900 ^{d/}	340	1800	24.0	7400	7800
	F-350	4x2	172.4	9900 ^{d/}	380	1800	24.0	7100	7650
	F-350	4x4	172.4	9900 ^{d/}	380	1800	24.0	7500	7950
	F-350 DRW	4x2	172.4	11,200j [/]	420	3450	24.0	9300/9100	10,600/9100
	F-350 DRW	4x4	172.4	11,200j [/]	420	3450	24.0	9300/9100	10,600/9100

a/ Vertical height measured from the top surface of the frame at the rear of the cab.

TABLE B — SUPER DUTY F-SERIES TIRE AND WHEEL WEIGHTS

Wheel Size	Wheel (only) Weight [lb]		
16 x 7.0 K (Steel Wheel — SRW)	35.0		
16 x 6.0 K (Steel Wheel — DRW)	37.0		
19.5 x 6.0 RW (Steel Wheel — DRW)	52.0		
19.5 x 6.75 K (Steel Wheel — DRW)*	42.5		
16 x 7.0 K (Deluxe Aluminum — SRW)	17.0		
16 x 7.0 K (Premium Aluminum — SRW)	22.5		
16 x 6.0 K (Polished Aluminum — DRW)	20.0		
Tire Size	Tire Weight [lb]		
LT215/85R16	36.6		
LT235/85R16	46.0		
LT265/75R16	46.0		
225/70R x 19.5	60.0		
245/70R x 19.5	75.0		

^{*} Motor Home

b/ Maximum Second Unit Body (SUB) weight for any model is the lesser of two values shown below:).

The value listed here or;

C/ Maximum (SUB) weights and center of gravity (CG) shown in this table are only allowable if FMVSS 105 criteria are satisfied per calculation Safety and Emission Section of this book.

d/ 9700 lb — California only.

e/ 12,500 lb for diesel. California and Hawaii are 11,000 lb for all engines.

Weight shown is maximum allowable for safety certification. For vehicles with a GVWR greater than 10,000 lb, the listed UVWs are recommended only. Refer also to pages 54-55 of the Safety and Emissions section for emission certification weight limitations.

^{9/} Note that the 5.4L engine and the 6.8L engine, with manual transmission, is not suitable for pickup box removal in California.

h/ Federal/California

i/ Federal/California and Hawaii

i/ 11,500 lb for diesel. California and Hawaii are 11,000 for all engines.

DESIGN RECOMMENDATIONS RANGER PICKUP BOX REMOVAL/ALTERATIONS

Page 292 APPENDIX



TABLE A - RANGER SUPERCAB MODELS AVAILABLE FOR PICKUP BOX REMOVAL

					Second Unit Body Limits				
					Maxim Weight Heigh			Maximum Complete Vehicle	
Description	Model	Drive	WB	GVWR	Minimum Maximum ^{b/c/}		CG ^{c/}	Overall	UVWR
SuperCab			[in]	[lb]	[lb]	[lb]	[in]	[in]	[lb]
	XL d/	4x2	126	4600	230	1000	11.5	39.75	3950
	XL d/	4x2	126	4920	230	1040	11.5	39.75	4150
	XLT e/	4x2	126	4760	230	960	11.5	39.75	3910
	XLT e/	4x2	126	5020	230	960	11.5	39.75	4070
	Edge e/	4x2	126	4840	230	680	11.5	39.75	3990
	XLT e/	4x4	126	5080	230	834	11.5	39.75	4208
	XLT e/	4x4	126	5260	230	833	11.5	39.75	4208

- a/ Vertical height measured from the top surface of the frame at the rear of the cab
- b/ Maximum Second Unit Body (SUB) weight for any model is the lesser of two values shown below:
 - 1/ The value listed here or;
 - 2/ the value determined by: SUB WEIGHT LIMIT = UVWR (OEM Wet Curb Weight) + Pickup Box + Options Removed
- c/ Maximum Sub weights and center of gravity (CG) shown in this table are only allowable if FMVSS 105 criteria are satisfied as per calculations shown in the Safety and Emission Section.

- d/ Models without rear jumpseats
- e/ Models with rear jumpseats

TABLE B - WHEEL AND TIRE DATA RANGER


V	Vheel Size	Wheel (only) Weight [lb]			
15 x 6.0 JJ	(base argent steel)	20.4			
15 x 7.0 JJ	(silver styled steel)	22.6			
15 x 7.0 JJ	(silver aluminum)	14.5			
15 x 7.0 JJ	(chrome steel)	23.9			
16 x 7.0 JJ	(5-spoke cast aluminum)	16.2			
15 x 7.0 JJ	(8-hole forged aluminum)	16.9			
16 x 7.0 JJ	(5-spoke cast aluminum)	20.5			
Т	ire Size	Tire (only) Weight [lb]			
P235/75R-15	SL	28.2			
P225/70R-15	SSL	24.1			
P245/75R-16	SSL	30.8			
31x10.5R15		43.2			

PICKUP BOX REMOVAL/ALTERATIONS RANGER FILLER PIPE LOCATION AND DIMENSIONS




APPENDIX Page 293

> NOTES - PROVIDE ADEQUATE SUPPORT OF FUEL FILLER AND VENT HOSES TO ENSURE A CONTINUOUS DOWNWARD SLOPE FROM FUEL INLET TO TANK.

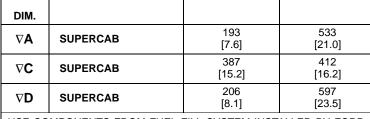

USE COMPONENTS FROM FUEL FILL SYSTEM INSTALLED BY FORD. REMOVE FROM VEHICLE HOSES AND CLAMPS AND CAP FOR USE WITH FILL PIPE KIT. USE NEW HOSES, PIPE, STEEL PORTION, TIE-WRAPS AND CLAMPS PROVIDED IN KIT TO CONNECT FUEL FILL SYSTEM FROM TANK TO UNIT BODY AS SHOWN, FUEL FILL AND VENT HOSES PROVIDED IN KIT MAY REQUIRE TRIMMING AS SHOWN IN FIGURE. THE RESULTING TRIMMED FILLER SYSTEM SHOULD PROVIDE A DIRECT DOWNWARD SLOPE TO THE FUEL TANK FROM THE METAL PIPE WHILE AVOIDING KINKS WHICH RESTRICT FUEL FLOW. ADDITIONAL SUPPORT MAY BE REQUIRED TO PREVENT SAGGING OR MIS-ORIENTATION. FAILURE TO DO SO WILL RESULT IN SPRAY OR SPIT-BACK DURING THE FUELING OPERATIONS.

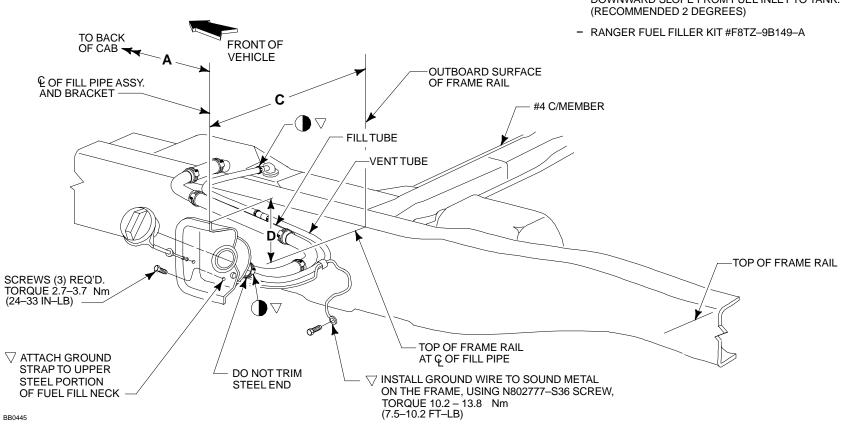

 ∇ CRITICAL CONTROL ITEM

TORQUE ALL WORM GEAR DRIVEN HOSE CLAMPS TO 2.7-3.7 Nm 24-38 IN-LB


NOTE - [] DIMENSIONS ARE INCHES.

PICKUP BOX REMOVAL/ALTERATIONS **RANGER**




Page 294


APPENDIX

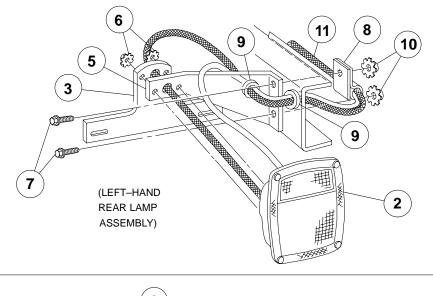


INSTALLATION FOR RANGER 4 x 2 MODELS

NOTE: WIRE HARNESS ROUTING **DIFFERENCES BETWEEN** 4 x 2 AND 4 x 4 MODELS

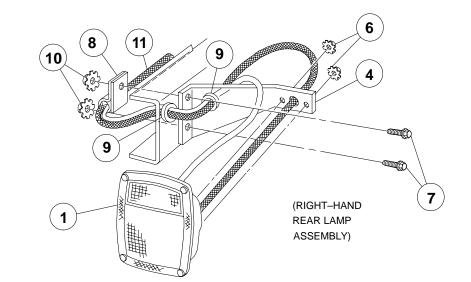

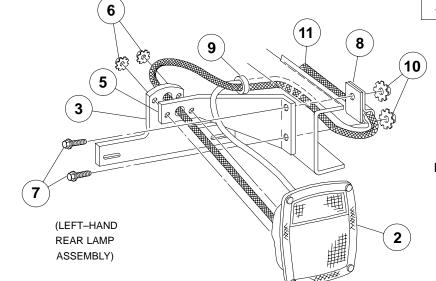

INSTALLATION FOR RANGER 4 x 4 MODELS

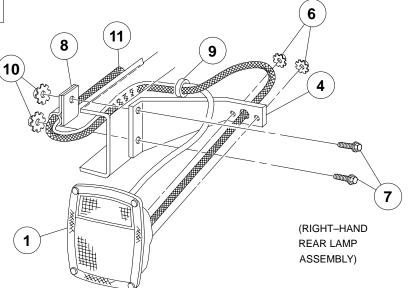

SERVICE PART NUMBERS

- 1. E4TZ-13404-C
- 2. E4TZ-13405-C
- 3. C7TZ-13406-A
- 4. E0TZ-13470-C
- 5. E0TZ-13471-A
- 6. 34659-S36M

7. 55653-S36

PART DESCRIPTION

RIGHT-HAND REAR LAMP ASSEMBLY LEFT-HAND REAR LAMP ASSEMBLY

LICENSE PLATE BRACKET

RIGHT-HAND MOUNTING BRACKET

LEFT-HAND MOUNTING BRACKET

NUT AND WASHER ASSEMBLY (4 REQUIRED) (TORQUE TO 3-7 POUND-FEET)

BOLT (4 REQUIRED)

SERVICE PART NUMBERS

- 8. 353473-S36
- 9. 384646-S
- 10. 34661-S36
- 11. E3TZ-13A409-A

PART DESCRIPTION

CLIP (2 REQUIRED)

GROMMET (4 REQUIRED FOR 4 x 2 MODELS;

2 REQUIRED 4 x 4 MODELS) (SPLIT LINE IN GROMMET

MUST BE AT TOP, IN VERTICAL POSITION)

NUT AND WASHER ASSEMBLY (4 REQUIRED)

(TORQUE TO 12-20 POUND-FEET)

WIRING HARNESS (CONNECT TO MAIN WIRING ASSEMBLY)

- RANGER ONLY

Page 295 APPENDIX



INFORMATION

The following recommendations are intended to assist in the design of second unit bodies and body mounting systems that will control second unit body movement with respect to the Ford supplied chassis when tested to the procedures specified in F/CMVSS 204⁽¹⁾, 208⁽²⁾, 212⁽³⁾, 214⁽³⁾⁽⁴⁾, 219⁽³⁾, and 301⁽³⁾. These recommendations are based on testing and analyses performed by Ford Motor Company.

Second Unit Bodies (SUB) and their body mounting systems may take many forms, and the following recommendations cannot cover all the possibilities. Strict adherence to these recommendations will not ensure that the completed vehicle will comply with F/CMVSS 204⁽¹⁾, 208⁽²⁾, 212⁽³⁾, 214⁽³⁾⁽⁴⁾, 219⁽³⁾, or 301⁽³⁾. The final stage manufacturer who installs a second unit body on the chassis is responsible for compliance to the above mentioned regulations. Accordingly, Ford Motor Company cannot represent that these recommendations are appropriate for every specific application of a second unit body, the body mounting system, or act of a subsequent stage manufacturer.

To verify compliance of a particular second unit body and selected body mounting system with F/CMVSS $204^{(1)}$, $208^{(2)}$, $212^{(3)}$, $214^{(3)(4)}$, $219^{(3)}$, and $301^{(3)}$, the testing of a representative vehicle to the applicable procedures of the above regulations is recommended. Questions regarding compliance with F/CMVSS regulations should be directed to your legal counsel, the National Highway Traffic Safety Administration, or Transport Canada.

SECOND UNIT BODY STRUCTURES

The structural design and materials used in the construction of second unit bodies must be sufficient to help control collapse of the body and prevent disengagement from the chassis when tested in accordance with the specifications of F/CMVSS 204⁽¹⁾, 208⁽²⁾, 212⁽³⁾, 214⁽³⁾⁽⁴⁾, 219⁽³⁾, and 301⁽³⁾. Steel or aluminum structures are recommended, however, wood or composite materials may require additional reinforcements to provide the structural integrity required for actual crash testing. SUB structures should not extend beyond (overhang) the end of the chassis (frame side members.)

SECOND UNIT BODY FUEL SYSTEM COMPONENTS

SUB floor and bulkhead structures must accommodate the Ford fuel fill system and suggested design clearances. Fill neck locations and all F/CMVSS 301⁽³⁾ compliance representations for Super Duty F-Series and E-Series vehicles are in the Statements of Conformity section of the *Incomplete Vehicle Manual*. See additional Fuel System Design Recommendations.

SECOND UNIT BODY ELECTRICAL

Some electrical power sources are identified in the Design Recommendations and the F/CMVSS 108 compliance representations in the *Incomplete Vehicle Manual* on pages 20-22. For wiring diagrams and additional information see Electrical Wiring pages of the Design Recommendations section.

UNDERBODY HEAT MANAGEMENT

- Underbody longitudinal or lateral air movement should not be restricted. Frame spacers designed by the intermediate and final stage manufacturer should provide for adequate airflow over the frame.
- 2. No portion of the floor pan should drop below the body sills, nor should the underbody structure drop below the top surfaces of the number 3 and 4 crossmembers. These conditions can result in reduced airflow, pinched fuel lines or vapor hoses which can raise the temperature of underbody components and increase fuel system pressure.
- 3. Any interior floor underlayment or insulation in the near vicinity of the exhaust system, without benefit of the Ford provided heat shields, must be capable of withstanding 371°C [700°F] (and 482°C [900°F] in close proximity to the catalyst) during normal operating conditions. Additionally, any under chassis mounted components within 101.6 mm [4 in] of the exhaust system must be compatible with these temperatures.

The subsequent stage manufacturer should also consider the following situations, which may have an adverse effect on heat management.

- Poor vehicle service or lack of maintenance
- Deviation from a 50/50 ethylene glycol based antifreeze (coolant) to water ratio
- Exceeding Ford GVW and GCW ratings
- Malfunctioning systems such as exhaust or engine
- Altering, changing, removing Ford engine fan and shroud
- Blocked radiator grille area (spare tire, bicycles, etc.)
- Use of throttle kickers.

- 4. Second Unit Body exterior panels, tool boxes, running boards, structures or skirting that extend below the bottom of the frame, may affect underbody temperatures. The final stage manufacturer should verify that underbody temperatures of the completed vehicle are compatible with all vehicle's components when under conditions that consider the projected vehicle duty cycle and vehicle loading.
- Full-width mudflaps should not be installed, as they restrict airflow under the vehicle and can also increase underbody temperatures.
- Added structure or equipment should not restrict air circulation in the engine compartment/underbody.
- Added body vents, especially powered vents, should be located away from the fuel filler and venting areas and exhaust to avoid fuel fumes and vapors entering the interior of the vehicle.
- Use of wood in construction should be eliminated where at all possible. If used, wood should be adequately protected from moisture and heat. Shields should be added if wood is installed near exhaust components.

NOTES —

- (1) For vehicles with a GVWR of 10,000 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (2) Injury criteria is applicable to vehicles with a GVWR of 8500 lb or less and an unloaded vehicle weight of 5500 lb or less.
- (3) Applicable to vehicles with a GVWR of 10,000 lb or less.
- (4) Dynamic Performance Requirements apply to MPV, Truck, or a Bus with a GVWR of 2722 Kg (6000 lb) or less for FMVSS only.

2002 MODEL YEAR

Page 296 APPENDIX

RANGER SUB MOUNTING SYSTEM (BRACKET ATTACHMENT METHOD)

Shear plates are a method of SUB attachment that should minimize SUB movement under impact conditions. The following items are critical to the performance of this type of mounting system.

- 1. The SUB must be 36.0 mm [1.40 in] from the back of the cab.
- 2. The frame to SUB spacers have a web dimension of 101.6 mm [4 in] minimum and the upper and lower flanges to be 57.0 mm [2.25 in], using 6.35 mm [0.25 in] HRLC steel. The spacer minimum length is 76.2 mm [3 in] for the front spacer and 152.4 mm [6 in] for the rear. These spacers will accommodate the recommended fuel filler pipe clearance provided they are installed 25.4 mm [1 in] or more from any fuel filler pipe. See Figure 1 on the next two pages for additional information.
- Shear plate recommendations for a second unit body are:
 - 3/8 inch thick HRLC steel material, with a minimum of four fasteners for each shear plate, or two fasteners installed in the frame if the shear plate is welded to the SUB structure. Detailed shear plate design recommendations are shown in the sketches in Figure 1 on the this page.
 - Hole size, location and spacing are shown in the above mentioned sketches.
 - Three shear plates per side one forward and two rearward of the rear axle.
 - Use 5/8 inch diameter, grade 8 bolts, nuts and washers, four per side to attach shear plates to the frame, see Figure 1. DO NOT WELD THE SHEAR PLATES TO THE FRAME.
 - Use 5/8 inch diameter, grade 8 bolts, nuts, and washers, four per side to attach shear plates to the SUB, or equivalent weld.
 - 105-220 ft-lb torque for 5/8 inch nuts
 - Direct the threaded end of bolts away from any fuel, brake, or electrical system component.

RANGER SUB MOUNTING SYSTEM (BRACKET ATTACHMENT METHOD)

This typical system design utilizes the existing eight (four per frame rail) pickup box mounting holes. The typical service body under-structure referenced uses 3 inch front and rear body cross sills. The height of the mounting system is governed by the clearance requirements of the midship fuel tank fuel filler to the front intermediate body cross sill. The mounting system depicted herein represents the minimum floor height achievable for a service body of conventional design.

Various service body designs (larger body cross sills or lower wheelhouse height) will dictate a higher mounting system in order to provide standard body to chassis (fuel filler and tire) clearances.

This suggested typical system is made up of eight (8) components and associated attaching hardware. A chart on this page and drawings of each component and their installation on the next 2 pages are typical of a service body installation.


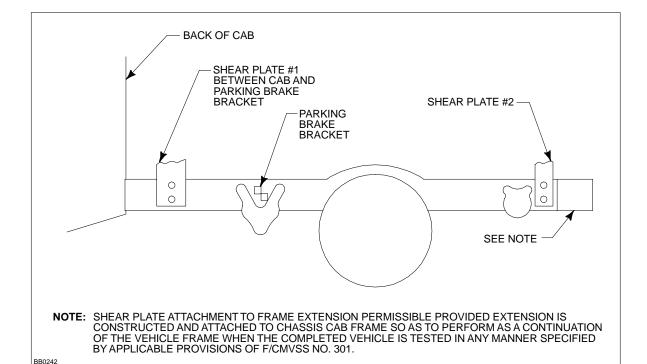


FIGURE 1 - TYPICAL RANGER SHEAR PLATE ATTACHMENT

COMPONENT DESIGNATION	COMPONENT DESCRIPTION	NOTES
Front Service Body Mount (Item A)	A 3" C section with outboard brace (restrainer). LH mount is a mirror image of the RH mount	Weld and bolt to underbody as specified, See Figure 1, Item A on page 297.
Mid-Front Cross Sill Service Body Mount (Item B)	A 4.66 " C section 30.5" long.	Locate on lower surface body floor by means of hole alignment to P/U box mounting holes in frame siderail upper flange. Weld to floor as specified, see Item B, on page 298.
Mid-Rear Service Body Mount (Item C)	A 3.06" C section 31.90" long.	Locate with respect to P/U box mounting holes in frame siderail upper flange. Weld and bolt to rear cross sill of service body as specified, see Item C, on page 298.
Rear Service Body Mount (Item D)	A 1.81" C section. The LH mount is a mirror image of the RH mount.	Locate forward (4.125" C/L) hole with respect to P/U box mounting hole in frame siderail upper flange. Weld and bolt to rear cross sill of service body as specified, see Item D, on page 298.
Attaching Parts, et.al.	Use 0.62" diameter grade 8 bolts, nuts and washers. Minimum length of 1.25" for bolts. Torque to 105-220 ft-lb	Largest possible flat washers must be utilized on lower side of frame rail flange. Caution: Ensure that the flat washer does not interfere with frame bend radii.

2002 MODEL YEAR

Page 297 APPENDIX

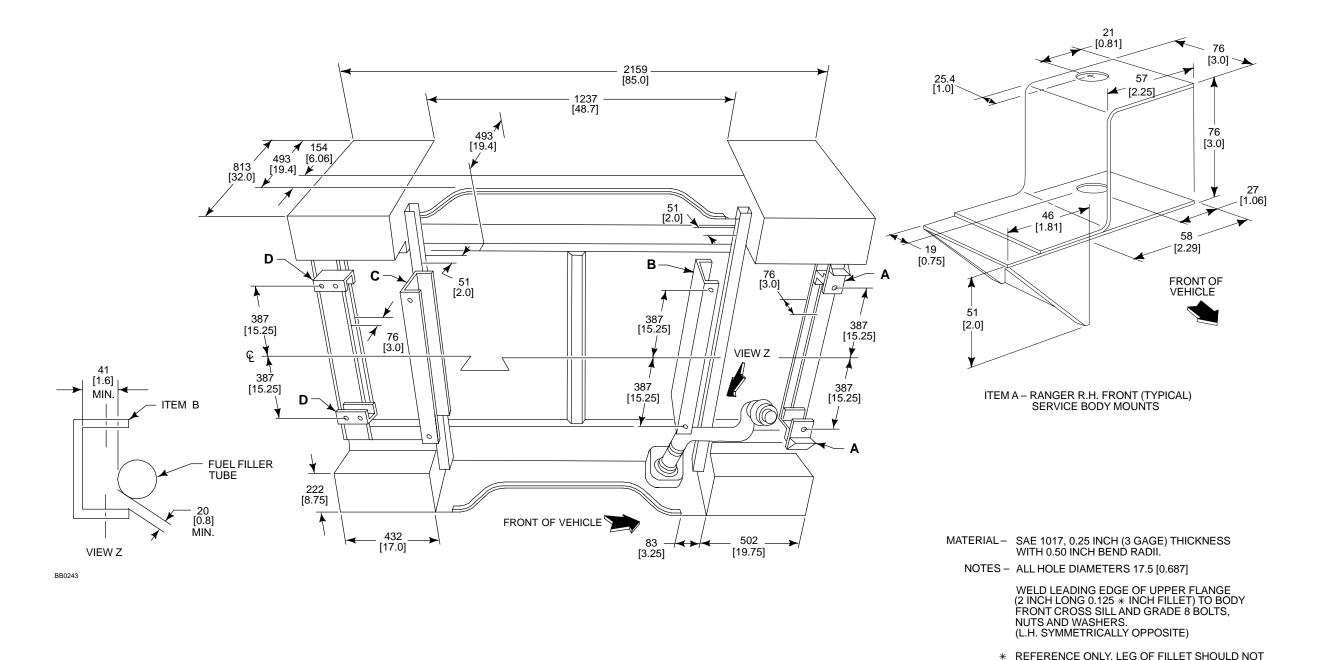


EXCEED 0.7 OF THE THICKNESS OF THINNEST

MATERIAL TO BE WELDED.



Page 298

APPENDIX

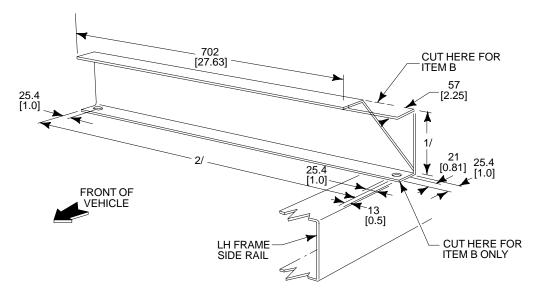

ITEMS B & C – RANGER MID–FRONT/REAR CROSS SILL (TYPICAL) SERVICE BODY MOUNT

MATERIAL – SAE 1017, 0.25 INCH (3 GAGE) THICKNESS WITH 0.50 INCH BENT RADII.

NOTES - ALL HOLE DIAMETERS 17.5 [0.687]

1/HEIGHT


ITEM B 118 [4.66] ITEM C 78 [3.06]

2/LENGTH

ITEM B 822 [32.375] ITEM C 810 [31.90]

WELD LEADING EDGE AND RADIUS OF UPPER FLANGE (SIX 2 INCH LONG WITH 3 INCH SPACING 0.125 * INCH FILLET) TO UNDERSIDE OF BODY FLOOR

* REFERENCE ONLY LEG OF FILLET SHOULD NOT EXCEED 0.7 OF THE THICKNESS OF THINNEST MATERIAL TO BE WELDED.

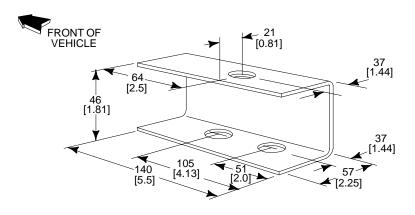

ITEM D – RANGER R.H. REAR (TYPICAL) SERVICE BODY MOUNT

MATERIAL – SAE 1017, 0.25 INCH (3 GAGE) THICKNESS WITH 0.50 INCH BEND RADII.

NOTES - ALL HOLE DIAMETERS 17.5 [0.687]

WELD REAR EDGE OF UPPER FLANGE (2 INCH LONG 0.125 * INCH FILLET) TO BODY #4 CROSS SILL AND USE 5/8 INCH DIA. GRADE 8 BOLTS, NUTS, AND WASHERS. (LH SYMMETRICALLY OPPOSITE)

* REFERENCE ONLY, LEG OF FILLET SHOULD NOT EXCEED 0.7 OF THE THICKNESS OF THE THINNEST MATERIAL TO BE WELDED.

BB0244

DESIGN RECOMMENDATIONS SECOND UNIT BODY MOUNTING E-SERIES CUTAWAY



Page 299 APPENDIX

E-SERIES SUPER DUTY CUTAWAY SUB MOUNTING SYSTEM

Ford provides optional SUB mounting spacers which will isolate the SUB from the frame. The SUB should be attached to these spacers using all the provided holes in the spacer with a suggested minimum 7/16-14 UNC grade 8 fastener. These fasteners should be directed away from any fuel system component or should not extend more than 25.4 mm [1.00 in] below the spacer flange. The location of these spacers is shown on page 124-129. The rubber isolators on the spacers are capable of 19.0 mm [0.75 in] movement in spherical zone from a static (design) position, which is the same for the isolators that mount the Cutaway body to frame. This will minimize squeaks, rattles and water or air leaks at the mounting surface of the SUB, to Cutaway body. The Ford optional spacers will accommodate the recommended fuel fill neck installation as shown on page 140, and a recommended 101.6 mm [4.00 in] minimum clearance between the frame and the bottom of the SUB (except at the rear axle kick-up area).

Vehicles not equipped with the Ford optional spacers have 34.8 mm [1.37 in] diameter holes on the upper flange of the frame sidemembers for body to frame isolators. The density/durometer, size and quantity of these isolators should be based on the SUB weight plus the projected payload of the completed vehicle, within the limits of the GAWRs and GVWR, as determined by the final stage manufacturer.

E-450 Super Duty Cutaway and Stripped Chassis vehicles have a transmission mounted parking brake. SUB structures should clear this component by 25.4 mm [1.00 in] minimum.


[176.00 in] WB vehicles equipped with a 55-gallon fuel tank will require a 457 mm [18.00 in] minimum frame extension to provide for an adequate departure angle.

The attachment of the SUB to the Cutaway body should consider the following:

- Blind installation of self-expanding nut type fasteners can be located in the the zone as defined in the figure on this page, and should allow for functional expansion, and be equally spaced. The body edge flange may also be used for fasteners provided the center of the required hole is 1.5 times the hole diameter from the edge of the panel. These recommendations apply to both B-pillar attachment.
- Removal of the access panel and fasteners at the lower area of the B-pillar will allow for flush mounting of the SUB. This opening should be completely covered and sealed from obvious climatic conditions.

- Roof attachments should be equally spaced and are permitted on the flange provided. The center of the required holes should be 1.5 times the hole diameter from the edge of the flange.
- 4. Floor attachments should be equally spaced and are permitted on the flange provided. The center of the required holes should be 1.5 times the hole diameter from the edge of the panel.
- Washers or doublers should be considered to increase the bearing surface under fasteners to increase joint integrity and to decrease sheet metal fatigue, squeaks, and rattles.
- Gaskets or sealers installed between the Cutaway body and the SUB should consider the displacement and stabilization of such materials when clamped, and the affect on joint integrity.

Second Unit Body mounting components NOT PROVIDED by Ford must be installed on the frame in areas as shown on page 57.

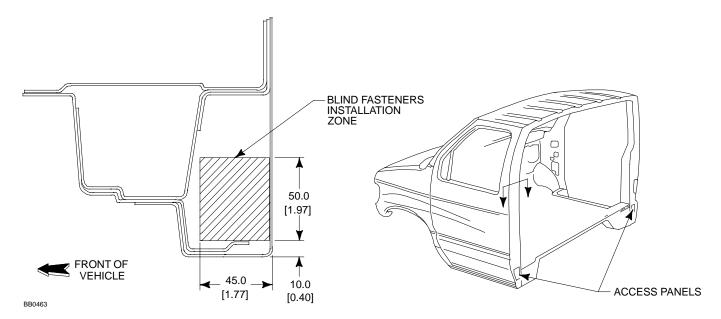

E-SERIES SUPER DUTY CUTAWAY BODY TO SECOND UNIT BODY ATTACHMENT

Page 300 APPENDIX

E-250/350/450 SUPER DUTY STRIPPED CHASSIS SECOND UNIT BODY

A full length structural body should be attached to the chassis utilizing a system of body bolsters bolted and welded to the chassis frame sidemember as shown on this page.

Rear body bolsters extend along the parallel sections of the frame sidemember using the existing 34.8 mm [1.4 in] diameter holes as shown in View B, on this page.

Bolster attachment in the rear axle kick-up area can be accomplished by bolting shear plates to the web of the frame sidemember as shown in View C, on this page. The maximum size hole that may be drilled in the frame web is 19 mm [0.75 in] diameter. Refer to the drilling precautions in the Frame section of these Design Recommendations on page 310.


Front body bolsters should be attached to the frame sidemember as far forward as possible. They should be welded to the web of the frame sidemember immediately to the rear of the front radiator and cowl support structure as shown in View A. Front bolsters should not be bolted to the frame sidemember in this area since there is no access to the inside surface sidemember.

Each front bolster should be rigidly connected to the corresponding rear bolster through the body floor or a tie bar.

Do not weld to the flanges of the side rail. Refer to the welding precautions in the Frame section of these Design Recommendations on page 310.

DESIGN RECOMMENDATIONS SECOND UNIT BODY MOUNTING



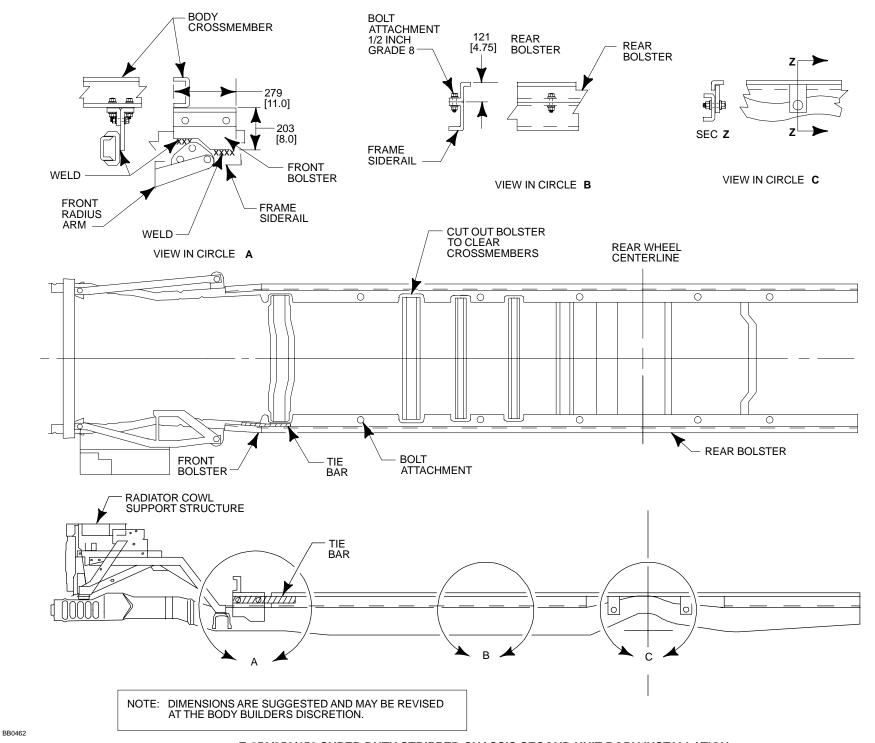

E-250/350/450 SUPER DUTY STRIPPED CHASSIS SECOND UNIT BODY INSTALLATION

NOTE — [] DIMENSIONS ARE INCHES.

Page 301

APPENDIX

SUPER DUTY F-SERIES SECOND UNIT BODY (SUB) MOUNTING TECHNIQUES FOR CHASSIS CAB (WIDE FRAME)

The intent of the illustrations shown on the following two pages is to offer an expanded range of Second Unit Body (SUB) mounting design recommendations for Super Duty F-Series trucks with a 1422 mm [56 in] Cab to Axle (CA) design.

SUB Mounting Techniques #1 and #2 for 56" CA with SUB weight 1800 lb or less

These SUB mountings were tested by Ford Motor Company and found to be capable of complying with F/CMVSS requirements. The sketches in Figures A and B on the following page depict the recommended SUB mounting techniques.

SUB Mounting Technique #3 for 56" CA with SUB weight 1800 lb or less

The third mounting scheme is a top bolted mounting technique. This top bolted SUB mounting is recommended for the Super Duty F-Series pickup trucks with a 1422 mm [56 in] CA. This technique uses the existing pickup box mounting holes to mount a SUB weighing [1800 lb[or less provided the SUB is mounted in a similar fashion to Ford's pickup box. These mountings should use the same number of OEM fasteners and OEM locations. The sketch which is shown in Figure C on page 303 depicts this technique. Refer to page 193 of Super Duty F-Series section for mounting hole layout.

SUB Mounting Technique #4 for 56" CA with SUB weight over 1800 lb

This technique embodies the Front and Rear Shear plate attachment as depicted in SUB Mounting Techniques #1 and #2, but requires addition of U-bolts for further attachment. Figures E and F on page 303 depicts this technique.

Chassis Cab (Narrow Frame)

Figures E and F on page 303 show the SUB mounting design recommendations for Super Duty F-Series Trucks with a 60", 84", 108", or 120" Cab to Axle (CA). Prepunched holes are provided to accommodate front shear plates as shown on pages 197 - 198 of the Super Duty F-Series section.

DETAILS OF THE SECOND UNIT BODY MOUNTING TECHNIQUES

The following SUB mounting design recommendations are methods of attachment intended to minimize SUB movement under crash situations. The following items are important factors in the performance of the system.

- The forwardmost surface of the SUB is located at least 76.2 mm [3.0 in] behind the rearmost surface of the cab. Refer to the statements of conformity for F/CMVSS 212⁽¹⁾, 219⁽¹⁾, and F/CMVSS 301⁽¹⁾ in the *Incomplete Vehicle Manual*.
- Spacers between the frame and SUB must provide adequate clearance to the fuel fill system on wide frame or pickup box delete models. Refer to the Statement of Conformity for F/CMVSS 301⁽¹⁾ on pages 45 to 50 of the *Incomplete Vehicle Manual* and the Design Recommendations for fuel fill systems on page 305-306 of this book.

 The following are SUB mounting instructions for a SUB weight of 3960 kg [1800 lb] or less and a 56" CA:

The frame to SUB spacers must provide adequate space to allow a proper fuel filler pipe installation on pickup box delete models.

Technique #1; **front shear plate** attachment; use two, 5/8" diameter, Grade 8 bolts, nuts, and washers in the OEM frame. One, 5/8" diameter, Grade 8 bolt, nut, and washer with a 1/4" equivalent weld bead around three sides of the shear plate and the SUB mounting frame, skip welded at the shear plate corners. See Figure A, View A on page 302. **Do not weld the shear plates to the OEM frame.**

Technique #1; **rear shear plate** attachment; use three, 5/8" diameter, Grade 8 bolts, nuts, and washers in the OEM frame. One 5/8" diameter, Grade 8 bolt, nut, and washer with a 1/4" equivalent weld bead around three sides of the shear plate and SUB mounting frame skip welded at the shear plate corners. See Figure A, View B on page 302.

Technique #2; **front shear plate** attachment; use two, 5/8" diameter, Grade 8 bolts, nuts, and washers in the OEM frame. Two 5/8" diameter, Grade 8 bolts, nuts, and washers in the SUB mounting frame. See Figure B, View C on page 302.

Technique #2; rear shear plate attachment; use three 5/8" diameter, Grade 8 bolts, nuts, and washers in the OEM frame. Two 5/8" diameter, Grade 8 bolts, nuts, and washers in the SUB mounting frame. See Figure B, View D on page 302.

Technique #3; **pickup box attachment**; use eight, 5/8" diameter, Grade 8 flange nuts and bolts that utilize the existing pickup box holes in the top frame flanges. See Figure C on page 303.

Technique #4 (56" CA with SUB weight over 1800 lb) use same as Technique #1 except with addition of U-bolts as shown in Figure D on page 303.

For Super Duty F-Series Chassis Cab vehicles with a 60", 84", 108", or 120" CA, it is recommended that the front shear plate mounting holes, as provided on each chassis, be used. Use the same front and rear shear plate attachment as Technique #1 or #2 with a 5/8" diameter U-bolt spaced every 24 to 36 inches. See Figure E on page 303. When U-bolts are used, vertical spacers must be between the upper and lower frame flanges at each U-bolt to prevent collapse of the flanges. See Figure F on page 303. U-bolt torque must be checked every six months.


The following items are important factors in the performance of the system.

- The spacer should be secured in such a manner as to maintain retention during installation or during operational use and should have a slight taper which starts at the front of the SUB frame. See Figures on page 302.
- Front shear plates should be angled forward approximately 45 to 60 degrees from the horizontal.
 Front shear plates should be a sufficient distance from the front of the SUB to allow for frame flexing, i.e., front shear plates should be placed behind the tapered section of the spacer.
- Use 5/8" diameter, Grade 8 bolts, nuts, and washers that attach the shear plates to the OEM vehicle and SUB frames.
- 60-65 ft-lb torque for the 5/8" diameter, Grade 8 bolts, nuts, and washers.
- Direct the threaded end of the bolts away from any fuel, brake or electrical system component.



2002 MODEL YEAR

Page 302 APPENDIX

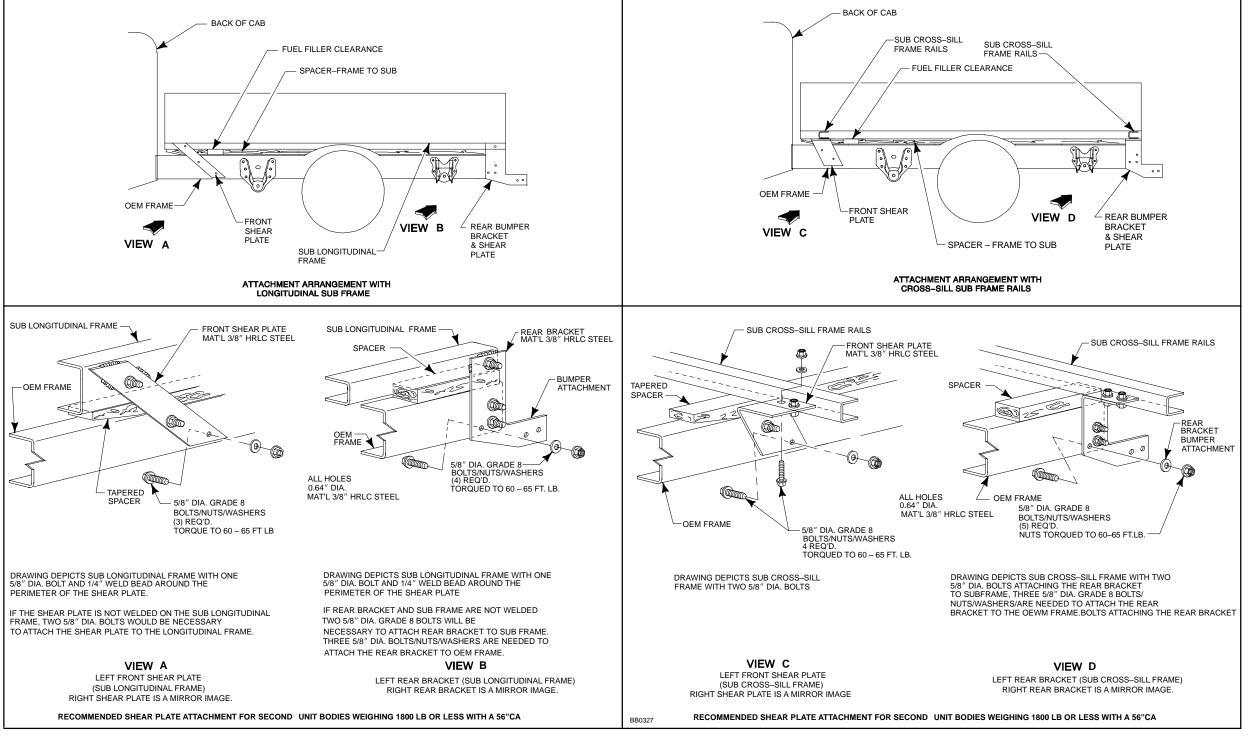

APPENDIX Page 303



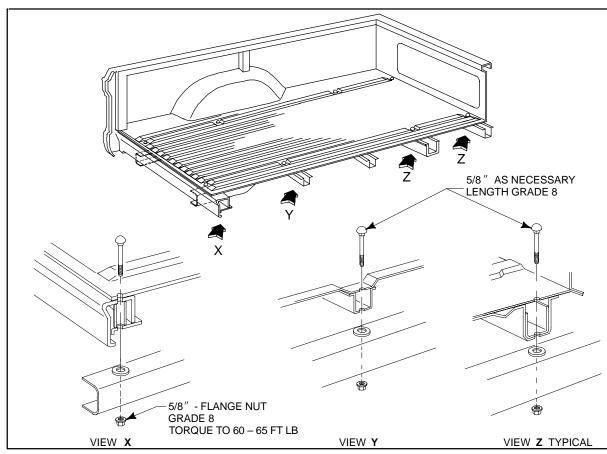



FIGURE C - SUPER DUTY F-SERIES SUB MOUNTING TECHNIQUE #3

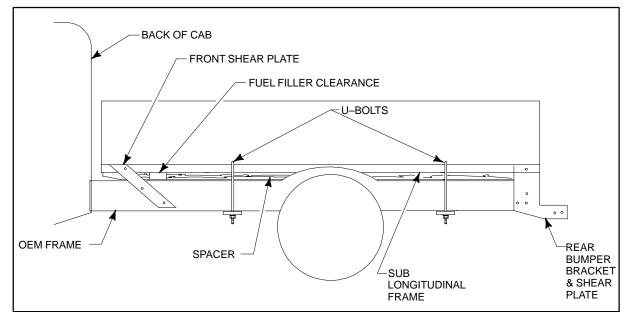

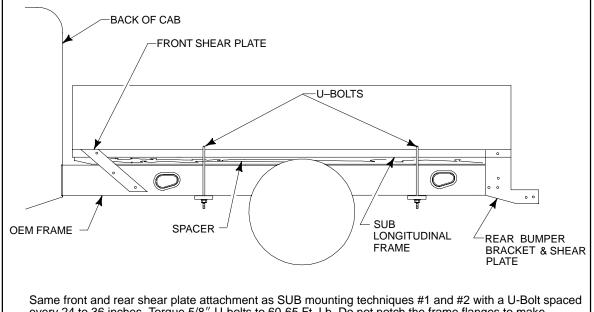

Same front and rear shear plate attachment as SUB mounting techniques #1 and #2 with a U-Bolt spaced every 24 to 36 inches. Torque 5/8" U-bolts to 60-65 Ft. Lb. Do not notch the frame flanges to make the U-bolts fit. Place a spacer in between the OEM frame flanges to provide proper U-bolt torque.

FIGURE E - SUPER DUTY F-SERIES SUB MOUNTING TECHNIQUE #4 FOR 60", 84", AND 120" CA CHASSIS CABS.

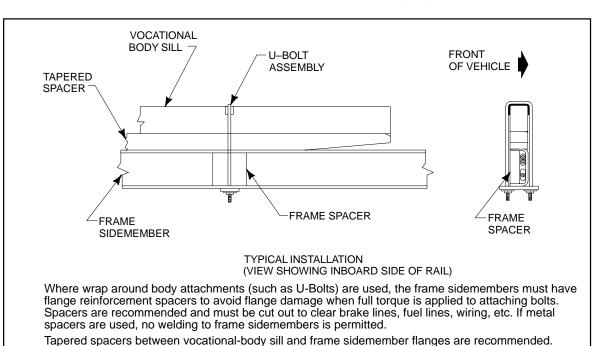

BB0322

A minimum of one set of shear plates per side is recommended. Also, one set of side shift plates

Periodic checking of body attachments for torque retention is highly recommended.

(see sketch for typical installations).

should be attached to vocational-body sills per side.



Page 304

FUEL SYSTEM

INFORMATION

The following recommendations are intended to assist in the design and completion of the fuel system capable of meeting the requirements of F/CMVSS 301. These recommendations are based on testing and analyses performed by Ford Motor Company.

APPENDIX

Since completed vehicles may take many forms, this list of recommendations cannot cover all possibilities. Strict adherence to these suggestions will not ensure that the completed vehicle will comply with F/CMVSS 301. The responsibility for determining compliance to F/CMVSS 301 regulations is that of the final stage manufacturer. Accordingly, Ford Motor Company makes no representations as to the appropriateness of any particular recommendation in its specific application to a particular design or act of intermediate or final stage manufacture.

To verify compliance with F/CMVSS 301, testing of representative vehicles to applicable F/CMVSS 301 procedures may be necessary. Questions regarding compliance with F/CMVSS regulations should be directed to your legal counsel, the National Highway Traffic Safety Administration. or Transport Canada.

Any alteration or modification of a vehicle's fuel or evaporative system may affect the vehicle's compliance with applicable federal and state emission laws, including on-board diagnostics (OBDII) and evaporative emissions requirements, and may also effect vehicle performance (driveability, idle quality, etc.). Vehicle modifiers are responsible for ensuring that a vehicle, as modified, complies with all applicable emissions regulations and for obtaining any necessary federal or state approval or certification relating to vehicle modification or sale of add-on or auxiliary parts.

WARNING

BEFORE OPENING THE FUEL SYSTEM ON VEHICLES WITH EFI ENGINES, RELIEVE FUEL PRESSURE BY FOLLOWING THE INSTRUCTIONS IN THE FORD TRUCK SHOP MANUAL FOR THE APPROPRIATE MODEL AND MODEL YEAR.

WHEN WELDING NEAR FUEL SYSTEM COMPONENTS, ALL METALLIC COMPONENTS SHOULD BE ADEQUATELY SHIELDED AND PROTECTED FROM HEAT OR WELD SPLATTER. ALL NON-METALLIC COMPONENTS SHOULD BE REMOVED.

REMOVAL OR REINSTALLATION OF ANY FORD FUEL SYSTEM COMPONENT SHOULD BE PERFORMED TO THE SPECIFICATIONS AND INSTRUCTIONS FOUND IN THE FORD TRUCK SHOP MANUAL FOR THE APPROPRIATE MODEL AND MODEL YEAR. (EXCEPT FOR ESERIES VAN AFT-OF-AXLE TANK INSTALLATIONS, SEE THE FOLLOWING NOTE).

E-SERIES VAN AFT-OF-AXLE FUEL TANK

A Fuel System Modification Kit is available for some E-Series products for removing the midship fuel tank and adding an aft-of-axle fuel tank. For technical assistance, and which vehicles apply, contact the Ford Truck Body Builder Advisory Service. This kit is distributed for Ford Component Sales by:

TDM 13000 Farmington Rd., Livonia, MI 48150 Phone: (800) 540-3913 Fax: (734) 458-9118

A. NEW FUEL TANKS

- The fuel tank should be designed with as few openings and connections as possible. Openings and connections generally should be located on the upper surface of the fuel tank.
- Fuel tanks should be fitted with an evaporation control valve having the means to close if the vehicle is rotated about a longitudinal axis pursuant to F/CMVSS 301.
- 3. The tank should be of simple configuration minimizing sharp surface transitions and protrusions which may be required for attachment or function.
- The tank should be strong enough to withstand instantaneous internal pressure imposed in the event of crash situations.
- Hoses connected to the tank should be sufficiently flexible to permit small movements of the tank relative to fixed mounting surfaces, without rupture or disconnection of such hoses in the event of crash situations.
- Emission regulations may require an OBDII fuel tank pressure sensor for the evaporative system. Any new fuel tank must be tested and comply with all evaporative emission regulations.
- 7. Package new tank away from heat sources such as exhaust.

B. NEW FUEL TANK RETENTION SYSTEMS

 The retention system should attach the fuel tank to the frame, between the frame rails, and below the body of the vehicle with sufficient clearance for normal body to frame movement under loaded conditions.

- 2. A retention system should restrict fuel tank movement in all possible directions to prevent contact or rupture with rigid or sharp objects, and the disconnection of fuel system tubes and hoses under crash conditions. Retention straps should avoid sharp edges and tank supports should be designed with fuel tank compatible surfaces and edges to the fuel tank.
- System fasteners and attachments should be designed to retain the tank during deflections incurred in crash situations.

TEMPORARY 7.5 GALLON FUEL TANK

Vehicles equipped with a 7.5 gallon temporary fuel tank (for transit shipping only) will require the subsequent stage manufacturer to dispose of this tank in an appropriate manner. The permanent aft-of-axle tank requires a 10 gallon minimum initial fuel fill to dilute the Ford provided anti-corrosion solution in the tank.

C. FUEL FILL SYSTEM

- Fill system should be sufficiently flexible to prevent possible rupture or disconnection resulting from movement of the fuel tank relative to frame during crash situations. Use the original pickup truck filler if the fill location is similar to the original pickup truck location. For Ranger, use Ranger Fuel Fill Kit #F87Z-9B149-A.
- Any appliance or hardware attachments to the body in the area of a fuel system component should be designed, positioned, and secured so as not to impact any fuel system component during crash situations.
- 3. The fuel filler opening area of the body should provide adequate sealing from the vehicle interior because holes or cracks in this area may allow fuel vapors to enter the vehicle interior. Openings should be sealed with a product which is fuel resistant. See Figure A on this page.
- 4. The metal outer end of the fuel fill neck tube provided by Ford must be properly grounded to the chassis to dissipate any electrostatic charge that may be produced and so reduce the possibility of a spark during fueling. A fill neck support made of metal would provide a ground path if directly mounted on the chassis. If the filler neck support is made of plastic or other non-metallic material, a ground strap or wire must connect the metal end of the fuel filler neck and a metal chassis component.

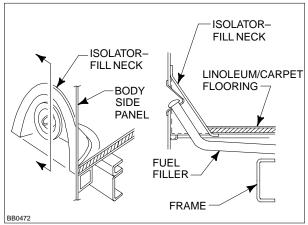


FIGURE A - BODY MOUNTED FUEL FILLER OPENINGS

- Fill openings should be recessed, and caps, when installed, should be inside the normal body plane.
- 6. Whenever possible, the fill system should pass under the body rather than through it. Where passing through floors and sides, the fill system should be shielded and have adequate clearance to surrounding structure. Fuel Filler and Vent Hoses should maintain a minimum of one inch clearance to body and surrounding chassis components, except where the hoses and protective sleeve material pass through the designed frame opening.
- Be sure that the fuel tank filler cap is the correct Ford designated part. Provide adequate hand clearance for cap installation and correct sealing of the cap to filler pipe.
- 8. The recommended horizontal and vertical locations for the fuel tank filler pipe is shown on page 140 (E-Series), pages 195-196 (Super Duty F-Series) and page 293 (Ranger).

SUPER DUTY F-SERIES CHASSIS CAB 60", 84", 108", and 120" CA							
Standard	Standard Aft Axle Fuel Tank Kit# F81A-9B149-C						
Optional	Optional Midship Fuel Tank Kit# F81A-9B149-A						
BOX DELETE 56" CA							
StandardMidship Fuel TankKit# F81A-9B149-E							

Other parts that can be ordered/purchased separately:

SERVICE PART NUMBERS	PART DESCRIPTION
E0TZ-9040-A	Support (unskirted body)
D702-9A095-A	Label — Unleaded Fuel
E432-9A095-A	Label — Diesel Fuel



APPENDIX Page 305

C. FUEL FILL SYSTEM (CONT'D)

- 9. When installing accessories or equipment, avoid exposure of fuel and vapor hoses to surfaces with sharp edges (see Figure A on this page) or high temperature surfaces (near hot exhaust or coolant). Also avoid installations which result in the exposure of these lines to road debris or undercoating, except as specified on page 308.
- 10. Install or route fuel tank filler hoses and filler vent hoses as follows:
 - a. Avoid sags below the horizontal which allow fuel puddling (i.e., avoid sink traps). See Sink Traps in Figure A. Fuel trapped in low spots can be expelled when the cap is removed, even if the tank is nearly empty.
 - b. Avoid pinches or kinks, as they restrict fuel filling or venting. Hose length may require adjusting depending on second unit body width. See Kinked Fuel Fill System, Figure A.
 - c. Do not place adjacent hardware such that it may cut or otherwise damage the filler neck and vent hoses and cause fuel or vapor leakage (i.e., avoid unfriendly surfaces) see Hostile Surfaces, Figure A.
 - d. Keep the flow of fuel continuously downward from the inlet of the fuel filler pipe all the way to the tank.
 - e. The filler hose and vent hose must be clear of moving suspension components so as to prevent abrasion which can result in fuel leakage. They should maintain a minimum of 1 inch clearance to body and surrounding chassis components, except where the hoses and protective sleeve material pass through the designed frame opening.
 - f. Be certain that all clamps are secure and properly
 - g. The fuel filler and filler vent hoses should not contain fittings or connections other than those incorporated in the original design, nor should they be interconnected with each other in any way.
 - h. Ford released parts should be used.

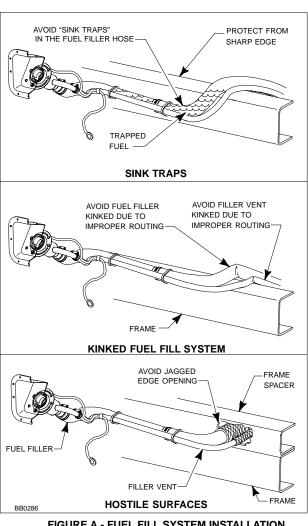


FIGURE A - FUEL FILL SYSTEM INSTALLATION **CONDITIONS TO BE AVOIDED**

D. FUEL TUBES, HOSES AND PUMPS

- 1. Do not reroute or change the attachment of fuel lines or fuel vapor hoses. Doing so may alter the vehicle's ability to comply with F/CMVSS 301, Fuel System Integrity, and may adversely affect vehicle performance by increasing the amount of heat absorbed by the fuel system or by restricting its venting.
- 2. Tubes and hoses should be routed away from and not attached to members that will move or deform during crash situations.
- 3. Tubes and hoses must be sufficiently flexible to avoid rupture or disconnection resulting from movement of the engine relative to the frame during crash situations.
- 4. Tubes and hoses should be routed away from hot 11. Each of the fuel line and fuel vapor hose retention regions and sharp objects and should be retained adequately to prevent movement into such regions or against such objects.
- 5. Do not add fuel or vapor line flow restrictors as they can cause engine fuel starvation or abnormally high fuel tank pressures.
- 6. Do not install auxiliary fuel pumps. This could cause the engine to run rich, producing additional exhaust heat.
- 7. If the push connectors on nylon fuel lines are disconnected, they must be reconnected as shown in Figure A on the next page, and the retention clip must be discarded and replaced with a new clip as specified in Figure A on the next page.
- 8. The special removal tool shown in Figure B on the next page must be used to open push connectors 14. Fuel filters installed in the fuel supply line must be installed on flexible fuel lines if the lines need to be disconnected. The appropriate tool is available from Ford Customer Service Division.
- 9. The push connectors on flexible fuel lines, if disconnected, must be reconnected by snapping them back into position and installing the appropriate retainer as shown in Figure B on the next page.

10. Avoid pinching or kinking of any fuel vapor hose. (See Figure B below).

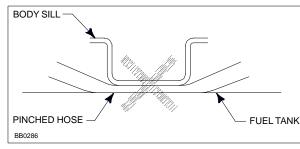


FIGURE B - FUEL VAPOR VENT LINES

- clips provided by Ford must be used in original factory locations to prevent misplacement or movement of the lines.
- 12. Be certain that the vent valves on top of the fuel tanks are seated and secure; do not dislodge or damage them when mounting the second unit body. If they are unseated, fuel leakage may occur. If damaged, the vapor vent system may not function, resulting in increased fuel tank pressure.
- 13. If a fuel sender is removed for any reason, use a new gasket when it is reinstalled so as to prevent fuel leaks. Be certain the fuel sender is seated and secure on the top of each fuel tank. Do not step upon or place weight upon the sender during vehicle manufacture. See page 140.
- of sufficient size to be nonrestrictive to fuel flow and placed so as to be protected from exposure to exhaust heat and physical damage. Ford replacement fuel filters are recommended. Filters are not to be installed in the fuel return line.
- 15. Temporary shipping fuel lines are not to be reused. They should be disposed of in an appropriate manner.
- 16. Fuel system components which are disconnected during manufacturing should be capped or plugged promptly to prevent possible contamination.
- 17. When welding near fuel system components, all metallic components must be adequately shielded and protected from heat or weld splatter. All nonmetallic components must be removed.

2002 MODEL YEAR

Page 306 APPENDIX

E. FUEL SYSTEM ACCESS FOR AUXILIARY FUEL POWERED EQUIPMENT

Precautions similar to those described in this Fuel System section should be taken in the design and positioning of a fuel system for auxiliary fuel-powered equipment. The auxiliary fuel-powered equipment should be securely mounted so as to withstand forces during crash situations.

E-Series Super Duty Cutaway, Super Duty F-Series, and E-Series Super Duty Stripped Chassis aft-of-axle fuel tanks are equipped with an auxiliary fuel port in the fuel sender unit. The purpose is to provide a fuel supply for fuel powered accessories such as generator sets.

E-Series van vehicles may have an optional auxiliary fuel port which is located on the midship fuel tank sender unit.

Final Stage Manufacturers that utilize the auxiliary fuel port must install a check valve because of Onboard Fuel System Diagnostics (OBDII). The system may affect the vehicle's compliance with applicable Federal/State emissions laws. Additional information is available in Bulletin Q-42. To obtain a copy log on to www.fleet.ford.com/truckbbas/ and select from the list of Bulletins required.

All auxiliary fuel ports have a safety cap which must remain in place until a fuel consuming accessory is installed.

E-Series van vehicles equipped with the auxiliary fuel port have a braided jumper hose which provides access without removing the fuel tank. A cap removal tool is provided on the jumper line immediately behind the cap and must be removed and reversed before it can be used to remove the cap.

A push connector F7UA-9J274-AA, available from your local Ford dealer, will attach to the auxiliary fuel port and accept a 1/4-inch hose and clamp. See page 140.

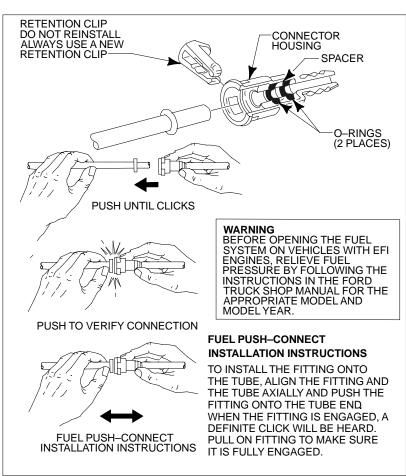


FIGURE A - NYLON FUEL LINE PUSH-CONNECT

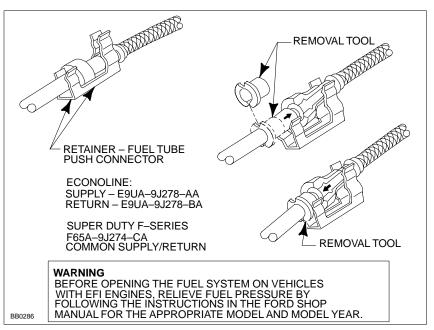


FIGURE B - FLEXIBLE FUEL LINE PUSH-CONNECT




Page 307 APPENDIX

COOLING SYSTEM

- Equipment such as flashing lights and sirens, spare tires or any other accessories should not be installed in the grille area forward of the radiator or air cleaner air inlet. Doing so restricts proper air flow through the radiator and engine compartments. E-Series and Super Duty F-Series are illustrated in the figure below.
- For proper engine cooling, do not alter, change the locations of, or remove the original equipment fan, fan clutch or shroud.
- Maintain a 50/50 mixture of ethylene glycol-based antifreeze-to-water ratio when adding or modifying the heater system or auxiliary heater system. A 60/40 antifreeze-to-water ratio may be necessary during winter months in very cold climates. For the remainder of the year, however, a 50/50 ratio should be maintained.
- 4. Use worm gear drive clamps only.
- Upper radiator hoses and heater hoses, which are added or replaced, should be EPDM-Kevlar composition. Lower radiator hoses should be EPDM-Rayon composition.

- The radiator and fan shroud should not be used as structural members and additional components should not be attached.
- Revisions to the Front End Accessory Drive System may affect the cooling system/component performance and are not recommended.
- 8. Do not alter or modify the automatic transmission water bypass system.
- The minimum radiator grille opening (excluding all grille parts) for the E-Series Stripped Chassis, to provide optimum cooling for the engine, is 300 sq in.
- Equipment, hazardous materials markers or placards must not obstruct the airflow to the radiator or the air cleaner inlet on the E-Series Super Duty Stripped Chassis.
- 11. The E-Series Super Duty Stripped Chassis engine compartment must be designed to eliminate any air circulation restriction that would affect the air induction or cooling systems. An engine compartment must provide adequate flow-through ventilation to prevent local air temperature from exceeding recommended maximums.

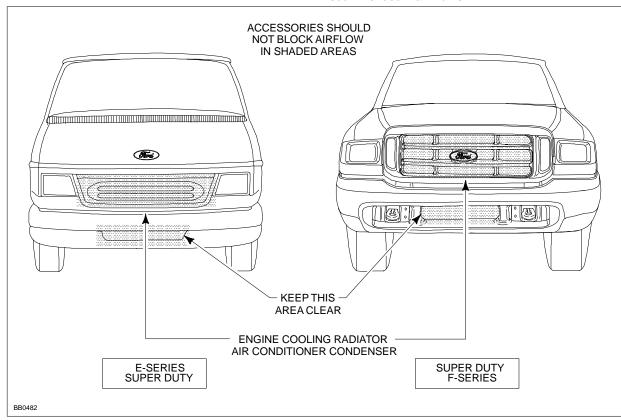

CLIMATE CONTROL SYSTEM

- An Auxiliary Heater A/C Connector Package can be either standard or optional on E-Series vehicles for connecting auxiliary climate control systems to the Ford system. The following items are important for the maximum efficiency of the combined systems:
 - The connector tubes are under the floor directly below the driver seat.
 - The heater supply tube is identified with a white paint dot and should be connected to the lowest connection port on the auxiliary heater core.
 - The A/C connector tubes have a 20 X 1.5-6g metric thread for high pressure and 24 X 2.0-6g metric thread for low pressure.
 - If the vehicle is equipped with the auxiliary heater-air conditioner, do not operate the front A/C system prior to the addition of an auxiliary system. The system oil could settle in the connector tubes and not provide lubrication to the compressor. See Bulletin Q-47. To obtain a copy log on to www.fleet.ford.com/truckbbas/ and select from the list of Bulletins required.
 - The Ford-provided auxiliary blower switch requires an electric relay for high-speed blower operation. Additional detailed information is available in Bulletin Q-19. To obtain a copy log on to www.fleet.ford.com/truckbbas/ and select from the list of Bulletins required.
- R134-A charged A/C systems must use PAG-type lubricating oil YN-12-B, Ford part number F2AZ-19577-C. Always use the same refrigerant and lubricating oil as originally equipped by Ford.
- Maintain a 4% suspended oil ratio in the A/C system for proper compressor lubrication.

4. E-Series A/C and Refrigerant Oil System are classified into the following (3) types:

A/C System	R-134A Ib	PAG Oil oz
Front Only ⁽¹⁾	2.75	9 (a)
Front w/Prep. Unit	2.75	13
Front & Aux. Unit	4.0	13

Must add 1-oz Oil for each 4-oz of R-134A above Ford's charge.

The Final Stage Manufacturer must attach a label (next to Ford A/C tag on the vehicle) showing the amount of PAG oil and R-134A Refrigerant that has been added.

- The A/C compressor will cycle during the defrost mode. A refrigerant shut-off valve for the auxiliary system may impair compressor lubrication.
- R134-A charged A/C systems should use barrier type A/C hose. Barbed fittings and external clamping may not be compatible with this type of hose. Swaged, permanent fittings on this type of hose are recommended.
- 7. Use only worm gear drive clamps on heater hose.
- 8. NEVER ATTACH ANY COMPONENT TO THE TRANSMISSION FILLER AND DIPSTICK TUBE.
- 9. Auxiliary heater and air conditioning systems hose routings must consider the following:
 - Dynamic engine roll or any system component which has an operating zone. Make sure there is adequate clearance (e.g., transmission downshift linkage, steering column shift linkage.)
 - Do not route heater or A/C hoses directly over or near the exhaust system.
 - Do not route hoses by attaching to the engine.
 - Use only metallic "Y" and "T" type fittings.
 - Do not route hose in wheelhouse area.
 - Do not route by sharp edges or moving component parts. There must be shield protection from any potential abrasive source.
- When routing in stone kickup area, lines should be protected by shields. Minimize use of concentric protective heater hose shields. Limit length of concentric hose shields to 305 mm [12 in] maximum.



Page 308 APPENDIX

EXHAUST SYSTEM

WARNING:

VEHICLE OPERATING TEMPERATURES

SOME TRUCKS OF FORD MOTOR COMPANY MAY **EXHIBIT HIGH ENGINE COMPARTMENT AND EXHAUST** SYSTEM TEMPERATURES IN CERTAIN OPERATING MODES. COMPONENTS, INCLUDING EXHAUST HEAT SHIELDING SYSTEMS, HAVE BEEN INSTALLED AS STANDARD EQUIPMENT ON SOME VEHICLES IN OUR ASSEMBLY PLANTS IN AN EFFORT TO PROVIDE PROTECTION **AGAINST** THERMAL TEMPERATURES. AFTERMARKET **EQUIPMENT** INSTALLERS OR INTERMEDIATE AND FINAL STAGE MANUFACTURERS ARE RESPONSIBLE PROVIDING THERMAL PROTECTION UNDERBODY HEAT SHIELDS) FOR ANY STRUCTURE OR EQUIPMENT ADDED TO THE VEHICLE AND SHOULD NOT REMOVE ANY COMPONENTS OR EXHAUST HEAT SHIELDING INSTALLED ON THE VEHICLE BY FORD.

- Do not substitute exhaust system components or add to those furnished by Ford, except as noted in this section. Such a substitution or addition may adversely affect engine performance or emissions system effectiveness.
- Do not change the position or routing of the exhaust system components. Such a change may affect the amount of heat transferred to body, chassis or powertrain components, particularly fuel system components. Specifically, do not add dual exhausts or reroute exhaust components to the left side of the vehicle.
- Do not remove or modify the existing shields. Ford underbody heat shields are installed on vehicles to provide heat protection for the vehicle floor and body mounting system, and must remain in place on the completed vehicle. (See Figure A).

- 4. Exhaust heat shields should be added by a body builder, and should extend far enough beyond the exhaust system components to protect underbody surfaces from heat radiated at any angle. Add shields over the muffler and exhaust pipe kick-up areas.
- 5. Do not remove Ford furnished exhaust clamps and hangers.
- An additional exhaust hanger should be installed, if appropriate, to support extended tailpipe length necessitated by body dimensions.
- 7. Do not make a rigid connection between the exhaust system and the body.
- 8. Do not apply body undercoating on the fuel tank, fuel fill hose, or fuel fill vent hoses. The extra insulation on these components may cause excessive heat build-up or possible material incompatibility concerns. (See Figure B).
- Do not apply body undercoating within twelve inches of the area directly above the exhaust, on any components within twelve inches of the exhaust, or to any part of any exhaust system. Undercoating will smoke or burn if subjected to high heat. (See Figure B).

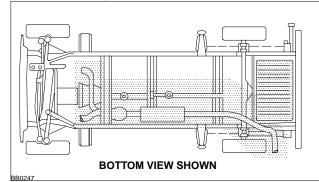


FIGURE B - DO NOT APPLY UNDERCOATING IN SHADED AREA

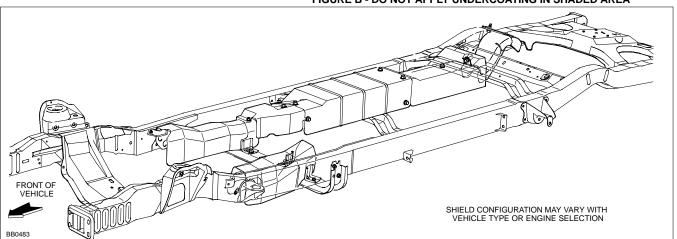


FIGURE A - UNDERBODY MOUNTED HEAT SHIELDS FOR VANS

- Extensions to the exhaust outlet pipe should direct exhaust away from the body to minimize the possibility of fumes entering the vehicle. Extensions should also protrude beyond the vertical body surface.
- Install all underbody plumbing for heaters, air conditioners, and other accessories so that they are not installed against sharp surfaces or jagged edges. Protect from exhaust heat when routing.
- 12. Use only stainless steel for any exhaust system modifications or additions.
- Exhaust system revisions should consider thermal expansion of materials and the affect on design clearances.

FORD BODY COMPONENTS

- Modifications to doors, roof, or body side panels may have an affect on F/CMVSS 208, 210, 212, 214, 219, and 301 compliance. Refer to the Statements of Conformity section in the *Incomplete Vehicle Manual* for compliance representations.
- Running boards or entry steps should use a mounting system that will attach only to the body. The Ford body to frame isolators allow body movement which may loosen fasteners. A combined frame and body mounting system may cause frame Noise, Vibration, and Harshness (NVH) transfer through such a mounting system into the body.
- Use a butyl type sealer on trimmed body sheet metal panels to prevent corrosion.
- 4. Temporary mounting pads may eliminate chipping and scratches when accessories are installed.
- Select materials which will not have a corrosive action with each other.

- 6. Additional fresh air vents should be located so that engine exhaust cannot be drawn into the vehicle.
- 7. When adding holes to the floor of the vehicle, consideration must be given to all components below the floor. The use of drill stops is recommended. A pattern for a floor template, which will locate the E-Series Van fuel tank, is available from the Ford Truck Body Builders Advisory Service.
- 8. Fasteners added to the floor should not point at the fuel tank or should have an appropriate shield. Components with sharp edges should have an appropriate shield to eliminate the possibility of fuel tank penetration in crash situations.
- Components added to the E-Series engine cover should allow for easy removal. Refer to the Statements of Conformity in the *Incomplete Vehicle Manual* or Figure A on page 47 of this book for Occupant Protection Zone requirements for the engine cover and other affected areas.
- The E-Series engine cover seal requires that carpeting and insulation should be installed as shown in Figure C.
- 11. Power operated windows, a partition, or roof panel systems when added to a vehicle with a GVWR of 4536 kg [10,000 lb] or less must comply with the requirements of F/CMVSS 118, refer to the Statements of Conformity in the *Incomplete Vehicle Manual*.
- 12. When a second unit body (SUB) or rear closure panel is attached directly to the cutaway body, difficulty may be experienced when closing doors due to air pressure build up. It is recommended that vent(s) be installed which will allow "ONE WAY" pressure release from the inside of the cab to the outside. Recommended minimum size of the venting is 36 square inches.

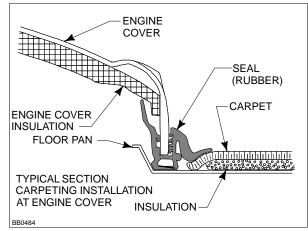


FIGURE C - E-SERIES ENGINE COVER SEAL

2002 MODEL YEAR

Page 309

WHEELS AND TIRES

WARNING:

SOME AFTERMARKET WHEEL ASSEMBLIES MAY NOT BE COMPATIBLE WITH SOME VEHICLES AND SHOULD NOT BE USED. USE OF INCOMPATIBLE WHEEL ASSEMBLIES MAY RESULT IN WHEEL FRACTURES, SEPARATION, WITH THE POTENTIAL FOR AN ACCIDENT, AND INJURY TO OCCUPANTS. FORD RECOMMENDS THAT ONLY WHEEL ASSEMBLIES APPROVED AND RELEASED BY FORD MOTOR COMPANY FOR THE VEHICLE MODEL SHOULD BE USED.

APPENDIX

WARNING:

RE-TORQUE ALL LUG NUTS TO SPECIFICATION. IT IS IMPERATIVE THAT THE DEALER RETORQUE ALL WHEEL LUG NUTS ON ALL VEHICLES PRIOR TO DELIVERY TO THE FINAL VEHICLE PURCHASER. DUAL REAR WHEEL VEHICLES MAY BE SHIPPED WITH THE OUTER REAR WHEELS REMOVED AND, THEREFORE, THE DEALER MUST ENSURE THAT THE LUG NUTS ARE RETORQUED TO THE PROPER SPECIFICATION BEFORE THE VEHICLE IS DELIVERED TO THE FINAL VEHICLE PURCHASER. IMPROPERLY TIGHTENED LUG NUTS COULD LOOSEN AND ALLOW THE WHEEL TO COME OFF WHILE THE VEHICLE IS IN MOTION, CAUSING LOSS OF CONTROL.

- 1. Use only wheels with the same load capacity, rim width, rim offset, and mounting configuration as those originally installed on the vehicle. Consult an authorized Ford Dealer for correct wheel load capacity, size, and usage. Wheels used must conform to the F/CMVSS 120. The use of any wheel or tire, other than those originally installed on the vehicle as manufactured by Ford, may adversely affect load carrying capacity, handling, bearing life, ride, braking performance, speedometer/odometer accuracy, automatic transmission (4R100 or 4R70W) shift timing, and tire/wheel clearance of the body and chassis.
- 2. Use only tires with the equivalent load-carrying capacity as those originally installed on the vehicle. Use only tires of a type and size that are recommended by the vehicle manufacturer and are compatible with the wheel installed on the vehicle. Do not over or under inflate tires, always maintain proper tire pressure. Never mix radial, bias-belted, or conventional bias type tires, and avoid mixing P and LT metric tires with alphanumeric tires whenever possible. Consult an authorized Ford Dealer for correct tire load capacity, type, size, and inflation pressure for the vehicle. Tires used must conform to FMVSS 119 (non-passenger car type tires) in the United States, or to the Motor Vehicle Tire Safety Regulations in Canada.

3. If you loosen or remove wheel lug nuts for any reason or have in your possession a vehicle at any of the mileage intervals listed in the Wheel Lug Nut Table below; check the lug nut torque and re-torque to the specifications as listed in the table.

WHEEL LUG NUT TABLE							
	MILE	AGE	WHEEL LUG NUT TORQUE				
VEHICLE TYPE	KM	MILES	Nm	Ft/Lb			
E-Series							
E-150	800	500	135	100			
E-250/350 SRW	800	500	190	140			
E 050/450 DDW	160	100	400	140			
E-350/450 DRW	800	500	190				
F-Series	•		•				
Super Duty F-250/350 SRW	800	500	200	145			
Super Duty	160	100	000	145			
F-350/450/550 DRW	800	500	200				
F-Super Duty Class A Motor Home	160	100	200	145			
Chassis (F53)	800	500	200	143			

SUSPENSION AND STEERING SYSTEM

NOTICE — VEHICLE HANDLING INFORMATION

The weight of the body structure and its center of gravity location (both longitudinally and vertically), as well as the weight and positioning of the cargo load, are important to the handling of the completed vehicle. Subsequent stage manufacturers should note that matching a body to a chassis in a manner appropriate for the intended use of the vehicle is the responsibility of the final-stage manufacturer. Following the representations in this book or the IVM manual, with respect to center of gravity locations and body weights for compliance with Federal or Canada Motor Vehicle Safety Standards, is only part of the task of producing a completed vehicle that handles appropriately in service.

IMPORTANT:

The final-stage manufacturer is responsible for verifying that the front wheel toe is within Ford Specifications on completed vehicles. The steering wheel clear vision (horizontal or level orientation of the steering wheel) should also be maintained when resetting wheel toe. These specifications are found in the general suspension section of the *Ford Shop Manual*.


 Front end alignment warranty policy for incomplete vehicles is based upon the completed vehicle remaining within OEM weight ratings, vehicle attitude, suspension and wheel/tire guidelines, and other characteristics affecting wheel alignment. Exceeding or modifying these restrictions may jeopardize related warranty.

- Modifications made by subsequent-stage manufacturers, particularly those that significantly affect vehicle ride heights, may cause vehicle control problems during excessively sharp turns or other abrupt steering maneuvers, possibly leading to rollover or other accidents that could result in serious injury.
- The steering gear, intermediate shaft, coupling shaft, linkage, column, and steering wheel should not be altered or relocated. Steering linkage travel should not be restricted.
- Ford front and rear GAWRs and GVWR must not be exceeded.
- 5. Front or rear suspension components should not be drilled, cut, welded, or relocated for any reason.
- 6. Welding to the frame in the steering gear area is not recommended.
- 7. If rear suspension spacers are used between the spring and axle seats to accommodate side-to-side variations, they should not exceed 3/8 inch. The spacers should not exceed the profile of the axle spring seat. Additional spacing may adversely affect driveline angles and axle system package clearance. Also affected are spring stress limits from excessive jounce travel.
- 8. Do not use any suspension component as a welding ground.
- When welding or cutting near suspension components, shield and protect all springs and rubber components from heat penetration and welding splatter.
- 10. Any add-on device mounted on the steering column, shroud, multifunction switch, or gear selector lever, must not affect steering column angles, tilt mechanism (if so equipped), range of operation, or steering column mounting hardware. Any such device must not interfere with steering column collapse stroke travel during crash situations or air bag deployment.

ENGINE

- Refer to the Emission Control Modifications on Safety/Emission pages 50-53 prior to making modifications to any engine component that could affect the emission certification.
- Gasoline engine conversion guidelines for Liquified Petroleum Gas (LPG) or Compressed Natural Gas (CNG) are in the Alternative Fuel pages of Safety/Emission section of this book.
- The engine should not be operated with the hood up or removed. This may allow excessive unforced air to circulate that could adversely affect the cooling system.

- 4. Do not use manual throttle kickers.
- 5. When using electric throttle kickers on gasoline engines, set the high idle RPM at as low as possible to obtain the required performance. The idle speed must be set when the engine is at normal operating temperature and under normal load. This RPM setting should be affixed to the vehicle and should be checked after the 2,000 mile brake-in engine tune up. This information should be provided to the purchasers. The addition of throttle kickers may affect electronic transmission operation.
- An auxiliary crankshaft bearing support is required on all modular gas engines before a FEAD-mounted PTO can be installed. Refer to Power-Take-Off Installations page for information.
- 7. The 7.3L DI Turbo Diesel Engine requires an auxiliary power train control module to elevate idle. An Auxiliary Idle Control Kit is described on page 273-274, which satisfies the Ford Standard Corporate Protocol serial data communication link required. Do not tap into the electrical circuits attached to the Pedal Position Sensor (PPS) or the Idle Position Switch (IPS) on the accelerator control. Do not bypass the electrical circuits attached to the PPS or IPS. See figure below for component identification.

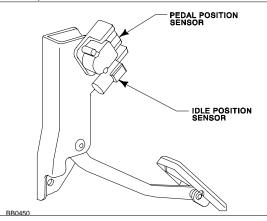

ELECTRONIC ACCELERATOR CONTROL

8. Installation of a gasoline engine speed governor is permissible, provided the governor design is compatible with each respective throttle body for the individual engine application and it does not exceed specified engine maximum RPM. It must also meet all noise and engine emission requirements. Governor installations may affect electronically-controlled transmissions. Contact Ford Truck Body Builders Advisory Service before installing.



Page 310

APPENDIX

DRIVELINE

- Bulletin Q-14, "Guidelines for Modifying Truck Drivelines," is available on www.fleet.ford.com/ truckbbas/. Any deviation from Ford specifications may adversely affect powertrain system operation including engine and transmission, or component reliability. Subsequent stage manufacturers or installers are responsible to maintain Ford specifications in the completion of such modifications.
- Rear axle vent and hose, if installed, must not be bent, pinched, or obstructed so that normal "breathing" of the rear axle is provided.
- On all rear axle assemblies, additional bracket bars or supports must not be welded to the axle assembly. Attachment of any equalizing-type trailer hitch or auxiliary suspension systems (springs) must not be attached to the rear axle assembly.

TRANSMISSION

- The transmission oil filler tube and dipstick must not be altered by bending, lengthening, or shortening, and must be readily accessible in the engine compartment for checking lubricant level. NEVER ATTACH ANY COMPONENT TO THE TRANSMISSION FILLER AND DIPSTICK TUBE.
- The installed engine angle must not be altered. The relative position of engine and transmission to shift linkage must not be altered.
- Transmission vent must not be altered, pinched, or collapsed, and the vent opening must not be restricted or relocated.
- Adequate tool clearance and suitable access openings for transmission adjustments must be provided. Transmission removal provisions must also be considered.
- Transmission oil cooler lines should not be kinked, bent, or restricted. All oil cooler lines must be properly retained with adequate clips. The truck type external oil cooler must not be "boxed in", which would restrict adequate air circulation. Use only Ford factory coolers.

Some 4R100 transmissions are equipped with "Stand Alone" transmissions fluid coolers. Vehicles equipped with this new oil to air cooler (OTA) may not have a transmission fluid cooler in the radiator. The OTA is located in front of the radiator and will require replacement every time the transmission is reworked or replaced. The cooler lines and Cooler Bypass Valve (CBV) must also be cleaned and backflushed.

CAUTION:

FAILURE TO REPLACE THE OTA, BACKFLUSH THE COOLER LINES AND CBV MAY RESULT IN TRANSMISSION ASSEMBLY INTERNAL DAMAGE.

- 6. Transmission shift cable, transmission outer shift lever, and shift cable bracket must not be altered and must have provisions for adjusting tool clearance. A severe duty shift cable (booted) is available as a service part from a Ford Dealer, for Super Duty F-Series vehicles which experience extensive off-road use.
- 7. Some 4R100 transmissions may be equipped with a transmission cooler bypass system. The purpose of the cooler bypass valve is to allow some transmission fluid to bypass the transmission fluid coolers and return to the transmission sump during cold weather operation. This provides a faster transmission fluid warm up and increased lube flow during cold weather operation. Do not remove or modify this system or transmission damage may occur. Do not use the cooler bypass line as a fitting point. Vehicles equipped with transmission cooler bypass will NOT have a hot water feed circuit from the water pump to the radiator tank containing the transmission cooler.

CAUTION:

DO NOT USE THE COOLER BYPASS VALVE (CBV) AS A HANDLE. DAMAGE TO THE CBV AND TRANSMISSION MAY RESULT. THIS ALSO CAUSES LEAKS.

- Transmission service identification tags must not be removed or destroyed. If the transmission is reworked or replaced, the tag should be attached to new transmission.
- Electronically controlled automatic transmission wire harness routing location, wire harness locating clips, all heat shielding, and clearance to the exhaust must be maintained as installed from the assembly plant.
- The manual transmission filler plug should not be obstructed, preventing easy checking of lube level or filling.

- Body structures should not be less than 1.00 inch from the rectangular vent holes on the top surface of the manual transmission housing.
- Bulletin Q-14 and Q-18 contain additional detailed information on modifications which may affect transmissions. To obtain a copy, log on to www.fleet.ford.com/truckbbas/ and select from the list of bulletins.

FRAME

- Holes that would weaken the frame sidemember should not be drilled in the frame. Holes are **not** to be drilled in the sidemember's top or bottom flange.
- 2. Holes to mount brackets, out-riggers, and supports, may be drilled in the vertical frame side rail web with the following restrictions:
 - Material between edge of hole and inside of upper or lower flange must not be less than 1.50 inch for low carbon steel (36,000 PSI yield).
 - The minimum edge distance between any two holes up to 0.625 inch diameter must be 1.00 inch. For larger than 0.625 inch diameter holes, the minimum edge distance must be 1.5 times the diameter of the largest hole.
 - 0.75 inch is maximum hole diameter.
 - Avoid close vertical succession of fasteners.
 - All attaching fasteners, including flat washers, must be of high strength steel (Grade 8).
- When welding is performed anywhere on the vehicle, precautionary measures should be taken to prevent damage to electrical system wiring or components. Prior to welding, any parts which could be damaged by excessive temperatures should be removed or adequately shielded. Also, prior to welding, disconnect both batteries, then the ABS module, then the PCM. The welding ground clamp should be positioned as close to the affected welding area as possible. Computer processors should be removed if welding is to be done within their close proximity. Welding cables should never be allowed to lay on, near, or across any electrical wiring or electronic component during welding. After welding, when parts are cool, carefully inspect wiring and electrical components for shorts or other damage which could draw excessive currents and possibly cause an electrical system short when the battery is reconnected.

- 4. When welding low carbon steel side rails (36,000 PSI yield strength), emphasis should be placed upon weld application techniques to avoid stress risers that may adversely affect frame operating stresses. When welding within 4 inches of any crossmember rivet, remove the rivets and replace with Grade 8 bolts and nuts.
- Do not modify or alter the convoluted frame sections in the area behind the front bumper. Modifications or alterations could have an adverse effect on vehicle performance in a crash situation.
- 6. Wheelbase alteration and frame extension guidelines for and E-Series Super Duty Cutaway are available in Bulletin Q-18, log on to www.fleet.ford.com/truckbbas/ and select from the list of bulletins. Any deviation from the original vehicle specification will become the responsibility of the subsequent stage manufacturer or installer. This may affect transmission operation and durability.
- Recommend the use of OEM front tow hooks only. See Ford Towing Manual FCS-12141-00 for towing instructions.
- To prevent collapse of the frame side rail flanges, when U-bolts are used for the attachment of bodies to the truck chassis, vertical spacer bars must be used between the upper and lower flanges at each U-bolt.
- All E-Series Super Duty Cutaways or Stripped Chassis with a 176-inch WB and equipped with a 55-gallon fuel tank will require an 18-inch minimum frame extension to provide for an adequate departure angle fuel tank clearance.
- School bus rear bumpers should meet the following recommended minimum specifications; height, 203.2 [8.00] under 10,000 lbs and 241.3 [9.50] over 10,000 lbs; 50.8 [2.00] upper and lower flange; 304.8 [12.00] wrap-around; 4.8 [.187] thick. See the *Incomplete Vehicle Manual* for additional information.

JACK

 Jacks, if installed, must be stowed in an adequate location for customer access.

AMBULANCE BUILDER GUIDELINES

Page 311 APPENDIX

A FORD VEHICLE IS SUITABLE FOR MANUFACTURE INTO AN AMBULANCE ONLY IF EQUIPPED WITH A FORD AMBULANCE PREPARATION PACKAGE. FORD URGES AMBULANCE MANUFACTURERS TO FOLLOW THE RECOMMENDATIONS FURNISHED IN THE INCOMPLETE VEHICLE MANUAL, (AND ANY PERTINENT SUPPLEMENTS), AND THE QUALIFIED VEHICLE MODIFIER (QVM) GUIDELINES.

USING A FORD VEHICLE WITHOUT THE FORD AMBULANCE PREPARATION PACKAGE TO PRODUCE AN AMBULANCE VOIDS THE FORD WARRANTY AND COULD RESULT IN ELEVATED UNDERBODY TEMPERATURES, FUEL OVER-PRESSURIZATION AND THE RISK OF FUEL EXPULSION AND FIRES.


VEHICLES EQUIPPED WITH FORD AMBULANCE PREPARATION PACKAGES HAVE LABELS LOCATED ON (THE INSIDE) DRIVER DOOR LOCK PILLAR THAT STATE THAT THE VEHICLE IS SO EQUIPPED.

INFORMATION

Ford urges careful consideration of the recommendations that follow. They are based on analyses of component and vehicle tests, actual service situations, and engineering judgments. Disregard of these recommendations may affect the durability, reliability, handling and performance characteristics of a completed vehicle and may elevate underbody temperatures and increase the potential for fire, or may affect the safety of the occupants in the event of an accident.

These recommendations are supplemental to U.S. and Canadian Motor Vehicle Safety compliance representations provided in the *Incomplete Vehicle Manual*. Additional information is also provided in this book and *Ford Truck Shop Manual* which may be helpful to subsequent stage manufacturers.

Subsequent Stage Manufacturers are encouraged to contact the Ford Truck Body Builder Advisory Service if they have any questions concerning these recommendations.

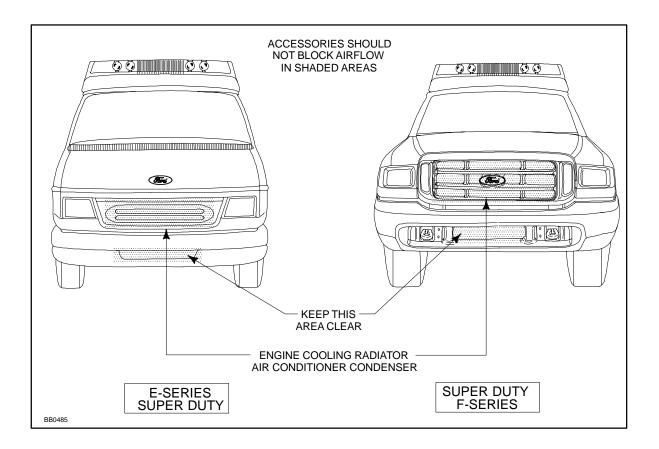

GUIDELINES

- All Exhaust System and Underbody Heat Management statements on page 295 and 308 respectively, apply to completed ambulance type vehicles.
- 2. Data concerning the effect of hood louvers is inconclusive. If a body builder chooses to add them, the opening should be directed rearward to avoid recirculating discharged hot air through the radiator. Remember, the vehicle interior vent air enters the passenger compartment at the base of the windshield. Louvers may direct heated air or fumes toward this opening. Removal of the underhood insulation may affect Exterior Noise compliance. See the Exterior Noise information on Safety/Emissions pages 49-50.
- 3. To deal with exceptionally high electrical loads, Ford vehicles with the Ambulance Prep Package are equipped with dual 115 ampere alternators, dual batteries and heavy duty wiring to handle higher current loads. Added wiring should be of sufficient capacity to handle the higher current loads. The alternator should not be modified, altered or replaced.

- Added Second Unit Body vents, especially powered vents, should be located away from the fuel filler, fuel venting areas and exhaust to avoid fuel fumes and vapors entering the interior of the vehicle.
- 5. Equipment such as flashing lights and sirens, spare tire, or any other accessories should not be installed in the grille area forward of the radiator or air cleaner air inlet. Doing so restricts proper airflow through the radiator and engine compartment. Lights, speakers, or sirens should be mounted in the center area of the grille. Equipment should be mounted as far outboard as possible, not to exceed 90 square inches each or 180 square inches combined in area.
- An ambulance is not to be used as a tow vehicle. GVWR = GCWR

NEW VEHICLE STORAGE GUIDELINES



Page 312 APPENDIX

GENERAL

- Store vehicles in a dry, ventilated place; protect from
 Start the engine every 15 days and move the vehicle sunlight if possible.
- If vehicles are stored outside, provide regular maintenance against rust and damage.

BODY

- Wash vehicle thoroughly to remove dirt, grease, oil, tar, or mud from exterior surfaces, rear wheel housing, and underside of front fender.
- Periodically wash vehicles stored in exposed locations.
- Touch up exposed raw or primed metal to provide rust protection.
- Cover chrome and stainless steel parts with a thick coat of auto wax to prevent discoloration. Rewax as necessary when the vehicle is washed.
- Lubricate all hoods, door hinges and latches with a light grade oil.

CAUTION: Keep all rubber parts free from oil and solvents.

• Cover the interior soft trim to prevent fading, if stored in exposed location.

ENGINE

- at least 25 feet. Run it at fast idle until it reaches normal operating temperature.
- Shift the transmission into all gears while engine is running.

FUEL SYSTEM

• Regularly move vehicles short distances to mix fuel anti-oxidation agents.

NOTE: During extended periods, if vehicle is stored for 60 days or more, gasoline may deteriorate due to oxidation. This can damage rubbers and other polymers in the fuel systems such as fuel pressure regulator diaphragms and fuel line connector seals. It may also clog small orifices. Diesel fuel deterioration in the form of fuel separation, sludge formation, and bacterial growth can cause restrictions in fuel supply lines. filters and sticking of fuel injection systems components.

A commercially available gasoline fuel stabilizer ("Sta-Bil" or equivalent) should be added to gasoline-powered vehicles or a diesel fuel stabilizer ("Fire Prep 100" or equivalent) to diesel-powered vehicles whenever actual or expected storage periods exceed 60 days. The manufacturer's instructions packaged with product should be followed. The vehicles should then be operated at an idle speed to circulate the additive throughout the fuel system.

A volatile, corrosion inhibitor ("NOx Rust VCI 105" or equivalent) added to the fuel will protect the fuel tank inner surface from corrosion. Follow instructions packaged with product.

E-SERIES TEMPORARY 7.5 GALLON FUEL **TANK**

Vehicles equipped with a 7.5 gallon temporary fuel tank (for transit shipping only) will require the subsequent stage manufacturer to dispose of this tank in an appropriate manner. The permanent aft-of-axle tank requires a 10-gallon minimum initial fuel fill to dilute the Ford-provided anti-corrosion solution in the tank.

COOLING SYSTEM

• Maintain appropriate antifreeze protection against freezing temperatures.

BATTERY

- Check and recharge as necessary.
- Keep connections clean and covered with light coat of grease.

BRAKES

 Make sure brakes and the parking brake are fully released.

TIRES

Maintain recommended air pressures.

MISCELLANEOUS


- Verify that all linkages, cables, clevis pins, and levers under the vehicle are covered with grease to prevent
- Move trucks at least 25 feet every 15 days to lubricate working parts and prevent corrosion.

TRANSMISSION

- Run engine to normal operating temperature.
- Shift the transmission into all gears with engine
- Check fluid level and condition (no water contamination, etc.).
- Stripped Chassis Vehicles cover transmission to prevent water from entering through the vent.

Page 159

F-SERIES

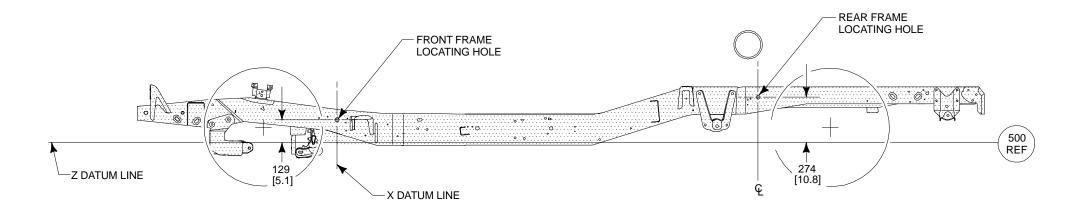

BB0480